


AM-2207

User Guide




AM-2207 Dimensions


• Dimensions (mm)

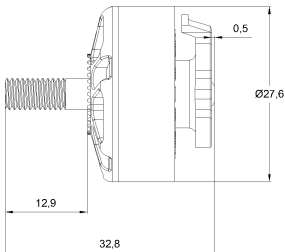

Side

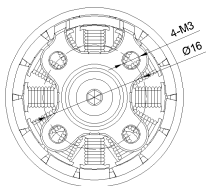

Bottom · mount

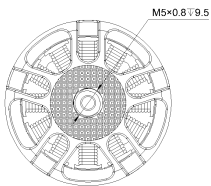

Top · propeller side

AM-2207 Specifications

• Basic Specifications

Stator Dimensions	$\Phi 27.6 \times 32.8$ mm
Slots / Poles	12N14P (7 pole pairs)
Motor Weight	36.6 g
KV Value	KV2700
Rated Voltage	14.8 V (4S LiPo)
Max Current	55 A
Max Power	1297 W
Recommended Prop	5 inch (5.1×3.3 / 5.1×4.6)
Operating Temp	-20 ~ +85 °C

AM-2207 Performance Data

4S LiPo, sea-level static thrust stand. Measured values; rated specs may differ.


• Propeller 5.1 × 3.3

Throttle	Thrust (g)	Current (A)	Power (W)	Eff. (g/W)	Temp (°C)
20%	228.3	3.33	55.8	4.1	30.3
40%	549.0	10.12	168.0	3.3	30.5
60%	813.2	17.36	285.8	2.8	31.4
80%	1180.0	29.49	478.3	2.5	33.1
100%	1596.2	47.65	754.9	2.1	34.8

• Propeller 5.1 × 4.6

Throttle	Thrust (g)	Current (A)	Power (W)	Eff. (g/W)	Temp (°C)
20%	236.0	3.48	58.2	4.1	20.5
40%	560.6	10.48	174.1	3.2	21.3
60%	837.4	18.31	301.2	2.8	22.5
80%	1234.7	32.19	520.3	2.4	25.1
100%	1673.5	52.39	825.5	2.0	26.5

AM-2207 Installation

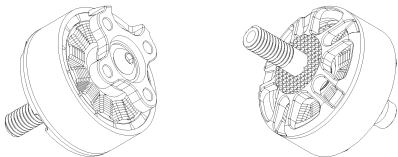

1. **Mounting** — Fix the motor to the arm through the bottom mounting holes. Follow the screw size and spacing on the drawing and use screws that do not reach the windings.
2. **ESC wiring** — Connect the three motor wires to the ESC outputs. To reverse the rotation, swap any two wires or reverse it in the ESC settings.
3. **Spin check** — Without a propeller, run at low throttle and check the direction and for abnormal noise.
4. **Propeller** — Fit a propeller matching the rotation and tighten the nut firmly.
Recommended: 5 inch (5.1×3.3 / 5.1×4.6).

AM-2207 Safety Notes

- Do not exceed the rated voltage. Rated: 14.8 V (4S LiPo).
- Use an ESC rated with margin above the motor maximum current. Max current: 55 A.
- Always remove the propeller while wiring, configuring or bench testing.
- The motor can be hot right after operation; let it cool before touching.
- Keep metal debris away from the magnets; stop using the motor if the shaft is bent or the bearings are noisy.



<Detailed Manual>

novaX