


AM-2810

User Guide




AM-2810 Dimensions


• Dimensions (mm)

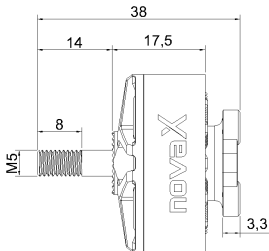

Side

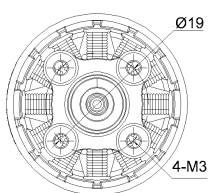

Bottom · mount

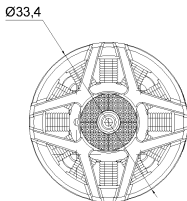

Top · propeller side

AM-2810 Specifications

• Basic Specifications

Stator Dimensions	$\Phi 33.4 \times 38$ mm
Slots / Poles	12N14P (7 pole pairs)
Motor Weight	62 g
KV Value	KV1100
Rated Voltage	22.2 V (6S LiPo)
Max Current	44.3 A
Max Power	1074 W
Recommended Prop	7 ~ 8 inch (7×4.0 / 8×4.0)
Operating Temp	-20 ~ +85 °C

AM-2810 Performance Data

6S LiPo, sea-level static thrust stand. Measured values; rated specs may differ.



• Propeller 7 × 4.0

Throttle	Thrust (g)	Current (A)	Power (W)	Eff. (g/W)	Temp (°C)
20%	216.0	1.40	35.2	6.1	24.5
40%	531.0	3.99	100.1	5.3	24.7
60%	831.5	7.06	176.9	4.7	24.8
80%	1422.1	14.97	372.6	3.8	25.2
100%	2125.8	27.13	668.5	3.2	25.8

• Propeller 8 × 4.0

Throttle	Thrust (g)	Current (A)	Power (W)	Eff. (g/W)	Temp (°C)
20%	279.3	1.59	39.9	7.0	24.8
40%	688.5	5.20	130.6	5.3	24.7
60%	1302.7	12.36	308.5	4.2	25.0
80%	2126.6	25.59	631.0	3.4	25.7
100%	2964.5	44.27	1074.2	2.8	26.0

AM-2810 Installation

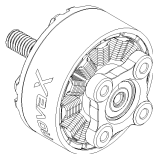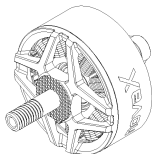

1. **Mounting** — Fix the motor to the arm through the bottom mounting holes. Follow the screw size and spacing on the drawing and use screws that do not reach the windings.
2. **ESC wiring** — Connect the three motor wires to the ESC outputs. To reverse the rotation, swap any two wires or reverse it in the ESC settings.
3. **Spin check** — Without a propeller, run at low throttle and check the direction and for abnormal noise.
4. **Propeller** — Fit a propeller matching the rotation and tighten the nut firmly.
Recommended: 7 ~ 8 inch (7×4.0 / 8×4.0).

AM-2810 Safety Notes

- Do not exceed the rated voltage. Rated: 22.2 V (6S LiPo).
- Use an ESC rated with margin above the motor maximum current. Max current: 44.3 A.
- Always remove the propeller while wiring, configuring or bench testing.
- The motor can be hot right after operation; let it cool before touching.
- Keep metal debris away from the magnets; stop using the motor if the shaft is bent or the bearings are noisy.



<Detailed Manual>

novaX