


AM-3115

User Guide




AM-3115 Dimensions


• Dimensions (mm)

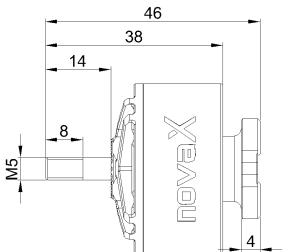

Side

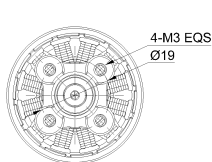

Bottom · mount

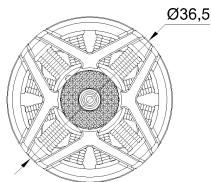

Top · propeller side

AM-3115 Specifications

• Basic Specifications

Stator Dimensions	$\Phi 37.2 \times 51.1$ mm
Slots / Poles	12N14P (7 pole pairs)
Motor Weight	113.1 g
Shaft / Thread	IN5 / OUT5 · M5 × 0.8
Mounting Hole	19 × 19 mm (M3)
KV Value	KV900
Rated Voltage	14.8 ~ 22.2 V
Max Current	62 A
Max Power	1894 W
Recommended Prop	9 ~ 10 inch (9×4×3 / 10×4.5)
Operating Temp	-20 ~ +85 °C

AM-3115 Performance Data

6S LiPo, 20%–100% throttle on static thrust stand. Measured values; rated specs may differ.

• Propeller 10 × 4.5

Throttle	Thrust (g)	Current (A)	Power (W)	Eff. (g/W)	Temp (°C)
20%	270	1.58	40	6.8	35
40%	836	6.16	154	5.5	—
60%	1814	17.30	430	4.3	—
80%	3004	35.30	864	3.4	—
100%	4084	61.50	1474	2.7	—

• Propeller 9 × 4 × 3

Throttle	Thrust (g)	Current (A)	Power (W)	Eff. (g/W)	Temp (°C)
20%	209	1.50	37.7	5.6	33.1
40%	612	4.60	115	5.3	—
60%	1253	11.20	279	4.5	—
80%	2260	23.60	579	3.7	—
100%	3404	42.15	1026	3.1	—

AM-3115 Installation



1. **Mounting** — Fix the motor to the arm through the bottom mounting holes. Follow the screw size and spacing on the drawing and use screws that do not reach the windings.
2. **ESC wiring** — Connect the three motor wires to the ESC outputs. To reverse the rotation, swap any two wires or reverse it in the ESC settings.
3. **Spin check** — Without a propeller, run at low throttle and check the direction and for abnormal noise.
4. **Propeller** — Fit a propeller matching the rotation and tighten the nut firmly.
Recommended: 9 ~ 10 inch (9×4×3 / 10×4.5).

AM-3115 Safety Notes

- Do not exceed the rated voltage. Rated: 14.8 ~ 22.2 V.
- Use an ESC rated with margin above the motor maximum current. Max current: 62 A.
- Always remove the propeller while wiring, configuring or bench testing.
- The motor can be hot right after operation; let it cool before touching.
- Keep metal debris away from the magnets; stop using the motor if the shaft is bent or the bearings are noisy.



<Detailed Manual>

novaX