





AM-4008

User Guide



AM-4008 Dimensions

• Dimensions (mm)

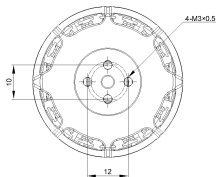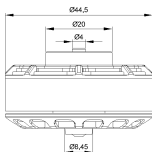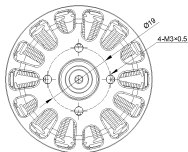

AM-4008 Specifications

• Basic Specifications

Stator Dimensions	$\Phi 44.5 \times 26.7$ mm
Slots / Poles	18N24P (12 pole pairs)
Motor Weight	82.5 g
KV Value	KV380
Rated Voltage	22.2 V (6S LiPo)
Max Current	16.25 A
Max Power	405 W
Recommended Prop	14 ~ 15 inch (14×4.7 / 15×5.0 / 15×5.5)
Operating Temp	-20 ~ +85 °C

AM-4008 Performance Data

6S LiPo, sea-level static thrust stand. Measured values; rated specs may differ.

• Propeller 14 × 4.7

Throttle	Thrust (g)	Current (A)	Power (W)	Eff. (g/W)	Temp (°C)
20%	113	0.28	7.0	16.2	26.5
40%	416	1.40	35.2	11.8	—
60%	866	3.85	96.9	8.9	—
80%	1439	9.51	238.2	6.0	—
100%	1909	16.25	404.9	4.7	—

• Propeller 15 × 5.0


Throttle	Thrust (g)	Current (A)	Power (W)	Eff. (g/W)	Temp (°C)
20%	70	0.20	5.1	13.5	28.2
40%	372	1.21	30.4	12.2	28.0
60%	784	3.35	84.2	9.3	27.6
80%	1246	6.82	171.2	7.3	27.4
100%	1787	11.61	290.4	6.2	28.0

AM-4008 Performance Data

• Propeller 15 × 5.5

Throttle	Thrust (g)	Current (A)	Power (W)	Eff. (g/W)	Temp (°C)
20%	111	0.27	6.9	16.0	15.9
40%	443	1.62	40.7	10.9	16.1
60%	862	4.26	107.0	8.1	15.8
80%	1369	8.97	224.4	6.1	16.3
100%	1865	15.15	376.7	5.0	16.2

AM-4008 Installation

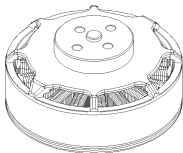

1. **Mounting** — Fix the motor to the arm through the bottom mounting holes. Follow the screw size and spacing on the drawing and use screws that do not reach the windings.
2. **ESC wiring** — Connect the three motor wires to the ESC outputs. To reverse the rotation, swap any two wires or reverse it in the ESC settings.
3. **Spin check** — Without a propeller, run at low throttle and check the direction and for abnormal noise.

AM-4008 Installation

4. Propeller — Fit a propeller matching the rotation and tighten the nut firmly.
Recommended: 14 ~ 15 inch (14×4.7 / 15×5.0 / 15×5.5).

AM-4008 Safety Notes

- Do not exceed the rated voltage. Rated: 22.2 V (6S LiPo).
- Use an ESC rated with margin above the motor maximum current. Max current: 16.25 A.
- Always remove the propeller while wiring, configuring or bench testing.
- The motor can be hot right after operation; let it cool before touching.
- Keep metal debris away from the magnets; stop using the motor if the shaft is bent or the bearings are noisy.



<Detailed Manual>

novaX