


AM-4214

User Guide




AM-4214 Dimensions


• Dimensions (mm)

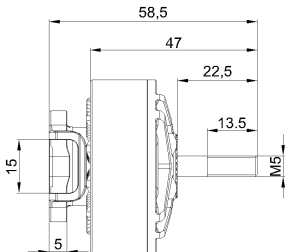

Side

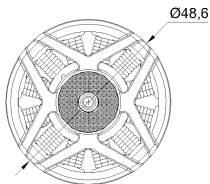

Bottom · mount

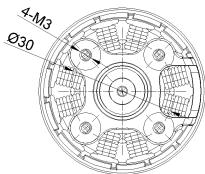

Top · propeller side

AM-4214 Specifications

• Basic Specifications

Slots / Poles	12N14P (7 pole pairs)
KV Value	KV620
Rated Voltage	22.2 V (6S LiPo)
Max Current	72.5 A
Recommended Prop	15 × 8
Operating Temp	-20 ~ +85 °C


AM-4214 Performance Data

6S LiPo, 20%–100% throttle on static thrust stand. Measured values; rated specs may differ.

• Propeller 15 × 8

Throttle	Thrust (g)	Current (A)	Power (W)	Eff. (g/W)	Temp (°C)
20%	392	1.57	39	9.7	40.1
40%	1596	8.25	207	7.8	—
60%	2935	23.03	571	5.2	—
80%	4483	47.05	1147	3.9	—
100%	5618	72.54	1674	3.4	—

AM-4214 Installation

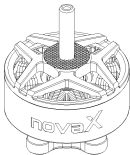

1. **Mounting** — Fix the motor to the arm through the bottom mounting holes. Follow the screw size and spacing on the drawing and use screws that do not reach the windings.
2. **ESC wiring** — Connect the three motor wires to the ESC outputs. To reverse the rotation, swap any two wires or reverse it in the ESC settings.
3. **Spin check** — Without a propeller, run at low throttle and check the direction and for abnormal noise.
4. **Propeller** — Fit a propeller matching the rotation and tighten the nut firmly.
Recommended: 15 × 8.

AM-4214 Safety Notes

- Do not exceed the rated voltage. Rated: 22.2 V (6S LiPo).
- Use an ESC rated with margin above the motor maximum current. Max current: 72.5 A.
- Always remove the propeller while wiring, configuring or bench testing.
- The motor can be hot right after operation; let it cool before touching.
- Keep metal debris away from the magnets; stop using the motor if the shaft is bent or the bearings are noisy.



<Detailed Manual>

novaX