

# ECE 361E: Machine Learning and Data Analytics for Edge AI Appendix A2

## A2.1. Connecting to Odroid MC1

- 1) Open a terminal
- 2) Use *scp* to transfer the files you want to the edge device
- 3) Next, you can SSH into the edge devices and use them:

ssh student@sld-mc1-<your MC1 number>.ece.utexas.edu


### A2.2. Core Affinity for Multithreaded Applications

Some benchmarks in this assignment may use all cores available on the MC1 by default; when required, you should use taskset to constrain their execution to the big cores.

Each process and thread in Linux has a *core affinity* – the set of processors on which that task can be scheduled. The CPU affinity can be set in-program using libraries or at runtime by using the command:

**NOTE:** Cores in the system are numbered from 0 to 7. Cores 0 through 3 are LITTLE cores and cores 4 through 7 are big cores (see *Table 1*). For example:

will run a benchmark on cores zero and one, which are the first two cores in the LITTLE cluster. Using a mask of 0xAA will run a benchmark on cores 1, 3, 5, and 7. **Figure 2** shows how two example hexadecimal bitmasks map to the cores in each cluster. Be careful that the cores are in the 7,6,5,4,3,2,1,0 order! If you want to run on big core 6 you will use the mask 0x40=0100 0000

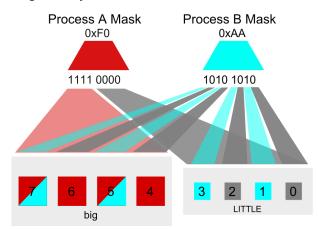

CPU Affinity Bitmask to Core Mapping

Grey square indicates core not used. Blue or red indicates use of core by respective process.

Figure 2. Diagram of two CPU affinity bitmask to core mappings

You can use htop to visualize and verify the resource utilization of each core on the MC1 as you run the benchmarks. By default, htop shows threads of a program as separate entries.

## **A2.3.** Running the benchmarks

To run the benchmarks on the MC1 check the *HW2\_files* on the device. The *blackscholes* and *bodytrack* benchmarks are in the *HW2\_files/parsec\_files* folder.

1) To run *blackscholes* go in the *HW2 files/parsec files* folder and run:

2) To run *bodytrack* go in the *HW2 files/parsec files* folder and run:

3) To run **TPBench** go in the **HW2\_files** folder and run:

taskset --all-tasks <affinity\_mask> ./TPBench.exe

### A2.4. Files Transfer Between Local Computer and Edge Devices

To transfer files between your local computer and the MC1, you can use the scp command. The general format is:

scp <sender address>:<path to send the file> <receiver address>:<path to receive the file>

For example, to transfer a file from your local computer to the MC1, you can open a terminal on your computer and type:

scp <local path to send the file> student@<Your MC1 IP>:<MC1 path to receive the file>

Similarly, if you want to receive a file from the MC1 board, open a terminal on your computer and type:

scp student@<Your MC1 IP>:<MC1 path to send the file> <local path to receive the file>

### A2.5. Checking Connection to Smart Power 2 (SP2)

To gather power readings, you need to access a Smart Power 2 (SP2) device for power monitoring to remotely measure the power of the entire MC1 device. You will access this data from the SP2 over a telnet connection. The MC1 devices are configured to automatically connect to the SP2 wireless link. Let's suppose you are logged in Odroid MC1 number 01 which has the name sld-mc1-01. Always check the connection status to the corresponding SP2 (i.e., sp2-mc1-01) run:

nmcli con

The output should be something like:

NAME UUID TYPE DEVICE

Wired connection 1 f059cda3-e7ad-339a-9861-3dc37dc47aeb ethernet eth0

If instead of wlang you see -- you will have to manually initiate the connection:

sudo nmcli con up sp2-mc1-01

Check again by typing

nmcli con

and also run

ip a

as a double check to see if you see the right IP address (highlighted below):

wlan0: <BROADCAST,MULTICAST,UP,LOWER\_UP> mtu 1280 qdisc mq state UP group default qlen 1000

link/ether 70:f1:1c:4c:94:bd brd ff:ff:ff:ff:ff

inet 192.168.4.100/24 brd 192.168.4.255 scope global dynamic noprefixroute wlan0

## A2.6. Power Logging over Telnet and Serial on MC1

You can use telnet to connect to the SP2 board over its Wi-Fi connection at the local IP address by executing the following command in terminal:

telnet 192.168.4.1

To exit telnet press CTRL+] and then type close to close the connection. The SP2 *output format* is Voltage [V], Current [A], Power [W], Energy [W/h]. For Python development, you can use the *telnetlib* library instead.