DMP Intrusion Panel Extension Guide 4.5.0

Click here for the most recent version of this document.

Document last updated: May 28, 2026

Legal notices

©2026 Genetec Inc. All rights reserved.

Genetec Inc. distributes this document with software that includes an end-user license agreement and is furnished under license and may be used only in accordance with the terms of the license agreement. The contents of this document are protected under copyright law.

The contents of this guide are furnished for informational use only and are subject to change without notice. Genetec Inc. assumes no responsibility or liability for any errors or inaccuracies that may appear in the informational content contained in this guide.

This publication may not be copied, modified, or reproduced in any form or for any purpose, nor can any derivative works be created therefrom without Genetec Inc.'s prior written consent.

Genetec Inc. reserves the right to revise and improve its products as it sees fit. This document describes the state of a product at the time of document's last revision, and may not reflect the product at all times in the future.

In no event shall Genetec Inc. be liable to any person or entity with respect to any loss or damage that is incidental to or consequential upon the instructions found in this document or the computer software and hardware products described herein.

Genetec™, AutoVu™, AutoVu MLC™, Citywise™, Cloud Link Roadrunner™, Community Connect™, Curb Sense™, Federation™, Flexreader™, Genetec Airport Sense™, Genetec Citigraf™, Genetec Clearance™, Genetec ClearID™, Genetec Cloudlink™, Genetec Mission Control™, Genetec Motoscan™, Genetec Patroller™, Genetec Retail Sense™, Genetec Traffic Sense™, KiwiVision™, KiwiSecurity™, Omnicast™, Privacy Protector™, Sipelia™, Stratocast™, Streamvault™, Streamvault Edge™, Synergis™, Valcri™, their respective logos, as well as the Mobius Strip Logo are trademarks of Genetec Inc., and may be registered or pending registration in several jurisdictions.

Other trademarks used in this document may be trademarks of the manufacturers or vendors of the respective products.

Genetec products, services, and innovations are protected by patents and other intellectual property rights in various jurisdictions, including the United States. For a detailed list of patents owned by Genetec Inc., visit www.genetec.com/patents.

All specifications are subject to change without notice.

Document information

Document title: DMP Intrusion Panel Extension Guide 4.5.0

Original document number: EN.550.072-V4.5.0(2)

Document number: EN.550.072-V4.5.0(2)

Document update date: May 28, 2026

You can send your comments, corrections, and suggestions about this guide to documentation@genetec.com.

About this guide

This guide describes how to install and configure the DMP Intrusion Panel extension in Security Center so that your organization can use Security Center to manage and monitor DMP intrusion panels.

This guide supplements the documentation provided with Security Center. It assumes that you are a certified user of Security Center, Synergis, and Omnicast, and that you are familiar with the configuration and use of the following:

- Security Center systems
- DMP Intrusion Panel

For specific information regarding third-party hardware, software, and systems, refer to their manufacturer's documentation and website.

To get your certification, refer to our list of Security Center courses at https://www.genetec.com/support/training/certification-courses.

Notes and notices

The following notes and notices might appear in this guide:

- **Tip:** Suggests how to apply the information in a topic or step.
- **Note:** Explains a special case or expands on an important point.
- **Important:** Points out critical information concerning a topic or step.
- **Caution:** Indicates that an action or step can cause loss of data, security problems, or performance issues.
- **Warning:** Indicates that an action or step can result in physical harm, or cause damage to hardware.

IMPORTANT: Content in this guide that references information found on third-party websites was accurate at the time of publication, however, this information is subject to change without prior notice from Genetec Inc.

Contents

Preface

Legal notices. . . . ii
About this guide. . . . iii

Chapter 1: Introduction to the DMP Intrusion Panel extension

What is the DMP Intrusion Panel extension. . . . 2
How the integration works. . . . 3
Integration overview. . . . 5
DMP Intrusion Panel terminology. . . . 8
About DMP 24-hour zones. . . . 9

Chapter 2: Release notes

What's new in version 4.5.0. . . . 11
Resolved issues in version 4.5.0. . . . 11
Differences between DMP control panel 5.8 and DMP Intrusion Panel 4.0 and later. . . . 14
Known issues. . . . 16
Limitations. . . . 18
Product compatibility. . . . 21
System requirements. . . . 22
License options. . . . 23
Supported devices. . . . 24
Supported number of DMP intrusion panels. . . . 25
Best practices for connecting DMP intrusion panels to the network. . . . 26
Supported intrusion detection features. . . . 27
Custom events added by the DMP Intrusion Panel extension. . . . 28

Chapter 3: Upgrading the DMP Intrusion Panel extension

Upgrading to version 4.5.0. . . . 30

Chapter 4: Deploying the DMP Intrusion Panel extension

Ports used by the DMP Intrusion Panel extension. . . . 33
Downloading and installing the extension. . . . 35
Performing a silent installation of the extension. . . . 36
Required privileges. . . . 37
Creating the Intrusion Manager role. . . . 41
Scheduling database backups and cleanups for the DMP Intrusion Panel extension. . . . 43
Configuring communications parameters. . . . 45
Pushing card credentials and PINs to the panel as DMP user codes. . . . 47
Enabling PIN and user code padding. . . . 48

Chapter 5: Adding DMP Intrusion Panel devices

Preparing the DMP Intrusion Panel for integration. . . . 50
Configuring the time zone of the DMP Intrusion Panel. . . . 55
Time zones. . . . 56
Enrolling a DMP Intrusion Panel. . . . 58

Chapter 6: Configuring DMP Intrusion Panel devices

Changing the connection settings of a DMP Intrusion Panel intrusion detection unit. 65
Viewing and configuring DMP inputs and outputs. 67
Configuring a DMP input to raise a Trouble event. 68
Configuring a key fob to raise a Panic event. 69
Assigning cameras to intrusion detection areas and inputs. 72
Configuring bad zones and reviewing intrusion detection area arming parameters. 73
Mapping intrusion panel events to Security Center actions. 75

Chapter 7: DMP users

Importing DMP intrusion panel users as cardholders. 78
Exporting cardholders to a DMP Intrusion Panel. 79
Cardholders with multiple credentials. 82
Defining the ambush code as the duress cardholder. 83
Scheduling and automating cardholder export. 85

Chapter 8: Controlling DMP panels

Resetting the state of 24-hour inputs. 87

Chapter 9: Monitoring DMP devices

Supported reports. 89

Chapter 10: Maintenance and troubleshooting

DMP Intrusion Panel extension installed but missing from Security Desk and Config Tool. 91

Glossary 92
Where to find product information 94
Technical support 95

1

Introduction to the DMP Intrusion Panel extension

This section includes the following topics:

- "What is the DMP Intrusion Panel extension" on page 2
- "How the integration works" on page 3
- "Integration overview" on page 5
- "DMP Intrusion Panel terminology" on page 8
- "About DMP 24-hour zones" on page 9

What is the DMP Intrusion Panel extension

The DMP Intrusion Panel extension integrates DMP panels in Security Center so that users can monitor intrusions in DMP areas.

Features

You can use the extension to do the following:

- Monitor the current status of the intrusion detection units and related intrusion detection areas, inputs, and outputs.
- Monitor events and alarms as they are received from the intrusion panel.
- Silence alarms on intrusion detection areas.
- Bypass inputs.
- Configure event-to-actions for panel events.
- Generate reports on activities and events related to DMP entities.
- Link cameras to intrusion detection areas to view recorded video associated with events and alarms from the panel.
- Configure DMP users using Synergis.


Related Topics

Integration overview on page 5

How the integration works

The DMP Intrusion Panel extension is a software module that integrates the DMP Intrusion Panel into Security Center.

Architecture diagram for DMP Intrusion Panel integration

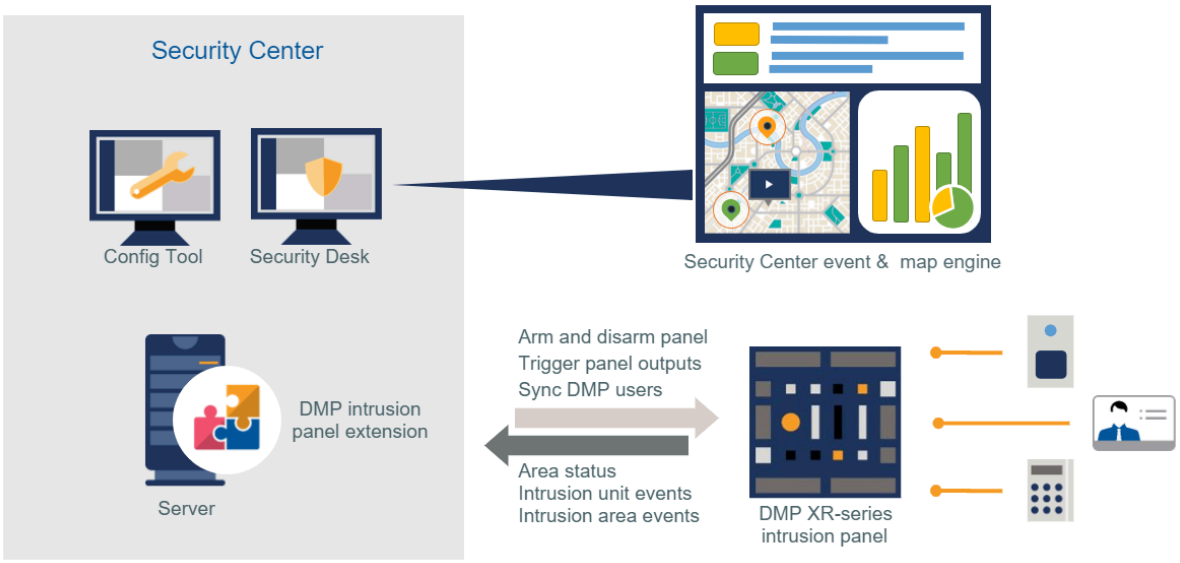

Components of DMP Intrusion Panel integration

- **DMP Intrusion Panel extension:** The DMP Intrusion Panel extension is installed on a Security Center server and adds DMP Intrusion Panel as an extension to the Intrusion Manager role. The Intrusion Manager role must be active before you can import the panels and related entities. The Intrusion Manager role receives events from the panel, reports them live in Security Desk, and logs them in a database for future reporting. The role also relays user commands to the panel.
- **Config Tool:** The DMP Intrusion Panel extension is also installed on a Config Tool workstation. The Security Center administrator uses Config Tool to create and configure the Intrusion Manager role. Using this role, integrators and administrators can add and manage the DMP Intrusion Panel.
- **Security Desk:** The DMP Intrusion Panel extension is installed on all Security Desk workstations. Security Desk operators can monitor and control the intrusion panels.
- **DMP XR-Series intrusion panel:** The DMP intrusion panels communicate with the extension over a TCP/IP Ethernet network.

Recommended use of DMP inputs

The main purpose of an input on a DMP intrusion panel is to trigger an alarm when the input state changes. When the input becomes active, the panel raises an alarm. Security Center uses this alarm to trigger an *Intrusion detection area alarm activated* event.

The DMP intrusion panels are not designed to capture rapid consecutive changes to their input states, such as doors being opened and closed rapidly, or motion sensors that detect constant movements. For this reason, we recommend that inputs on intrusion panels are only used for intrusion monitoring, and not for access control.

DMP intrusion panel connectivity options

When a DMP intrusion panel is enrolled using the Standard connection, the DMP intrusion extension communicates with the panel through the network programming port. When a transaction is complete, the extension releases the port.

The network programming port supports one remote session at a time; If a remote connection is already in progress when Security Center tries to connect to the intrusion panel, the connection fails and Security Center marks the panel as offline. When this happens, Security Center cannot synchronize or configure the panel, but still receives event notifications.

If you are using XR150/550-series intrusion panels with firmware 193 or later, you can use the Integrator or Entré connection to enroll your DMP intrusion detection panel, and free up the network programming port for use by Remote Link and other applications. Enrolling your DMP panel using the Integrator port or Entré port gives you the ability to enable the **Always stay connected** option. Use the Integrator port for communication between Security Center and the panel. Only use the Entré port for the Entré software by DMP.

Security Center releases its remote connection

During the following processes, Security Center connects to the panel, and then releases the connection when the process is completed:

- Enrolling a unit
- Requesting entity status (only for the first connection)
- Synchronizing the clock
- Configuring a DMP entity
- Synchronizing users; including pushing cardholders and pulling DMP user
- Sending an action, like bypass input
- Triggering outputs periodically

Except when outputs connect periodically

When an output's behavior is set as **Periodic**, Security Center maintains a remote connection to the panel indefinitely. If your DMP intrusion panel is enrolled using the Standard connection, then before you can configure the panel using another application, like Remote Link, you must first deactivate the intrusion detection unit in Security Center.

Related Topics

Integration overview on page 5

Integration overview

You can integrate DMP Intrusion Panels into Security Center using the DMP Intrusion Panel extension by following a sequence of steps.

Step	Task	Where to find more information
Understand prerequisites and key issues before deploying		
1	Learn what you can do using the extension.	• What is the DMP Intrusion Panel extension on page 2. • Supported devices on page 24. • Supported number of DMP intrusion panels on page 25. • Supported intrusion detection features on page 27.
2	Before installing the extension, read the release notes to learn about the new features, the known issues, and the limitations.	• What's new in version 4.5.0 on page 11. • Resolved issues in version 4.5.0 on page 11 • Known issues on page 16. • Limitations on page 18.
3	Learn about the different components and how they connect together.	• How the integration works on page 3. • DMP Intrusion Panel terminology on page 8.
4	Ensure that the server where the extension will be installed meets the recommended system requirements and is running a compatible version of Security Center.	• Product compatibility. • System requirements on page 22.
Prepare Security Center		
5	(Optional) In Security Center, create a georeferenced map.	• Refer to the following topics in the *Security Center Administrator Guide*: • Creating maps • Creating maps by connecting to a GIS • Georeferencing a map image • Supported map objects
6	Verify that the Security Center license has a valid certificate for the . Go to the Config Tool homepage, click **Aboutextension** > **Certificates**, and confirm that DMP Intrusion Panel is in the list.	• Your license information is included in the license update email that we sent you. This email includes links to the download package and other license information. • To acquire a license, see License options on page 23.
Deploy the extension		
7	On a Security Center server, download the extension and install it.	Downloading and installing the extension on page 35.

Step	Task	Where to find more information
8	Grant users the privileges that they need to use the extension.	• Required privileges on page 37. • Refer to "Assigning privileges to users" in the *Security Center Administrator Guide*. • For a list of all available privileges, refer to the Security Center privileges spreadsheet for your version. • Refer to "Assigning privileges to users" in the *Security Center Administrator Guide*. • For a list of all available privileges, refer to the Security Center privileges spreadsheet for your version.
9	If not yet done, create the Intrusion Manager role for managing the DMP Intrusion Panel extension.	Creating the Intrusion Manager role on page 41.
10	Schedule regular back ups and grooming of events.	Scheduling database backups and cleanups for the DMP Intrusion Panel extension on page 43.
11	(Optional) Change the extension configuration to suit your particular needs.	Configuring communications parameters on page 45
12	Configure the card credentials or the PINs to be pushed to the panel as DMP user codes	Pushing card credentials and PINs to the panel as DMP user codes on page 47
13	(Optional) Enable PIN padding.	Enabling PIN and user code padding on page 48.
Add and configure the devices		
14	Prepare the intrusion devices for enrollment.	• Preparing the DMP Intrusion Panel for integration on page 50. • Configuring the time zone of the DMP Intrusion Panel on page 55.
15	Add intrusion devices as intrusion detection units in Security Center.	• Enrolling a DMP Intrusion Panel on page 58.
16	Verify that the DMP inputs and outputs are listed as expected. (Optional) Change the names and descriptions of inputs and outputs.	Viewing and configuring DMP inputs and outputs on page 67.
17	(Optional) Configure inputs to raise a Trouble event.	Configuring a DMP input to raise a Trouble event on page 68.
18	(Optional) Assign cameras to intrusion detection areas and inputs so that you can view video of related events.	Assigning cameras to intrusion detection areas and inputs on page 72.
19	Review the arming configuration of your intrusion detection areas. (Optional) Change the Bad Zones setting.	Configuring bad zones and reviewing intrusion detection area arming parameters on page 73.

Step	Task	Where to find more information
20	Create event-to-action for intrusion detection events.	Mapping intrusion panel events to Security Center actions on page 75.
Synchronizing and configuring DMP user codes and Security Center cardholders		
21	Import the DMP users from a panel.	Importing DMP intrusion panel users as cardholders on page 78.
22	If you have Security Center cardholders you want to add as a user on the panel, export those cardholders to the DMP panel.	Exporting cardholders to a DMP Intrusion Panel on page 79.
23	Define the ambush code as the duress cardholder.	Defining the ambush code as the duress cardholder on page 83.
24	(Optional) Schedule automatic updates of users.	Scheduling and automating cardholder export on page 85.

DMP Intrusion Panel terminology

The DMP Intrusion Panel extension uses specific terms. Here are the definitions of some common terms and their equivalents in Security Center.

DMP term	Description	Security Center term
24-hour zone	24-hour zones include Panic, Emergency, and Supervisory. Unlike regular zones, a 24-hour zone is always armed and no area assignment is needed.	24H zones (an intrusion detection area)
Ambush	The duress code is used if an attacker or robber ambushes you and forces you to disarm the intrusion detection area.	Duress
Area	A group of zones configured on the intrusion panel that specify a physical area, such as a floor of a building. These groups can be monitored and armed in Security Desk.	Intrusion detection area
Control panel	The intrusion panel that can be monitored and controlled by Security Center	Intrusion detection unit
DMP command processor panel	The intrusion panel that can be monitored and controlled by Security Center	Intrusion detection unit
Output	Output pin connected to the intrusion panel.	Output
User code	The account a person uses to access the functionality of the intrusion panel, such as arming and disarming areas.	Cardholder
Zone[1]	Inputs for devices such as glass break detectors, motion sensors, temperature sensors, and so on, that are connected to the intrusion panel.	Input

[1]If you create a zone with a blank type in Remote Link, it will not appear in Security Center because the zone is not fully configured.

For detailed descriptions of the DMP terms, refer to the Appendix of the Programming Guide for your model of DMP Intrusion Panel, which is available for download from the DMP product page and from https://dmp.com/guides.

IMPORTANT: Content in this guide that references information found on third-party websites was accurate at the time of publication, however, this information is subject to change without prior notice fromGenetec Inc.

Related Topics

About DMP 24-hour zones on page 9
Integration overview on page 5

About DMP 24-hour zones

24-hour zones are inputs used to trigger alarms for emergency events. On DMP intrusion panels, these inputs are not associated to an area. In Security Center these inputs are associated to a single intrusion area called *24H zones*.

From the DMP intrusion panel and in Security Center, 24-hour inputs are only distinguishable from other input types by their behavior.

Intrusion detection areas for 24-hour inputs

When a DMP intrusion panel is enrolled in Security Center, a *24H zones* intrusion detection area is automatically created by the Intrusion Manager role, regardless of whether the panel has 24-hour inputs or not.

The running state of the *24H zones* intrusion detection area follows the state of the intrusion detection unit. If the unit is online, the area will be online, even if there are no inputs associated to that intrusion detection area.

All 24-hour inputs of an intrusion panel are associated to the *24H zones* intrusion detection area in Security Center. For a DMP intrusion panel, the following input types are considered 24-hour inputs:

- Panic
- Emergency
- Supervisory
- Arming

The *24H zones* area is always in the *Master armed* arming state. When the state changes on one of the inputs attributed to the area, an alarm is triggered.

When the duress code is entered on a keypad, an *Intrusion detection area duress* event is triggered on the *24H zones* intrusion detection area.

Resetting a 24-hour input to Normal

When a 24-hour input returns to its *Normal* state on the panel after being activated, this state is not automatically reflected in Security Center. You must reset the state of the input.

Related Topics

Resetting the state of 24-hour inputs on page 87
DMP Intrusion Panel terminology on page 8

2

Release notes

This section includes the following topics:

- "What's new in version 4.5.0" on page 11
- "Differences between DMP control panel 5.8 and DMP Intrusion Panel 4.0 and later" on page 14
- "Known issues" on page 16
- "Limitations" on page 18
- "Product compatibility" on page 21
- "System requirements" on page 22
- "License options" on page 23
- "Supported devices" on page 24
- "Supported number of DMP intrusion panels" on page 25
- "Best practices for connecting DMP intrusion panels to the network" on page 26
- "Supported intrusion detection features" on page 27
- "Custom events added by the DMP Intrusion Panel extension" on page 28

What's new in version 4.5.0

The DMP Intrusion Panel extension 4.5.0 includes the following new features.

- **Failover communication support:** You can now configure the DMP Receiver software to push all DMP events from the panel if the primary connection between DMP and the Intrusion Manager fails. For more information, see Configuring communications parameters.
- **Trigger alarms from a panel keypad:** You can now trigger *Panic 19*, *Emergency 29*, and *Fire 39* alarms in Security Center by pressing their corresponding button on the DMP panel keypad.
- **View DMP system users that trigger events in the DMP panel:** You can now view the DMP system user that triggers events in the DMP panel in the *Monitoring* task. For more information, see System users in Configuring communications parameters for all DMP intrusion detection units.
- **Passphrase protection for events:** You can now protect commands and events sent over a public network by configuring a password.

  IMPORTANT: Passphrase can only be configured for panels enrolled with the integrator path connection. For more information about configuring passphrase, see Configuring communication parameters for all DMP intrusion detection units.
- **Custom failover events:** The DMP Intrusion Panel extension 4.5.0 automatically creates custom failover events in Security Center. These custom events are raised when you lose or recover the primary connection and can be tracked in the Intrusion unit report. For more information, see Mapping intrusion panel events to Security Center actions.
- **Trigger Panic alarms using a Key Fob:** You can now raise a *Panic* event in the DMP intrusion detection areas by pressing key fob buttons. The *Panic* event can be tracked in the *Monitoring* and the *Intrusion detection* tasks.

  IMPORTANT: This feature is only compatible with DMP intrusion units with firmware versions 243 or later for North American and 731 for European panels. For more information, see Configuring a key fob to raise a Panic event on page 69.
- **Firmware updated:** The DMP Intrusion Panel extension now supports firmware 231, 243 and 253 for North American XR150 and XR550 panels, and firmware 731 for European panels. For more information, see Supported devices in DMP Intrusion Panel on the TechDoc Hub.

Related Topics

Integration overview on page 5

Resolved issues in version 4.5.0

The following issues are resolved in the DMP Intrusion Panel extension 4.5.0.

Issue	Description
4663896	When an unstable network causes multiple errors on a panel, it might trigger an automatic forced push to the panel resulting in user profiles being reset.
4517588	After updating a panel's input type in the unit's *Peripherals* page, the input's tamper setting is deactivated.
4500580	Password field formatting is not the same for the extension setting and the panel entity settings. This leads to user entry errors.
4499885	The DMP Intrusion Panel extension passphrase feature does not display a warning for passwords that don't respect the strength requirements.

Issue	Description
4470103	When an event port is flooded with events, the associated intrusion unit gets overwhelmed and shuts down.
4467229	The plugin does not show any warning when a significant amount of time has passed without receiving events or status updates.
4430422 4430401	If a user synchronization process fails, user profiles might be reset to the factory default causing users to lose their previously configured access.
4400562	After a driver restart, there is no event to notify the user that the driver is back online.
4397837	Events that happen while a `Driver restarting` warning is active do not appear in the *Intrusion Detection Activities* report.
4386042	After upgrading to build 4.4.39.0, panels show a `Driver restarting` warning message until the unit is power cycled.
4356194	When the **Assign automatically** option for event ports is selected during panel enrollment, and a `System.Net.Sockets.SocketException: An attempt was made to access a socket in a way forbidden by its access permissions` exception occurs, the system cannot automatically assign a new port to the panel.
4355168	*Disarm* events that happen while a synchronization is active do not appear in the *Intrusion Detection Activities* report.
4160277	If an alarm event without an associated intrusion area triggers while a panel is offline, the event does not show the panel's parent intrusion area when reported in the *Intrusion Detection Activities* task.
4160256	When an unhandled event occurs on a panel, all the panel entities on the system re-synchronize.
4083783	Monitoring task in Security Desk and the intrusion unit report does not inform about the status of a wireless input if it goes missing.
4011229	Cardholder synchronization takes 10 minutes if the Genetec™ Intrusion Protocol extension is installed with the plugin.
3996728	Moving panels to a new Intrusion Manager role alters the name of all the associated intrusion areas.
3923629	Importing DMP Intrusion Panel users as cardholders takes over 45 minutes when the number of cardholders and credentials are over 200,000.
3922478	Selecting the **Assign automatically** option for event ports during panel enrollment assigns already-used ports to new panels. This causes duplicate event ports to appear in the system.
3819295	*Arm* and *Disarm* events do not appear in the *Monitoring* or *Intrusion Detection Activities* tasks if the panel is disarmed using Remote Link.
3805498	After creating or updating a cardholder's credential, the PIN credential is not pushed to the panels.

Issue	Description
3774325	The intrusion detection unit must be restarted to apply changes made to cardholders when the *Push mode* is switched from **Manual only**.
3511824	A DMP 1100T device type configured with **Competitor Wireless** enabled never comes online in Security Center.
3486470	After upgrading to version 4.4.0, the names of panels and associated areas are altered when enrolling international panels using firmware protocol 721.

Related Topics

Integration overview on page 5

Differences between DMP control panel 5.8 and DMP Intrusion Panel 4.0 and later

DMP Intrusion Panel extension 4.0 and later replaces the DMP control panel extension 5.8 that was built into Security Center 5.8.

End-of-life for built-in DMP control panel

The DMP control panel extension was built into Security Center 5.8 and earlier. This product is end-of-life, and is unavailable starting in Security Center 5.9.

Comparison of features

The DMP Intrusion Panel extension is intended to replace the legacy DMP control panel, which was a built-in add-on in Security Center 5.8 and earlier.

Feature or functionality	DMP control panel extension 5.8 and earlier	DMP Intrusion Panel extension 4.0 and later
Installation	When users install Security Center, the extension is included.	User downloads and installs the extension on a pre-existing Security Center server.
Panel remote session	A panel supports a single remote connection at one time.[1]	
Remote connection	Security Center remains connected to the panel at all times. To configure a panel using a remote configuration application, like Remote Link, you must deactivate the intrusion detection unit in Security Center. Then, make your changes, disconnect Remote Link, and then reactivate the unit.	Security Center only connects to the panel when required, and then releases the connection, unless the Integrator or Entré connection is used. When either of these connections is used, you can configure the connection to stay open. When a remote configuration application, like Remote Link, is connected to the panel, Security Center receives events from the panel, but cannot synchronize with or configure the panel. If Security Center tries to connect to the panel, but cannot, it puts the intrusion detection unit offline (red).
Scalability and performance	Supports 10 panels with a combined total of 890 entities per Intrusion Manager role.	Supports 300 panels with a combined total of 90,000 entities per Intrusion Manager role.
Modification of input behavior	To change the behavior of an input, from the intrusion detection unit's **Peripherals** tab, disable the **Real-time status** option, and then change the **Contact type**.	To change the behavior of an input, configure the input to raise a **Trouble** event.

[1]DMP intrusion panel extension version 4.1 and later adds support for the Integrator port.

Related Topics

Configuring a DMP input to raise a Trouble event on page 68
Integration overview on page 5

Known issues

The DMP Intrusion Panel extension 4.5.0 includes the following known issues.

Issue	Found In Release	Description
5036548	4.5.0	If the DMP Intrusion Panel extension has the **Receiver** communication mode enabled, the *Remote programming complete* event appears twice in the *Monitoring* task report pane.
5036272	4.5.0	Using the **Override** option for a panel's **Synchronization interval** does not work as expected. The panel connection refreshes, but the override does not apply.
4218127	4.4.0	It is possible to push a duplicate PIN to a panel even though DMP intrusion panels do not support duplicate PINs.
4218122	4.4.0	After editing a cardholder's or cardholder group's profile in Security Center, the changes do not synchronize automatically with the panel. **Workaround:** Perform a manual sync to push the changes.
3674104	4.4.0	When cardholder synchronization fails due to short PIN length, the plugin does not display an error message about the reason for failure.
2526633	4.1	Switching the **Synchronization interval** of a DMP Intrusion Panel from **Inherit from extension** to **Override** changes the interval to one minute, no matter what the interval was set to.
2521413	4.1	When you want to add new cardholders to the DMP Intrusion Panel, all available cardholders are listed in Security Center, even if some have already been added to the list. If you have hundreds of cardholders, it can be difficult to know which cardholders have already been added. **Workaround:** Use cardholder groups instead of adding individual cardholders.
3482501	4.0	Programming a DMP XR150FC or XR550FC panel with a FIRE keypad stops the integration from working. **Workaround:** Use a separate, non-FC panel for intrusion detection.
2315583	4.0	From an intrusion detection unit's *User Codes* tab, when editing a cardholder's profiles, you can add more profiles than allowed by the panel. However, Security Center only pushes the number of profiles allowed and starts with the first profile in the list.

Issue	Found In Release	Description
2306489	4.0	In Config Tool, cardholders are imported into the default partition, so users who belong to different partitions are unable to see the imported cardholders in the *User codes* window of the *Intrusion detection* task.
2306482	4.0	The *User codes* window of the *Intrusion detection* task shows no indication of whether a cardholder profile is enabled or disabled.
2239264	4.0	All DMP intrusion detection units have an area named *24H zones*. From the *Area View* task, it is not possible to differentiate which *24H zones* area belongs to which unit. **Workaround:** Select the area on its **Identity** page, in the **Relationships** box, expand **Controlled by** to see which unit owns the area. Rename the 24H zone area to include the name of the intrusion detection unit.
2195674	4.0	If a cardholder fails to be pushed to the panel successfully, users cannot know which cardholder failed nor what caused the failure. **Workaround:** To see which cardholders failed to be pushed to a panel, review the DMP logs in Server Admin and the logs in the Windows Event Viewer app.
2159060	4.0	If an input, output, or area is renamed quickly and multiple times in Security Center, the changes might fail to be made on the panel. So, the name of the intrusion detection unit reverts to the name that is set on the panel.
2120293	4.0	When a panel is configured to use an event port that is already in use by another application, Security Center stops receiving events from the panel. **Workaround:** Set the port to be "Automatically assigned" so that Intrusion Manager always uses a port that is available.

Related Topics

Integration overview on page 5

Limitations

The DMP Intrusion Panel extension 4.5.0 includes the following known limitations.

Issue	Found In Release	Title
5267206	4.5.0	DMP devices with model numbers ending in `-CAN` are unable to use remote arming. Trying to use remote arming on these devices fails in Security Center and shows a `Remote arming with Canada Features enabled is not allowed` error message in Remote Link.
5039171	4.5.0	When **Receiver** communication is enabled, the panel does not send *Trouble/short* or *Open* input states to Security Center. As a result, affected inputs incorrectly appear as green (normal) in the **Peripherals** tab, potentially masking wiring or input issues. **NOTE:** 24-hour input types are not impacted by this limitation.
5038952	4.5.0	Enrolling a panel or moving it to an Intrusion Manager using the **Receiver** communication mode will cause errors if the intrusion panel does not have a receiver configured.
5038518	4.5.0	When a user triggers the panic button on a keypad, the alarm sound cannot be silenced remotely from the DMP Intrusion Panel extension. **Workaround:** Use the keypad to silence the alarm sound on the panel.
5034728	4.5.0	An intrusion panel goes offline when its communication path is changed to a different DMP receiver unit.
4899361	4.5.0	An Intrusion Manager configured with the **Receiver** communication mode may display an intrusion panel's status as offline when the virtual receiver service is restarted.
4500246	4.5.0	A DMP panel enrolled using the Standard connection goes offline when configured with a passphrase in Config Tool. **Workaround:** Select **Override** and keep the **Passphrase** field empty in the **Properties** tab of the Intrusion Manager role. Panels enrolled using the Standard connection do not support Passphrases.
468421	4.5.0	Pressing the key fob button does not raise a *Panic* event for a DMP intrusion unit with firmware version 243 or later for North American and 731 for European panels. This occurs when a key fob is configured as a zone in the Remote Link application. **Workaround:** Enroll the key fob in the Remote Link application instead of configuring it as a zone. For more information, see Configuring a key fob to raise a Panic event on page 69.
4355199	4.5.0	When two or more DMP intrusion panels with the same account number switch to their backup connection at the same time, the plugin doesn't accurately display source panels for events.
3835257	4.5.0	You cannot activate or deactivate a DMP Intrusion Panel while running in failover mode. **Workaround:** Connect the panel back to its primary connection.
3526304	4.5.0	Credentials of all cardholders are named as *DMP imported PIN* in Security Center after they are imported from the DMP panel.

Issue	Found In Release	Title
3343335	4.3.0	An area must be added to the **Event monitoring** list in Security Desk in order for the **Initiator** column in the **Monitoring** task to show information when the area is armed and disarmed.
3333559	4.3.0	If a cardholder is modified in DMP Remote Link, the cardholder mapping does not match with Security Center, which causes incorrect user reporting. **Workaround:** Modify cardholders in Security Center.
3333022	4.3.0	If a cardholder is deleted from Security Center after synchronization with the panel, and then the cardholder tries to arm or disarm the panel from the touchscreen, the **Initiator** field in the **Monitoring** task is left blank and no warning is triggered.
3297266	4.2.2	For a zone set to the **Arming** type, the panel does not send events when the state changes. This prevents automatic updates in the *Maps* or *Monitoring* tasks. **Workaround:** Manually arm and disarm the panel.
2513772	DMP 4.1	When using the Integrator or Entré port, you must leave the **Remote key** field blank in the Config Tool *Properties* window of the DMP Intrusion Panel. The field must be left blank even if you have configured a remote key on the panel itself.
2293243	DMP 4.0	DMP Intrusion Panels do not support the *Trigger intrusion alarm* feature of Security Center.
2293240	DMP 4.0	DMP Intrusion Panels do not support the *Acknowledge intrusion alarm* feature of Security Center.
2293238	DMP 4.0	When silencing an area from Security Center, all areas that are in alarm on the same panel are also silenced.
2283510	DMP 4.0	When a DMP Intrusion Panel disconnects from Security Center while an input is in the "Trouble" state, the input changes to the "Active" state once the panel reconnects. This state is incorrect.
2283508	DMP 4.0	When a DMP Intrusion Panel disconnects from Security Center while an area is in the "Alarm silenced" state, the area changes to the "Alarm active" state once the panel reconnects. This state is incorrect.
2245011	DMP 4.0	When you access a DMP intrusion detection unit from a Security Center machine, Config Tool stops responding. This occurs when the Security Center machine does not have the DMP Intrusion Panelextension4.5. In response, Security Center tries to use the built-in DMP Intrusion Panel extension. **Workaround:** Install the DMP Intrusion Panel extension 4.5 on the workstation.
2221559	DMP 4.0	Events are raised twice when monitoring grace period events in Security Desk.
2200508	DMP 4.0	When a DMP Intrusion Panel runs firmware v.109, the panel stops sending events. **NOTE:** There are 3 possible solutions: 1. Deactivate and then activate the intrusion detection unit in Security Center. 2. If the intrusion panel is configured with a communication path, remove it. 3. Upgrade the firmware on the intrusion panel to a newer version.
2184458	DMP 4.0	DMP Intrusion Panels do not support the cardholder settings *Set expiration on first use*.

Issue	Found In Release	Title
2177190	DMP 4.0	The names of DMP entities (intrusion detection area, input, output, and user) must be 32 characters or less. If you push longer names to the intrusion panel, the panel trims the names. As a result, the names in Security Center are different from the names on the panel.
2177188	DMP 4.0	When the DMP entity names in Security Center contain the special characters ! @ # $ % & * ( ) _ + - ? , the DMP Intrusion Panel replaces the characters with a space. As a result, the names in Security Center are different from the names on the panel. **Workaround:** Do not use special characters in the names of DMP entities (intrusion detection area, input, output, and user).
2148754	DMP 4.0	When an input is bypassed on the DMP Intrusion Panel and its type is changed to "Priority zone", it is impossible to unbypass the input from Security Center. **Workaround:** Bypass the input (zone) from the panel's keypad.
2139868	DMP 4.0	When a user's privileges deny viewing intrusion detection units, the DMP *Properties* page of the intrusion detection area is not visible. **Workaround:** Grant the user the **View intrusion detection unit** privilege.
2139534	DMP 4.0	When a panel is offline, you can change the names of its inputs and outputs in Security Center, but the changes are lost when the panel comes back online. **Workaround:** Change the properties of entities when the panel is online.
2119497	DMP 4.0	DMP Intrusion Panels only support English language characters. So when you use accented characters in the names of DMP entities in Security Center, the unaccented characters replace the accented characters on the panel.
2115036	DMP 4.0	While an area is Arming, the DMP intrusion detection unit reports the area as Armed.

Related Topics

Integration overview on page 5

Product compatibility

To be eligible for technical support, you must install the DMP Intrusion Panel extension with versions of Security Center and third-party software that are certified or supported by design.

For the latest compatibility information, see Supported plugins in Security Center on the Genetec™ TechDoc Hub.

System requirements

To ensure that the DMP Intrusion Panel extension 4.5.0 performs as expected, the extension must be installed on a computer that meets the recommended specifications for Security Center.

Refer to the *server requirements* and *client workstation requirements* topics in the Security Center system requirements for the version of Security Center that you are using.

Related Topics

Integration overview on page 5

License options

Before installing the extension, you must update your Security Center license to include a certificate for the extension. To update your license, contact us and provide the part numbers listed in this topic.

Part number	Description	Requirements
GSC-AP-BASE	This package is the base license for intrusion panel extensions. You need one license per Security Center Directory. This part is included in Security Center 5.11 and later.	• Synergis Standard, Professional, or Enterprise • Omnicast Professional or Enterprise • Genetec Advantage System Maintenance Agreement (SMA) **NOTE:** A Synergis license is required to manage and synchronize intrusion panel users. An Omnicast license is required to assign cameras to DMP intrusion detection areas.
GSC-1AP-DMP	This package provides a license for a single DMP Intrusion Panel connection. You need one part for each DMP Intrusion Panel.	GSC-AP-BASE

Does your Security Center license include all the options you need?

In addition to a certificate for your extension, ensure that your Security Center license includes all the options you expect to use in Security Center. For example, if you integrated a system that has visitors, you need the Visitors option in Security Center. If an option is missing, an error message is displayed when the server tries to create or modify the entity related to that option.

For a list of available license options, see "License options" in the *Security Center Administrator Guide*.

Related Topics

Integration overview on page 5

Supported devices

Security Center supports the following DMP Intrusion Panel as intrusion detection units.

An intrusion detection unit is a device, such as an intrusion panel, a control panel, or a receiver, that is monitored and controlled by an Intrusion Manager.

NOTE: Fire alarm operations and programming panels with FIRE-type keypads are unsupported by this integration.

For each device, the corresponding firmware and certification level is listed.

- **Certified:** The device has been tested and validated by Genetec Inc.
- **Supported by design:** The device shares the same design characteristics as a certified device but has not been validated or tested by Genetec Inc.

Model	Device type	Firmware version
XR500N	Intrusion panel	**Certified:** 212
XR500E	Intrusion panel	**Certified:** 212
XR150DN	Intrusion panel	**Certified:** 109, 171, 183, 191, 193, 202, 211, 213, 221, 231, 243, and 253
XR550DN	Intrusion panel	**Certified:** 109, 171, 183, 191, 193, 202, 211, 213, 231, 243, and 253
XR550INT	Intrusion panel	**Certified:** 683, 691, 702, 711, 713, and 731

Related Topics

Integration overview on page 5

Supported number of DMP intrusion panels

When planning the number of panels you can integrate in Security Center, you need to know if the servers in your system meet the Recommended system requirements and how many entities there are per panel.

The following table lists the maximum number of panels given the following assumptions:

- The Security Center servers meet the Recommended system requirements.
- The maximum number of Intrusion Manager roles is 20 per Directory.
- Each Intrusion Manager receives approximately 70 events per second with occasional bursts of 100 events per second.
- The combined number of entities for 100 panels is 8,800 or less.

NOTE: These limits are based on one Intrusion Manager role per server, and might be further affected by the performance of the server.

	No. of intrusion detection units	No. of entities	No. of events per second
Per Intrusion Manager role	100	8,800	70
Per Directory	2,000	176,000	1,400

Example

On a server that meets the recommended system requirements, you could easily connect 100 intrusion panels, each with 50 inputs, 10 areas, and 5 outputs, for a total of 65 entities per panel.

Related Topics

Integration overview on page 5

Best practices for connecting DMP intrusion panels to the network

Intrusion panels are not designed to withstand heavy traffic from the network, especially when broadcast messages occur frequently. Because the panel needs to process incoming packets to check whether it is the recipient, this might lead to increased demand on processing resources. Under heavy network load conditions, you might notice that the panel drops offline and reconnects repeatedly.

To avoid having the panel reconnect repeatedly, we recommend that you connect the panel to Security Center through an isolated network to isolate the panel from traffic for which it is not the recipient. Many panels can be connected to the same isolated network, as long as the network is not also the hub for other traffic which does not involve the panels.

You can build an isolated network by adding a dedicated hardware network node (switch or router), or by creating a dedicated Virtual Local Area Network (VLAN) on a network node that provides network node configuration capabilities.

Related Topics

Integration overview on page 5

Supported intrusion detection features

Discover the intrusion detection features that are supported in Security Center for an integration with DMP Intrusion Panel.

For a list of features supported by your plugin, download the feature comparison PDF from the TechDocs Hub.

Feature comparison for intrusion detection extensions and plugins.

Related Topics

Integration overview on page 5

Custom events added by the DMP Intrusion Panel extension

The DMP Intrusion Panel extension adds custom events to Security Center. These events can be used as query filters in activity reports or to create event-to-actions.

IMPORTANT: If these events are not displayed in the *Custom events* list in Config Tool, the extension is not installed on the local computer.

Custom events

The DMP Intrusion Panel extension adds all of the DMP system messages as custom events. For a listing and description of the custom events, contact DMP.

IMPORTANT: Content in this guide that references information found on third-party websites was accurate at the time of publication, however, this information is subject to change without prior notice from Genetec Inc.

3

Upgrading the DMP Intrusion Panel extension

This section includes the following topics:

- "Upgrading to version 4.5.0" on page 30

Upgrading to version 4.5.0

To run the latest release of the DMP Intrusion Panel extension, you can upgrade directly from any earlier version of the extension.

What you should know

- You can upgrade directly from any earlier version of the DMP extension.
- An upgrade keeps your current entities and their configuration.
- The Directory database contains all your DMP entities.
- The Intrusion Manager database contains all your DMP event notifications.
- It is best practice to back up your databases before an upgrade.
  BEST PRACTICE: If you are upgrading from versions older than 4.4.36, it is recommended to copy and save the *appsettings.json* file before upgrading. The *appsettings.json* file contains private user settings and is deleted after upgrading to version 4.5.0.

Procedure

1 (Optional) Open Server Admin and backup the Directory database.


2 In Config Tool, make sure the Intrusion Manager role is running.

3 (Optional) From the Intrusion Manager role, click the **Resources** tab, and then back up the database.

4 From the Intrusion Manager role, make sure that your DMP Intrusion Panels are connected.

5 Download and install the new extension.

6 From the Intrusion Manager role, click the **Extensions** tab, and confirm that you have the new options shown in the following image.

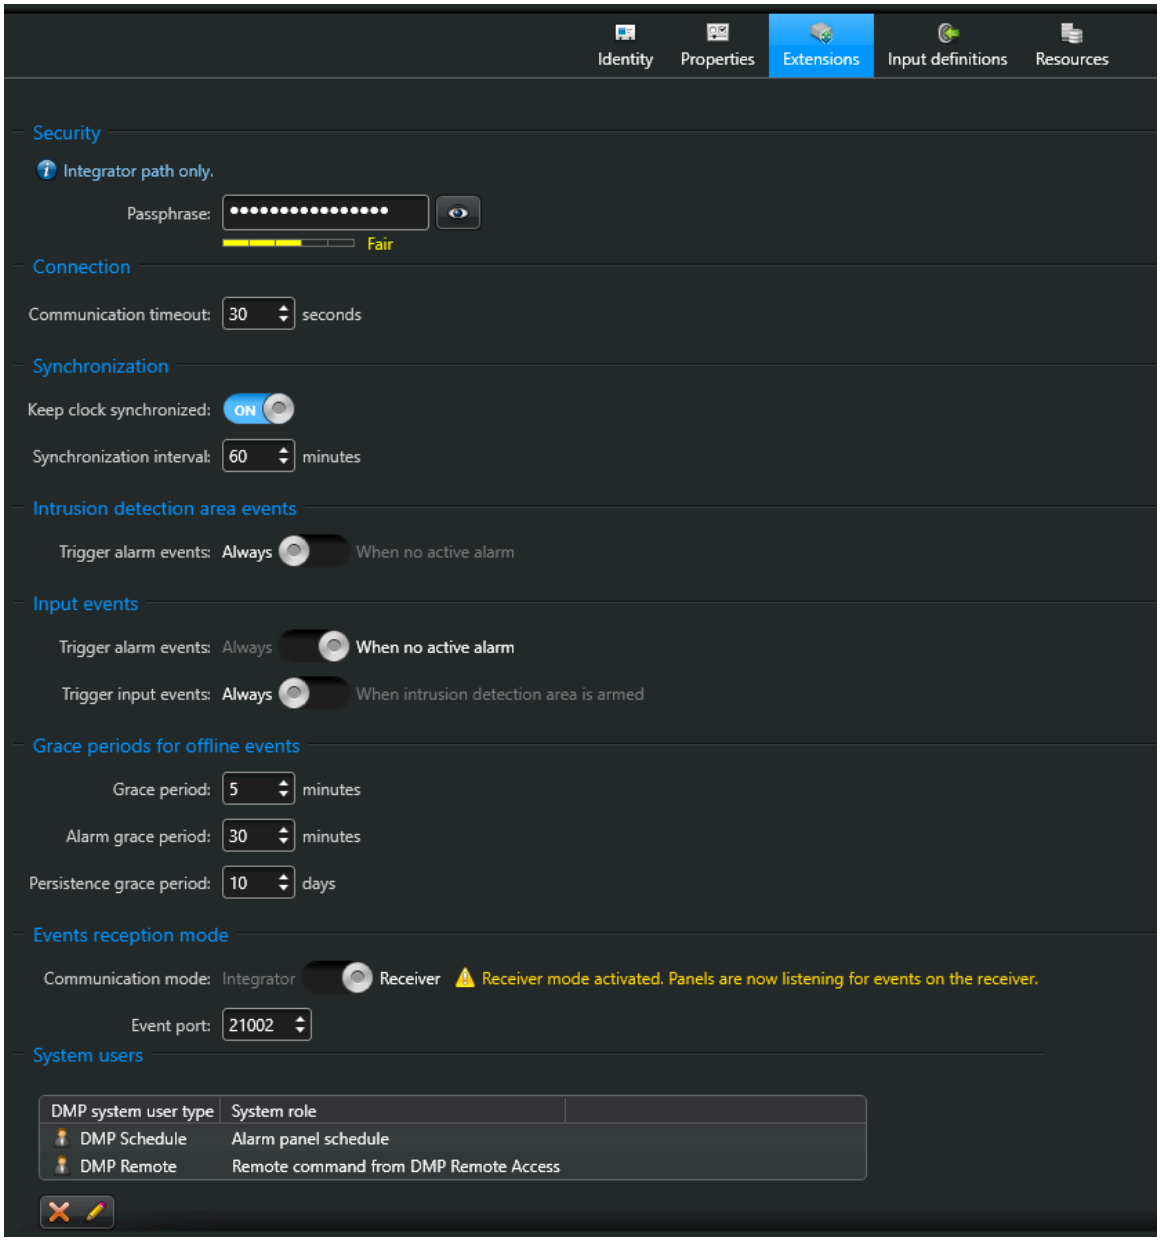

7 Click the **Resources** tab, and schedule regular backups and cleanups of the role database.

Related Topics

Downloading and installing the extension on page 35

4

Deploying the DMP Intrusion Panel extension

This section includes the following topics:

- "Ports used by the DMP Intrusion Panel extension" on page 33
- "Downloading and installing the extension" on page 35
- "Performing a silent installation of the extension" on page 36
- "Required privileges" on page 37
- "Creating the Intrusion Manager role" on page 41
- "Scheduling database backups and cleanups for the DMP Intrusion Panel extension" on page 43
- "Configuring communications parameters " on page 45
- "Pushing card credentials and PINs to the panel as DMP user codes" on page 47
- "Enabling PIN and user code padding" on page 48

Ports used by the DMP Intrusion Panel extension

Before installing the DMP Intrusion Panel extension, you must ensure that the required ports are open on all network switch routers and firewalls, and that no other applications are using these ports.

It is recommended that you keep the ports at their default values. If you make changes to user configurable ports, ensure that the inbound port number is correctly set, otherwise you might not receive events and state changes when activity happens on the panel.

IMPORTANT: Communication between the plugin and the DMP Intrusion Panel does not protect the integrity and confidentiality of data. As a best practice, deploy the plugin on the same subnet as the third-party DMP Intrusion Panel, within a closed network.

Regular (PC Log) connection

Application	Inbound	Outbound	Configu	Port usage
DMP panel command connection	-	TCP 2001	Yes	Network programming and intrusion command port
DMP event connection	Automatically selected	-	Yes	Event callback port **NOTE:** Your DMP panel must be able to connect to the Intrusion Manager on this port. This port must be unique per panel, per Intrusion Manager, and per expansion server. Event port overlap is not allowed on the same Intrusion Manager role and server.

Integrator path connection

Application	Inbound	Outbound	Configu	Port usage
DMP panel command connection	-	TCP 8011	Yes	Network programming and intrusion command port
DMP event connection	TCP 8001	-	Yes	Event callback port **NOTE:** Your DMP panel must be able to connect to the Intrusion Manager on this port. This port must be unique per panel on the Intrusion Manager. Event port overlap is not allowed on the same Intrusion Manager.

Entré path connection

Application	Inbound	Outbound	Configu	Port usage
DMP panel command connection	-	TCP 2022	Yes	Network programming and intrusion command port
DMP event connection	TCP 2001	-	Yes	Event callback port **NOTE:** Your DMP panel must be able to connect to the Intrusion Manager on this port. This port must be unique per panel on the Intrusion Manager. Event port overlap is not allowed on the same Intrusion Manager.

Downloading and installing the extension

To monitor and control DMP Intrusion Panels from Security Center, you must install the DMP Intrusion Panel extension on a Security Center server and on all client workstations.

Before you begin

Ensure the following:

- Your server meets the recommended system requirements.
- A compatible version of Security Center is installed.

IMPORTANT: Communication between the plugin and the DMP Intrusion Panel does not protect the integrity and confidentiality of data. As a best practice, deploy the plugin on the same subnet as the third-party DMP Intrusion Panel, within a closed network.

What you should know

- Although it is possible to host the Intrusion Manager role on any server, it is a best practice to host that role on a dedicated expansion server for best system performance.
- If you already have an Intrusion Manager role set up, install the extension on that server.
- For your operators to have access to the features added by this extension, you must install this extension on all Security Center client workstations.

Procedure

1 Open the GTAP Product Download page.

2 From the **Download Finder** list, select your version of Security Center.

3 Search for your package by name and download it.

4 Click the downloaded *.exe* file to unzip it.
By default, the file is unzipped to *C:\Genetec*.

5 Stop all Genetec applications, including Genetec™ Server, Security Desk, and Config Tool.
NOTE: If you do not stop the Genetec™ applications, you might be prompted by the installer to reboot the Windows server at the end of the installation. If prompted, you must reboot to properly complete the installation.

6 Open the extracted folder, right-click the *setup.exe* file, and click **Run as administrator**.

7 Follow the installation instructions.

8 On the *Installation Wizard Completed* page, click **Finish**.
IMPORTANT: The **Restart Genetec™ Server** option is selected by default. You can clear this option if you do not want to restart the Genetec™ Server immediately. However, you must restart the Genetec™ Server to complete the installation.

After you finish

If it is not already done, create the Intrusion Manager role.

Related Topics

Upgrading to version 4.5.0 on page 30
Integration overview on page 5

Performing a silent installation of the extension

You can automate the process of installing the DMP Intrusion Panel extension by installing it in silent mode.

Before you begin

Ensure the following:

- Your server meets the recommended system requirements.
- A compatible version of Security Center is installed.

What you should know

- A silent installation is an automated way of installing software without using an installer. The silent installation is run from the command prompt using the *setup.exe* executable, and Windows Installer commands.
- A silent install will install the plugin using its default settings.
- Although it is possible to host the Intrusion Manager role on any server, it is a best practice to host that role on a dedicated expansion server for best system performance.
- If you already have an Intrusion Manager role set up, install the extension on that server.
- For your operators to have access to the features added by this extension, you must install this extension on all Security Center client workstations.

Procedure

1 Open the GTAP Product Download page.

2 From the **Download Finder** list, select your version of Security Center.

3 Search for your package by name and download it.

4 Click the downloaded *.exe* file to unzip it.

By default, the file is unzipped to *C:\Genetec*.

5 In Windows, right-click the **Command Prompt**, and then click **Run as administrator**.

6 In the Command Prompt, enter the following command line:

IMPORTANT: Enter the commands without line breaks or hard returns except at the end of the line.

```
"Genetec DMP Intrusion Extension Setup.exe" /silent /ISInstallDir_PluginName="C:
\Program Files (x86)\Genetec Intrusion Extensions\DMP" RESTART_GENETEC_SERVER="1"
```

When the installation is complete, Security Center will restart.

The plugin is ready for use.

Required privileges

For administrators to install and configure the extension in Config Tool, and for operators to monitor the DMP Intrusion Panel in Security Desk, the correct user privileges must be granted to their user accounts.

Privileges added by the DMP Intrusion Panel extension

The following table lists the privileges added to Security Center when the extension is installed. If all of these privileges are missing from the privileges list in your user accounts, then the extension is not installed on your local computer.

Although every company's organization is unique, we typically assign Config Tool and Security Desk privileges to users who install the extension and set up the Security Desk workstations for operators. Operators are usually granted access to Security Desk privileges. Some privileges are required by all users.

Legend for applications:

- **SD:** Security Desk
- **CT:** Config Tool

Privileges	Description	Application	User role
View intrusion detection unit users	To view the *Users* page of an intrusion detection unit in Config Tool.*	CT	Admin
Modify intrusion detection unit users	To modify the *Users* page of an intrusion detection unit in Config Tool.*	CT	Admin
Reset sensors	To reset the state of all 24-hour wireless inputs to *Normal* in Security Center from Security Desk.	SD	Operator

*This privilege is installed by both the DMP and Bosch extensions.

Privileges common to all plugins and extensions

Administrators have access to all privileges. However, if you create a user account from the Provisioning template, and you want this user to add and configure your extension, that user needs the following Security Center privileges.

Privilege	Description	Application	User role
View license	Allows the user to view the software license.	CT	Admin
View role properties	Allows the user to view role properties.	CT	Admin
Modify role properties	Allows the user to modify role properties.	CT	Admin
Add roles	Allows the user to add roles.	CT	Admin
Delete roles	Allows the user to delete roles.	CT	Admin
View server properties	Allows the user to view server properties.	CT	Admin
Modify custom field definitions	Allows the user to add, modify, and delete custom field definitions and custom data types.	CT	Admin

Privilege	Description	Application	User role
Modify custom events	Allows the user to add, modify, and delete custom events.	CT	Admin
Modify event-to-actions	Allows the user to add, modify, and delete event-to-actions.	CT	Admin

Privileges common to all intrusion detection extensions

Privilege	Task
Application privileges	
Config Tool	To use Config Tool.
Security Desk	To use Security Desk.
Administrative privileges > Physical entities	
View intrusion detection area properties	To view the intrusion detection area configuration pages in Config Tool.
Modify intrusion detection area properties	To modify the intrusion detection area configurations in Config Tool.
Add and delete intrusion detection areas	To add or delete intrusion detection areas in Config Tool.
View intrusion detection unit properties	To view the intrusion detection unit configuration pages in Config Tool.
Modify intrusion detection unit properties	To modify the intrusion detection unit configurations in Config Tool.
Add and delete intrusion detection units	To add or delete intrusion detection units in Config Tool.
Reset intrusion detection units	To restart the unit.
Upgrade intrusion detection units	To upgrade the firmware and platform components of an intrusion detection unit.
Administrative privileges > Alarm management	
View alarm properties	To view alarm configuration pages in Config Tool.
Modify alarm properties	To modify alarm configuration settings in Config Tool.
Add and delete alarms	To add or delete alarms in Config Tool.
Task privileges > Administration	
Intrusion detection	To use the *Intrusion detection* task in Security Desk.
Task privileges > Operation	

Privilege	Task
Monitoring	To use the *Monitoring* task in Security Desk.
Task privileges > Investigation	
Intrusion detection area activities	To use the *Intrusion detection area activities* task in Security Desk.
Task privileges > Maintenance	
Intrusion detection unit events	To use the *Intrusion detection unit events* task in Security Desk.
Task privileges > Alarm management	
Alarm monitoring	To use the *Alarm monitoring* task in Security Desk.
Alarm report	To use the *Alarm report* task in Security Desk.
Action privileges > Alarms	
Acknowledge alarms	To acknowledge active alarms in Security Desk.
Forward alarms	To forward alarms in Security Desk.
Snooze alarms	To snooze active alarms in Security Desk.
Trigger alarms	To trigger alarms in Security Desk.
Action privileges > Intrusion detection	
Arm	To arm an intrusion detection area from Security Desk or Config Tool. Replaces the "Arm and disarm intrusion detection areas" privilege found in Security Center 5.7 SR3 and earlier.
Bypass	Bypass an intrusion detection area from Security Desk or Config Tool.
Force	Force arm an intrusion detection area from Security Desk or Config Tool.
Disarm	Disarm an intrusion detection area from Security Desk or Config Tool. Replaces the "Arm and disarm intrusion detection areas" privilege found in Security Center 5.7 SR3 and earlier.
Silence intrusion alarm	To silence alarms in intrusion detection areas in Security Desk or Config Tool.
Trigger intrusion alarm	To trigger alarms in intrusion detection areas in Security Desk or Config Tool.

Security Center access control privileges

Search for all "access control" privileges. Go through the list and grant or deny access as required for each user.

Users that will manage and synchronize DMP intrusion panel users need to have any rights related to viewing cardholders, cardholder groups, and credentials.

Related Topics

Integration overview on page 5


Creating the Intrusion Manager role

You must create an Intrusion Manager role in Config Tool to manage the DMP Intrusion Panel extension.

Procedure

1 From the Config Tool homepage, open the *System* task, click **Roles**.

2 Click **Add an entity** (), and then **Intrusion Manager**.
The *Creating a role: Intrusion Manager* window opens.

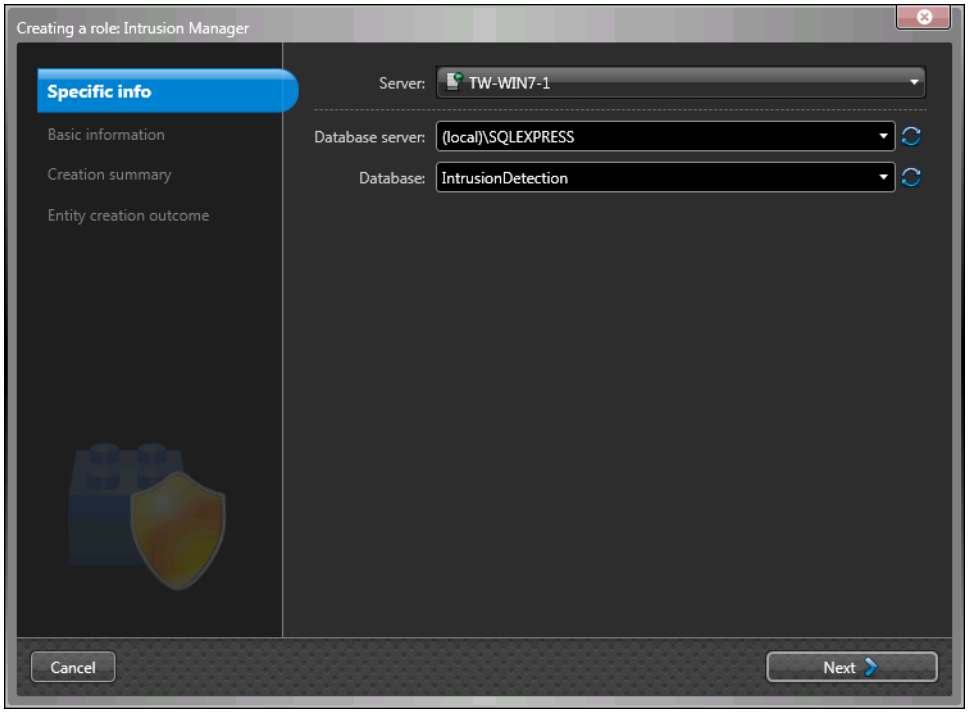

3 On the *Specific info* page, do the following:
a) From the **Server** drop-down list, select the server assigned to this role.
NOTE: If no expansion server is present, this option is not available.
b) In the **Database server** field, select or type the name of the database server.
c) In the **Database** field, select or type the name of the database (for example, **IntrusionDetection**).
d) Click **Next**.

4 On the *Basic information* page, do the following:
a) Type the **Entity name** (**Intrusion Manager**).
b) Type an **Entity description** for the role.
c) Click **Next**.

5 On the *Creation summary* page, do the following:
a) Verify the information you entered.
b) If everything is correct, click **Create**, or click **Back** to modify your settings.
When the role is created, you see the following message: *The operation was successful.*

6 Click **Close**.

After you finish

Add the intrusion detection units in Security Center.

Related Topics

Integration overview on page 5

Scheduling database backups and cleanups for the DMP Intrusion Panel extension

It is important to protect your data by scheduling regular database backups. Also, regularly clean your database to remove old data so that the database does not grow beyond its capacity. If the database is full, your integration might stop working.

Before you begin

- Get access to the Server Admin machine and log on credentials.
- Ensure you have the following privileges:
  - View role properties
  - Modify role properties
  - Administration > Intrusion detection

What you should know

- For Security Center versions earlier than 5.11.1, when an expansion server is using the database on the main server, a backup of that database does not include the configuration files for the expansion server.

  As a workaround, create a folder called *SecurityCenterBackup* on the *C:* drive of the expansion server. Backing up the database copies the configuration files of the expansion server into the local folder.
- The Intrusion Manager role database contains event notifications from the DMP Intrusion Panels.
- The Directory database contains the entities and their configuration, and custom events.
- It is a best practice to schedule all database maintenance during non-peak hours.

Procedure

To schedule database backups:

1 From Server Admin, back up the Directory database.

2 From the Config Tool homepage, open the *Intrusion detection* task.

3 Select the Intrusion Manager role from the entity browser and click the **Resources** tab.

4 Click **Backup/Restore** (), choose the location for backup files, enable automatic backups at least once per week, and then click **OK**.

5 From the Intrusion Manager role, click the *Properties* tab, and specify how long to keep events.

6 Click **Apply**.

To configure database cleanup:

1 Click **Properties** and configure the general settings of the Intrusion Manager.

- **Keep events:** Specify how long you want to keep the events in the Intrusion Manager database before deleting them. The events are used for reporting and maintenance purposes (they include events for intrusion detection units, intrusion detection areas, and intrusion detection inputs).
  - **Indefinitely:** Keep the events until you manually delete them.
  - **For:** Select the number of days for the retention period.

  CAUTION: If you are using the *SQL Server 2014 Express* database engine (included with the Security Center installation files), the database size is limited to 10 GB. An intrusion event uses (on average) 200 bytes in the database. If you configure the Intrusion Manager to keep intrusion events indefinitely, the database eventually reaches the 10 GB limit and the engine stops.

2 Click **Apply**.

Related Topics

Integration overview on page 5

Configuring communications parameters

You can change the default parameters that apply to all intrusion detection units connected to a particular Intrusion Manager role.


What you should know

If you need to change the parameters of an individual intrusion detection unit, do so on the unit's *Properties* page.

Procedure

1 From the Config Tool homepage, open the *Intrusion detection* task.

2 Select the **Intrusion Manager** role and click **Extensions** > **DMP**.

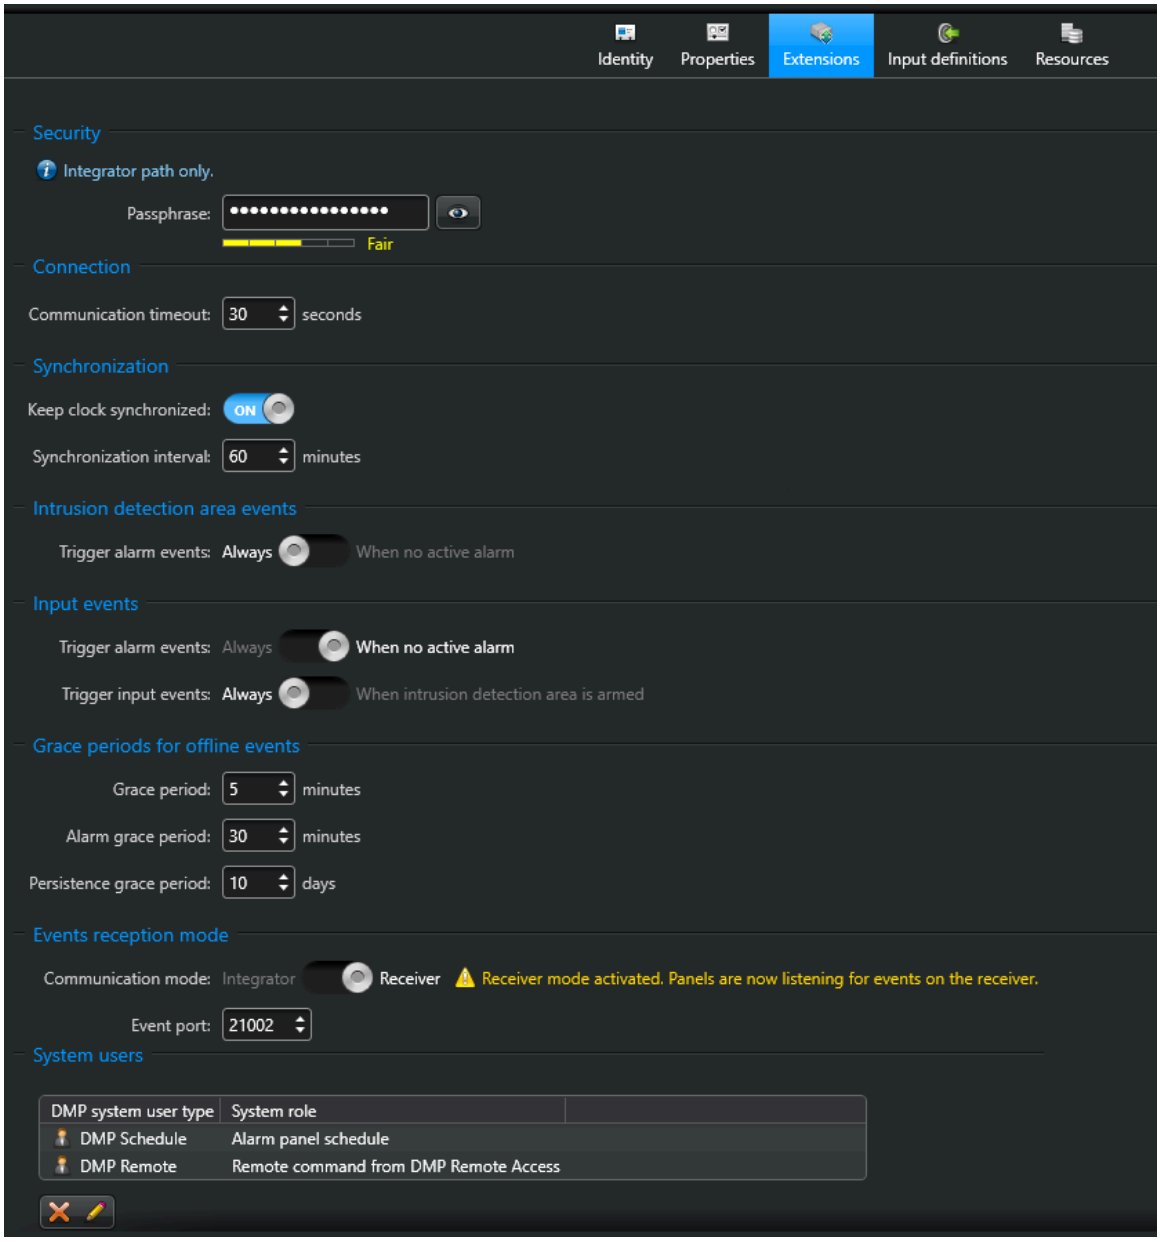

3 Configure the following options:

- **Passphrase:** A password is used to protect data transferred over a public or private network. This data protection mechanism is provided by the DMP panels.
- **Communication timeout:** The number of seconds the Intrusion Manager waits for the intrusion panel to respond to a request. If the intrusion panel does not respond, the Intrusion Manager waits up to 30 seconds and tries to re-connect with the panel again.
- **Keep clock synchronized:** When enabled, this option keeps the clock on the intrusion panel synchronized with the clock on the Security Center server.
- **Synchronization interval:** Defines how often, in minutes, Security Center reconnects to the intrusion panel and sets the panel's clock. The default is 60 minutes.
- **Trigger alarm events (for intrusion detection areas):** When set to **Always**, every new alarm event that occurs for a given panel intrusion area triggers a new alarm event in Security Center. When set to **When no active alarm**, only the first alarm event is reported for the area, subsequent alarm events are discarded. A new alarm event can only be reported when the previous alarm is acknowledged.
- **Trigger alarm events (for inputs):** When set to **Always**, every new alarm event reported by a given input triggers a new alarm event in Security Center. When set to **When no active alarm**, only the first alarm event is reported, subsequent alarm events are discarded. A new alarm event is only reported when the previous alarm is acknowledged.
- **Trigger input events:** When set to **Always**, every input alarm event is reported for the related area. When set to **When intrusion detection area is armed**, input events are only reported if the area is armed.
- **Grace period:** Period when offline events from the intrusion panel are treated as live events; they are logged and sent to online users. The default is 5 minutes.
- **Alarm grace period:** Period when offline *alarm events* from the intrusion panel are treated as live events; they are logged and sent to online users. The default is 30 minutes.

  An alarm event is defined as one of the following:

  - Input alarm activated
  - Intrusion detection area alarm activated
  - Intrusion detection area duress
  - Intrusion detection unit tamper
- **Persistence grace period:** Period during which offline events from the intrusion panel are logged but not sent to online users (default = 10 days). Offline events outside this period are discarded.
- **Communication mode:** When set to **Integrator**, the Intrusion Manager receives DMP events directly from the DMP panels. When set to **Receiver**, a virtual DMP receiver acts as a medium to receive the DMP events from the panel and sends them to the Intrusion Manager. The virtual DMP receiver sends events even if the primary connection between the Intrusion Manager and a DMP panel fails.
- **Event port:** A unique port number that Security Center uses to listen for incoming events from the intrusion panel.
- **System users:** Click to map a DMP intrusion panel user with a cardholder or user in Security Center.

  IMPORTANT: You can only view the source system user of an event in the *Monitoring* task if the system user is mapped in Security Center.

4 Click **Apply**.

Related Topics

Integration overview on page 5

Pushing card credentials and PINs to the panel as DMP user codes

You can push your existing card credentials and PIN as DMP user codes to arm or disarm panels and provide access to the doors through Synergis™ readers.

What you should know

The plugin only supports Wiegand H10302 37-bit cards. For more information about the card format, see About credentials.

Procedure

1 From the system that runs the Intrusion Manager, open a text editor to create a new XML file.

2 Add the following parameters to the XML file:

`useCardCredentialAsUserCode` set to `true`.

The following sample shows the code for the *.JSON* file.

```
{
"useCardCredentialAsUserCode": true
}
```

3 Save the file as *DmpExtraConfiguration.json*.

4 Copy the *DmpExtraConfiguration.json* file to the Security Center *ConfigurationFiles* folder of your Intrusion Manager server.

NOTE: The configurations in the *DmpExtraConfiguration.json* file affects all the panels connected to the server.

Related Topics

Integration overview on page 5

Enabling PIN and user code padding

To set the minimum accepted length of PINs or user codes on the DMP Intrusion Panel, you must enable PIN padding or user code padding in Security Center.

What you should know

- *PIN padding* or *user code padding* prefixes zeros to PIN values when they are below the minimum accepted length. For example, if the minimum accepted length of PINs is five digits, and the current PIN value is 123, enabling PIN padding prefixes two zeros to the PIN value and pushes the PIN to the system as "00123".

Procedure

1 Open the *DmpExtraConfiguration.json* file saved in the Security Center *ConfigurationFiles* folder of your Intrusion Manager server.

For more information on creating a *DmpExtraConfiguration.json* file, see Pushing card credentials and PINs to the panel as DMP user codes on page 47.

2 (For PIN padding) Add the following parameters to the file:

- `isUsingPinPadding` set to `true`.
- `numberOfPinDigits` set to the minimum number of digits you want to have.

The following sample shows the code for the *.JSON* file.

```
{
    "isUsingPinPadding": true,
    "numberOfPinDigits": 5
}
```

IMPORTANT: If there are existing settings in the *.JSON* file, separate them by commas.

NOTE: The PIN padding feature pads PIN credentials before pushing them to the panel, and strips the padding when pulling PINs from the panel.

3 (For user code padding) Add the following parameters to the file:

- `isUsingUserCodePadding` set to `True`.
- `numberOfUserCodeDigits` set to the minimum number of digits you want to have.

The following sample shows the code for the *.JSON* file.

```
{
    "isUsingUserCodePadding": true,
    "numberOfUserCodeDigits": 5
}
```

NOTE: User code padding pads the credential being pushed as the user code regardless of its type (PIN or card), but does not strip the padding when pulling from the panel.

4 Save the *DmpExtraConfiguration.json* file.

NOTE: The configurations in the *DmpExtraConfiguration.json* file affect all the panels connected to the server.

Related Topics

Integration overview on page 5

5

Adding DMP Intrusion Panel devices

This section includes the following topics:

- "Preparing the DMP Intrusion Panel for integration" on page 50
- "Configuring the time zone of the DMP Intrusion Panel" on page 55
- "Enrolling a DMP Intrusion Panel" on page 58

Preparing the DMP Intrusion Panel for integration

Before you can enroll your DMP Intrusion Panel into Security Center using the Standard connection, you must prepare the panel.

What you should know

If you are running the XR150-series DMP Intrusion Panel, upgrading the firmware to version 193 or later allows you to use the Integrator path feature. For more information on upgrading firmware, refer to the DMP user documentation.

NOTE: Make sure to enroll your panel using the Integrator port if you plan to use Remote Link at the same time as Security Center.

CAUTION: DMP devices with model numbers ending in `-CAN` are unable to use remote arming. Trying to use remote arming on these devices fails in Security Center and shows a `Remote arming with Canada Features enabled is not allowed` error message in Remote Link.

Procedure

1 Make sure that the DMP Intrusion Panel is configured and working as expected.

2 On all routers, switches, and network devices, unblock the port used to communicate with the extension.

3 Confirm that the DMP Intrusion Panel can communicate with the Security Center server where the extension is installed, using the Ping command, Telnet, or related tools.

4 From the Security Center server machine that hosts the Intrusion Manager role, open the Remote Link application and connect to a DMP Intrusion Panel.

a) Open the Remote Link application and click **File** > **Panel Information**.


b) From the *Panel Information* page, select the corresponding **DMP panel** and click **OK**.

c) Click **Panel** > **Connect** > **Connect**.

The Remote Link application is connected to the DMP panel.

NOTE: If Remote Link cannot connect to the panel, then Security Center will not be able to connect either.


5 Make a backup copy of the panel configuration.

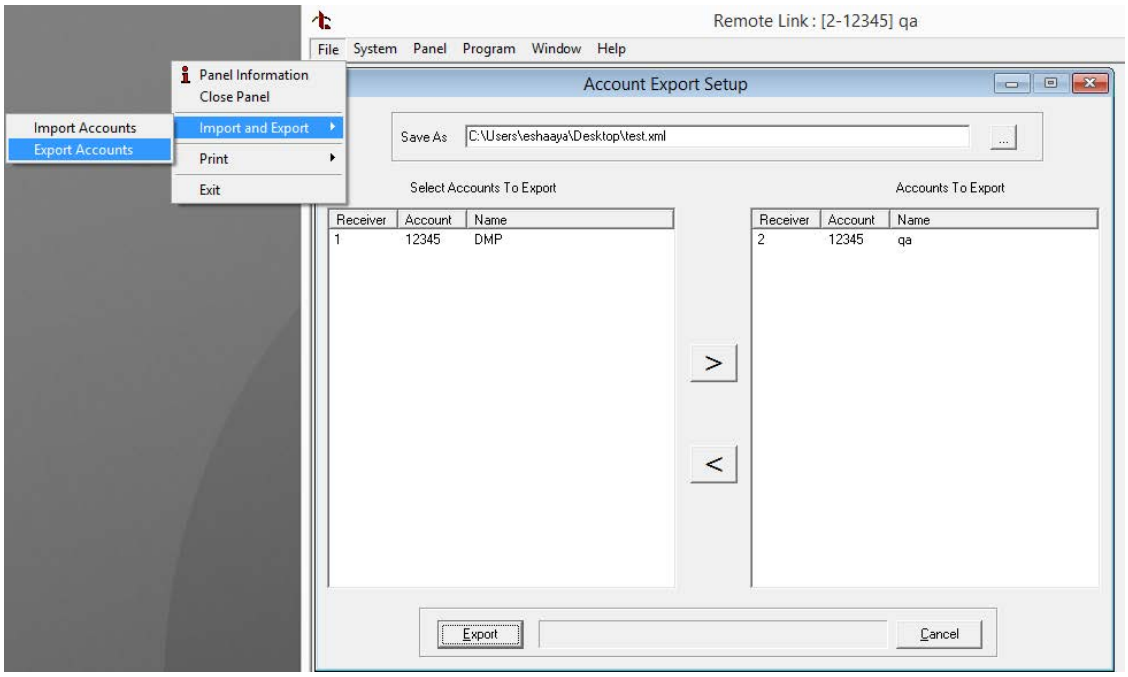

6 If you have users configured in your panel that you do not want to import to Security Center, manually delete those users from the panel now.

7 Open the *Remote Options* page, and do the following:

- Take note of the **Remote Key**.
- Enable **Remote disarm**.
- Enable **Allow Network Remote**.
- Take note of the **Network Programming Port**.

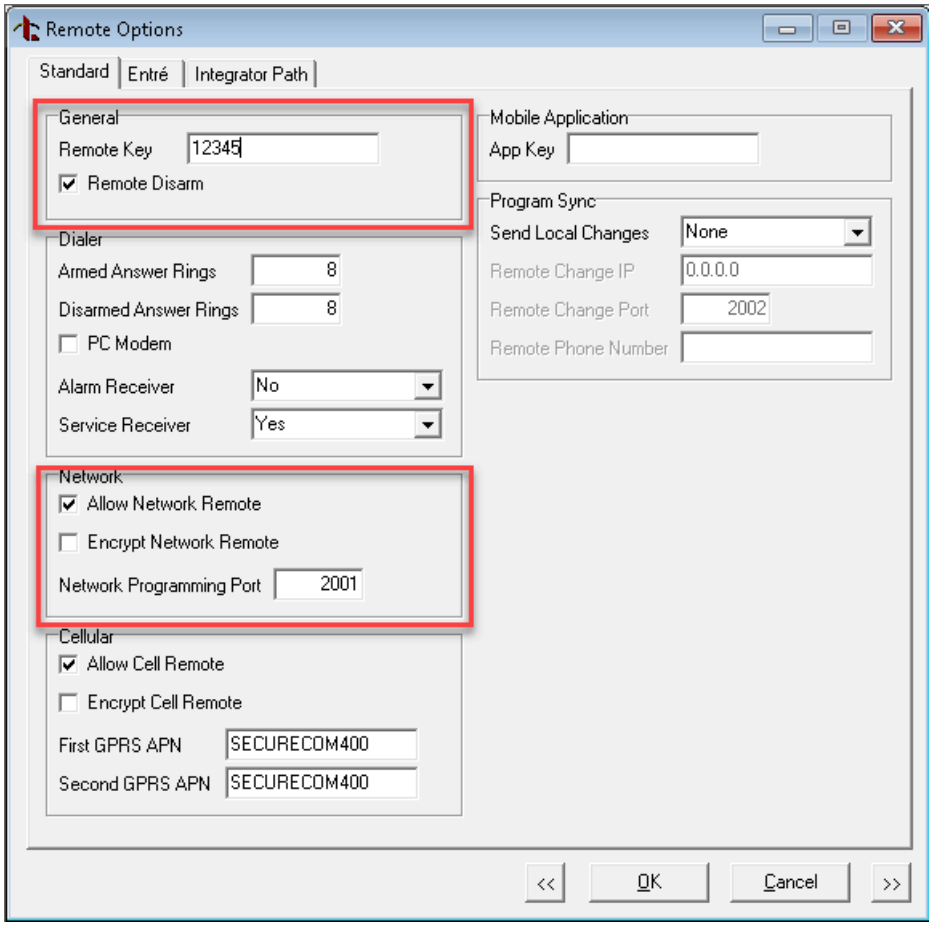

NOTE: This screenshot shows the Standard connection window. If you are using the Entré connection or the Integrator connection, see Enrolling a DMP Intrusion Panel on page 58 for descriptions of those windows.

8 Open the *Network Options* page, and do the following:

- Verify that the connection settings for the panel are correct.
- Take note of the **Local IP Address**




9 From Remote Link, send the configuration to the panel.

10 Configure the panel to send alarm events in real-time:


a) Open the *Communication Path* page, and create a temporary path.

b) Set the **Comm Type** to **Network**

c) Set **Transmit Delay** to **0**.

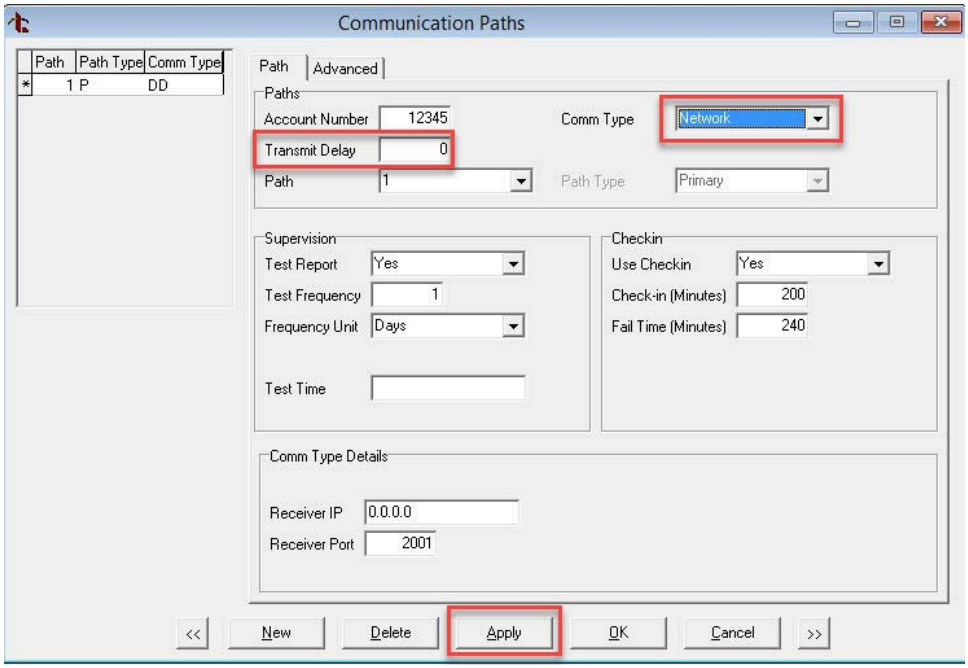

d) Click the **Advanced** tab and select **Send Path Information**.

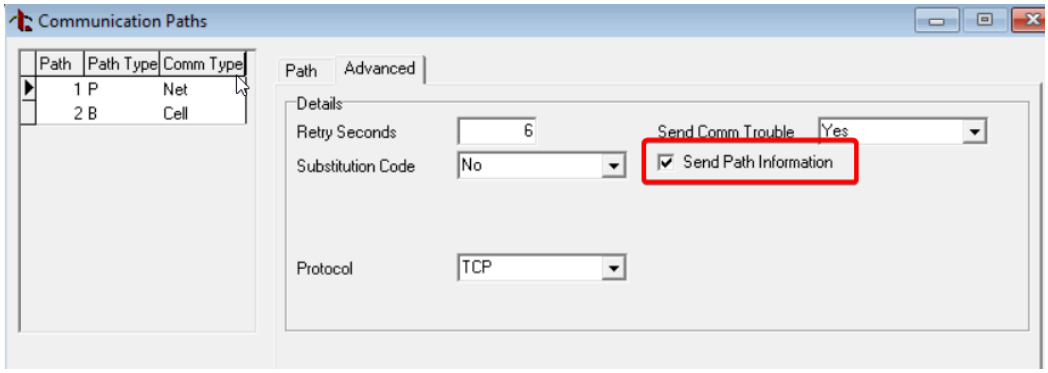

e) Click **Apply**.


f) From the **Panel** menu, click **Connect**, then click **Send** to push the changed settings to the DMP Intrusion Panel .

g) Go back to the **Communication Paths** window and delete the temporary path.

h) Repeat substeps e and f.

11 Open the *Area Information* page and change the **Account Number** from the default value. The default is 12345.

12 Take note of the account number.

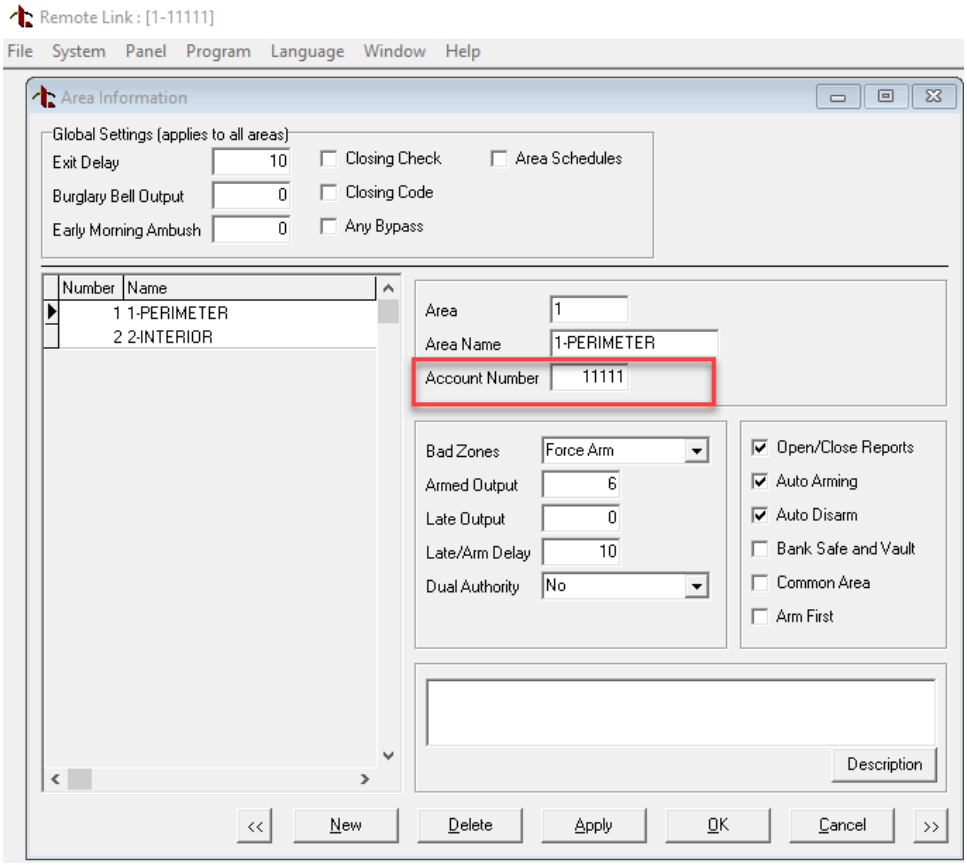

13 Disconnect Remote Link from the panel.

CAUTION: If Remote Link remains connected, Security Center cannot enroll the panel.

The panel is ready for communication with Security Center. You should have the following information written down for use during the enrollment of the panel in Security Center:

- Remote key
- Network Programming Port and Listening Port (must be the same value)
- Local IP Address
- Account number

After you finish

Do the following:

- Configuring the time zone of the DMP Intrusion Panel on page 55
- Enrolling a DMP Intrusion Panel on page 58

Related Topics

Integration overview on page 5


Configuring the time zone of the DMP Intrusion Panel

For the DMP Intrusion Panel extension to send the correct time settings across multiple time zones, you must set the local time zone on the panel and in Security Center.

Procedure

1 Open the Remote Link application and click **Program** > **System Options**.

2 In the **Hours from GMT** field, enter the GMT number that corresponds to your time zone, and then click **OK**. See Time zones on page 56 to know more about the GMT numbers for different time zones.

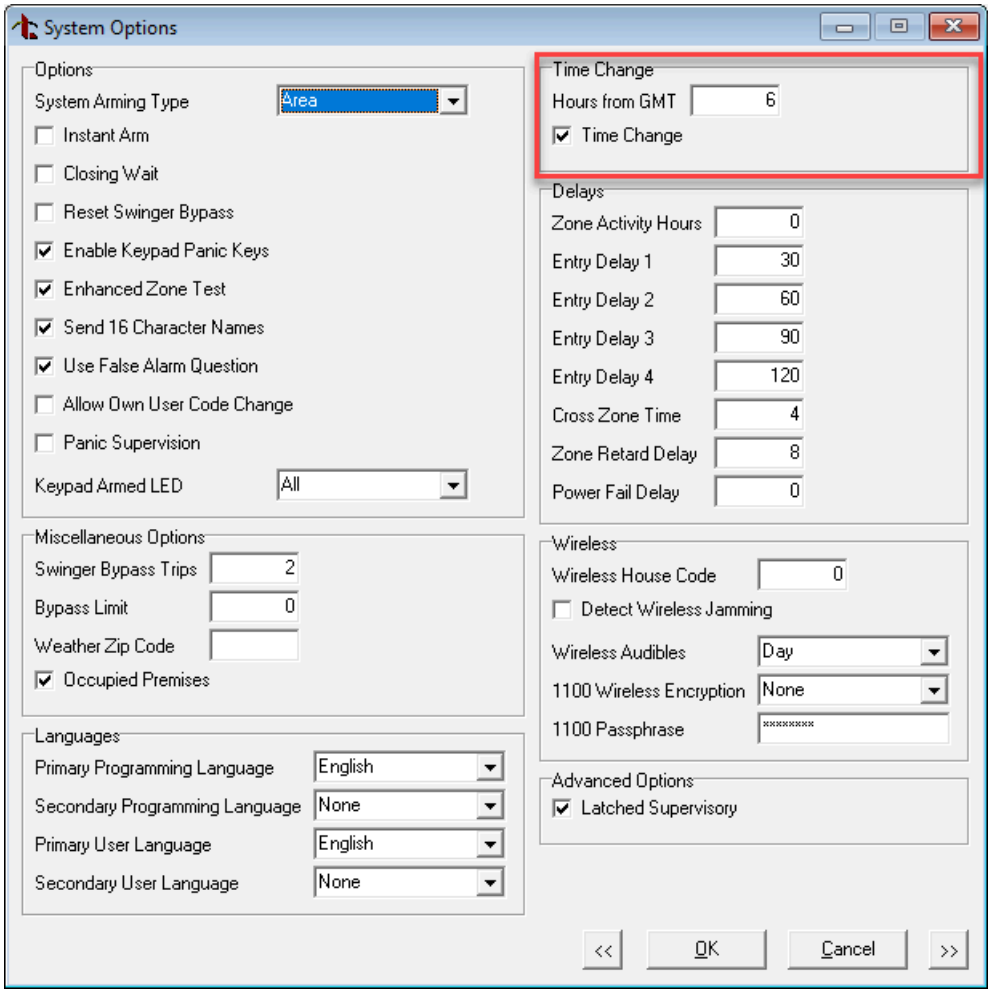


3 From the Config Tool homepage, open the *Intrusion detection* task.

4 From the entity browser, select the intrusion detection unit you want to configure.

5 Click the *Properties* tab, and then verify that the **Keep clock synchronized** slider is set to **ON**.


NOTE: You can change the synchronization setting for all panels connected to the Intrusion Manager role by selecting the role, clicking the *Extensions* tab, and then setting the value.

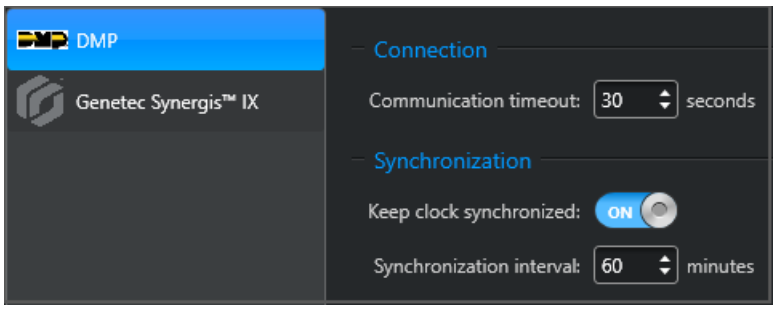

6 Click **Apply**.

7 Click the **Locations** tab, and set the **Time zone** corresponding to the enrolled intrusion unit.

The time displayed in the **Time zone** field and the time displayed in the **Hours from GMT** field in the Remote Link application must match.

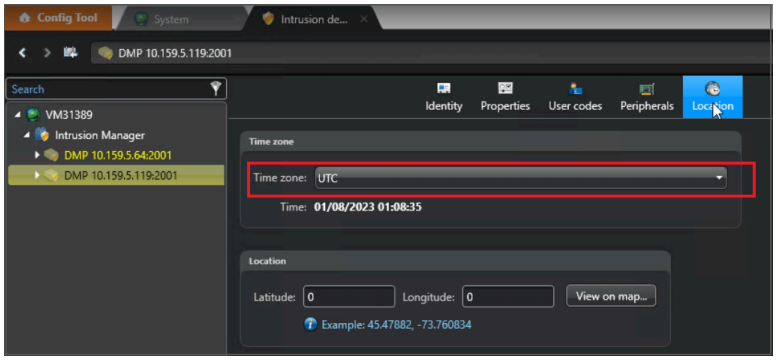

8 Click **Apply**.

Time zones

To configure time zones on the DMP Intrusion Panel use the number that corresponds to the time zone you want to use.

Refer to the following table for the time zone value you must enter in the **Hours from GMT** field.

GMT	City/Time zone
0	London, Monrovia, Lisbon, Dublin, Casablanca, Edinburgh
1	Cape Verde Island, Azores
2	Mid-Atlantic, Fernando de Noronha
3	Buenos Aires, Georgetown, Brasilia, Rio de Janeiro
4	Atlantic Time (Canada), Caracas, La Paz, Santiago
5	Eastern Time (US, Canada), Bogota, Lima, Arequipa
6	Central Time (US, Canada), Mexico City, Saskatchewan

GMT	City/Time zone
7	Mountain Time (US, Canada), Edmonton
8	Pacific Time (US, Canada), Tijuana
9	Alaska
10	Hawaii
11	Midway Island, Samoa
12	Fiji, Marshall Islands, Wellington, Auckland, Kwjalein, Kamchatka
13	New Caledonia
14	Guam, Sydney
15	Tokyo, Seoul
16	Hong Kong, Singapore
17	Bangkok, Hanoi
18	Dhaka, Almaty
19	Islamabad, Karachi
20	Abu Dhabi, Kazan
21	Moscow, Baghdad
22	Eastern Europe
23	Rome, Paris, Berlin

Enrolling a DMP Intrusion Panel

Before you can use your intrusion panel in Security Center, you must enroll the panel as an intrusion detection unit in Config Tool.

Before you begin

- Prepare the DMP Intrusion Panel for enrollment.

What you should know

- The DMP Intrusion Panel can be enrolled using the Standard connection, the Entré path connection, or the Integrator path connection.
- To use the Entré path or the Integrator path connection, you must download and install DMP Remote Link. For more information on downloading the DMP Remote Link application, refer to the DMP user documentation.
- To use the Integrator path connection, your DMP Intrusion Panel must run firmware version 193 or newer.


  NOTE: Firmware 193 is only compatible with 150 and 550-series DMP Intrusion Panels.


IMPORTANT: It is recommended to use the Integrator Path connection where possible, as the Standard connection configuration can easily be accidentally overwritten using service operations and other integrations.

Procedure

1 (For Entré path and Integrator Path connection) Use DMP Remote Link to configure the following settings:

- **Connection:** Net.
- **Incoming TCP Port:** The port used by Security Center to connect to the panel.
- **IP:** The IP address of the Intrusion Manager server.
- **Passphrase:** (For Integrator Path only) Enter the configured passphrase. Leave blank for Entré path.

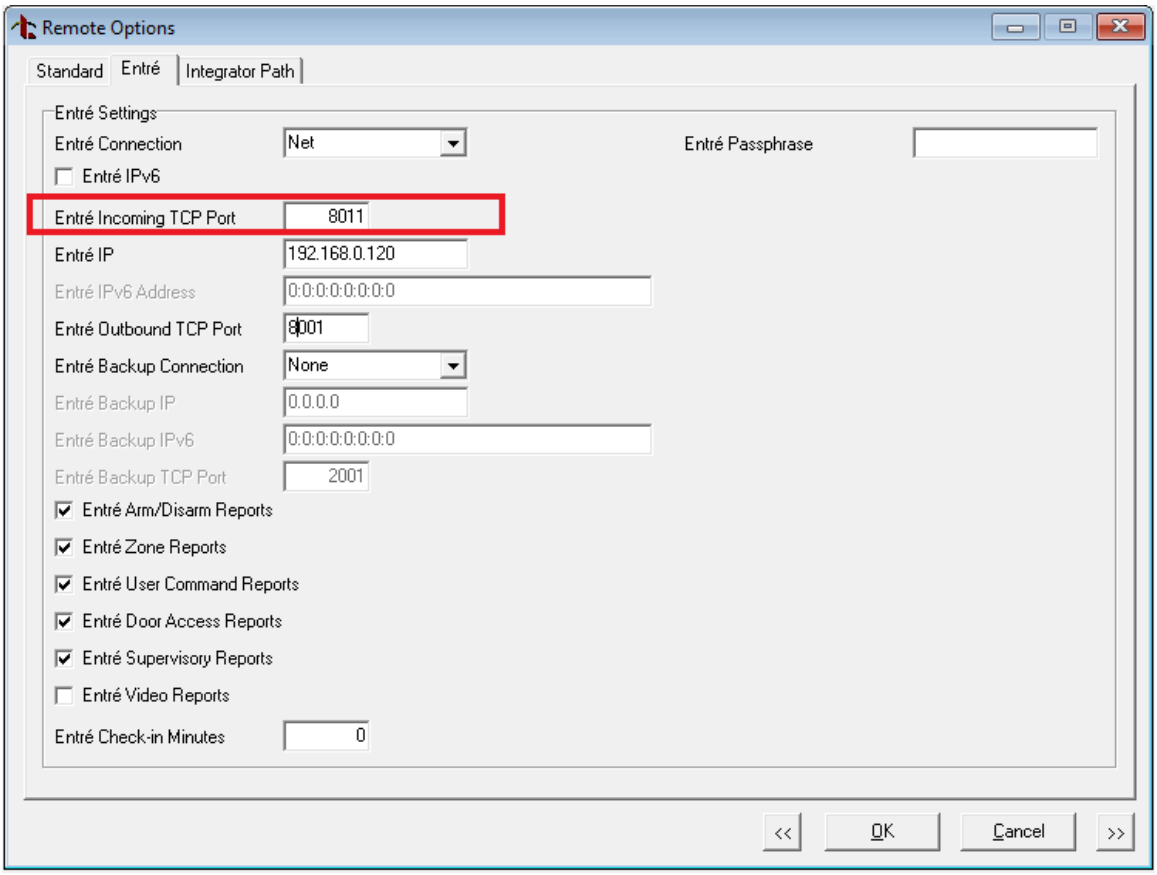

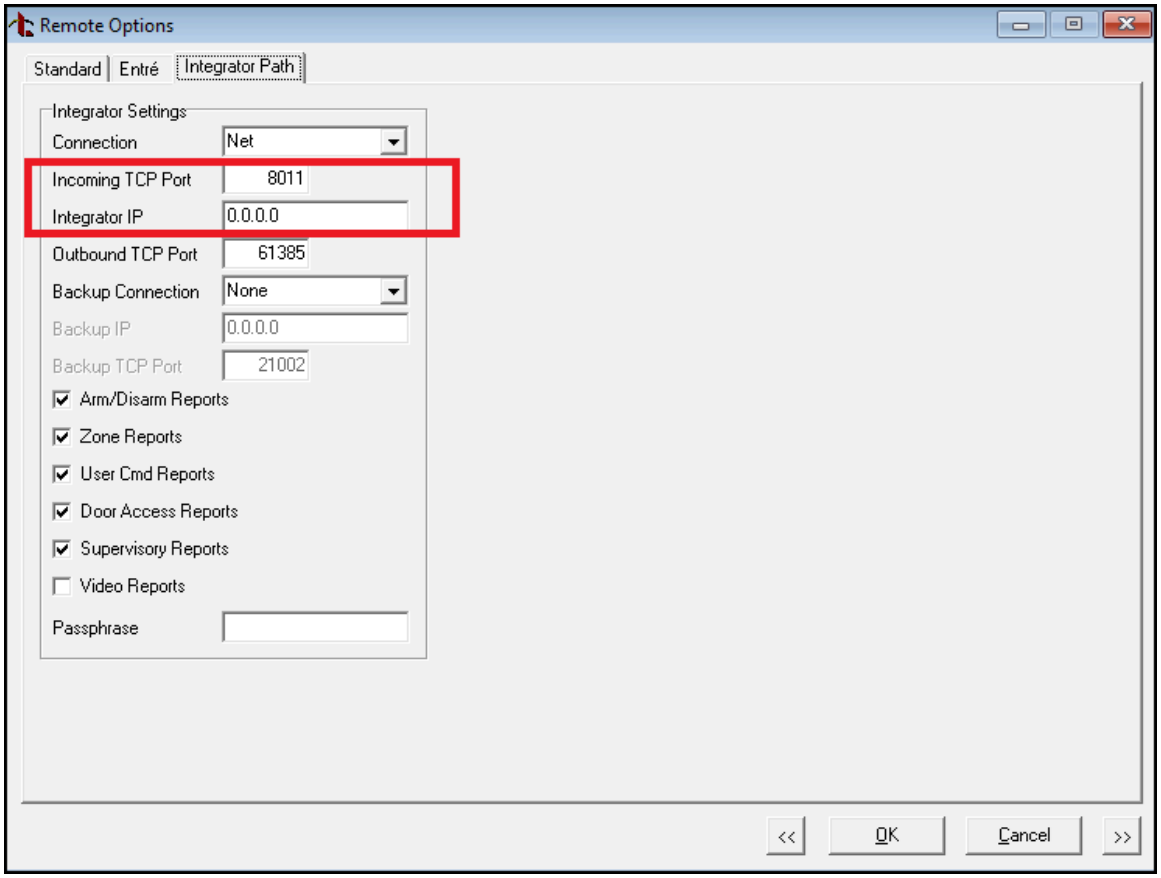


For more information, refer to the DMP user documentation.

2 From the Config Tool homepage, open the *Intrusion detection* task.


3 Click **Intrusion detection unit** ( ).

4 In the *Manual Add* dialog box, configure the following:


- **Intrusion Manager:** This setting is only visible when there are multiple Intrusion Manager roles. Choose a role to host the intrusion detection unit.
- **IP address:** The unique TCP/IP address of the intrusion panel.
- **Port:** The TCP communication port number that is configured on the intrusion panel. Default incoming TCP ports based on connection types are as follows:
  - **Standard Network Programming Port:** 2001

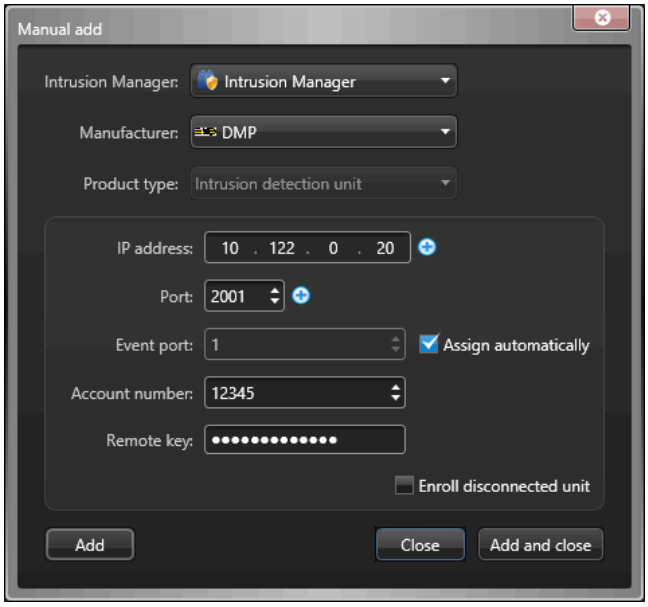

- **Entré Incoming TCP Port:** 2022

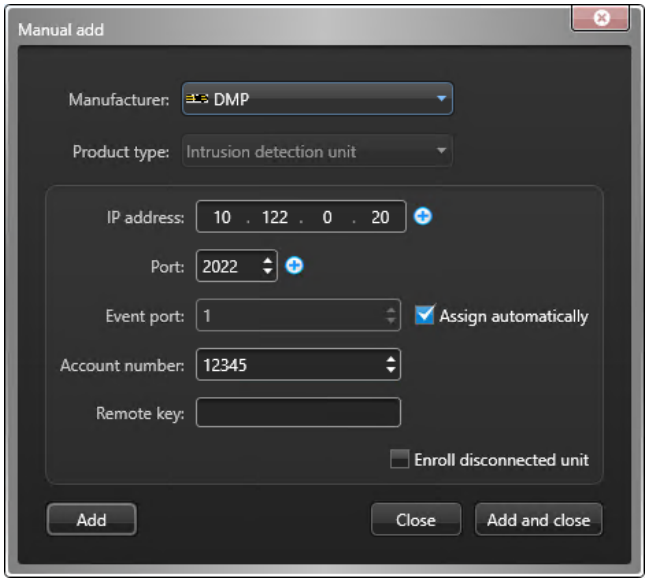

- **Integrator Path's Incoming TCP Port:** 8011

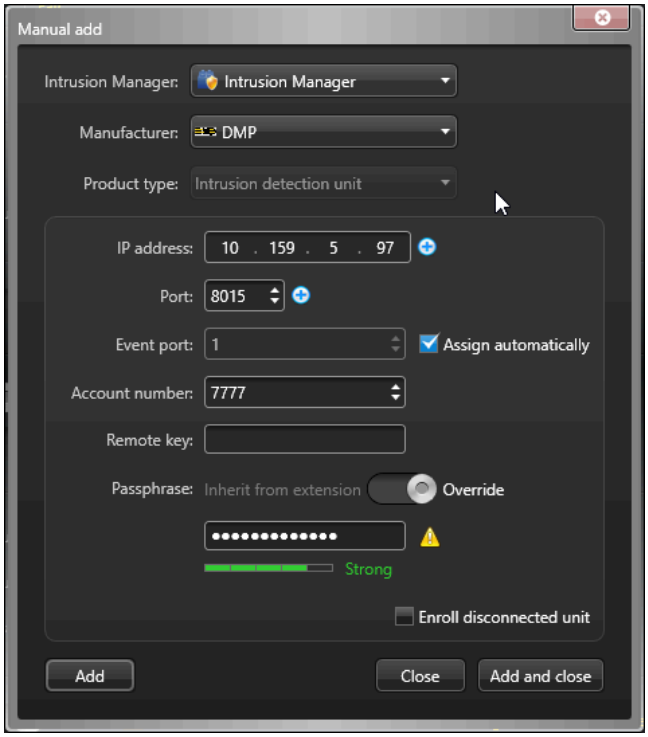

- **Event port:** A unique port number that Security Center uses to listen for incoming events from the intrusion panel.

  NOTE: If an event port connection from the DMP panel fails, you do not receive events or panel state changes in Security Center. There is also no warning or feedback in Security Center or on the panel.
- **Assign automatically:** Select this checkbox. When selected, the panel's *Net options* on the *PC Log Reports* page is configured correctly. The **Net IP address** is set to the address of the Intrusion Manager server. The **Net Port** is set to a unique value.
- **Account number:** The account number is a one- to five-digit number used to identify the intrusion panel. On the panel, this is the **Account Number** on the *Area Information* page. The default is 12345.

IMPORTANT: The **Account number** on the intrusion unit must match the account number configured on the DMP panel for the system to receive events correctly.

- **Remote key:** The remote access code for the intrusion panel that was assigned using DMP Remote Link. Security Center can only communicate with the panel when the correct remote key is provided.

  IMPORTANT: In enrolling the DMP panel using the Entré path or the Integrator path connection, leave **Remote key** blank in the *Manual Add* dialog box even if there is a remote key configured on the panel.
- **Passphrase:** A password is used to protect data transferred over a public or private network. This data protection mechanism is provided by the DMP panels.

  IMPORTANT: The passphrase option is only available if you enroll the plugin using the Integrator Path connection.
- **Enroll disconnected unit:** Select this option to add a device that is not yet physically connected to the IP network or is connected but offline.

5 Click **Add and close**.

The configuration is saved and the *Manual add* window closes. The panel is enrolled.

6 Select the newly enrolled intrusion detection unit and click **Properties**.

7 Select **Always stay connected**.

IMPORTANT: Selecting the **Always stay connected** option keeps the connection between the DMP Intrusion Panel and Security Center open permanently.

The intrusion detection unit is displayed under the Intrusion Manager role in the entity browser. When the unit connects to the panel, Intrusion Manager creates the intrusion detection areas, inputs, and outputs that are configured on the panel. You can see the:

- Intrusion detection unit listed under the Intrusion Manager role in the *Intrusion detection* task.
- Intrusion detection areas in the *Area View* task.
- Inputs and outputs on the intrusion detection unit's *Peripherals* tab.

Related Topics

Integration overview on page 5

6

Configuring DMP Intrusion Panel devices

This section includes the following topics:

- "Changing the connection settings of a DMP Intrusion Panel intrusion detection unit" on page 65
- "Viewing and configuring DMP inputs and outputs" on page 67
- "Configuring a DMP input to raise a Trouble event" on page 68
- "Configuring a key fob to raise a Panic event" on page 69
- "Assigning cameras to intrusion detection areas and inputs" on page 72
- "Configuring bad zones and reviewing intrusion detection area arming parameters" on page 73
- "Mapping intrusion panel events to Security Center actions" on page 75

Changing the connection settings of a DMP Intrusion Panel intrusion detection unit

You can change the connection settings of a unit, such as its remote key, IP address, port numbers. You can also override the global synchronization settings for a unit, which you might want to do if network traffic causes delays in communication.

What you should know

Only Administrators or a user with user management rights can modify these fields.


IMPORTANT: Communication between the plugin and the DMP Intrusion Panel does not protect the integrity and confidentiality of data. As a best practice, deploy the plugin on the same subnet as the third-party DMP Intrusion Panel, within a closed network.

Procedure

1 From the Config Tool homepage, open the *Intrusion detection* task.

2 Expand the Intrusion Manager role from the entity browser, and then select the intrusion detection unit you want to configure.

3 Click the **Properties** tab.

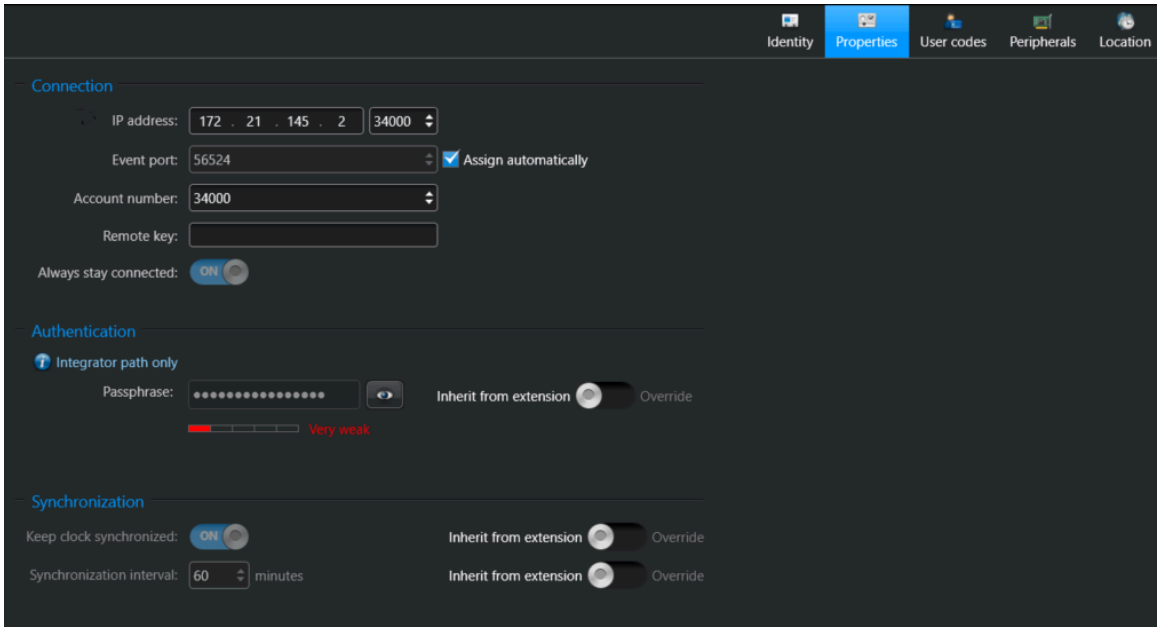

4 Make the required changes in the *Connection* section.

- **Intrusion manager:** This setting is only visible when there are multiple Intrusion Manager roles. Choose a role to host the DMP Intrusion Panel.
- **IP address:** The unique TCP/IP address of the DMP Intrusion Panel.
- **Port:** The TCP communication port number that is configured on the intrusion panel. This number can either be the **Standard Network Programming Port** (default 2001), the **Entré Incoming TCP Port** (default 2022), or the **Integrator Path's Incoming TCP Port** (default 8011).
- **Event port:** A unique port number that Security Center uses to listen for incoming events from the DMP Intrusion Panel. On the panel, the event port is the **Net Port** in Standard mode, **Entré Outbound TCP Port** in Entré path mode, and **Outbound TCP Port** in Integrator path mode.
- **Assign automatically:** Select this checkbox:

- If the port corresponds with the Standard port configured in the panel, the **Net IP address** and **Net Port** in the *PC Log Reports* page are configured correctly.
- If the port corresponds with the Entré port configured in the panel, the **Entré Outbound TCP Port** and **Entré IP** on the Remote Options *Entré* page are configured correctly.
- If the port corresponds with the Integrator port configured in the panel, the **Outbound TCP Port** and **Integrator IP** on the Remote Options *Integrator path* page are configured correctly.

- **Account number:** The account number is a one- to five-digit number used to identify the intrusion panel. On the panel, it is the **Account Number** on the *Area Information* page. The default is 12345.

  IMPORTANT: The **Account number** on the intrusion unit must match the account number configured on the DMP panel for the system to receive events correctly.
- **Remote key:** The remote access code for the intrusion panel that was assigned using DMP Remote Link. Security Center can only communicate with the panel when the correct remote key is provided. When using the Integrator or Entré path connections, this value should be blank.
- **Always stay connected:** Keeps the connection between the DMP Intrusion Panel and Security Center open permanently.

  IMPORTANT: If the DMP Intrusion Panel is enrolled using the Integrator path connection, you must select this option to ensure cellular support in failover mode.

5 In the *Authentication* section, move the desired slider to **Override**, then configure the following:

- **Passphrase:**

  A password that protects data transferred over a public or private network. The DMP panels

  provide this data protection mechanism. By default, the password is inherited from the Remote Link application. Move the slider to **Override** to modify the password.
  IMPORTANT: The Passphrase option is only available for an intrusion panel enrolled using the Integrator path connection. The passphrase configured in the Remote Link application and in Config Tool must match for the panel to stay connected with the Intrusion Manager. For an intrusion panel enrolled using the Standard or Entre path connection, move the slider to **Override** and keep the **Passphrase** field empty.

6 In the *Synchronization* section, move the desired slider to **Override**, then configure any of the following:

- **Keep clock synchronized:** When enabled, this option keeps the clock on the intrusion panel synchronized with the clock on the Security Center server.
- **Synchronization interval:** Defines how often, in minutes, Security Center reconnects to the intrusion panel and sets the panel's clock. The default is 60 minutes.

NOTE: When you synchronize the clocks, the time is set to the Security Center server's local time zone.

7 Click **Apply**.

Related Topics

Integration overview on page 5

Viewing and configuring DMP inputs and outputs

From the **Peripherals** tab, you can assign a name, logical ID, and a description to the inputs and outputs of an intrusion detection unit. You can also see the state of inputs and outputs.

What you should know

- The state of an input will be **Unavailable** in two cases:
  - When the input is bypassed.
  - When the intrusion panel is offline.

    When the panel is offline, the panel and all of its inputs and outputs are unavailable and highlighted in red.
- When an input, output, or intrusion detection area is renamed on a panel, Security Center is updated immediately.
- If you physically remove an input or output from an intrusion panel, Security Center detects the input or output as offline. You can manually delete this entity from the *Peripherals* page.
- When **Receiver** communication is enabled, the panel does not send *Trouble/short* or *Open* input states to Security Center. As a result, affected inputs incorrectly appear as green (normal) in the Peripherals tab.


  NOTE: 24-hour input types are not impacted by this limitation.

Procedure

1 From the Config Tool homepage, open the *Intrusion detection* task.

2 Expand the Intrusion Manager role from the entity browser, and then select the intrusion detection unit you want to configure.

3 Click the **Peripherals** tab.

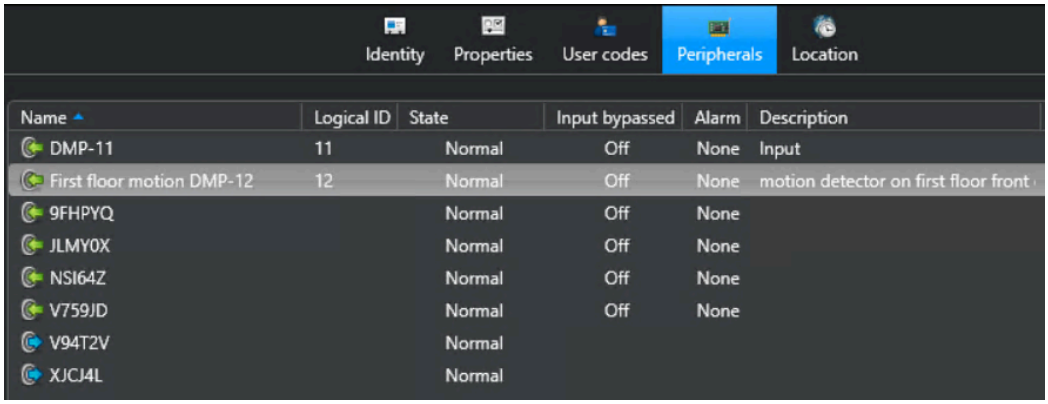

4 Double-click the entity.

TIP: You can edit multiple entities of the same type simultaneously by clicking the CTRL or SHIFT key while clicking entities, then click **Edit an item** ( ).

5 In the dialog box, enter a **Name**, **Logical ID**, and **Description**.

6 Click **Apply**, and then click **Apply** again.

Related Topics

Integration overview on page 5

Configuring a DMP input to raise a Trouble event

When you want an input to trigger a Trouble alarm event, you must configure the input using the DMP Remote Link application.

What you should know


For detailed information and instructions for using DMP Remote Link and for configuring DMP intrusion panels, refer to the DMP user documentation.

Procedure

1 From Remote Link, on the *Program* menu, open the *Zone Information* page.

2 Select a zone from the list.

3 Click the **Action** tab, and choose a message to send the **Trouble** event.

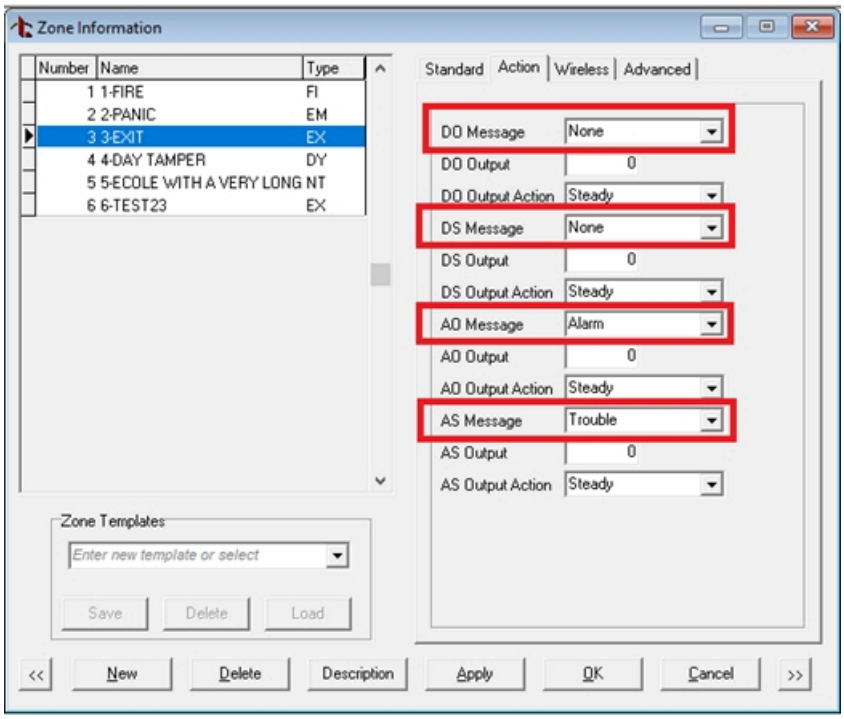

If you set the disarmed open (DO) message to trouble, then when the area is disarmed and the input circuit is open, the state of the input in Security Center is **Trouble (open-circuit)**.

Related Topics

Differences between DMP control panel 5.8 and DMP Intrusion Panel 4.0 and later on page 14

Integration overview on page 5

Configuring a key fob to raise a Panic event


When you want a key fob to trigger a *Panic* event, you must configure the key fob using the DMP Remote Link application.

What you should know


For detailed information on using DMP Remote Link and configuring DMP intrusion panels, refer to your DMP user documentation.

Procedure

1 From Remote Link, on the *Program* list, select **Key Fobs**.

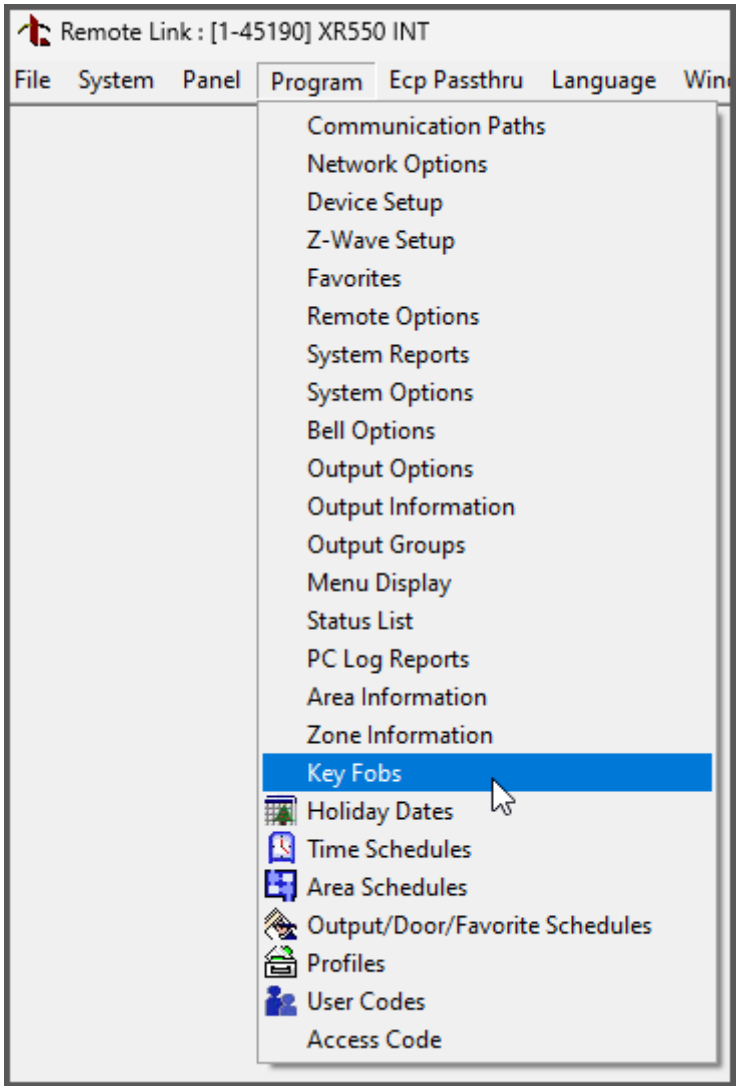

2 On the *Key Fobs* page, click **New**.

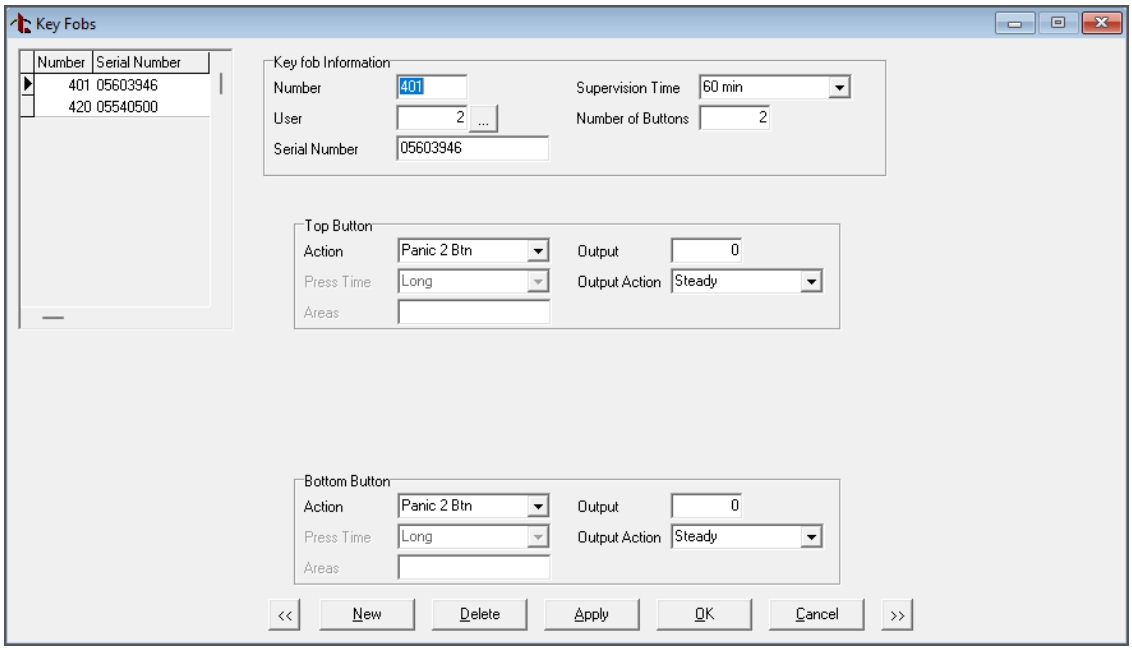

3 Configure the following *Key fob Information* settings:

- **Number:** The wireless zone number for the XR panel series. For XR panel models, the zone number ranges between 400 - 449.
- **Supervision Time:** The maximum time duration that the key fob can stay out of range from the intrusion panel. If the key fob is out of range longer than the configured supervision time, a *Device missing* event is triggered. The supervision time can be either configured between 60 - 240 minutes or disabled.
- **User:** The user number or user ID associated with the key fob.


  IMPORTANT: The user ID doesn't affect the *Panic* event. To raise a *Panic* event, the key fob is linked to the intrusion panel and not to the user.
- **Number of Buttons:** The number of buttons on the key fob.

  IMPORTANT: Only the following two models support *Panic* events:

  - 1144-1 One-Button
  - 1144-D Panic Dual-Button
- **Serial Number:** The 8-digit key fob serial number.

4 Configure the following *Top Button* settings:

- **Action:** The action the key fob performs when the top button is pressed. Select **Panic** from the drop-down. Actions other than **Panic** aren't supported by the DMP Intrusion Panel Extension.

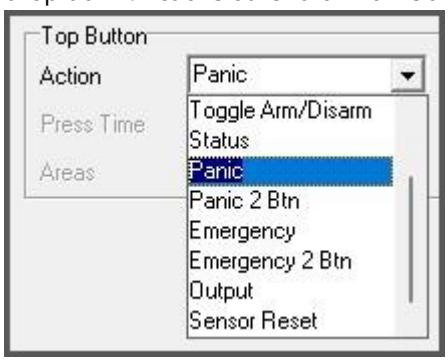

- **Output:** The output that the top button of the key fob is linked to. The output number is configured by default inside the panel.
- **Output Action:** The type of signal the key fob emits to the output when the top button is pressed.

Notice: The type of signal doesn't affect the *Panic* event.

5 Configure the following *Bottom Button* settings:

NOTE: The *Bottom Button* settings can only be configured if the key fob model has two buttons. For the key fob models with one button, configure only the *Top Button* settings.

- **Action:** The action the key fob performs when the bottom button is pressed. Select **Panic** from the drop-down. Actions other than **Panic** aren't supported by the DMP Intrusion Panel Extension.
- **Output:** The output that the bottom button of the key fob is linked to. The output number is configured by default inside the panel.
- **Output Action:** The type of signal the key fob emits to the output when the bottom button is pressed.

  Notice: The type of signal doesn't affect the *Panic* event.

6 Click **Apply** > **Okay**.

The key fob button is configured to raise a *Panic* event. When a key fob button is pressed, a *Panic* event is triggered. Track the source panel for the *Panic* event using the *Monitoring* and the *Intrusion detection* tasks.

Assigning cameras to intrusion detection areas and inputs

By linking cameras to intrusion detection areas and intrusion detection inputs, when an intrusion event occurs, the video from the linked cameras is displayed in the Security Desk monitoring tile.

What you should know

Cameras are linked to intrusion detection areas and related intrusion detection inputs. When an event occurs, the most relevant camera is shown first in the monitoring tile. For example, when an area event occurs, only the cameras assigned to the area are shown in the monitoring tile. When an input event occurs, the camera assigned to the input is displayed first, and the cameras assigned to the area are displayed in the other tiles. You can cycle or unpack the tile to display the video from the other cameras.

- To assign cameras to intrusion detection inputs, see Assigning cameras to intrusion detection inputs on the TechDoc Hub.
- To assign cameras to intrusion detection areas, see Assigning cameras to intrusion detection areas on the TechDoc Hub.

Configuring bad zones and reviewing intrusion detection area arming parameters

You can view the arming settings that are configured for an intrusion detection area. You can also change the options for the Bad Zones feature.

What you should know


- The only parameter that can be changed is **Bad Zones**.
- Bad zones apply only when using the panel's keypad to arm an area. When you arm a DMP intrusion detection area from Security Center, it ignores the bad zones parameter. If it detects a faulty input, it ignores the input and arms the area.
- This requires the **Modify intrusion detection area properties** privilege.
- The *DMP Properties* page displays the parameters set on the intrusion panel. If the panel is offline, the last known settings are displayed.
- For detailed information about these parameters, refer to your DMP user documentation.

Procedure

To view the arming behavior for a DMP intrusion detection area:

1 In Config Tool, open the *Area View* task.

2 Select a DMP intrusion detection area from the entity browser pane, and click the **DMP Properties** tab.
The intrusion detection area's current configuration is displayed.

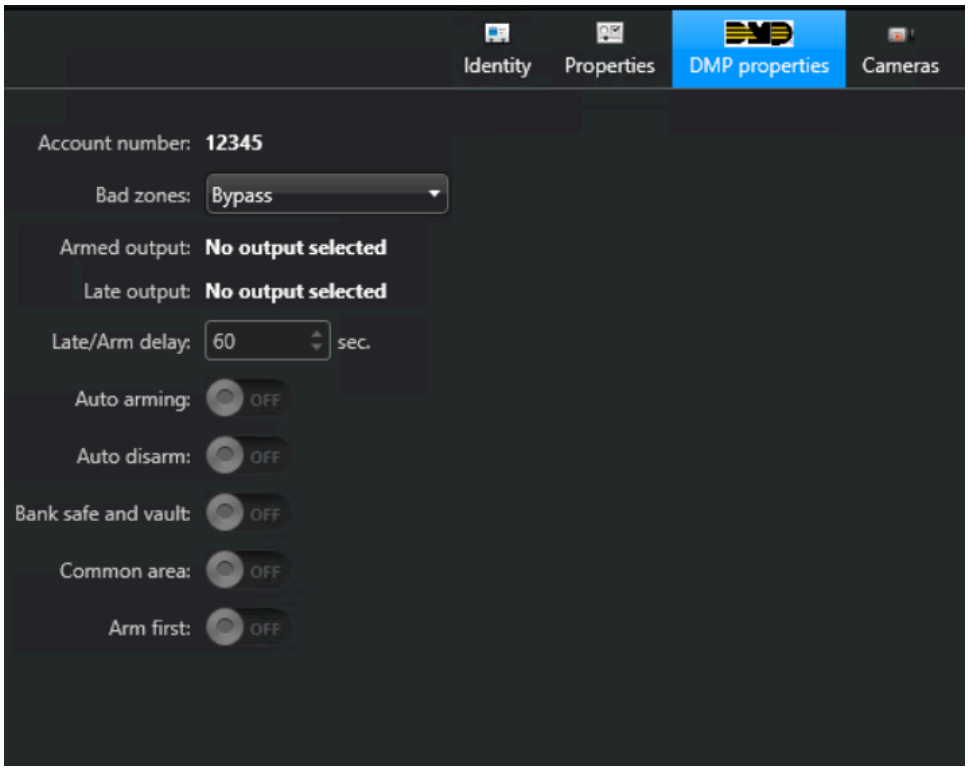

To configure the arming behavior of a bad zone:

1 In the **Bad zones** list, select one of the following options:

- **Bypass:** If a faulty input is detected, the panel bypasses the input and arms the intrusion detection area. The bypass status is canceled when the area is disarmed. This is the default setting.
- **Force arm:** If a faulty input is detected, the panel ignores the faulty input and arms the intrusion detection area. The input is not permanently bypassed.
- **Refuse arm:** If a faulty input is detected, the panel does not arm the intrusion detection area.

Related Topics

Integration overview on page 5

Mapping intrusion panel events to Security Center actions

You can set up events from the panel to trigger actions in Security Center, using event-to-actions.

What you should know

- For example, an *Intrusion detection unit tamper* event on the intrusion panel can trigger a Security Center alarm.

  NOTE: Output pins on the intrusion panel only support the *Trigger output* action.
- It is recommended to create two event-to-actions for custom DMP failover events.
  1. First event-to-action when the DMP panel switches to a secondary cellular connection.
  2. Second event-to-action when the primary connection to the DMP panel is restored.
- The two custom DMP failover events are automatically created by the plugin. The two event-to-actions for custom failover events must be created before starting the Intrusion Manager role.
- The two event-to-actions trigger alarms in Security Desk when the DMP panel switches between secondary and primary connection. These events are recorded in the Intrusion unit report and help in tracking all events and alarms during the failover period.

Procedure

1 From the Config Tool homepage, open the *System* task.

2 Click the **General settings** view, and click the *Actions* page.

3 On the *Actions* page, click .


4 From the **When** list in the *Event-to-action* dialog box, select an event.

5 In the **From** option, select **All entities**, **Intrusion detection unit**, **Intrusion detection area**, or **Device** as the source of the event. Use **Device** for inputs and outputs.

By default, the event-to-action occurs when **Any entity** triggers the event you selected.

6 From the **Action** list, select an action, and enter any additional information required about the action.

Example: If you select the **Trigger output** action, you must select the output relay to trigger, and its output behavior. The output behavior is ignored because the *Output trigger overrides* is sent to the panel instead.

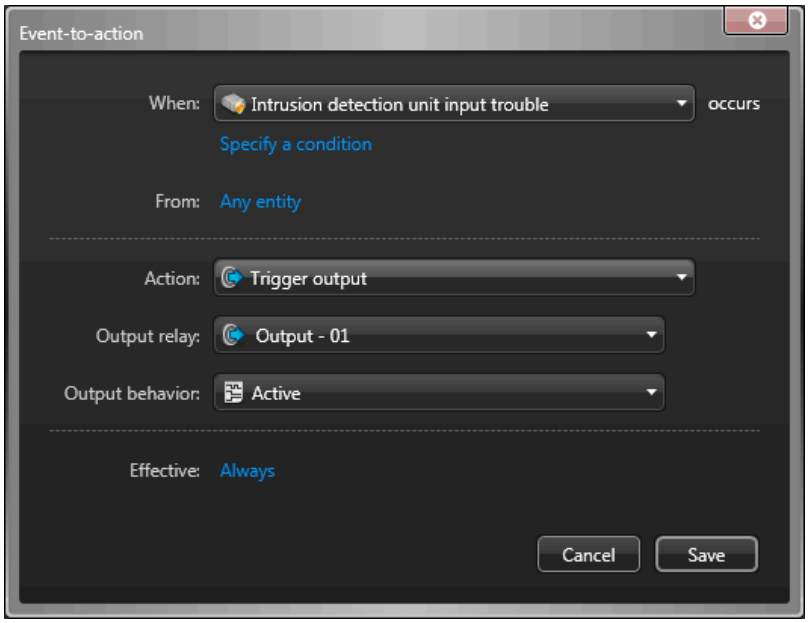

7 In the **Effective** option, click **Always**, and select a schedule when this event-to-action is active.

If the event occurs outside of the defined schedule, then the action is not triggered. By default, the **Always** schedule is selected.

8 Click **Save**.

Related Topics

Integration overview on page 5

7

DMP users

This section includes the following topics:

- "Importing DMP intrusion panel users as cardholders" on page 78
- "Exporting cardholders to a DMP Intrusion Panel" on page 79
- "Cardholders with multiple credentials" on page 82
- "Defining the ambush code as the duress cardholder" on page 83
- "Scheduling and automating cardholder export" on page 85

Importing DMP intrusion panel users as cardholders

You can pull the user codes from a DMP intrusion panel into Security Center, where they become cardholders.

Before you begin

Configure PIN padding and user code padding.

What you should know

- **Pull from panel:** Imports the user name and code from an intrusion panel and saves them as Security Center cardholders. When the first and last name of a cardholder match the name of a user code, the credentials are updated. If the user code name doesn't match any cardholders, a new cardholder is created. This operation assumes that names are separated by spaces and that the first string is the first name and any text after the first space is the last name. Example: "John Doe Bob" would be first name = John, last name = Doe Bob.
- Usually, the user codes are imported as PIN credentials. However, when the user is configured to use **Card plus PIN**, the user code is imported as a Wiegand H10302 37-bit card credential and the PIN is imported as a PIN credential.
- Users must be managed only in Security Center. Modifying users on the panel causes synchronization issues and incorrect reporting in Security Center.

Procedure

1 From the Config Tool homepage, open the *Intrusion detection* task.

2 Expand the Intrusion Manager role from the entity browser, and then select the intrusion detection unit you want to configure.

3 Click the **Users codes** tab.

4 In the **Cardholder synchronization** section, click **Pull from panel**.

NOTE: If you deactivate a user on the panel with DMP Remote Link software then pull from the panel in Config Tool, the user will not be changed to inactive in Security Center.

Related Topics

Integration overview on page 5

Exporting cardholders to a DMP Intrusion Panel

You can push Security Center cardholders to a DMP Intrusion Panel, where they become user codes.

Before you begin

Configure PIN padding and user code padding.

What you should know

- **Push to panel:** Exports all Security Center cardholders to the panel and converts them to user codes. Updates, adds, and deletes user codes to match the cardholders in Security Center.
- **Force push to panel:** Deletes all users from the intrusion panel, and then exports all Security Center cardholders listed to the panel.
- Cardholders must be assigned at least one profile to have access to the panel. Cardholders without profiles do not have privileges on the panel.
- The DMP 150 series panels have up to four profiles per user.
- The DMP 100 series panels have one profile per user.
- If a cardholder is in different groups, the profiles are merged. For example: Group A has profiles 3 and 4. Bob has profiles 1 and 2, and is assigned to Group A. Bob is pushed to the panel with profiles 1, 2, 3, and 4.
- If a cardholder has more profiles than the panel supports, only the first profiles are kept, all extra profiles are ignored. For example, Group A has profiles 3 and 4, Group B has profiles 5, 6, 7, 8. Bob has profiles 1 and 2, and is assigned to Group A and Group B. Bob is pushed to the panel with profiles 1, 2, 3, and 4, and the profiles 5, 6, 7, 8 are ignored.
- When you export cardholder lists from Security Center to a DMP Intrusion Panel, you can use an exclusion list to keep certain cardholders from being pushed to the panel, or to remove them during the next synchronization. For example, you can create an exclusion group for employees who are on vacation, and deny access to those employees' credentials while they are away.
- Setting a cardholder's card credential to **Stolen** in Security Center causes that credential to be deleted from the DMP Intrusion Panel during synchronization.
- Inactive users pushed to XR150-series panels are deleted.
- If a cardholder is modified in DMP Remote Link, the cardholder mapping does not match with Security Center, which causes incorrect user reporting. To ensure proper reporting, modify cardholders in Security Center.

Procedure

1 From the Config Tool homepage, open the *Intrusion detection* task.

2 Expand the Intrusion Manager role from the entity browser, and then select the intrusion detection unit you want to configure.

3 Click the **Users codes** tab.


4 Choose the cardholders that you want to export:

a) In the *Cardholder synchronization* section, click .

b) In the **Configure cardholders profiles** dialog box, click .

c) Select the cardholders and cardholder groups that you want to export.

CAUTION: Adding a cardholder group exports all the cardholders in that group. However, the users in the **Exclusion list** are not exported.

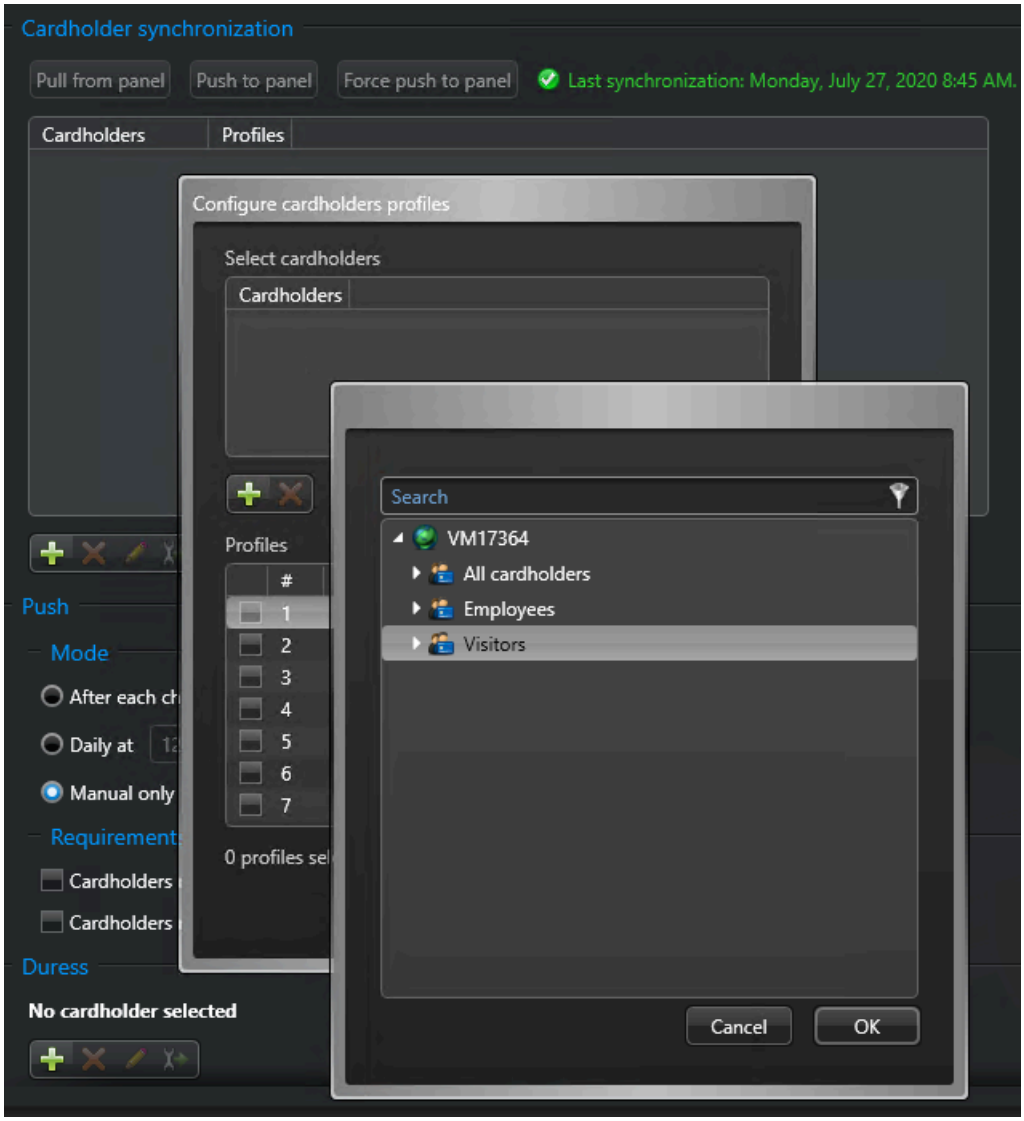

d) Select one to four profiles, and then click **Apply**.

Profiles give the cardholder access privileges, and are defined on the intrusion panel.

e) Click **Apply** again.

5 (Optional) Choose the cardholders that you want to exclude from the export:

a) Click **Exclusion list**, select the cardholders and groups to exclude, and then click **OK**.

b) Click **Apply**.

6 Filter cardholders by credential type. Under **Requirements**, select one or both of the following:

- **Cardholders must have at least one card credential**: Only push cardholders with one or more card credentials.
- **Cardholders must have at least one PIN credential**: Only push cardholders with one or more PIN credentials.

Selecting both options pushes cardholders with card and PIN credentials.

7 In the *Cardholder synchronization* section, click **Push to panel**.

Cardholders are exported to the panel.

Related Topics


Integration overview on page 5

Cardholders with multiple credentials

The DMP Intrusion Panel extension supports the synchronization of cardholders with multiple credentials.

Cardholders

When pushing cardholders with multiple credentials to the panel, all of the cardholder's credentials are pushed.

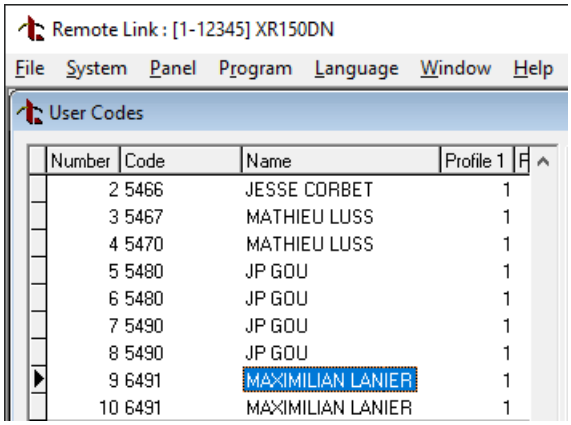

If a cardholder has at least one profile with one card credential and one PIN, both of which are enabled, then the cardholder is pushed with Card and PIN enabled.

If Card and PIN is not enabled:

- Only one type of credential is pushed. By default, PINs are pushed.
- If there is no PIN credential, then card credentials are pushed.

If credentials have been pushed as DMP user codes, then the card credentials are pushed over PIN credentials.

NOTE: For more information on pushing credentials as user codes, see Pushing card credentials and PINs to the panel as DMP user codes on page 47.

A cardholder that is set as the Duress user can have at most one card and at most one pin.

Users

When pulling users from the panel, all users with the same name are merged into one cardholder with multiple credentials.

- When using Card and PIN, all users pulled from the panel must have a user code and a user PIN.
- If you are not using Card and PIN, then user codes are converted into PIN credentials unless you created or pushed credentials as DMP user codes. For more information on pushing credentials as user codes, see Pushing card credentials and PINs to the panel as DMP user codes on page 47.

Defining the ambush code as the duress cardholder

When you have defined the ambush code on your intrusion panel, you will need to choose a Security Center cardholder to be the duress user.

Before you begin

- On the panel, configure the ambush code and associated user profile.
- In Security Center, create a cardholder to use as the duress user.

What you should know

The duress cardholder must be in the *Cardholders* list. If it isn't in the list, that user won't have a profile when it is pushed to the panel. Cardholders without profiles have no rights.

Only one duress user is supported per panel.

Procedure

1 From the Config Tool homepage, open the *Intrusion detection* task.

2 Expand the Intrusion Manager role from the entity browser, and then select the intrusion detection unit you want to configure.

3 Click the **Users codes** tab.

4 In the **Duress** section, click **Select cardholder** ( ).

5 Choose the cardholder you want to use as the Duress user, then click **OK**.

6 Click **Apply**.


7 Add the duress user to the list of cardholders that will be pushed to the panel.

a) In the *Cardholder synchronization* section, click .

b) In the **Configure cardholders profiles** dialog box, click .

c) Select the cardholders and cardholder groups that you want to export.

CAUTION: Adding a cardholder group exports all the cardholders in that group. However, the users in the **Exclusion list** are not exported.

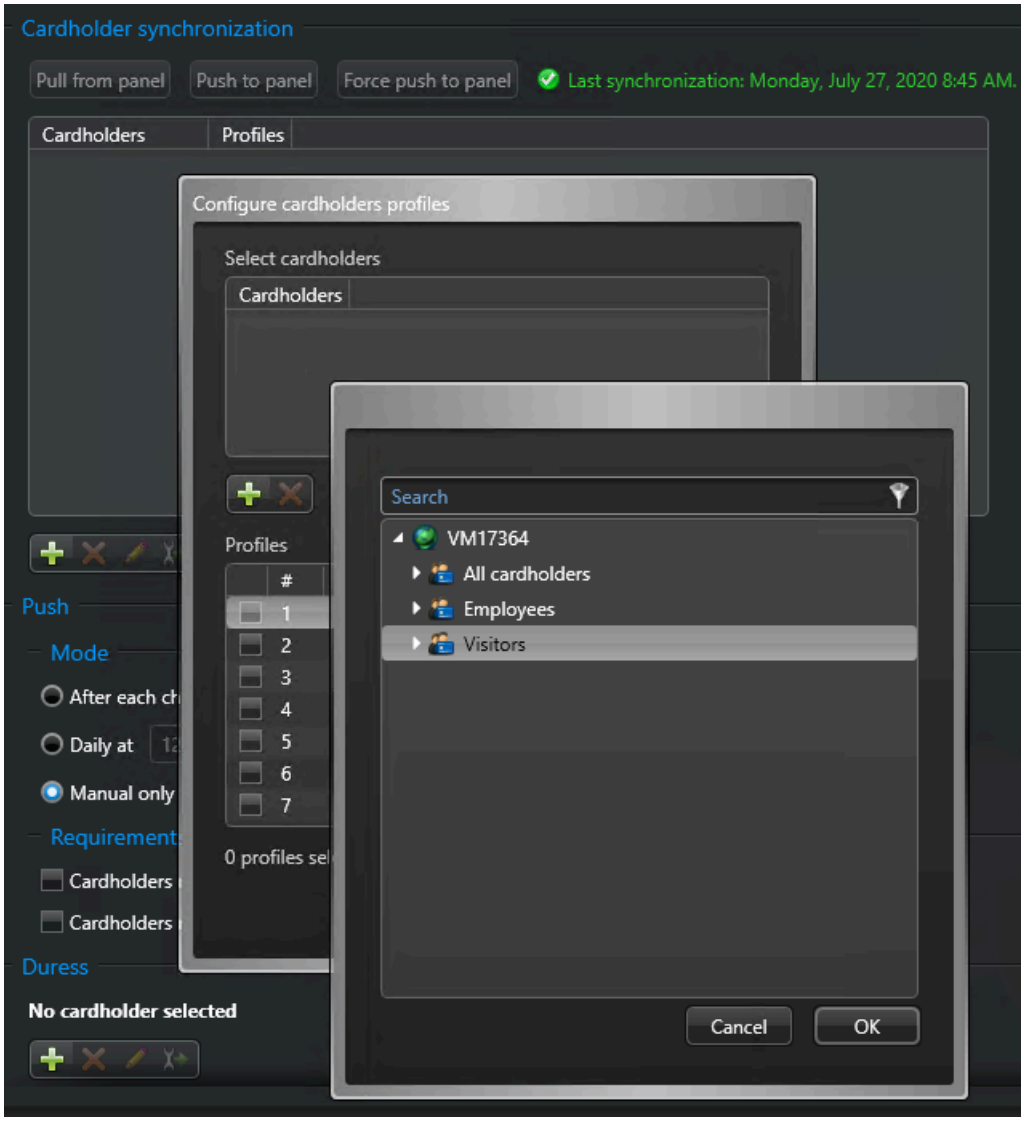

d) Select one to four profiles, and then click **Apply**.

Profiles give the cardholder access privileges, and are defined on the intrusion panel.

e) Click **Apply** again.

NOTE: If the duress user is already part of a group that you are pushing, you don't need to add it again, although you can if you want to be certain.

8 Click **Exclusion list**, and verify that the duress cardholder is not included in any of the groups listed.

9 To export this duress cardholder to the panel, click **Push to panel**.

Related Topics

Integration overview on page 5

Scheduling and automating cardholder export

You can configure the extension to push cardholders to the panel when changes are made, at a specific time each day, or only manually.

What you should know

- **Push to panel:** Exports all Security Center cardholders to the panel and converts them to user codes. Updates, adds, and deletes user codes to match the cardholders in Security Center.

Procedure

1 From the Config Tool homepage, open the *Intrusion detection* task.

2 From the Config Tool homepage, open the *Intrusion detection* task.

3 Click the **User Codes** tab.

4 If this panel has never been synchronized, the options in the *Push* section are unavailable. Either click **Pull from panel** or **Force push to panel**, and wait for the operation to finish.

5 In the **Push** section, choose one of the following synchronization options:

- **After each change:** When a cardholder is changed in Security Center, it is immediately and automatically pushed to the corresponding user account on the intrusion panel. The relevant changes included are:
  - cardholder added to a group
  - cardholder removed from a group
  - cardholder group moved into another group
  - cardholder modified
  - cardholder activated
  - cardholder deactivated
  - credential of a cardholder modified
  - credential added
  - credential removed
  - credential activated
  - credential deactivated
- **Daily at:** Every day at the specified time, all selected cardholders are pushed to the intrusion panel.
- **Manual only:** When selected, a user must click **Push to panel** from the intrusion detection unit's **User codes** tab. This is the default setting.

6 Click **Apply**.

Related Topics

Integration overview on page 5

8

Controlling DMP panels

This section includes the following topics:

- "Resetting the state of 24-hour inputs" on page 87

Resetting the state of 24-hour inputs

When a 24-hour input returns to its *Normal* state on an intrusion panel after being activated, this state change is not automatically reflected in Security Center. You must reset the state of the input.

What you should know

You can reset the state of a 24-hour input from the keypad on the intrusion panel or from the *24H zones* intrusion detection area in

NOTE: To reset input states from Security Desk, you must have the *Reset sensors* privilege.


Procedure

1 From the Security Desk homepage, open one of the following tasks:

- *Monitoring* task
- *Maps* task

2 Right-click the *24H zones* intrusion detection area, and then select **Reset sensors**.

From the *Monitoring* task, you can right-click the area from the entity tree or from a tile.

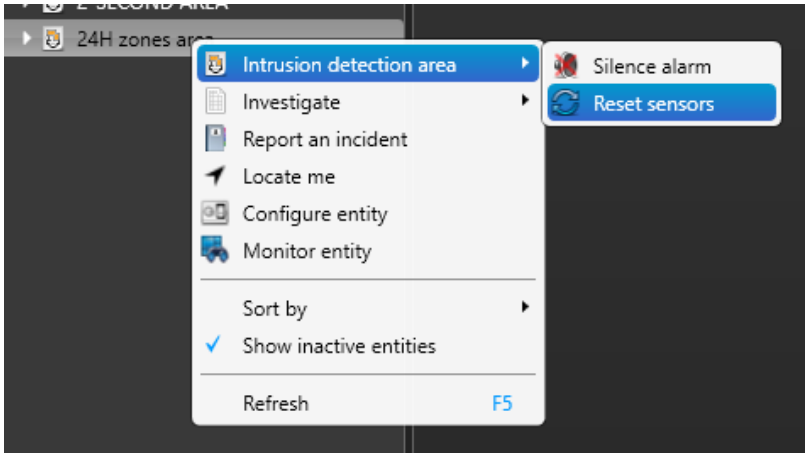

All 24-hour inputs that are activated in Security Center and are *Normal* on the intrusion panel are set to *Normal* in Security Center.

Related Topics

About DMP 24-hour zones on page 9

9

Monitoring DMP devices

This section includes the following topics:

- " Supported reports " on page 89

Supported reports

You can investigate the events and alarms forwarded by the intrusion panels using several of the reports available in Security Desk.

For more information about the purpose, content, and use of these investigation reports, refer to the *Security Center User Guide* or press F1 in Security Desk to access the online help.

An area must be added to the **Event monitoring** list in Security Desk in order for the **Initiator** column in the **Monitoring** task to show information when the area is armed and disarmed.

If a cardholder is deleted from Security Center after synchronization with the panel, and then the cardholder tries to arm or disarm the panel from the touchscreen, the **Initiator** field in the **Monitoring** task is left blank and no warning is triggered.

For a zone set to the **Arming** type, the panel does not send events when the state changes. This prevents automatic updates in the *Maps* or *Monitoring* tasks.

Security Desk investigation report	Where to find more information
Alarm report	Investigate the alarms triggered and the major events that happened in your system (by only selecting critical alarms), who acknowledged a specific alarm, and why. This report is only relevant if you have alarms configured as event-to-actions. Refer to "Investigating current and past alarms" in the *Security Center User Guide*.
Intrusion detection area activities	Investigate events that occurred in intrusion detection areas. Refer to "Investigating intrusion detection area events" in the *Security Center User Guide*.
Intrusion detection unit events	Investigate internal events, such as AC fail, battery fail, unit lost, input trouble, and so on related to selected intrusion detection units. Refer to "Investigating intrusion detection unit events" in the *Security Center User Guide*.

10

Maintenance and troubleshooting

This section includes the following topics:

- "DMP Intrusion Panel extension installed but missing from Security Desk and Config Tool" on page 91

DMP Intrusion Panel extension installed but missing from Security Desk and Config Tool

If the extension-specific role *Properties* page, reports, events and alerts are missing, then the extension is not installed on your local machine. The extension must be installed on a Security Center server (main or expansion) and on all client workstations that are used to monitor incidents.

Symptoms

- Enrollment of intrusion detection units always fails.
- In Config Tool, you cannot see the DMP Intrusion Panel in the **Extensions** tab of the Intrusion Manager role.
- In Security Desk, you do not see the reports for intrusion unit events or intrusion detection area activities.

Cause

The extension is not installed on the local computer, the license (certificate) is invalid, or you are missing required user privileges.

Solutions

Solution 1: Install the extension on your local computer.

Solution 2: Make sure that a Security Center server has the extension installed, that the Intrusion Manager role is hosted on it, and that it is configured correctly.

Solution 3: Make sure that the intrusion panels are online and configured properly.

Solution 4: Confirm that the extension is installed on your Security Center computer: from the homepage in Security Desk or Config Tool, click **About** > **Installed components** and look in the list for entries that begin with *Genetec.IntrusionExtensions*.

Solution 5: Confirm that your system has a license certificate for the extension: from the homepage in Security Desk or Config Tool, click **About** > **Certificates**, look in the list for the name of the extension, and make sure that your access permissions are set to **Unlimited**.

Solution 6: From the homepage in Security Desk or Config Tool, click **About** > **Security Center** and validate that **Intrusion detection** is supported, and that the **Number of intrusion detection units** is greater than zero.

Glossary

add-on

An add-on is a software package that adds tasks, tools, or specific configuration settings to Security Center systems.

alarm

An alarm entity informs users of a situation that requires immediate attention and provides details on how it can be handled in Security Center. For example, an alarm can indicate which entities (usually cameras and doors) best describe the situation, who must be notified, how it must be displayed to the user, and so on.

entity

An entity represents anything in your system that requires configuration. This can be a physical device, such as a camera or a door, or an abstract concept, such as an alarm, a schedule, a user, a role, a plugin, or an add-on.

event

An event is a record of an activity or incident that occurred in the system. Security personnel can monitor events in real time and investigate them later. Events can also trigger automations in the system.

event-to-action

An event-to-action links an action to an event. For example, you can configure an alarm to trigger when a door is forced open.

expansion server

An expansion server is any server machine in a Security Center system that does not host the Directory role. The purpose of the expansion server is to add to the processing power of the system.

extension

An extension refers to a group of manufacturer-specific settings found in the *Extensions* configuration page of a role, such as Archiver, Access Manager, or Intrusion Manager. Most extensions are built-in to Security Center, but some require the installation of an add-on; in those situations, the extension also refers to this add-on.

Federation™

Federation™ joins multiple, independent Genetec™ security systems into a single virtual system. With this feature, users on a central system, called the Federation host, can view and control entities that belong to remote systems.

intrusion detection

Intrusion detection designates one of the following: *intrusion detection (hardware)* or *intrusion detection (analytics)*.

Intrusion detection

The *Intrusion detection* task is an administration task that you can use to configure intrusion detection roles and units.

intrusion detection area

An intrusion detection area entity represents a zone (sometimes called an area) or a partition (group of sensors) on an intrusion panel.

Intrusion detection area activities

The *Intrusion detection area activities* task is an investigation task that reports on activities (master arm, perimeter arm, duress, input trouble, and so on) in selected intrusion detection areas.

intrusion detection unit

An intrusion detection unit is a device, such as an intrusion panel, a control panel, or a receiver, that is monitored and controlled by an Intrusion Manager.

Intrusion detection unit events

The *Intrusion detection unit events* task is an investigation task that reports on events (AC fail, battery fail, unit lost, input trouble, and so on) related to selected intrusion detection units.

Intrusion Manager

The Intrusion Manager role monitors and controls intrusion detection units. It listens to the events reported by the units, provides live reports to Security Center, and logs the events in a database for future reporting.

intrusion panel

An *intrusion panel* (also known as *alarm panel* or *control panel*) is a wall-mounted unit where the alarm sensors (motion sensors, smoke detectors, door sensors, and so on) and wiring of the intrusion alarms are connected and managed.

Maps

The *Maps* task is an operation task that heightens your situational awareness by providing the context of a map to your security monitoring and control activities.

PIN padding

PIN padding is a DMP Intrusion Panel extension feature that adds leading zeroes to PINs that are shorter than the specified minimum length.

role

A role is a software component that performs a specific job within Security Center or Security Center SaaS.

Service Release

A Service Release (SR) is a standalone release that includes minor functionality improvements, bug fixes, and the integration of new hardware, intrusion devices, and plugins.

user code padding

User code padding is a DMP Intrusion Panel extension feature that adds leading zeroes to user codes that are shorter than the specified minimum length.

Where to find product information

You can find our product documentation in the following locations:

- **Genetec™ TechDoc Hub:** The latest documentation is available on the TechDoc Hub.

  Can't find what you are looking for? Contact documentation@genetec.com.
- **Installation package:** The Installation Guide and Release Notes are available in the Documentation folder of the installation package. These documents also have a direct download link to the latest version of the document.
- **Help:** Security Center client and web-based applications include help, which explains how the product works and provide instructions on how to use the product features. To access the help, click **Help**, press F1, or tap the **?** (question mark) in the different client applications.

Technical support

Genetec™ Technical Assistance Center (GTAC) is committed to providing its worldwide clientele with the best technical support services available. As a customer of Genetec Inc., you have access to TechDoc Hub, where you can find information and search for answers to your product questions.

- **Genetec TechDoc Hub:** Find articles, manuals, and videos that answer your questions or help you solve technical issues.

  Before contacting GTAC or opening a support case, it is recommended to search TechDoc Hub for potential fixes, workarounds, or known issues.

  To access the TechDoc Hub, sign in to Genetec Portal and click Go to TechDoc Hub. Can't find what you're looking for? Contact documentation@genetec.com.
- **Genetec Technical Assistance Center (GTAC):** Contacting GTAC is described in the Genetec Advantage Description.

Technical training

In a professional classroom environment or from the convenience of your own office, our qualified trainers can guide you through system design, installation, operation, and troubleshooting. Technical training services are offered for all products and for customers with a varied level of technical experience, and can be customized to meet your specific needs and objectives. For more information, go to https://www.genetec.com/support/training/training-calendar.

Licensing

- For license activations or resets, contact GTAC at https://portal.genetec.com/support.
- For issues with license content or part numbers, or concerns about an order, contact Genetec Customer Service at customerservice@genetec.com, or call 1-866-684-8006 (option #3).
- If you require a demo license or have questions regarding pricing, contact Genetec Sales at sales@genetec.com, or call 1-866-684-8006 (option #2).

Hardware product issues and defects

Contact GTAC at https://portal.genetec.com/support to address any issue regarding Genetec appliances or any hardware purchased through Genetec Inc.