


# Bedienungsanleitung Funkset ZB40 für Gurtwickler GW60

Artikel Nr. SR70040

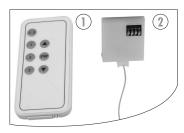

## superrollo Hausautomatisierung GmbH

Gewerbepark 1

01156 Dresden
www.superrollo-online.de

www.soportono ommo.do

Service-Hotline: 01807 001655 \*

\* 30 Sekunden kostenlos, danach 14 ct/Minute aus dem dt. Festnetz bzw. max. 42 ct/Minute aus dem dt. Mobilfunknetz.

## 1. Allgemeine Sicherheitshinweise



Der Einsatz defekter Geräte kann zur Gefährdung von Personen und zu Sachschäden führen (Stromschlag, Kurzschluss).

Verwenden sie niemals defekte oder beschödigte Geräte. Wenden Sie sich in diesem Fall bitte an unseren Kundendienst.

## Bei unsachgemäßem Gebrauch besteht erhöhte Verletzungsgefahr.

- Es darf Kindern nicht erlaubt werden, mit dem Funkhandsender zu spielen.
- Bewahren Sie die Funkhandsender so auf, dass ein ungewollter Betrieb, z. B. durch spielende Kinder, ausgeschlossen ist.

## 2. Richtige Verwendung

## Verwenden Sie den Funkhandsender und den Funkempfänger nur zur Fernbedienung von:

superrollo Gurtwicklern GW60

#### Einsatzbedinaungen

- Betreiben Sie Funkhandsender und Funkempfänger nur in trockenen Räumen.
- Die Fernbedienung mit Funkhandsender und Funkempfänger ist nur für Geräte und Anlagen zulässig, bei denen eine Funkstörung im Sender oder Empfänger keine Gefahr für Menschen, Tiere oder Gegenstände ergibt oder das Risiko durch andere Sicherheitseinrichtungen abgedeckt wird.

#### 3. Falsche Verwendung

Verwenden Sie den Funkhandsender und den Funkempfänger nie zur Fernsteuerung von Geräten und Anlagen mit erhöhten sicherheitstechnischen Anforderungen oder erhöhter Unfallgefahr. Dies bedarf zusätzlicher Sicherheitseinrichtungen. Beachten Sie die jeweiligen gesetzlichen Regelungen zum Errichten solcher Anlagen.

### 4. Funkhandsender (1)

Mit Hilfe des Funkhandsenders können Sie bis zu drei superrollo Gurtwickler einzeln oder gemeinsam steuern, sofern diese alle mit Funkempfängern ausgestattet sind.

#### **Funktionsmerkmale**

- Einfache Steuerung von bis zu drei superrollo Gurtwicklern GW60.
- Drei Kanalwahltasten 1 ... 3 zur Auswahl eines Gurtwicklers.
- Eine Sammeltaste zur gleichzeitigen Steuerung aller angemeldeten Gurtwickler.
- ◆ Drei Kommandotasten zur Ausführung manueller Schaltbefehle ▲ / stop / ▼.

## 5. Funkempfänger 2

Funkempfängermodul zur einfachen Steckmontage in einen superrollo Gurtwickler GW60.

#### **Funktionsmerkmale**

- An- und Abmeldemodus. Es können maximal 4 Sender an einem Gurtwickler angemeldet werden.
- Empfang manueller Steuerbefehle eines Funkhandsenders.
- Freihängende flexible Antenne.

## 6. Anschluss des Funkempfängers

Der Funkempfänger wird in das Einschubfach auf der Gehäuserückseite des Gurtwicklers eingesteckt. Eine Verdrehsicherung verhindert das falsche Einstecken des Empfängers.

#### WICHTIG:

- Beachten Sie die richtige Position der elektrischen Kontakte des Empfängers (s. Abbildungen in Kapitel 6.1 und 6.2).
- Beim Einstecken in das Einschubfach müssen Sie einen kleinen Widerstand überwinden bis der Empfänger einrastet.
- Stecken sie den Stecker nie mit Gewalt in das Einschubfach.
- Erfolgt der Anschluss nachträglich in einen bereits installierten Gurtwickler müssen Sie vorher die Netzspannung für den Gurtwickler ausschalten.
- Achten Sie darauf, dass das Antennenkabel bei der Montage des Gurtwicklers nicht beschädigt wird.

#### 6.1 Anschluss an ein Aufputzgerät

#### Neuinstallation eines Aufputzgerätes:

- Halten Sie die Montagereihenfolge gemäß der Bedienungsanleitung des Aufputzgerätes ein.
- Stecken Sie zuerst den Funkempfänger seitenrichtig (s. Abbildung 3) in das Einschubfach bis er einrastet, bevor Sie das Netzteil und den Sonnensensor (falls vorhanden) anschließen.

## Nachträglicher Anschluss an ein bereits montiertes Aufputzgerät:

- Stecken Sie den Funkempfänger seitenrichtig in das Einschubfach bis er einrastet.
- Die größte Funkreichweite ergibt sich, wenn das Antennenkabel glatt nach unten hängt. Alternativ kann es auch am Gurtwickler befestigt werden.



## 6.2 Anschluss an ein Unterputzgerät

#### Neuinstallation eines Unterputzgerätes:


- Halten Sie die Montagereihenfolge gemäß der Bedienungsanleitung des Unterputzgerätes ein.
- Stecken Sie den Funkempfänger seitenrichtig in das Einschubfach bis er einrastet (s. Abbildung 4).

#### **◆** ACHTUNG

Verlegen sie anschließend die Antenne wie in Abbildung 5 gezeigt . Verwenden Sie eventuell einen Klebesteifen, um das Antennenkabel auf dem Gehäuse zu fixieren. Das Antennenkabel darf bei der Montage des Unterputzgerätes nicht an der Wand eingeklemmt und beschädigt werden.

## Nachträglicher Anschluss an ein bereits montiertes Unterputzgerät:

- Demontieren Sie den Unterputzgurtwickler wie in der zugehörigen Bedienungsanleitung beschrieben.
- Schließen sie den Funkempfänger wie oben beschrieben an und verlegen sie auch das Antennenkabel entsprechend.





## 7. Den Funkempfänger demontieren


Der Funkempfänger lässt sich mit Hilfe eines kleinen Schraubendrehers aus dem Einschubfach herausdrücken (s. Abbildung 6).

#### **WICHTIG**

Schalten sie unbedingt die Netzspannung für den Gurtwickler aus, bevor Sie den Funkempfänger demontieren.

## Unterputzgerät

 Um den Funkempfänger aus einem Unterputzgurtwickler zu entfernen, müssen Sie zuerst den Unterputzgurtwickler demontieren (s. zugehörige Bedienungsanleitung).



**Beispiel:** Demontage am Unterputzgurtwickler.

## 8. Anmelden des Funkhandsenders

Damit Sie den Gurtwickler mit dem Funkhandsender steuern können, müssen Sie diesen zuerst am Funkempfänger bzw. am Gurtwickler anmelden.

- 1. (4s lang \* + A drücken). Den Gurtwickler in den Anmeldemodus schalten.
- Die Sonnen-Kontrollleuchte des Gurtwicklers blinkt. Der Anmeldemodus bleibt für 60 Sekunden aktiv.
- 3. Die gewünschte Kanaltaste am Funkhandsender drücken 1 .... 3.

Wollen Sie nur einen Gurtwickler fernbedienen empfehlen wir Ihnen die Anmeldung des Funkhandsenders mit Hilfe der Kanaltaste vorzunehmen, somit können sie später den Gurtwickler mit jedem beliebigen Kanal steuern.

- 4. Eine Kommandotaste des Funkhandsenders drücken (z. B. 🔼).
- 5. Der Funkhandsender ist am Gurtwickler angemeldet, sobald die Sonnen-Kontrollleuchte nicht mehr blinkt.
- 6. Den nächsten Funksender anmelden oder die Anmeldung beenden.

### HINWEIS

Sollte die Sonnen-Kontrollleuchte nicht nach 4 Sekunden blinken, so ist die Anmeldung fehlgeschlagen, zum Beispiel wenn schon die maximale Anzahl an Funksendern (max. 4 Sender) angemeldet ist oder ein ungeeignetes Gerät angemeldet wird.

#### 9. Abmelden des Funkhandsenders

- 1. (4s lang 🔆 + 🔽 drücken). Den Gurtwickler in den Abmeldemodus schalten.
- Die Uhr-Kontrollleuchte des Gurtwicklers blinkt. Der Abmeldemodus bleibt für 60 Sekunden aktiv.
- 3. Eine Kommandotaste drücken (z. B. 🖎).
- 4. Der Funkhandsender ist abgemeldet, sobald die Uhr-Kontrollleuchte nicht mehr blinkt.
- Den n\u00e4chsten Funksender abmelden oder die Abmeldung beenden.

#### HINWEIS

Sollte die Uhr-Kontrollleuchte nicht nach 4 Sekunden blinken, so ist die Abmeldung fehlgeschlagen, zum Beispiel wenn versucht wird, einen Funksender abzumelden, der gar nicht angemeldet ist.

#### 10. Den Funkhandsender bedienen

**Beispiel 1:** Sie haben den Funkhandsender an drei Gurtwicklern angemeldet. Jeder Gurtwickler bzw. jedes Fenster ist einer Kanaltaste zugeordnet (Fenster 1 = Taste 1 usw.):

## Der Rollladen an Fenster 2 soll sich schließen:

- 1. Wählen Sie Kanal 2 2.
- 2. Drücken Sie anschließend die Taste.
  Der Rollladen an Fenster 2 fährt runter.

## Der Rollladen an Fenster 2 soll sich wieder öffnen (z.B. am nächsten Morgen):

3. Drücken sie die 🔼-Taste.

Der Rollladen an Fenster 2 fährt wieder hoch. Schritt 3. funktioniert nur, wenn zwischendurch keine andere Kanaltaste gedrückt wurde. Ansonsten erst Taste 2 drücken und dann die "Auf-Taste".

## Beispiel 2: Alle Rollläden sollen sich schließen:

- 1. Drücken Sie die Sammeltaste 📖.
- 2. Drücken Sie anschließend die Taste.
  Alle Rollläden fahren runter.

## 11. Batteriewechsel im Funkhandsender

 Das Batteriefach befindet sich an der Unterseite des Funkhandsenders. Zum Wechseln der Batterie müssen Sie das Einschubmodul mit einem kleinen Schraubendreher lösen und herausziehen.

CROSS

- Achten Sie beim Einsetzen der Batterie auf die richtige Polarität. Der Plus-Pol (+) der Batterie muss oben liegen.
- HINWEIS! Leere Batterien sind Sondermüll und aehören nicht in den Restmüll.

## 12. Einstellungen löschen

Beim Löschen aller Daten des Gurtwicklers (Zurücksetzen auf die Werkseinstellungen), werden auch alle Einstellungen des Funkempfängers gelöscht.

## 13. Technische Daten Funkempfänger

Versorgungsspannung: +5 V DC
(max. 12,5 mA) erfolgt über den Gurtwickler

Empfangsfrequenz: 433,92 MHz

Maße (L x B x T): 29 x 33 x 7,5 mm

Antennenkabel: Länge =17 cm

### 14. Technische Daten Funkhandsender

Sendefrequenz:	433,92 MHz
Sendeleistung:	10 mW
Reichweite im Gebäude:	ca. 15 m (Abhängig von der Bausubstanz)
Versorgungsspannung:	3 V
Batterie-Typ: Lebensdauer ca. 2 Jahre, bei	CR2025 (Lithium) 6 Betätigungen pro Tag.
Max. Anzahl Kanäle:	3
Zul. Umgebungstemperatur:	+ 5 °C bis + 40 °C
Abmessungen (L x B x T):	87 x 41 x 7 mm

## 15. CE-Zeichen und EG-Konformität

Das **Funkset ZB40** (Art.-Nr. SR70040) erfüllt die Anforderungen der geltenden europäischen und nationalen Richtlinien.



#### 1999/5/EG R&TTE Richtlinie

Die Konformität wurde nachgewiesen. Die entsprechenden Erklärungen und Unterlagen sind beim Hersteller hinterlegt.

## 16. Garantiebedingungen

Die superrollo Hausautomatisierung GmbH gibt 24 Monate Garantie für Neugeräte, die entsprechend der Einbauanleitung montiert wurden. Von der Garantie abgedeckt sind alle Konstruktionsfehler, Materialfehler und Fabrikationsfehler.

Ihre gesetzlichen Gewährleistungsansprüche bleiben von dieser Garantie unherührt

#### Ausgenommen von der Garantie sind:

- ◆ Fehlerhafter Einbau oder Installation
- Nichtbeachtung der Einbau- und Bedienungsanleitung
- Unsachgemäße Bedienung oder Beanspruchung
   Äußere Finwirkungen wie Stöße. Schläge oder Witterung
- Aubere Entwirkungen wie Stobe, Schlage oder Wilferung
   Reparaturen und Abänderungen von dritten, nicht autorisierten
- ◆ Verwendung ungeeigneter Zubehörteile
- Schäden durch unzulässige Überspannungen z. B. Blitzeinschlag)
- Funktionsstörungen durch Funkfrequenzüberlagerungen und sonstige Funkstörungen

Voraussetzung für die Garantie ist, dass das Neugerät bei einem unserer zugelassenen Fachhändler erworben wurde. Dies ist durch Vorlage einer Rechnungskopie nachzuweisen.


Innerhalb der Garantiezeit auftretende Mängel beseitigt superrollo kostenlos entweder durch Reparatur oder durch Ersatz der betreffenden Teile oder durch Lieferung eines gleichwertigen oder neuen Irsatzgerätes. Durch Ersatzlieferung oder Reparatur aus Garantiegründen tritt keine generelle Verlängerung der ursprünglichen Garantiezeit ein.

Technische Änderungen, Druckfehler und Irrtümer vorbehalten. Abbildungen unverhindlich.



## **Operating instructions** Radio unit ZB40 for belt winder GW60

Item no. SR70040

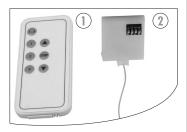

#### superrollo Hausautomatisieruna GmbH Gewerbenark 1

01156 Dresden (Germany) www.superrollo-online.de

Service-Hotline: 01807 001655 \*

\* 30 seconds free of charge, subsequently 14 cents/minute from German fixed line networks and max. 42 cents/minute from German cellular networks.

## 1. General safety instructions



The use of defective equipment can lead to personal injury and damage to property (electric shocks, short circuitina).

Never use defective or damaged equipment Please contact our Customer Service department in the event of faults

## Incorrect use leads to an increased risk of injury.

- ◆ Children may not be permitted to play with the manual radio transmitter.
- ◆ Store the radio transmitter so that unintentional operation, e. g. by playing children, can be ruled out.

## 2. Correct usage

## Only use the wireless transmitter and radio receiver for the remote control of:

superrollo belt winder GW60


#### **Operating conditions**

- Only use the radio transmitter and radio receiver in
- Operation of the radio transmitter and radio receiver is only permitted for devices and systems where radio interference from the radio transmitter or receiver cannot present a hazard for persons, animals or property, or where the risk is covered by other safety equipment

#### 3. Incorrect usage

Never use the radio transmitter and radio receiver for remote controlling devices and systems with increased safety-relevant requirements or where there is an accident risk. Such use would require additional safety equipment. Observe the respective statutory regulations for the installation of such systems

## 4. Radio transmitter (1)



## **Functional characteristics**

 Straightforward control of up to three superrollo belt winders GW60.

insofar as they are all equipped with radio receivers.

- ◆ Three channel selection keys ■...■ for the selection of a helt winder
- ◆ A combination key for simultaneously controlling all of the assigned belt winders.
- Three command keys for executing manual switching commands  $\triangle$  /  $\bigcirc$  /  $\bigcirc$ .

## 5. Radio receiver (2)

\$A70040-1 (06.15)

Radio receiver module for easy plug-and-play installation on a superrollo belt winder GW60.

#### **Functional characteristics**

- ◆ Log-on and log-off mode. A maximum of 4 transmitters can be loaged on to a single belt winder.
- Receive manual control commands from a radio
- Freely-suspended flexible antenna.

#### 6. Connection of the radio receiver

The radio receiver can be slotted into the bay on the rear side of the belt winder. An alianment protection mechanism prevents the receiver from being inserted the wrong way ground.

#### IMPORTANT:

- Pay attention to the correct alignment of the electrical contacts on the receiver (please refer to figures in chapter 6.1 and 6.2)
- ◆ When inserting the unit into the bay, you will experience slight resistance until the receiver engages.
- Never force the connector into the bay.
- If the installation is being carried out on an existing and previously installed belt winder then the mains power for the belt winder is first to be switched off.
- Ensure that the antenna cable is not damaged when installing the belt winder.

#### 6.1 Installation on a surface-mounted device

#### New installation of a surface-mounted device:

- Maintain the order for installation in accordance with the operating instructions for the surface-mounted
- First insert the radio receiver paying attention to its alignment - (see Fig. 3) into the bay until it engages, before connecting the power supply and solar sensor (if available)

## Retrofitting on a previously-installed surfacemounted device:

- Insert the radio receiver, paying attention to its alignment into the bay until it engages.
- ◆ The best radio range is achieved when the antenna cable is allowed to freely hang straight down. Alternatively it can be fastened to the belt winder.



### 6.2 Installation on a flush-mounted device

#### New installation of a flush-mounted device:


- Maintain the order for installation in accordance with the operating instructions for the flush-mounted device.
- ◆ Insert the radio receiver, paying attention to its alignment, (see Fig. 4) into the bay until it engages.

#### **◆** ATTENTION

Subsequently align the antenna as shown in Fig. 5. Possibly use a strip of adhesive tape to fasten the antenna cable to the housing. The antenna cable may not be pinched against the wall or damaged when installing the flush-mounted device.

#### Retrofitting on a previously-installed flushmounted device:

- Dismontle the flush-mounted belt winder as described. in the corresponding operating instructions.
- ◆ Connect the radio receiver as described above and lay the antenna cable accordingly.





## 7. Dismantling the radio receiver


The radio receiver can be pressed out of the bay with the help of a small screwdriver (see Fig. 6).

#### IMPORTANT

Always ensure that the mains voltage to the belt winder is switched off before dismantling the radio receiver.

## Flush-mounted device

◆ In order to remove the radio receiver from a flush-mounted device, you must first dismantle the flush-mounted belt winder (see corresponding operating instructions).



**Example:** Dismantling a flush-mounted belt winder.

## 8. Assigning the radio transmitter

In order to be able to control the belt winder with the radio transmitter, you must first assign it to the radio receiver and helt winder

- 1. (Press 🔆 + 🔼 for 4 seconds). Switch the belt winder to registering mode.
- 2. The sunlight indicator light flashes on the belt winder. Registering mode remains active for 60 seconds.
- 3. Press the desired channel key on the radio transmitter 🐽 .... 🔞.

If you only intend to remotely control one belt winder we recommend registering the radio transmitter with the help of the channel key so that you will subsequently be able to control the helt winder with any of the channels.

- 4. Press a command key on the radio transmitter (e. a. 🖎).
- 5. The radio transmitter is assigned to the belt winder as soon as the sunlight indicator light stops flashing.
- 6. Assign the next radio transmitter or quit registering mode.

#### NOTE

In the event that the sunlight indicator light fails to flash after 4 seconds, then registration has failed, for example, if the maximum number of radio transmitters has been reached (max. 4 transmitters) or an unsuitable device has been registered.

## 9. Logging-off the radio transmitter

- 1. (Press + For 4 seconds), Switch the belt winder to log-off mode.
- 2. The clock indicator light flashes on the belt winder. Log-off mode remains active for 60 seconds.
- 3. Press a command key (e. g. 🔼).
- 4. The radio transmitter is logged off as soon as the clock indicator lightstops flashing.
- 5. Log-off the next radio transmitter or quit log-off mode.

In the event that the clock indicator light fails to flash after 4 seconds, then logging off has failed, for example, if you attempt to log off a radio transmitter that was not assigned.

## 10. Operating the radio transmitter

**Example 1:** You have assigned the radio transmitter to three belt winders. Each belt winder and each window is assigned to a channel key (window 1 = key  $\bigcirc$  etc.):

The roller shutters on window 2 should close:

- 1. Select channel 2 💿
- 2. Subsequently press the key. The roller shutters on window 2 close.

## The roller shutters on window 2 should open again (e. g. the following morning):

3. Press the \textstyre kev.

The roller shutters on window 2 open again. Step 3 only works if no other channel key has been pressed in the meantime. Otherwise press key 2 and then press the UP kev.

## Example 2: All of the roller shutters should be closed:

- 1. Press the combination key ......
- 2. Subsequently press the key. All of the roller shutters will close

## 11. Exchanging the radio transmitter battery

- The battery compartment is located on the bottom side of the radio transmitter. In order to exchange the battery, release the plua-in module with a small screwdriver and remove it.
- ◆ When inserting the bat- □ tery, pay attention to the correct polarity. The positive pole (+) of the battery must be upwards.
- ◆ NOTE! Empty batteries are special waste and should not be discarded with household waste

## 12. Deleting the settings

When the helt winder data is deleted (resetting to factory settings), then all of the radio receiver settings will be deleted.

#### 13. Radio receiver technical data

Su	pply voltage:	+5 V DC	
(n	(max. 12.5 mA) realised via the belt winder		
Re	ception frequency:	433.92 MHz	
Di	mensions (L x W x D):	29 x 33 x 7.5 mm	
An	tenna cable:	Lenath =17 cm	

## 14. Radio transmitter technical data

Transmission frequency:	433.92 MHz
Transmitting power:	10 mW
Range within a building:	approx. 15 m (dependent on the building structure)
Supply voltage:	3 V
Battery type:	CR2025 (lithium)
Service life approx. 2 years w	vith 6 actuations per day.
Max. number of channels:	3
Perm. ambient temp. range:	+ 5 °C to $+$ 40 °C
Dimensions (L x W x D):	87 x 41 x 7 mm

## 15. CE Mark and EC Conformity

The Radio unit ZB40 (item no. SR70040) complies with the requirements of the current European and national directives.



#### 1999/5/EC **R&TTE** directive

Conformity has been verified. The corresponding declarations and documentation are available on file at the manufacturer's premises.

## 16. Warranty conditions

superrollo Hausautomatisierung GmbH offers 24 months warranty for new equipment installed in accordance with the installation instructions. All construction faults, material defects and manufacturing defects are covered by the warranty.

Your statutory warranty claims shall remain unaffected by this

### The following are not covered by the warranty:

- ◆ Incorrect fitting or installation
- Non-observance of the installation and operating instructions
- Improper operation or wear and tear
- External influences, such as impacts, knocks or weathering
- Repairs and modifications by third party, unauthorised persons
- Use of unsuitable accessories
- Damage caused by impermissible over-voltages (e. g. lightening
- Malfunctions caused by radio frequency overlaps and other radio

A prerequisite for the warrant is that the new device must have been purchased from one of our approved specialist retailers. Proof of this must be provided by presenting a copy of the bill.

superrollo will remedy any defects which occur within the warranty period free of charge either by repair or by replacement of the affected parts or by supply of a new replacement unit or one to the same value. There is no general extension of the original warranty period by delivery of a replacement or by repair as per the terms of the warranty.

Subject to technical modifications, misprints and errors excepted.

Diagrams subject to change.