



current position : Home (<https://en.peacefair.cn/>) > Products (<https://en.peacefair.cn/product/>) > AC communication module (<https://en.peacefair.cn/product/4/>)



PZEM-6L24 Din Rail Three-Phase Power Meter AC Voltage Current with TTL & RS485 Modbus Output Energy Meters with CT

Category : communication module

Browse : 1890

QR code :

Release time : 2025-07-28 17:51:36

menu



I want to make an inquiry (<https://en.peacefair.cn/inquiry/>)

Product description

The module is mainly used to measure the relevant power parameters of the three-phase AC power frequency power grid, the module does not have a display function, and the measurement data can be read through UART or RS485 interface.

Voltage: 50~220/380V

Current: 0~100A

It supports TTL/485 communication and MODBUS protocol

Hardware/software address modification is supported

File :Peacefair_Power_System.rar shared via network disk

Link: <https://pan.baidu.com/s/1cscXu-ReePyi6b5Uurl9lw?pwd=dp6y>

Extraction code: dp6y

Copy this content and open the Baidu network disk mobile App, which is more convenient to operate

Parameter	Min	Typical	Max	Accuracy	Unit	Remarks
Voltage	50	220/380	566	1%	V	
Current	0		100A	1%	A	
Frequency	45	50/60	65	1%	HZ	
Active Power	0		38	1%	kW	
Reactive Power	0		38	1%	kVar	
Apparent Power	0		38	1%	kVA	
Power Factor (PF)	0		1	1%	PF	
Active Energy	0		399999999.9	1%	kWh	

menu

Reactive Energy	0		399999999.9	1%	kVarh	
Apparent Energy	0		399999999.9	1%	kVAh	
Phase	0		360		°	
Pulse Constant (CF)		1000			imp/kWh	10ms open-drain output (pull-up resistor required)
Baud Rate	2400	9600	115200			
UART Working Voltage		3.3			V	
RS485 Working Voltage		3.3			V	
UART Working Voltage(External)	3	5	5.5		V	when needed
RS485 Working Voltage(External)	3	5	5.5		V	when needed
UART Output Current	60	80	100		mA	
RS485 Output Current	60	80	100		mA	
Device Address (dialing code)	1	1	32			
Device Address (Software Setting)	1	1	247			0 broadcast 248-255 reserved
Whole machine power consumption	0.2	0.3	0.5		W	
Operating Temperature	-20	23	60		°C	
Weight(Only PCB)		51			g	
Weight(Only Host)		107			g	

menu




menu

peacefair


NEW*High precision
Fast response
Stable communication*

Three-Phase AC Module

Voltage: 50~220/380V Current: 0~100A Network port CT

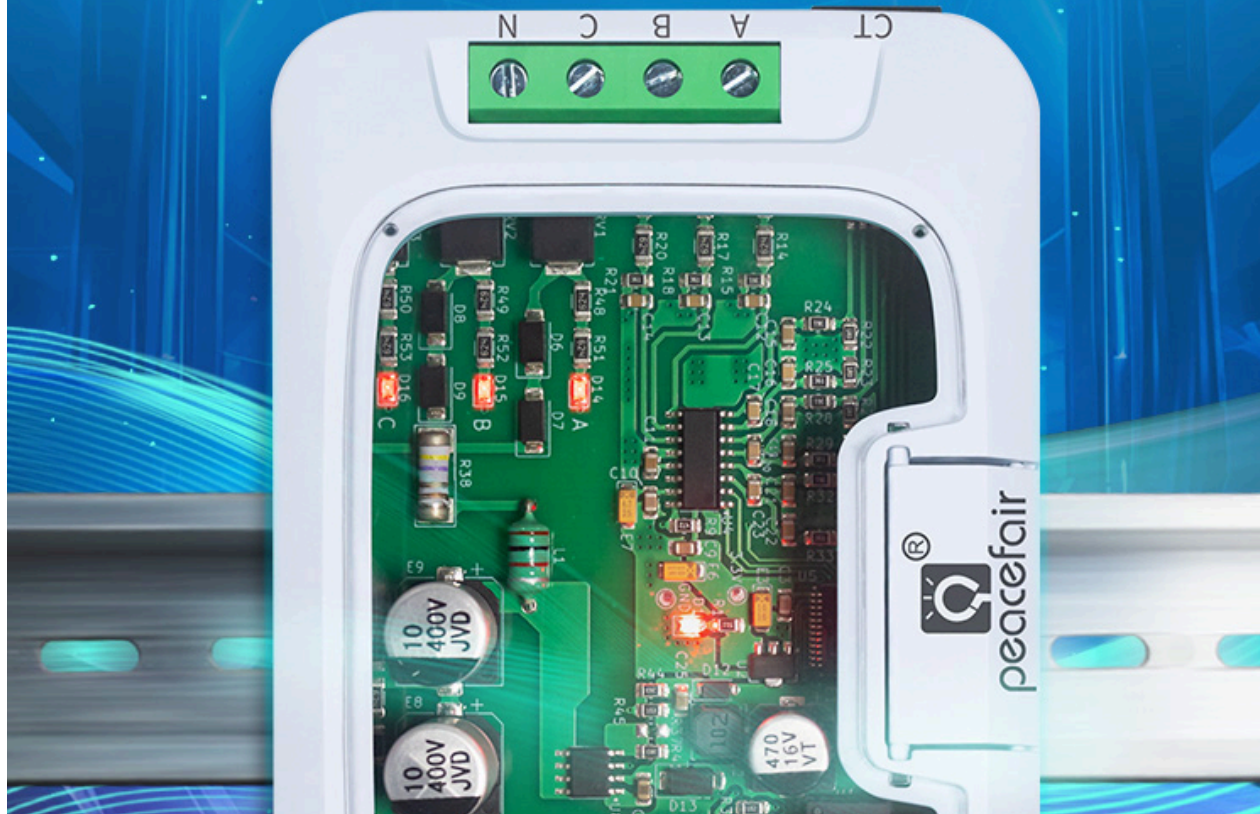

menu

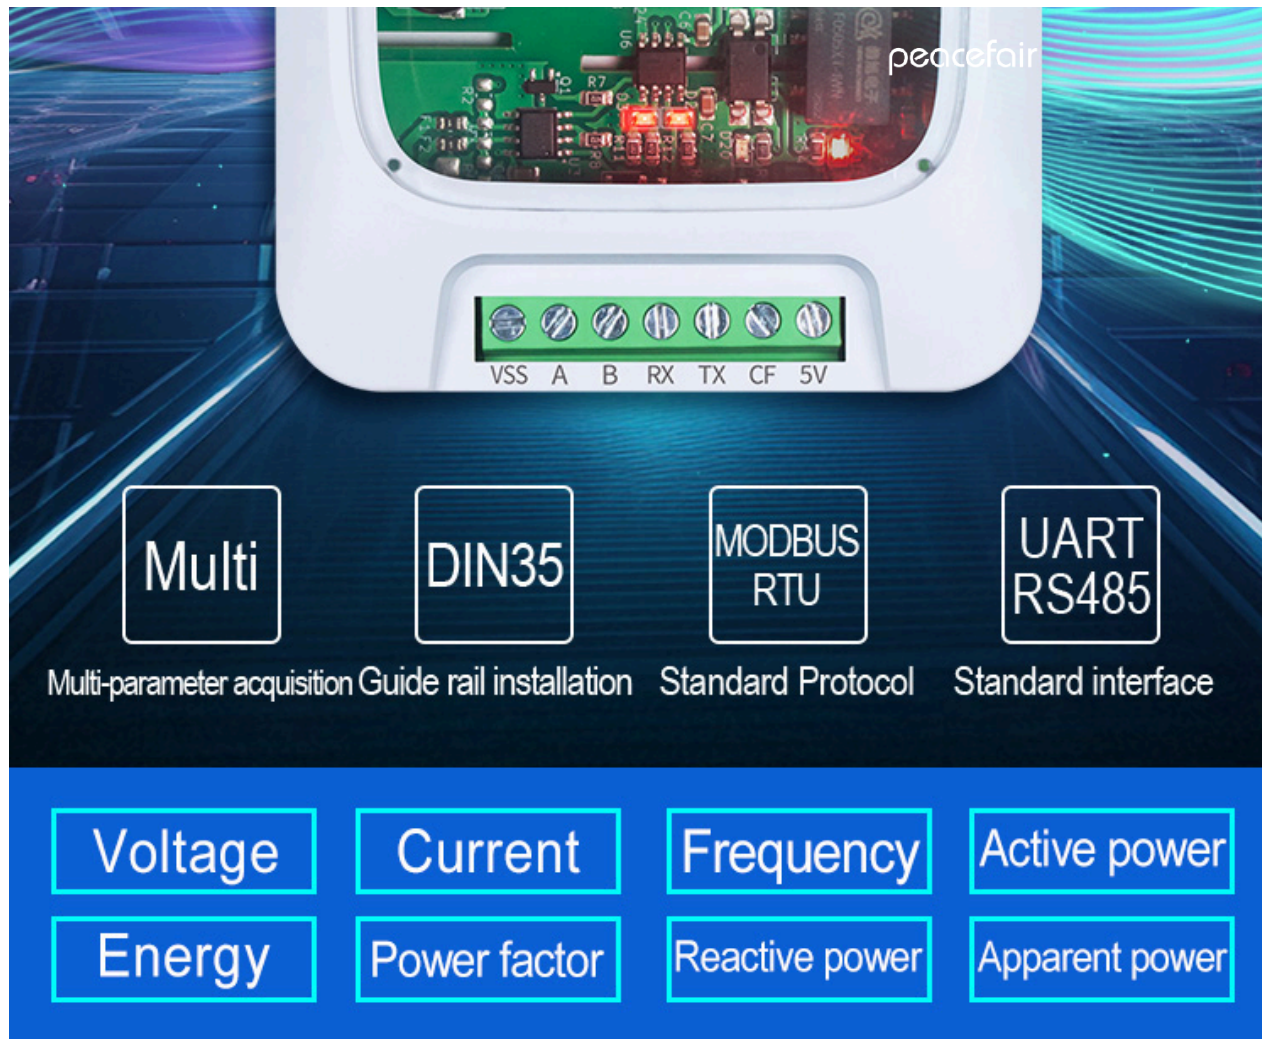

menu

peacefair


Appearance Design


New Standard of Electronic Aesthetics

High integration circuit, minimalist profile, transparent window,
frosted base, PC fire-resistant material

High integrated circuit design

Efficient space utilization

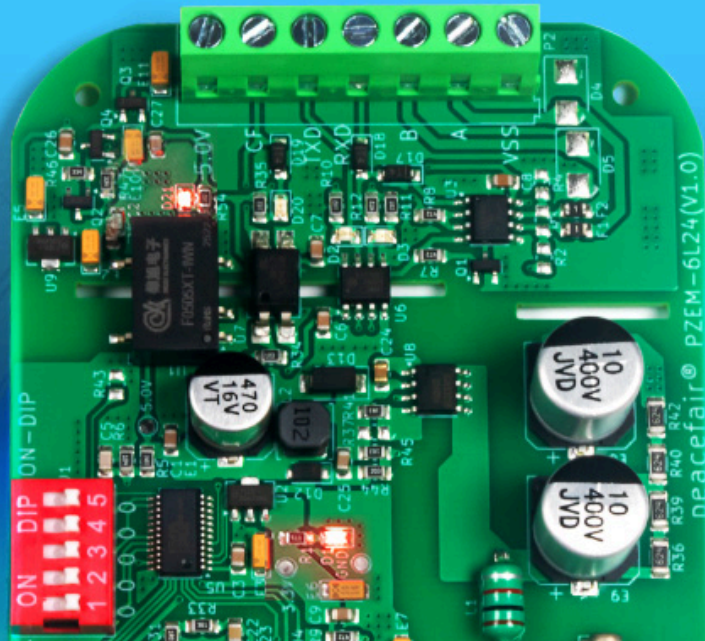[menu](#)

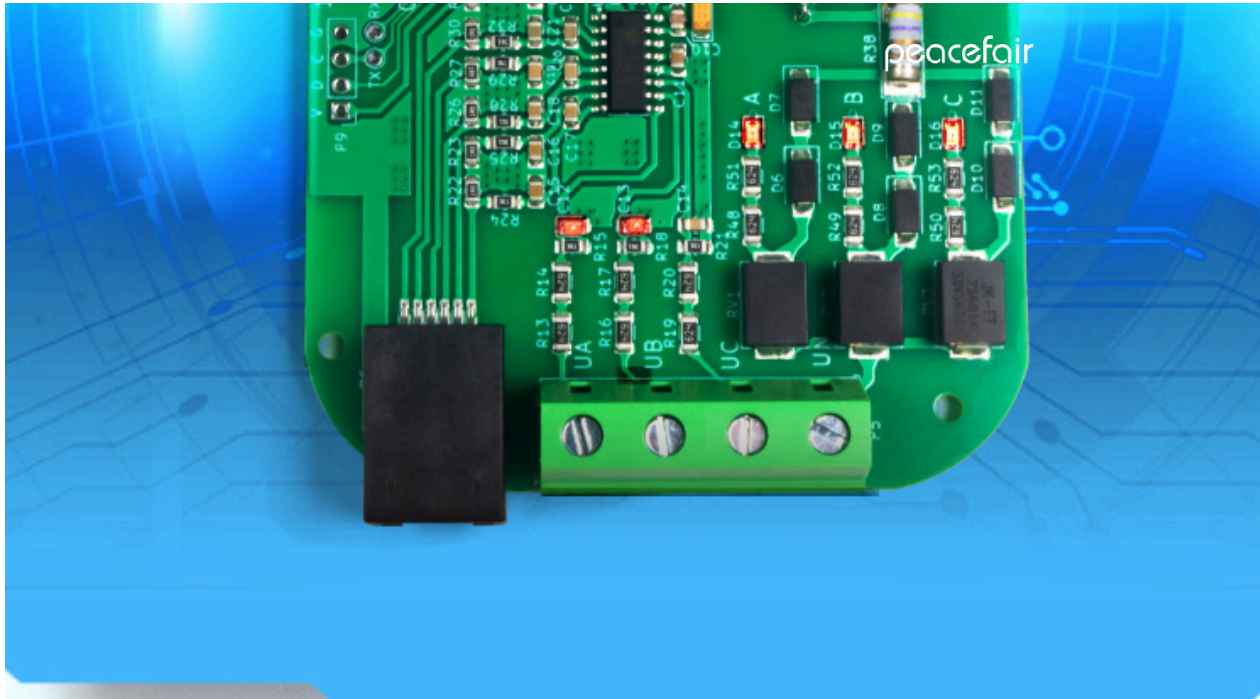


menu


peacefair

The transparent window offers a clear view

Transparent mask, real-time visibility of operating status

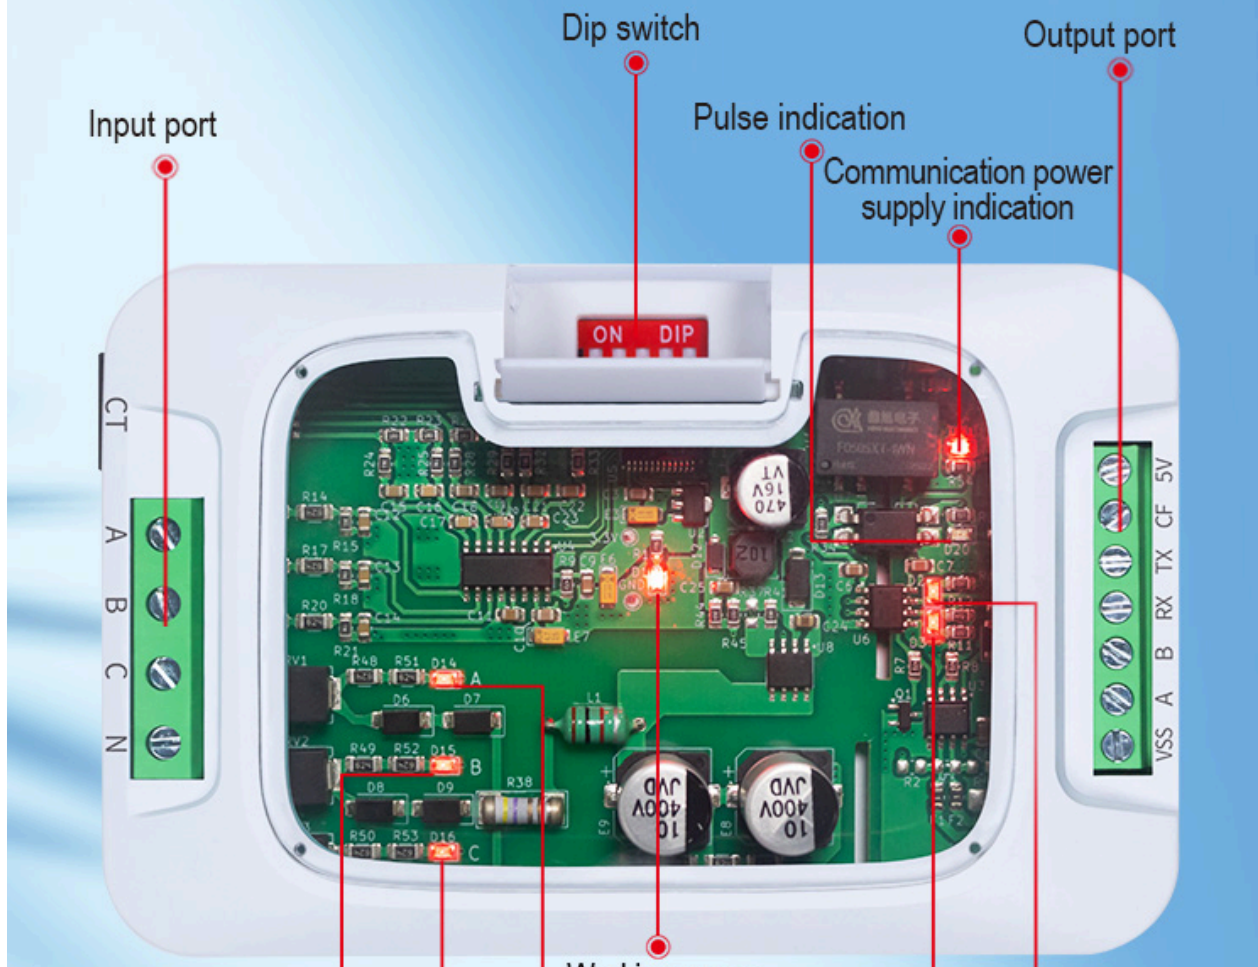

menu

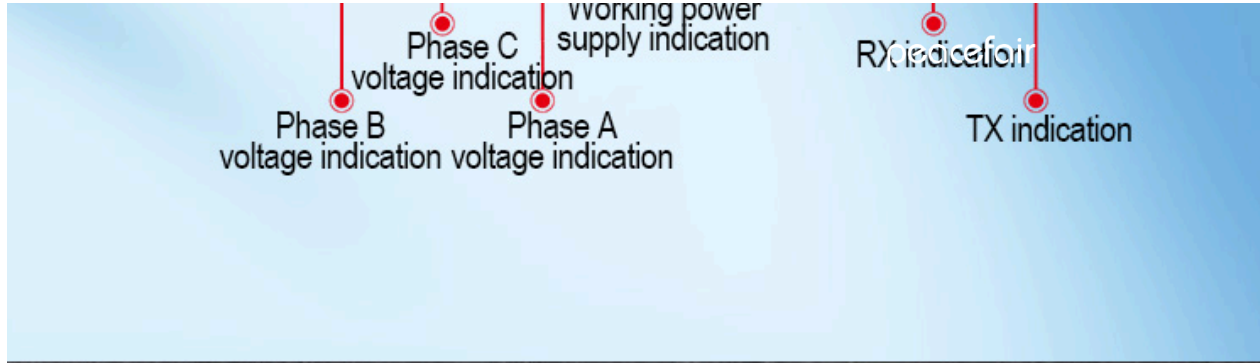

menu


peacefair

PC-grade flame retardants prevent fire

It has good impact resistance and heat resistance



menu

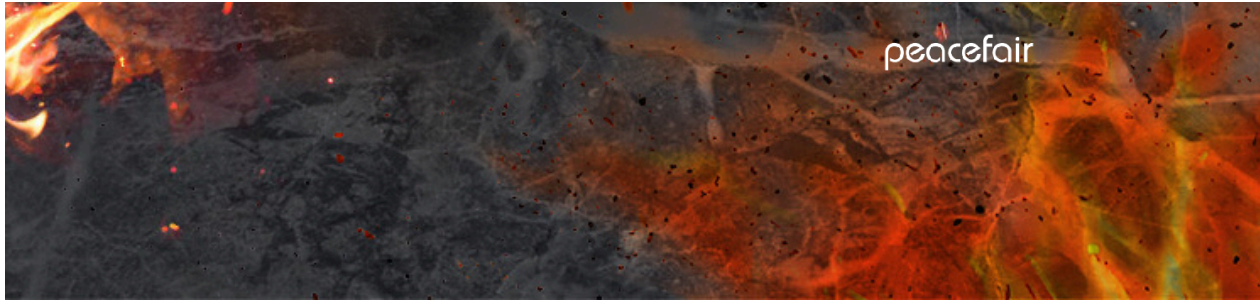

menu


peacefair

Network Interface Design Plug and play

Transformer current sampling is convenient and safe



menu

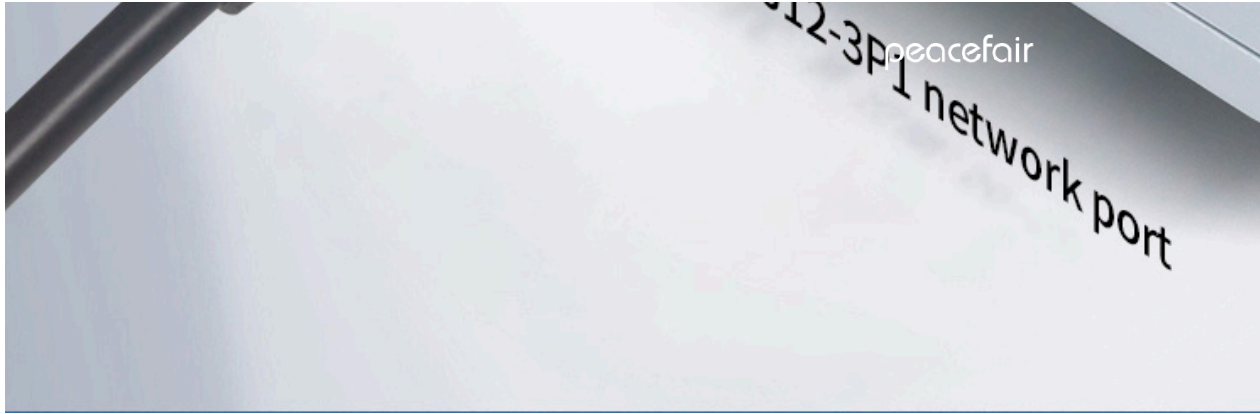

menu


peacefair

Rich communication interfaces

The application layer adopts the Modbus-RTU protocol,
the physical layer uses UART or 485 communication interfaces



menu

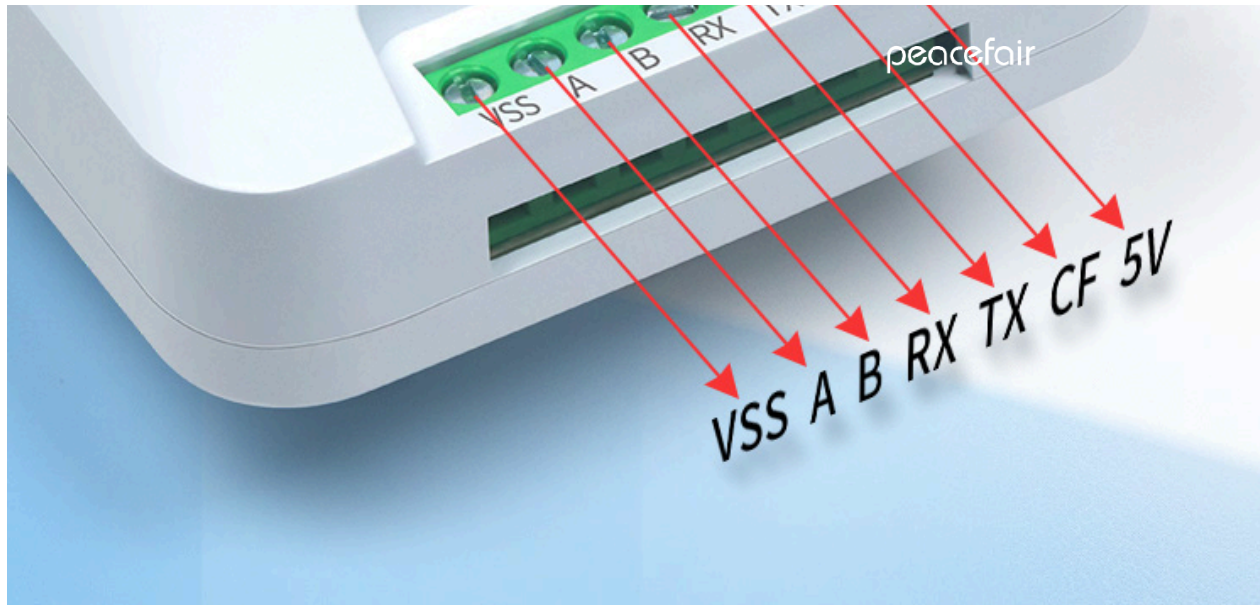

menu

peacefair

Equipped with a high-current transformer *Measure directly without conversion*


It can measure a current of 3 phases ×100A



menu

External dimensions drawing (unit: mm)

Remarks : L=1000 ± 50mm

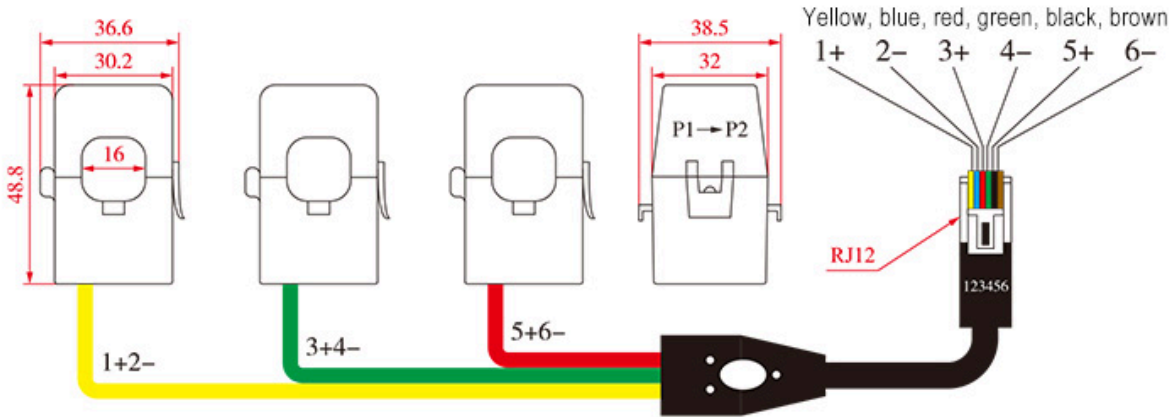

Specification parameters


	PZKHCT-100A-RJ12-3P1 network port	Unit
Rated input	50	A(AC)
Rated output	50	mA(AC)
Transformation ratio	1000:1	Magnification
Phase difference	$\leq 120^\circ$ (RL=0.5Ω)	points
Linear range	0-120 (RL=0.5Ω)	A(AC)
Linearity	0.5%	%
Direct current resistance	$41 \pm 5 \Omega$	Ω
Net weight of the product	/	g
Dimensional tolerance	0.5	mm
Usage method	The primary current flows into the transformer from P1, and the secondary winding current flows into the external circuit from S1	/

menu



External dimensions drawing (unit: mm)

Remarks : $L=1000 \pm 50\text{mm}$

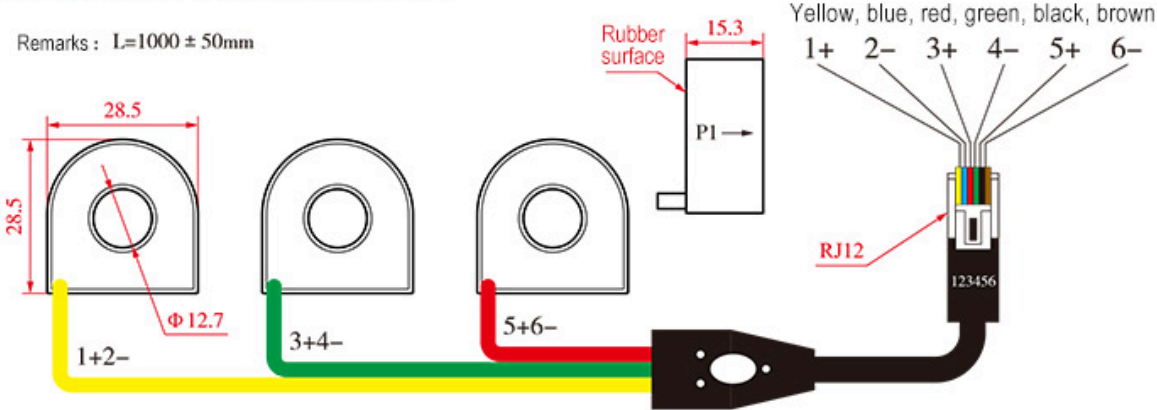

Yellow, blue, red, green, black, brown

1+ 2- 3+ 4- 5+ 6-

RJ12

123456

Rubber surface

15.3

P1

28.5

28.5

$\Phi 12.7$

1+2- 3+4- 5+6-

Specification parameters

	PZXQCT-100A-RJ12-3P1 network port	Unit
Rated input	50	A(AC)
Rated output	50	mA(AC)
Transformation ratio	1000:1	Magnification
Phase difference	$\leq 10^\circ$ (RL=0.5Ω)	points
Linear range	0-110 (RL=0.5Ω)	A(AC)

menu


Linearity	0.2%	%
Direct current resistance	$37 \pm 8 \Omega$	Ω
Net weight of the product	/	g
Dimensional tolerance	0.5	mm
Usage method	The primary current flows into the transformer from P1, and the secondary winding current flows into the external circuit from S1	

Note: Current transformers must not be used in an open circuit, nor should fuses be connected. When using a current transformer, please be sure to connect the load device at the output end of the transformer first.

[menu](#)

More application scenarios

Monitor the electrical parameters and power consumption of AC equipment

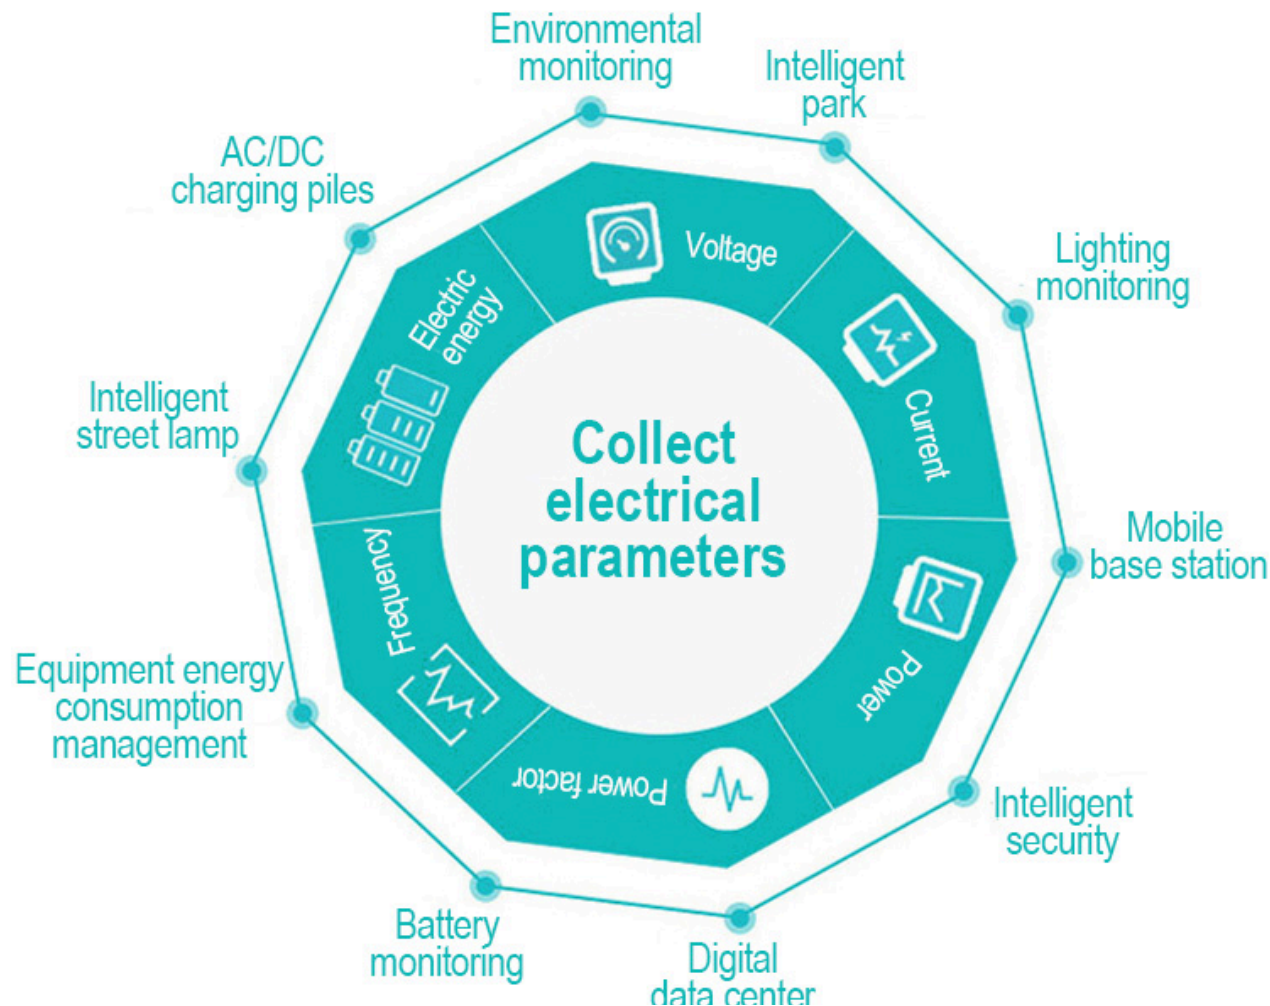


menu



The guide rail design makes installation more convenient

35mm standard guide rail slot

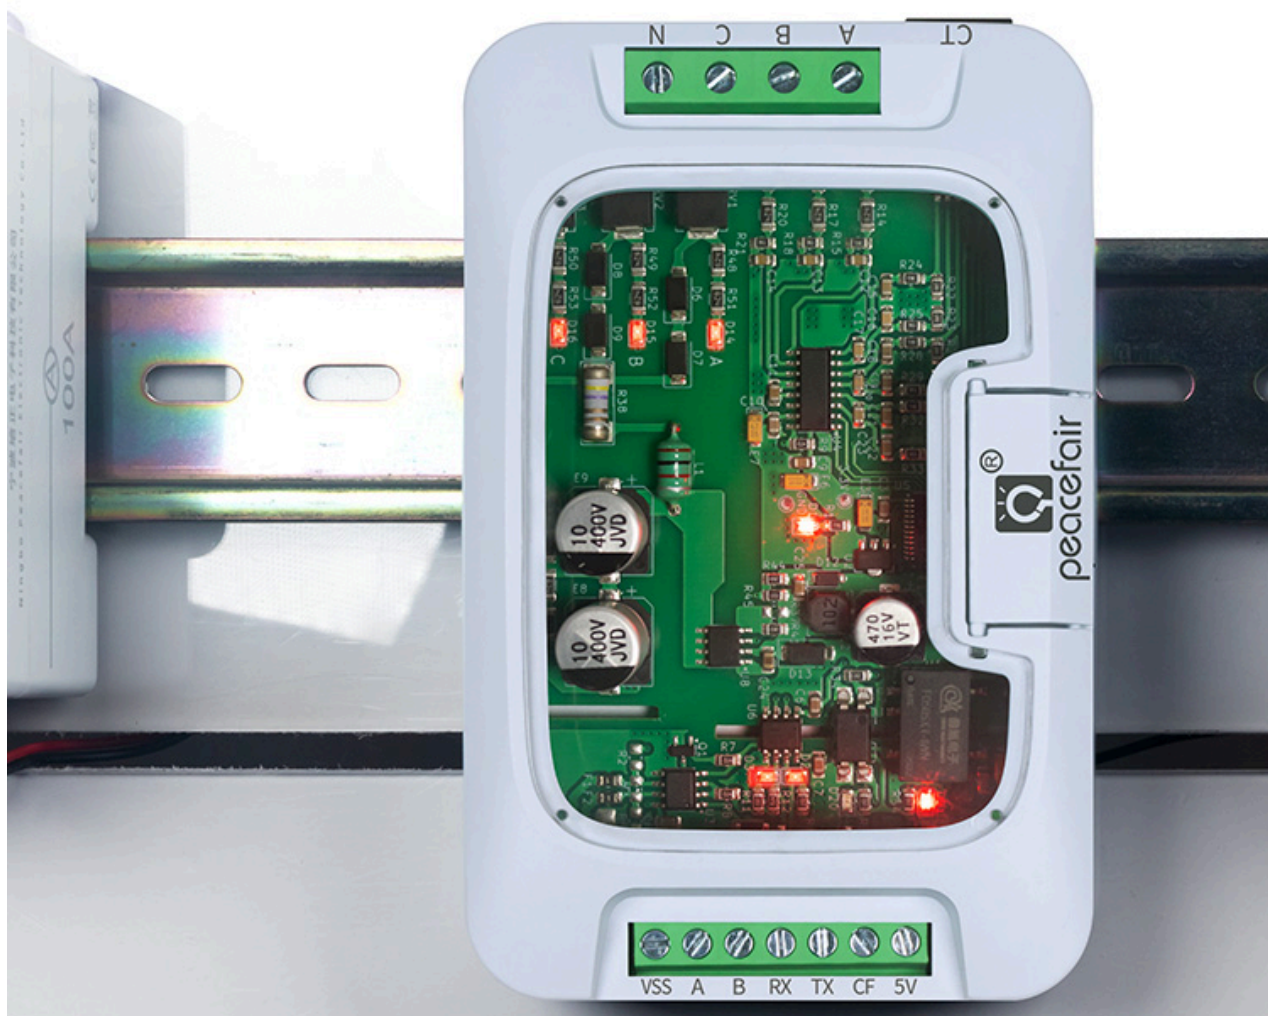

menu


peacefair

menu


peacefair


Compatible with three-phase three-wire/four-wire

The wiring is compatible

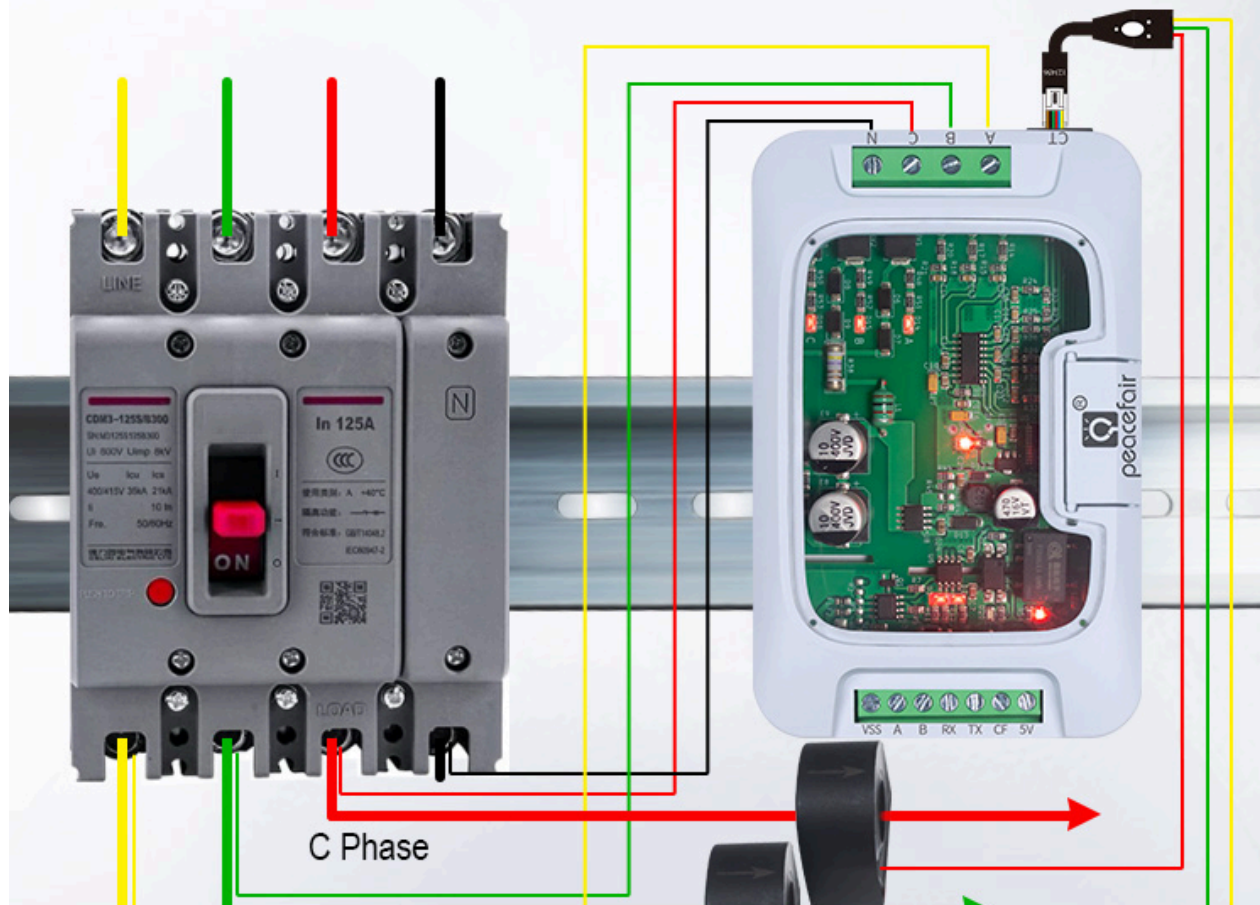

menu

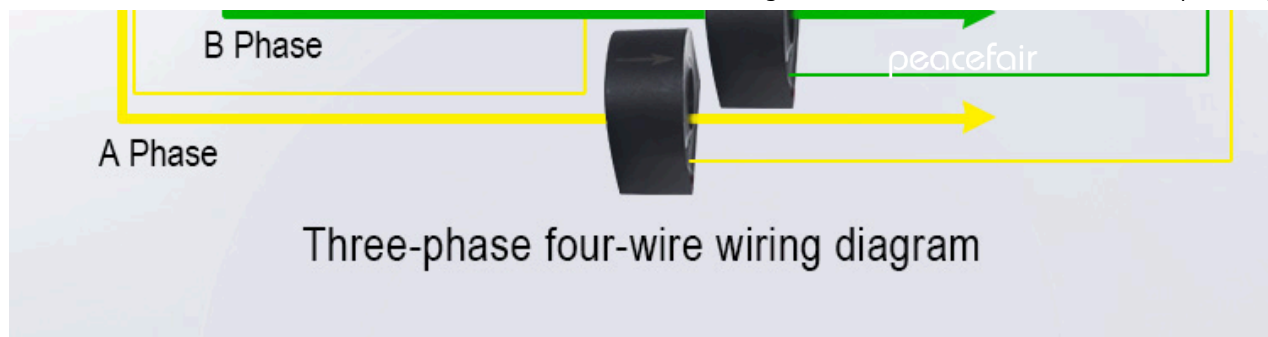[menu](#)

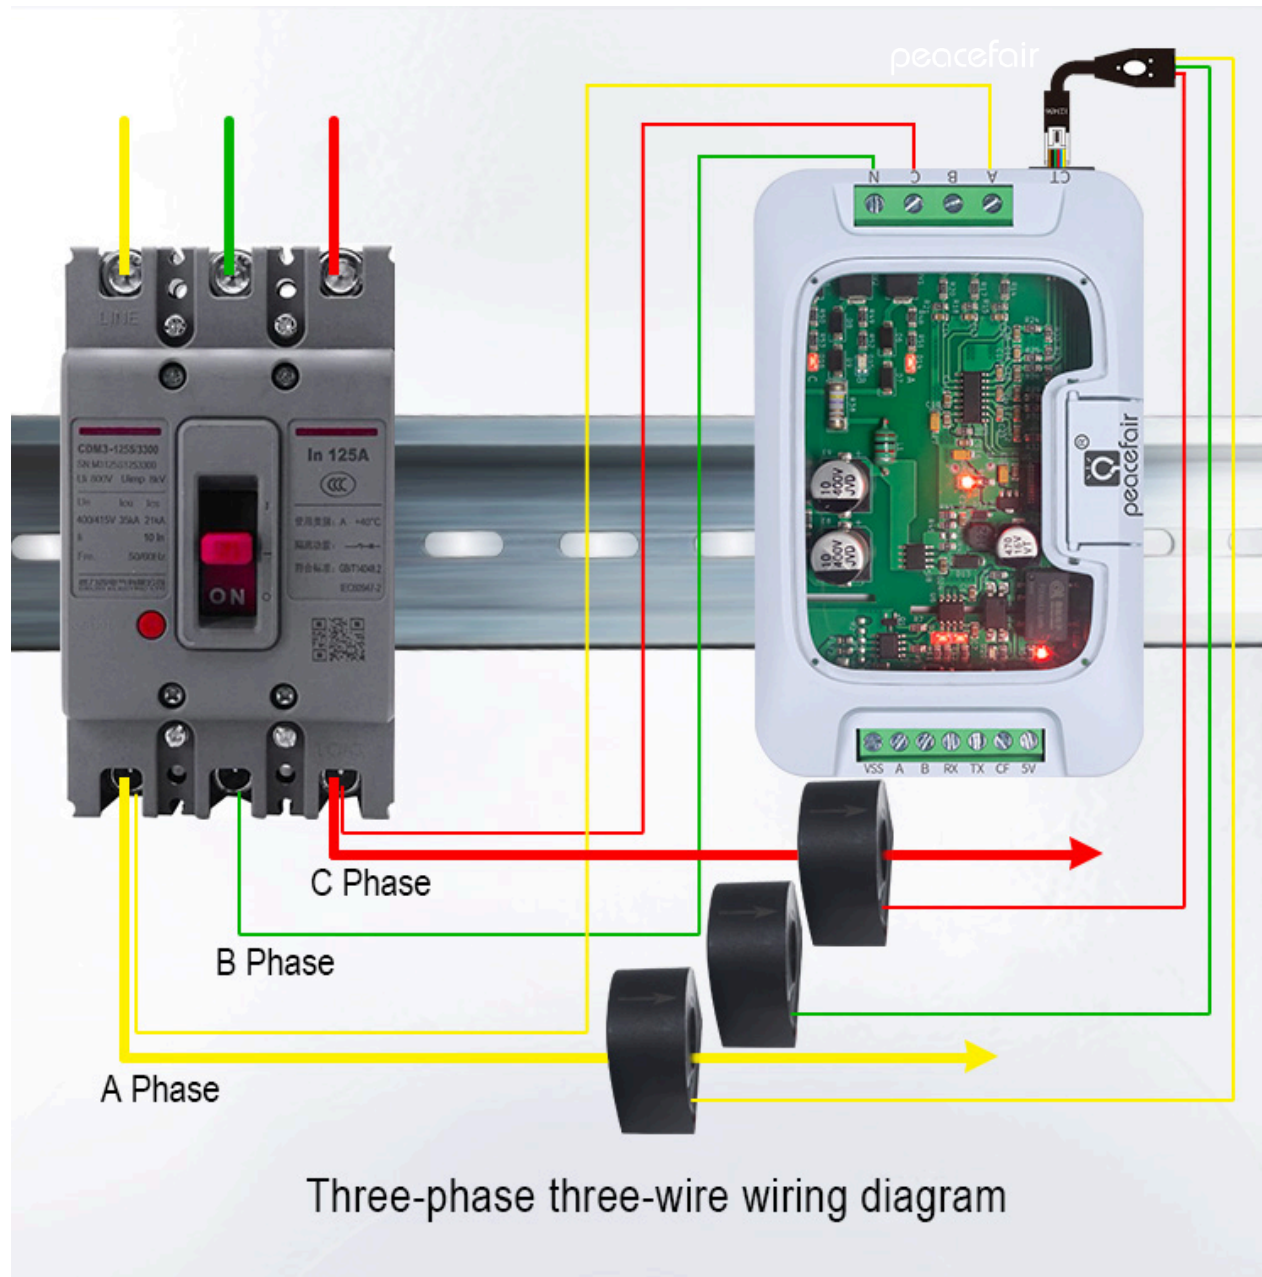


menu

Product dimension drawing

Length×Width×height: 116×76×27.8mm



menu



peacefair

Product Photography

360° all-round display



menu




menu



menu



menu

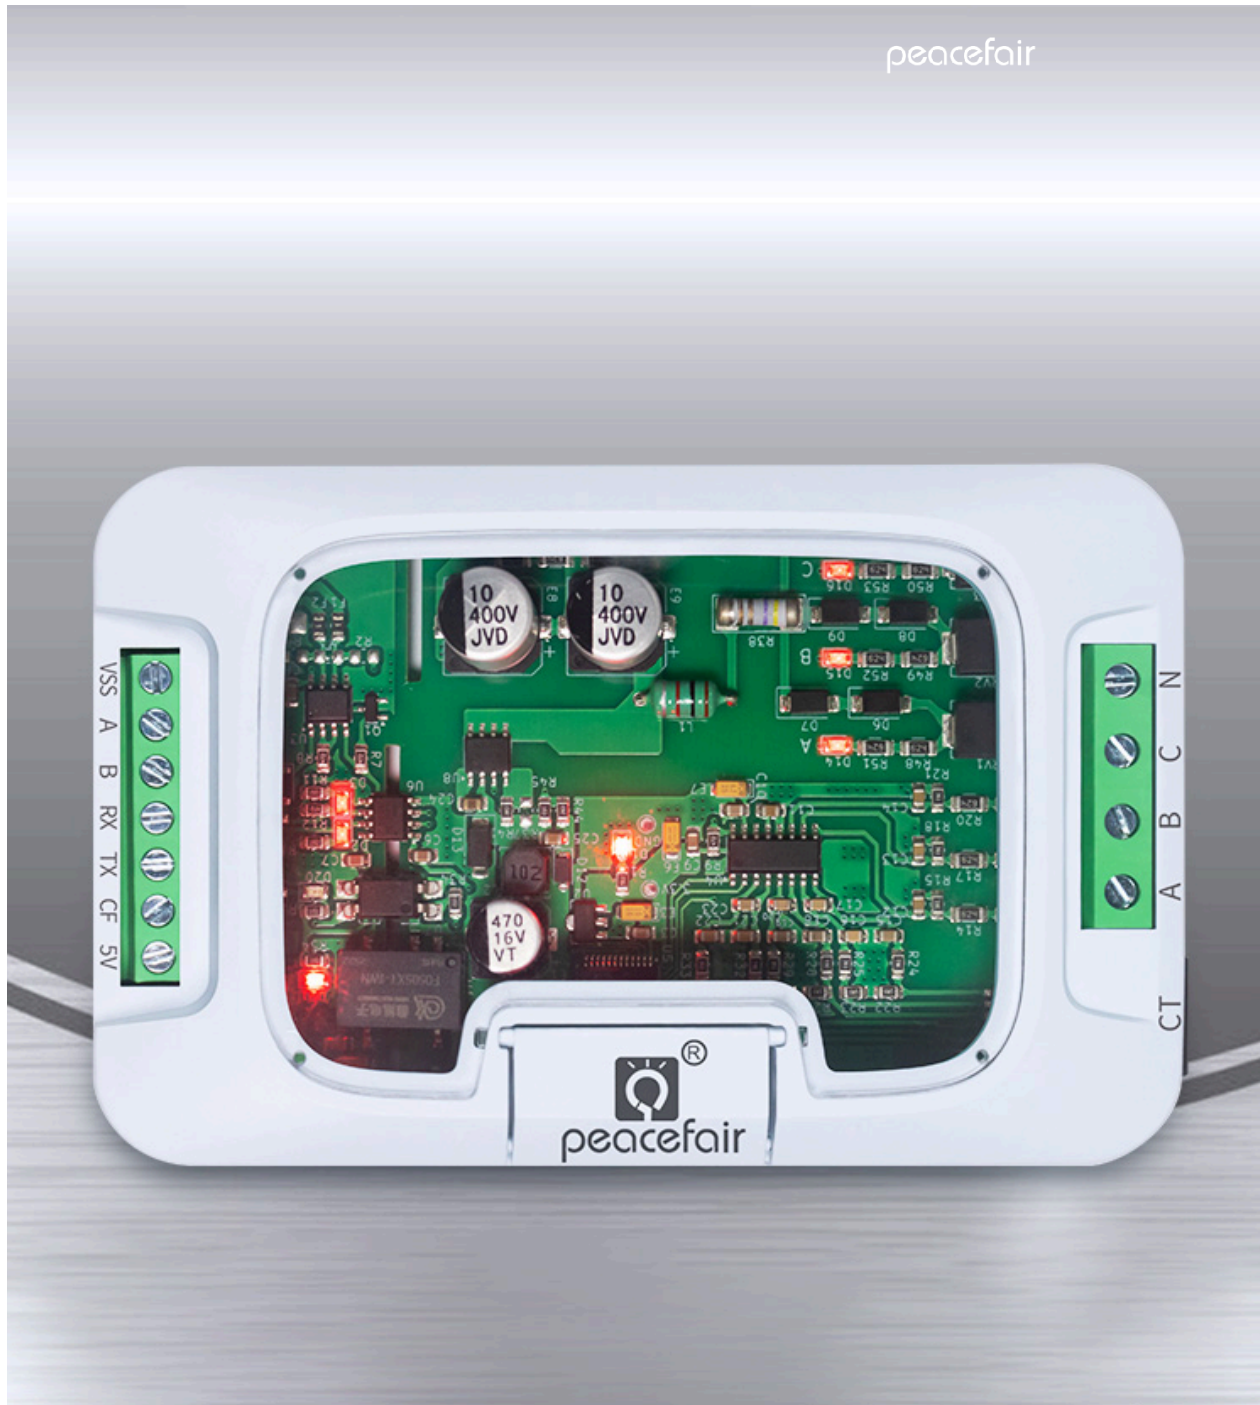

menu



menu



menu



Three-Phase AC Module User Manual

Overview

This document describes the technical specifications and usage instructions for the PZEM-6L24 three-phase AC module. The module is designed to measure electrical parameters in three-phase power grids, it has no display screen, you can read the data via UART or RS485 interfaces.

Dimensions Diagram

Length × Width × height: 116 × 76 × 27.8mm

[menu](#)



Figure 1 Dimension Diagram

menu

Features & Technical Specifications ^P

Parameter	Min	Typical	Max	Accuracy	Unit	Remarks
Voltage	50	220/380	566	1%	V	
Current	0		100	1%	A	
Frequency	45	50/60	65	1%	HZ	
Active Power	0		38	1%	kW	
Reactive Power	0		38	1%	kVar	
Apparent Power	0		38	1%	kVA	
Power Factor(PF)	0		1	1%	PF	
Active Energy	0		399999999.9	1%	kWh	
Reactive Energy	0		399999999.9	1%	kVarh	
Apparent Energy	0		399999999.9	1%	kVAh	
Phase	0		360		°	
Pulse Constant (CF)		1000			imp/kWh	10ms open-drain output (pull-up resistor required)
Baud Rate	2400	9600	115200			
UART Working Voltage		3.3			V	
RS485 Working Voltage		3.3			V	
UART Working Voltage(External)	3	5	5.5		V	when needed
RS485 Working Voltage(External)	3	5	5.5		V	when needed
UART Output Current	60	80	100		mA	
RS485 Output Current	60	80	100		mA	

menu

Device Address (dialing code)	1	1	32			
Device Address (Software Setting)	1	1	247			0 broadcast 248-255 reserved
Whole machine power consumption	0.2	0.3	0.5		W	
Operating Temperature	-20	23	60		°C	
Weight(Only PCB)		51			g	
Weight(Only Host)		107			g	

[menu](#)

Communication Protocol

1. Physical Layer

Interfaces: UART or RS485

Settings: Configurable baud rate, 8 data bits, 1 stop bit, no parity.

2. Application Layer (Modbus-RTU)

Application layer use Modbus-RTU protocol to communicate. At present, it only supports function codes such as 0x03 (Read Holding Register), 0x04 (Read Input Register), 0x10 (Write Multiple Registers), 0x41 (Calibration), 0x42 (Reset energy).etc.

0x41 function code is only for internal use (address can be only 0xF8), used for factory calibration and return to factory maintenance occasions, after the function code to increase 16-bit password, the default password is 0x3721

The address range of the slave is 0x01 ~ 0xF7. The address 0x00 is used as the broadcast address, the slave does not need to reply the master. The address 0xF8 is used as the general address, this address can be only used in single-slave environment and can be used for calibration and setting etc. operation.

3. Read the Measurement Result

The command format of the master reads the measurement result is (total 8 bytes):

Slave Address + 0x04 + Register Address High Byte + Register Address Low Byte + Register quantity High Byte + Register quantity Low Byte + CRC High Byte + CRC Low Byte.

There are two types for the command format of the reply from the slave:

Correct Reply: Slave Address + 0x04 + Number of Bytes + Register 1 Data Low Byte + Register 1 Data High Byte + ... + CRC High Byte + CRC Low Byte

Error Reply: Slave address + 0x84 + Abnormal code + CRC High byte + CRC Low byte

Abnormal code analyzed as following (the same below)

- 0x01, Illegal function
- 0x02, Illegal address

menu

● 0x03, Illegal data

● 0x04, Slave error

menu

The register of the measurement results is arranged as the following table

Register address	Description	Resolution
0x0000	A Phase Voltage Value	1LSB corresponds to 0.1V, no signed number low byte first (same below)
0x0001	B Phase Voltage Value	1LSB corresponds to 0.1V, no signed number
0x0002	C Phase Voltage Value	1LSB corresponds to 0.1V, no signed number
0x0003	A Phase Current Value	1LSB corresponds to 0.01A, no signed number
0x0004	B Phase Current Value	1LSB corresponds to 0.01A, no signed number
0x0005	C Phase Current Value	1LSB corresponds to 0.01A, no signed number
0x0006	A Phase Voltage Frequency Value	1LSB corresponds to 0.01Hz
0x0007	B Phase Voltage Frequency Value	1LSB corresponds to 0.01Hz
0x0008	C Phase Voltage Frequency Value	1LSB corresponds to 0.01Hz
0x0009	B Phase Voltage Phase	1LSB corresponds to 0.01°, relative to A phase voltage
0x000A	C Phase Voltage Phase	1LSB corresponds to 0.01°, relative to A phase voltage
0x000B	A Phase Current Phase	1LSB corresponds to 0.01°, relative to A phase voltage
0x000C	B Phase Current Phase	1LSB corresponds to 0.01°, relative to A phase voltage
0x000D	C Phase Current Phase	1LSB corresponds to 0.01°, relative to A phase voltage
0x000E	A Phase Active Power 16 Bits Low	1LSB corresponds to 0.1W, with a signed number
0x000F	A Phase Active Power 16 Bits High	
0x0010	B Phase Active Power 16 Bits Low	1LSB corresponds to 0.1W, with a signed number
0x0011	B Phase Active Power 16 Bits High	
0x0012	C Phase Active Power 16 Bits Low	1LSB corresponds to 0.1W, with a signed number
0x0013	C Phase Active Power 16 Bits High	
0x0014	A Phase Reactive Power 16 Bits Low	1LSB corresponds to 0.1Var, with a signed number
0x0015	A Phase Reactive Power 16 Bits High	
0x0016	B Phase Reactive Power 16 Bits Low	1LSB corresponds to 0.1Var, with a signed number
0x0017	B Phase Reactive Power 16 Bits High	
0x0018	C Phase Reactive Power 16 Bits Low	1LSB corresponds to 0.1Var, with a signed number
0x0019	C Phase Reactive Power 16 Bits High	
0x001A	A Phase Apparent Power 16 Bits Low	1LSB corresponds to 0.1VA, with a signed number
0x001B	A Phase Apparent Power 16 Bits High	

menu

0x001B	A Phase Apparent Power 16 Bits High	1LSB corresponds to 0.1VA, with a signed number
0x001C	B Phase Apparent Power 16 Bits Low	
0x001D	B Phase Apparent Power 16 Bits High	

0x001E	C Phase Apparent Power 16 Bits Low	1LSB corresponds to 0.1VA, with a signed number
0x001F	C Phase Apparent Power 16 Bits High	
0x0020	Combined Active Power 16 Bits Low	1LSB corresponds to 0.1W, with a signed number
0x0021	Combined Active Power 16 Bits High	
0x0022	Combined Reactive Power 16 Bits Low	1LSB corresponds to 0.1 Var, with a signed number
0x0023	Combined Reactive Power 16 Bits High	
0x0024	Combined Apparent Power 16 Bits Low	1LSB corresponds to 0.1VA, with a signed number
0x0025	Combined Apparent Power 16 Bits High	
0x0026	A Phase and B Phase Power Factor	1LSB corresponds to 0.01, high byte is A phase, low byte is B phase
0x0027	C Phase and Combined Power Factor	1LSB corresponds to 0.01, high byte is C phase, low byte is combined phase
0x0028	A Phase Active Energy 16 Bits Low	1LSB is 0.1kWh
0x0029	A Phase Active Energy 16 Bits High	
0x002A	B Phase Active Energy 16 Bits Low	1LSB is 0.1kWh
0x002B	B Phase Active Energy 16 Bits High	
0x002C	C Phase Active Energy 16 Bits Low	1LSB is 0.1kWh
0x002D	C Phase Active Energy 16 Bits High	
0x002E	A Phase Reactive Energy 16 Bits Low	1LSB is 0.1kVar
0x002F	A Phase Reactive Energy 16 Bits High	
0x0030	B Phase Reactive Energy 16 Bits Low	1LSB is 0.1kVar
0x0031	B Phase Reactive Energy 16 Bits High	
0x0032	C Phase Reactive Energy 16 Bits Low	1LSB is 0.1kVar
0x0033	C Phase Reactive Energy 16 Bits High	
0x0034	A Phase Apparent Energy 16 Bits Low	1LSB is 0.1kVA
0x0035	A Phase Apparent Energy 16 Bits High	
0x0036	B Phase Apparent Energy 16 Bits Low	1LSB is 0.1kVA
0x0037	B Phase Apparent Energy 16 Bits High	
0x0038	Phase Apparent Energy 16 Bits Low	1LSB is 0.1kVA
0x0039	C Phase Apparent Energy 16 Bits High	
0x003A	Combined Active Energy 16 Bits Low	1LSB is 0.1Kw
0x003B	Combined Active Energy 16 Bits High	

menu

0x003C	Combined Reactive Energy 16 Bits Low	1LSB is 0.1kVar
0x003D	Combined Reactive Energy 16 Bits High	
0x003E	Combined Apparent Energy 16 Bits Low	1LSB is 0.1kVA
0x003F	Combined Apparent Energy 16 Bits High	

[menu](#)

The command format of the master to read the slave parameters and read the measurement results are same(see section 3.3 for details), only change the function code from 0x04 to 0x03.

The command format of the master to modify the slave parameters is:

Slave Address + 0x10 + Register Address High Byte + Register Address Low Byte + Register Quantity High Byte + Register Quantity Low Byte + N Byte + The Data of N Byte + CRC High Byte + CRC Low Byte.

There are two types of command formats for the following reply from the slave:

Correct Response: Slave Address + 0x10 + Register Address High Byte + Register Address Low Byte + Register Quantity High Byte + Register Quantity Low Byte + CRC High Byte + CRC Low Byte.

Error Reply: Slave address + 0x90 + Abnormal code + CRC High Byte + CRC Low Byte.

For example, the master sets the slave:

0x01 + 0x10 + 0x00 + 0x00 + 0x00 + 0x03 + 0x06 + 0xFF + 0xFF + 0xFF + 0xFF + 0xFF + 0xFF + 0xFF + 0xFF + 0xFF + 0xFF + 0xFF

Indicates that the master needs to set the 0x0000~0x0002 register.

The correct response from the master is as follows:

0x01 + 0x10 + 0x00 + 0x00 + 0x00 + 0x03 + 0xFF + 0xFF

5. Reset energy

The command format of the master to reset the slave's energy is(total 6 bytes):

Slave address + 0x42 + 0x00 + Phase Sequence + CRC High Byte + CRC Low Byte.

Correct Reply: Slave address + 0x42 + 0x00 + Phase Sequence + CRC High Byte + CRC Low Byte.

Error Reply: Slave address + 0xC2 + Abnormal code + CRC High Byte + CRC Low Byte

Phase Sequence:

● A Phase: 0x00

● B Phase: 0x01

menu

- C Phase: 0x02
- Combined Phase: 0x03
- All Energy: 0x0F

menu

6. Calibration

The command format of the master to calibrate the slave is (total 6 bytes):

0xF8 + 0x41 + 0x37 + 0x21 + CRC High Byte + CRC Low Byte.

Correct Reply: 0xF8 + 0x41 + 0x37 + 0x21 + CRC High Byte + CRC Low Byte.

Error Reply: 0xF8 + 0xC1 + Abnormal code + CRC High Byte + CRC Low Byte

It should be noted that the calibration takes 3~4 seconds, after the master sends the command, if the calibration is successful, it will take 3~4 seconds to receive the response from the slave.

7. CRC Check

CRC check use 16bits format, occupy two bytes, the generator polynomial is $X^{16} + X^{15} + X^2 + 1$, the polynomial value used for calculation is 0xA001.

The value of CRC check is the result of checking all bytes of a frame of data except the CRC check value.

Functional Block Diagram

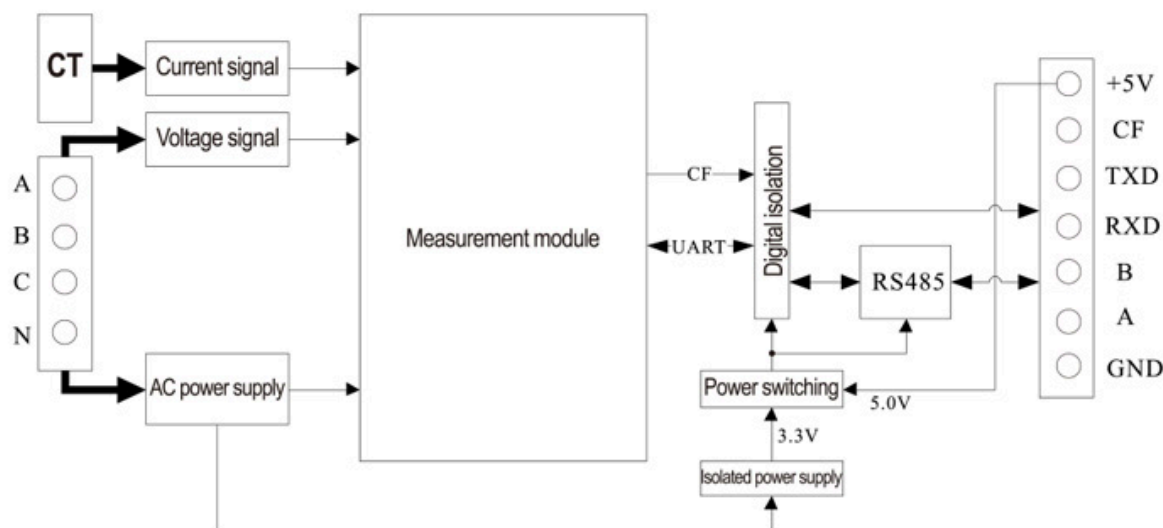


Figure2 Functional Block Diagram

menu

Diagram illustrating the internal components and wiring of the 485-USB module. The module is shown with its green PCB and various components like the microcontroller, capacitors, and LEDs. Wires connect the module to a PC and a power source. Labels indicate the function of each wire and component.


Wiring and Connections:

- Power Supply:** A 5V power supply is connected to the module. A note states: "(Note: It is equipped with a built-in 3.3V power supply and no external power supply is required. If 5V is needed, it should be connected separately)".
- RS-485 Interface:** The module has two sets of pins for RS-485 communication:
 - TX (Transmit):** Connected to the TX pin of the 485-USB module.
 - RX (Receive):** Connected to the RX pin of the 485-USB module.
- Grounding:** The VSS pin is connected to ground.
- PC Connection:** The 485-USB module is connected to a PC via a USB cable.

Internal Components and Indicators:

- Microcontroller:** Labeled as "MCU".
- Capacitors:** Various capacitors are present, including a 100nF capacitor and a 1000pF capacitor.
- LEDs:** Several LEDs are used for status indication:
 - TX Indication:** A red LED that lights up when transmitting.
 - RX Indication:** A red LED that lights up when receiving.
 - Working power supply indication:** A red LED that lights up when the module is powered on.
 - Phase A voltage indication:** A green LED that lights up when Phase A voltage is detected.
 - Phase B voltage indication:** A green LED that lights up when Phase B voltage is detected.
 - Phase C voltage indication:** A green LED that lights up when Phase C voltage is detected.
- Other Labels:**
 - 11111 → 32** and **00000 → 1**: These labels are connected to the "Equipment address (dial code)" pin.
 - Pulse indication**: A red LED that lights up when a pulse is detected.
 - Communication power supply indication**: A red LED that lights up when the communication power supply is active.

Three-Phase AC Power Measurement Module

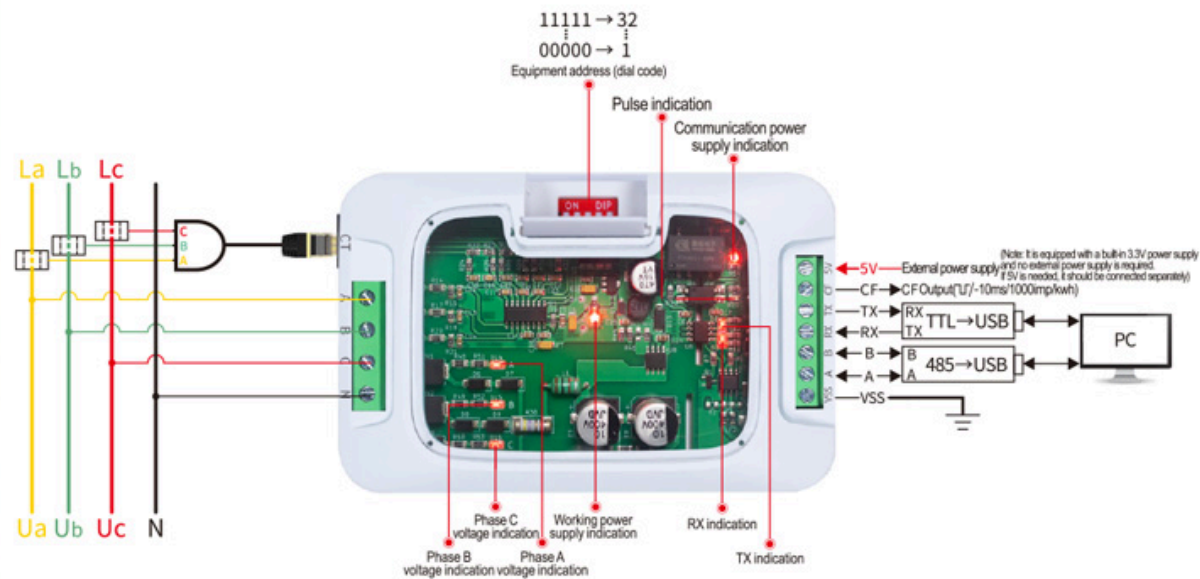

Note:

1. CF is a 10mS negative pulse open drain output, and external testing requires a pull-up resistor
2. 50Hz/60Hz can be set, please set it before measurement, default is 50Hz
3. Three phase three wire/four wire can be set, please set it before measurement, default is three-phase four wire
4. After completing the frequency and wire system settings, it is necessary to power on again, otherwise the data cannot be automatically refreshed

This dedicated module is designed for comprehensive measurement of key electrical parameters within three-phase, 50/60 Hz AC power grids (typical utility or industrial mains). It serves as a data acquisition unit, lacking an integrated display.

Key Measurement Capabilities:

- * Voltages: Accurately measures RMS phase-to-neutral and/or phase-to-phase voltages. Supported Range: 50V to 566V (Phase-Neutral) 220V / 380V

- * Currents: Measures RMS current per phase using external current transformers (CTs) or shunts. Supported Range: 0A to 100A

- * Power Parameters: Calculates essential power metrics including:

- * Active Power (W) per phase and total

- * Reactive Power (VAR) per phase and total

- * Apparent Power (VA) per phase and total

- * Power Factor (PF) per phase and total

- * Frequency (Hz) of the grid

- * Energy Consumption (kWh) - Active Energy (Import/Export), Reactive Energy (typically)

Data Access & Communication:

- * Interfaces: Equipped with dual communication interfaces:

1. UART (TTL-Level): Direct serial connection (typically 3.3V or 5V logic) for simple integration with microcontrollers (e.g., Arduino, Raspberry Pi) or local logic.

2. RS485: Robust differential serial bus standard for long-distance communication (up to 1200 meters) and operation in electrically noisy environments. Enables connection to SCADA systems, PLCs, HMIs, or data loggers.

- * Protocol: Implements the widely adopted MODBUS RTU protocol over both UART and RS485 interfaces. This standardized protocol allows seamless integration with a vast ecosystem of industrial automation and monitoring software. Common function codes

menu

Configuration & Addressing:

- * MODBUS Address Assignment: Supports flexible configuration of its MODBUS Slave Address.

- * Hardware Modification: Address can often be set via physical means such as DIP switches or jumper blocks on the module.

- * Software Modification: Address can also be configured via software commands sent over the UART or RS485 interface (using specific MODBUS function codes or a proprietary configuration protocol), allowing for remote or programmatic setup.

Typical Applications:

- * Energy monitoring systems
- * Power quality analysis
- * Industrial automation control panels
- * Smart grid applications
- * Building Management Systems (BMS)
- * Embedded systems requiring grid parameter data

Key Features Summary:

- * Measures 3-Phase Voltage, Current, Power (Active/Reactive/Apparent), Power Factor, Frequency, Energy.
- * Wide Voltage Input Range: 50-220V (L-N) / 380V (L-L).
- * High Current Input Range: 0-100A (via CTs/shunts).
- * Dual Communication: TTL-Level UART & RS485.
- * Industry-Standard MODBUS RTU Protocol.
- * Configurable MODBUS Address (Hardware & Software Methods).
- * Headless Design (No Display).

Company Introduction

Ningbo Peacefair Electronic Technology Co., **Ltd** (<https://en.peacefair.cn/>). is founded in 2014. The area of the factory is 1800square meters, has two assembly line. We are a professional manufacturer engaged in the research, development, production, sale and service of AC and DC Electric digital power meter, Voltage meter and Energy meter. Our products have the patent and C E, F C C certificates.

menu



menu



peacefair

NINGBO PEACEFAIR ELECTRONIC
TECHNOLOGY CO.,LTD

Laura
President and CEO



Mobile: +86 15867335815
 WeChat: 373042689
 Email: Kindboy1982@163.com
 WhatsApp: +86 15867335815

Tel: 0574-88466521
 Fax: 0574-88466891
 Web: www.peacefair.cn

Tags

Modbus TTL485 3-Phase Energy Monitor - AC Power Consumption Metering Module with Instrument transformers (<https://en.peacefair.cn/tag/1068.html>)

url : <https://en.peacefair.cn/product/807.html> (<https://en.peacefair.cn/product/807.html>)

Previous : PZEM-041 50KW 500A Shunt 72V DC USB Tester Electronic Load Lithium Discharge Monitor Battery Capacity Power Supply Chec...

<https://en.peacefair.cn/product/807.html>



[\(https://search.weibo.com/search?ip=1&ipid=1&ipurl=https%3A%2F%2Fen.peacefair.cn%2Fproduct%2F807.html&ipurl=Phase%20Phase%20Phase%20PZEM-6L24%20Din%20Rail%20Three%20Phase%20Power%20Meter%20with%20TTL%20RS485%20Modbus%20Output%20Energy%20Meters%20with%20CT\)](https://search.weibo.com/search?ip=1&ipid=1&ipurl=https%3A%2F%2Fen.peacefair.cn%2Fproduct%2F807.html&ipurl=Phase%20Phase%20Phase%20PZEM-6L24%20Din%20Rail%20Three%20Phase%20Power%20Meter%20with%20TTL%20RS485%20Modbus%20Output%20Energy%20Meters%20with%20CT)

Next : Peacefair PZEM-018/020 5A 10A Brand AC Digital Display Electric Power Monitor, Voltage Meter, Current Meter, Power Factor Met...

Online evaluation (0)

* product review :

product review

* Verification code :

Verification code



submit

No evaluation information !

Contact number : 86-0574 88466521

Email : manager@peacefair.cn

Fax : 86-0574 88466891

Address : No. 962, Mingshu Road,
Jiangshan Town, Yinzhou District,
Ningbo City, Zhejiang Province

About

(https://en.peacefair.cn/about/)

Products

(https://en.peacefair.cn/product/1/)

Company profile

(https://en.peacefair.cn/product/1/)

Battery tester

(https://en.peacefair.cn/product/2/)

AC digital display meter

(https://en.peacefair.cn/product/2/)

DC digital display meter

(https://en.peacefair.cn/product/3/)

AC communication module

(https://en.peacefair.cn/product/4/)

News

(https://en.peacefair.cn/news/)

Message

(https://en.peacefair.cn/message/)

Contact

(https://en.peacefair.cn/contact/)

Contact us

(https://en.peacefair.cn/contact/)

menu

DC communication
module
(<https://en.peacefair.cn/product/5/>)

Instrument parts
(<https://en.peacefair.cn/product/6/>)

Smart home
(<https://en.peacefair.cn/product/7/>)

Article (<https://en.peacefair.cn/article/>) | Site map (<https://en.peacefair.cn/sitemap/>) | RSS (<https://en.peacefair.cn/rss.xml>) | XML (<https://en.peacefair.cn/sitemap.xml>)
Copyright © Ningbo Peizheng Electronic Technology Co., Ltd All rights reserved record number : 浙ICP备2022018977号-1 (<https://beian.miit.gov.cn/>) Mainly engaged in Multi functional digital display meter (<https://en.peacefair.cn/search.php?wd=Multi functional digital display meter>), digital voltmeter (<https://en.peacefair.cn/search.php?wd= digital voltmeter>), digital ammeter (<https://en.peacefair.cn/search.php?wd= digital ammeter>), Welcome to inquire !
Powered by Xiangyun Platform (<http://www.cn86.cn>) Technical Support : 华企立方 (<http://www.0574huaqi.com>) Disclaimers (<https://en.peacefair.cn/disclaimer.html>)
Technical Support : 华企立方 (<http://www.0574huaqi.com>) Disclaimers (<https://en.peacefair.cn/disclaimer.html>)

menu