SOURCE OF UNCERTAINTY - MODEL 266t

Noise Source:
- **Blue noise** (-3db/oct - low frequency biased)
- **Pink noise** (flat - equal frequency balanced)
- **White noise** (+3db/oct - high frequency biased)
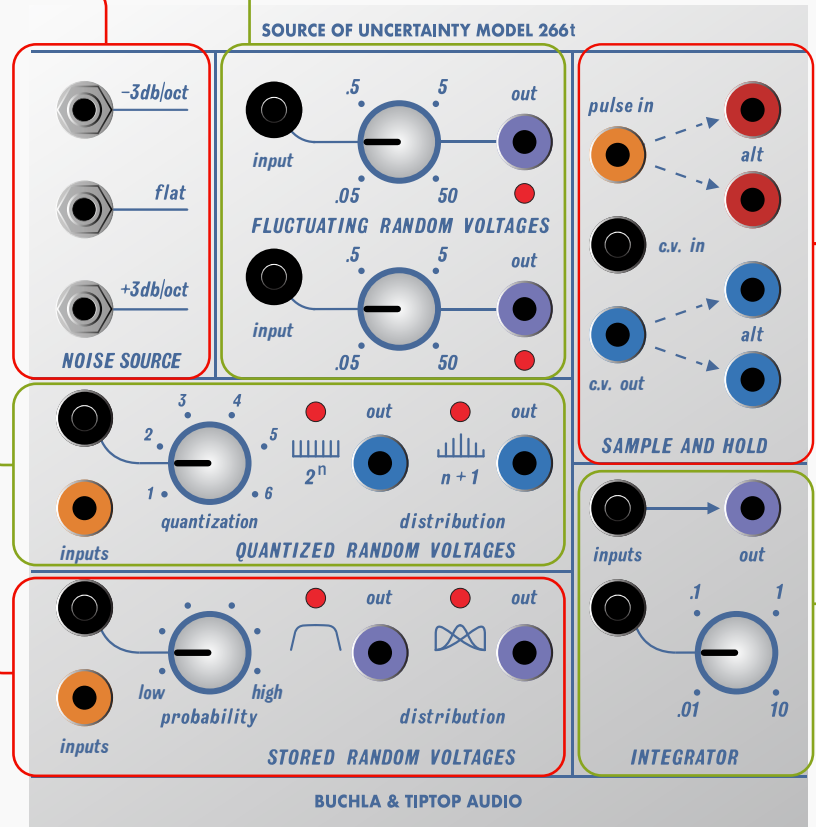
Fluctuating Random Voltages:
- **CV Input** controls the probable rate of random voltage change
- **Knob** offsets the probable rate change from slow 0.05hz to 50hz
- **CV Output** of voltages with LED indicating the fluctuation rate

Quantized Random Voltage:
- **Pulse Input** activates a random stepped voltage at the Output
- **The knob** offsets the varying number of steps from setting 1 to setting 6
- **CV Input** controls the number of steps
- **n+1** is more locally scaled in the 5V range
- **2^n** is more equally distributed over a 10V range

Stored Random Voltage:
- **Pulse Input** activates a random stepped voltage at the **CV Outputs**
- **The left CV Output** is an evenly distributed random voltage
- **The right CV Output** has a **potentiometer** and **CV input** to determine the random voltage distribution.
- **CV In** affects the "curve" distribution of the **right CV Output**
- **The knob** offsets the "curve" distribution of the **right CV Output.**
Fully counterclockwise skews in favor of lower voltages. The middle is a bell curve distribution and clockwise skews toward higher voltages.

SOURCE OF UNCERTAINTY MODEL 266t

NOISE SOURCE
−3db/oct
flat
+3db/oct

FLUCTUATING RANDOM VOLTAGES
input · out
.5 · 5 · .05 · 50
input · out
.5 · 5 · .05 · 50

QUANTIZED RANDOM VOLTAGES
inputs · quantization
1 2 3 4 5 6
2^n · out · $n+1$ · out
distribution

STORED RANDOM VOLTAGES
inputs · probability
low · high
out · out
distribution

SAMPLE AND HOLD
pulse in · alt · alt
c.v. in · c.v. out

INTEGRATOR
inputs · out
.1 · 1 · .01 · 10

BUCHLA & TIPTOP AUDIO

Integrator:
- **Input** is looking for discrete or stepped voltages
- **The knob** proportionally smooths out the incoming voltage from 0.01 (no smoothing) to 10 (dramatic smoothing, glissandi)
- **CV Input** controls the smoothing potentiometer
- **TR1** is a trimmer on the back of the module, it adjust the range of the Integrator.

Sample and Hold:
- **Pulse Input** samples the voltage at the CV Input
- **Pulse "alt"** divides the incoming pulse into alternating pulse outputs
- **CV Input** for periodic, continuous or fluctuating voltages
- **CV Output** of the complete voltages
- **CV Output "alt"** divides the voltages into alternating outputs (great for ping pong effects)

Specifications:

Size: 24 HP - Depth: 25mm
Power: +12V 150mA / -12V 100mA

Buchla TIPTOPaudio

Eurorack 200 series