

Diagram 7



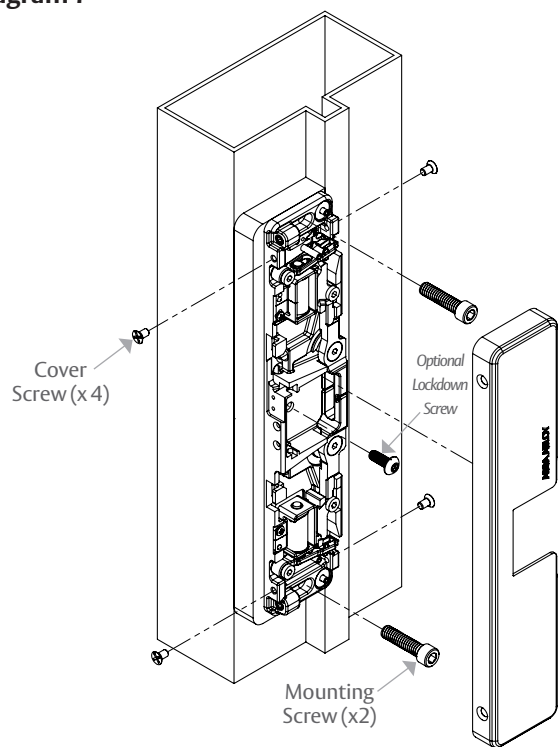


Diagram 8

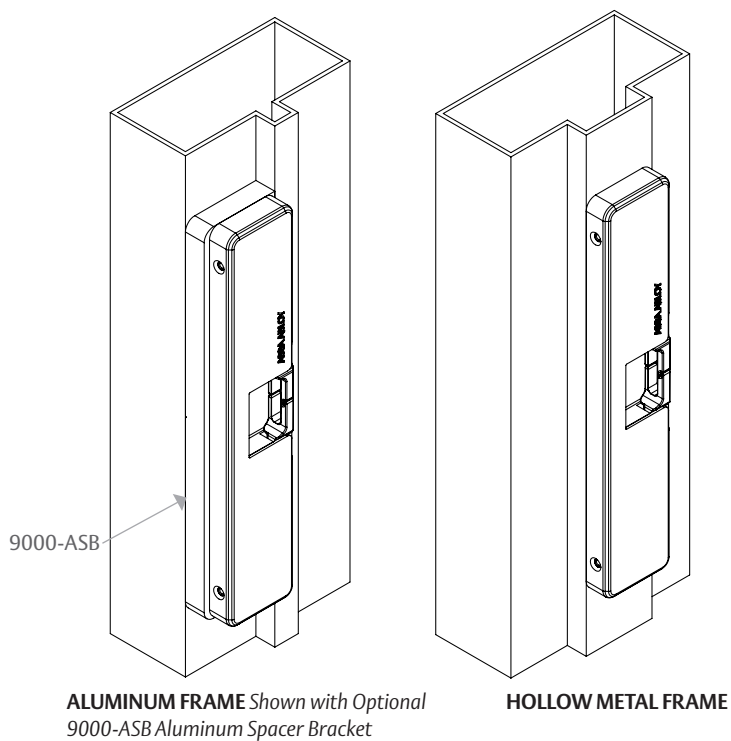

Dimensions

NOTE: May not be to scale. For easy installation, the HES 9000-MTK should be ordered.

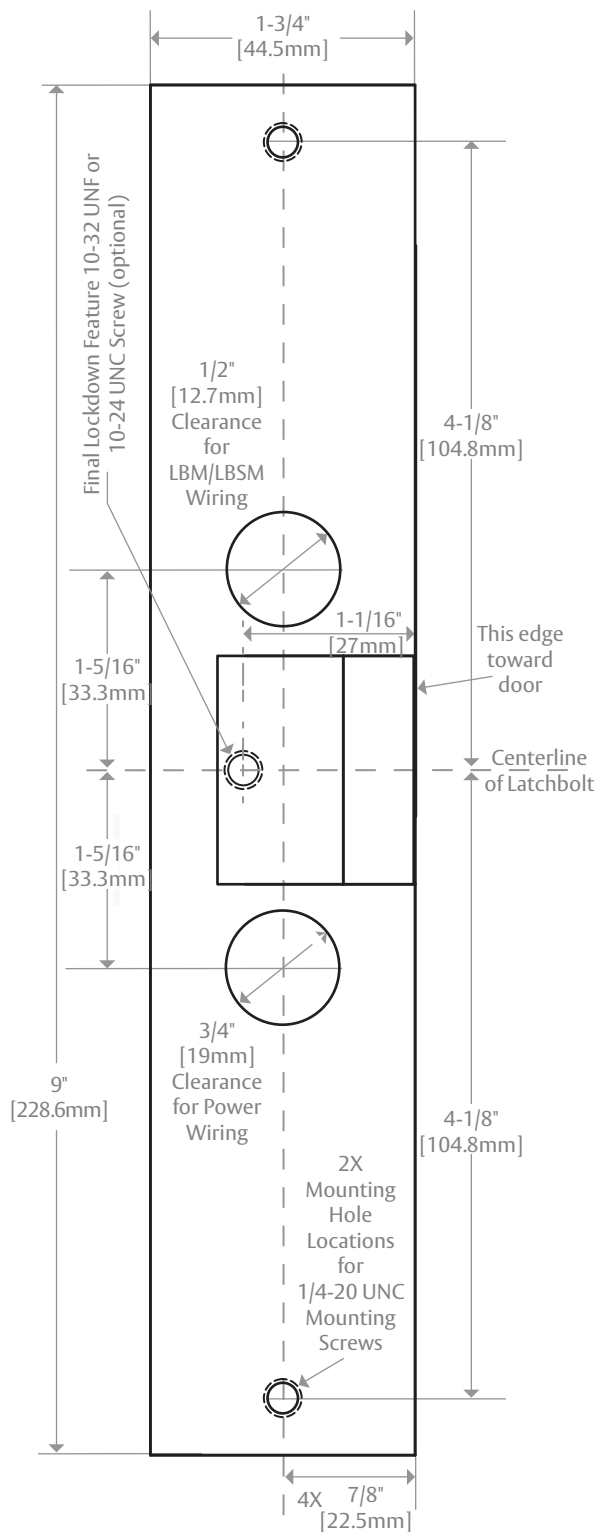

HES® 9800 | Adams Rite® 7800 Electric Strike

ASSA ABLOY


Installation Instructions

The global leader in
door opening solutions

Product Components

- A HES 9800 | Adams Rite 7800 Strike Body
- B HES 9800 | Adams Rite 7800 Cover
- C 1/4"-20 x 1" Mounting Screws
- D #10 & 10-24 Lockdown Screws (optional)
- E #6-32 x 1/4" Cover Screws
- F 5/64" Hex Key
- G 12-Volt and 24-Volt Pigtails (P/N 2007M)
- H Spacers: 1/8" (P/N 9000-108-630), 1/16" (P/N 9000-116-630)

Diagram 1: Product Components

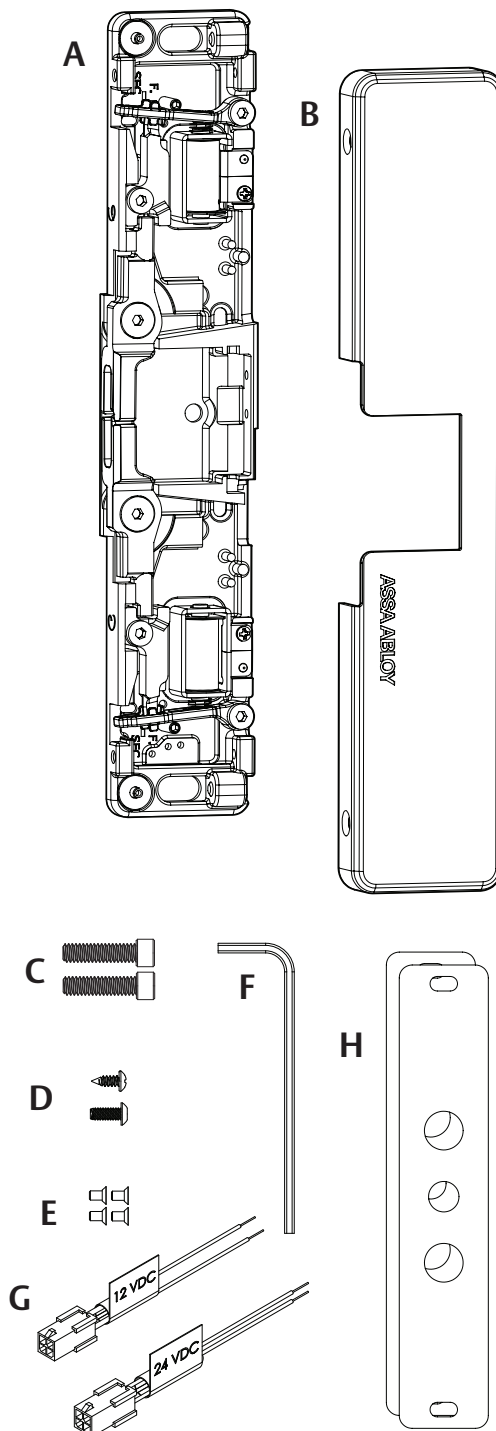

Electrical Specifications

Electrical Ratings for Solenoid

Voltage	12 VDC	24 VDC
Resistance in Ohms	24	96
mA Continuous Duty	500	250

Solenoids are rated at +/- 10% indicated value.

Minimum Wire Gauge Requirements (Based on Round Trip)	Solenoid Voltage	
	12 VDC	24 VDC
200 feet or less	18 gauge	22 gauge
200 – 300 feet	16 gauge	22 gauge
300 – 400 feet	16 gauge	20 gauge

UL1034

- Static Strength: 1500 lbs
- Dynamic Strength: 70 ft – lbs
- Endurance: 250,000 cycles

UL294 Performance Levels

- Destructive Attack: Level I
- Line Security: Level I
- Endurance: Level IV
- Standby Power: Level I

NOTE: Installation wiring for the product and wiring methods shall be in accordance with the National Electrical Code, ANSI/NFPA70

▲ CAUTION ▲ Before connecting any device at the installation site, verify input voltage using a multimeter. Many power supplies and low voltage transformers operate at higher levels than listed. Any input voltage exceeding 10% of the solenoid rating may cause severe damage to the unit and will void the warranty.

Preparing the Strike

For 12 VDC, the Plug In Connector (pigtail) marked "12 VDC" should be used; for 24 VDC, the pigtail marked "24 VDC" should be used.

- SELECT the appropriate pigtail that matches system power and electrically CONNECT as illustrated in Diagram 1.
NOTE: BLACK wire of pigtail is NEGATIVE (-)
- IF no connector is present, THEN CONFIGURE the wires as shown in Diagram 2.
- *9800 Only:* IF using the Latchbolt Monitor (LBM) or Latchbolt Strike Monitor (LBSM), THEN REFER to Table 1 and Diagram 5 to complete wiring (see page 3).

Diagram 1: 12V to 24V Conversion


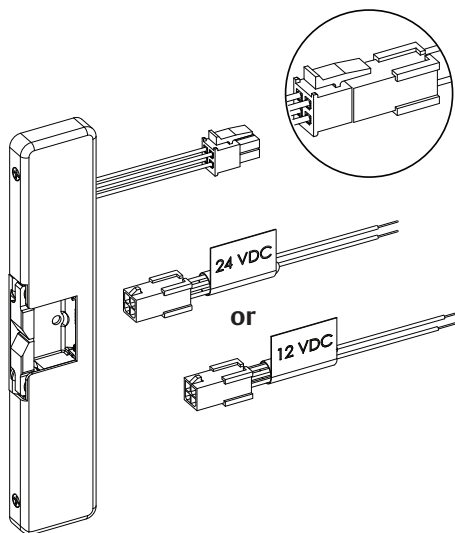


Diagram 2: If Connector Is Missing

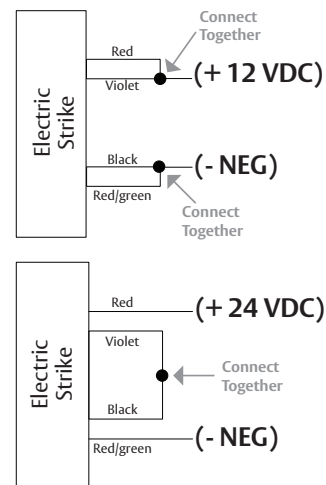

Verifying the Operation Mode

The HES 9800 | Adams Rite 7800 Electric Strike is pre-set for FAIL SECURE OPERATION as shown in Diagram 3.

- VERIFY that both keepers are in FAIL SECURE OPERATION.

Converting the Operation Mode

There are two Selector Stop Pins, one on the left side and one on the right side. Both Selector Stop Pins must be repositioned (as shown in Diagram 4) to convert the strike to FAIL SAFE OPERATION.

IN FAIL SAFE OPERATION: Both keepers should be unlocked without power but locked when power is applied.

- To convert to FAIL SAFE OPERATION, REMOVE the Selector Stop Pins on each side of the strike body using the provided 5/64" hex key.
- MOVE the Selector Stop Pins to the FAIL SAFE OPERATION position (towards the center of the strike) as shown in Diagram 4.
- TIGHTEN both Selector Stop Pins after they have been moved to the FAIL SAFE OPERATION position using the 5/64" hex key.

FAIL SAFE OPERATION mode should not be used in fire rated or windstorm-resistant applications.

Diagram 3: Fail Secure Operation


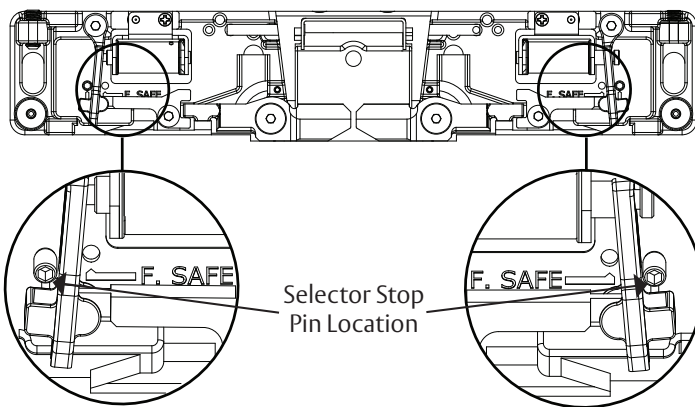


Diagram 4: Fail Safe Operation

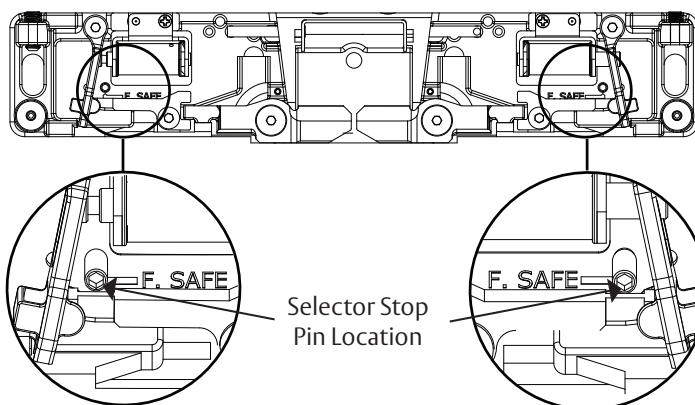

Preparing the Frame

When mounting on an aluminum frame, with a blade stop, an HES 9000-ASB (sold separately) is necessary to provide a secure installation. The HES 9000-ASB is shown installed in Diagrams 7 and 8.

- IDENTIFY and MARK the latchbolt centerline on the frame.
- Using the dimensions provided on page 4, MARK all appropriate holes. If using a HES 9000-ASB, reference the installation instructions provided with that product. *This may require the exit device to shift horizontally towards the hinge side of the door to compensate for the HES 9000-ASB.*
- PUNCH, DRILL and TAP the marked holes as required.

Finishing the Installation

- ELECTRICALLY CONNECT the HES 9800 | Adams Rite 7800 to the Plug In Connector, and ATTACH the electric strike to the jamb using the 1/4"-20 x 1" mounting screws provided.
- CHECK the starwheel interaction with the keepers to ensure proper engagement and clearance. The starwheel's latchguard needs to be centered within the keepers as seen in Diagram 6. Use one or both of the spacers to provide latch guard/keeper clearance. Additional spacers can be ordered separately.

Adjusting Horizontal and Lockdown

NOTE: Complete assembly shown in Diagram 7 (see page 4)

- TIGHTEN the two 1/4"-20 x 1" mounting screws.
- SECURE the adjustment by tightening the set screws.
- OPTIONAL LOCKDOWN FEATURE: INSTALL the #10 UNC or 10-24 UNF lockdown screw if additional security is required; however, REMOVE the strike before drilling hole. IF using a HES **9000-ASB**: drilling and tapping for the lockdown hole is required.
- INSTALL the cover plate, and SECURE in place using the #6-32 x 1/4" Cover Screws.

Optional Lock and Strike Monitor Wiring 9800 series only

Table 1: LBM and LBSM Switch Wiring

Latchbolt Monitor (LBM)		Note: LBM switch state as shown when door is closed
Contact Rating	500mA @ 30V	
White	Common	
Orange	Normally Closed	
Green	Normally Open	
Latchbolt Strike Monitor (LBSM)		Note: LBSM switch state as shown when strike is unpowered.
Contact Rating	500mA @ 30V	
Brown	Common	
Yellow	Normally Open	
Blue	Normally Closed	

Diagram 5: Wiring Diagram Example

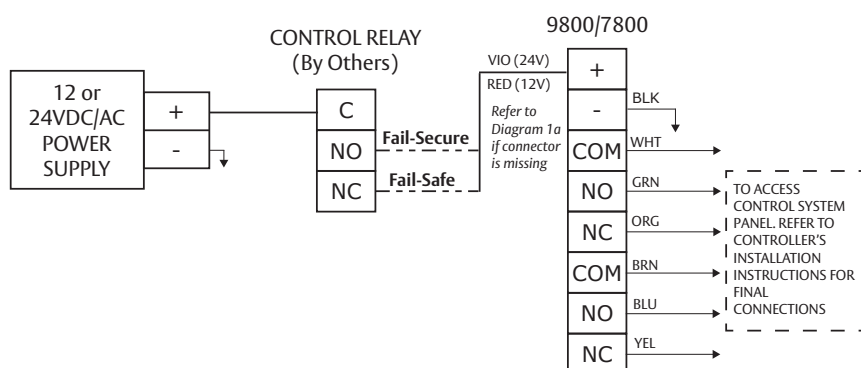


Diagram 6: Starwheel & Keeper Cross-section

