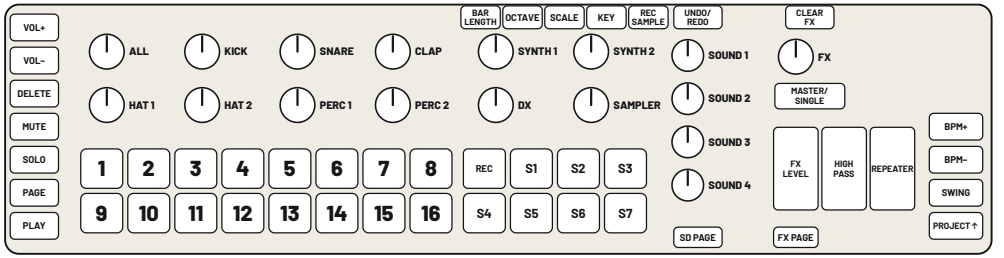
# Notes

Your own shortcuts, settings and tricks



# SEQTRAK

Pocket cheat sheet & panel map for the Yamaha SEQTRAK (OS V2.00)




HOLD this control · PRESS / TAP it · TURN this knob · 1 order of steps

**key 1–16** = Drum keys (top row 1–8) · **S1–S7** = Synth keys

## WHERE THINGS LIVE

- **Left edge** – VOL+ / VOL–, DELETE, MUTE, SOLO, PAGE and PLAY (hold 2 s = power).
- **Track knobs** – ALL plus the 7 drum tracks (KICK … PERC 2) and SYNTH 1, SYNTH 2, DX, SAMPLER. **Turn** = change pattern, **press** = select the track (when stopped it also plays the sound).
- **Drum keys 1–16** – the steps; also numbered choices (projects 1–8, patterns 1–6, sound categories, scenes).
- **Record key + Synth keys S1–S7** – play notes or samples. Above them on the top edge: BAR LENGTH, OCTAVE, SCALE, KEY, REC SAMPLE.
- **Right** – SOUND 1–4 knobs with SD PAGE and UNDO/REDO; FX knob, MASTER/SINGLE, CLEAR FX, touch sliders FX LEVEL · HIGH PASS · REPEATER with FX PAGE. **Right edge**: BPM+ / BPM–, SWING, PROJECT↑.

## GOLDEN RULES

- **Hold ALL is the shift key** – it opens the modes: Mixer, Mute, Song, keyboard input, metronome, chord edit.
- **ALL is also the dial**: hold BPM±, SWING, OCTAVE, SCALE, KEY, VOL± or PAGE and turn ALL to scroll the value.
- **Press and turn** any knob for bigger jumps (a whole bar at a time for lengths).
- **Saving is automatic** when you switch projects or power off.
- UNDO/REDO covers sound and effect tweaks only – not notes or sound choices.
- Combos are written **hold + press**: keep the first control held, tap the second.

**BOOKLET MAP**


**p2 Projects & patterns**
power · projects · tempo · swing · patterns · length · copy

**p3 Drums & synths**
steps · micro timing · substeps · probability · chords · step input

**p4 Sampler & sound**
sampling · sounds · pages · parameter lock · motion rec

**p5 FX, mixer & modes**
effects · mixer · mute · song · every shortcut


# Projects & patterns

Power · projects · tempo · swing · patterns · length · copy · mute

## Power · play / stop





Hold **PLAY** for 2 s to switch on or off (the project saves). Press **PLAY** to start / stop the project.

## Switch project



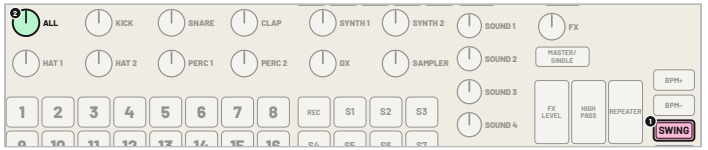

Hold **PROJECT↑** + **key 1**–**key 8** for projects 1–8 (the current one is lit yellow). Delete: hold **PROJECT↑** + **DELETE** + that key.

## Tempo · metronome




**BPM+** / **BPM–** (hold to scroll), or hold one and turn **ALL**: 5–300 BPM. Both together = back to the project's starting tempo. Metronome: hold **ALL** + **BPM+**.

## Swing




**SWING**, or hold **SWING** and turn **ALL**: –58 to +58 ticks on even steps. Reset: hold **DELETE** + **SWING**.



| Function | Input | Function | Input |
|---|---|---|---|
| Switch project | hold **PROJECT↑** + **key 1**–**key 8** | Launch Quantize | hold **PROJECT↑** + turn **ALL** |
| Delete project | hold **PROJECT↑** + **DELETE** + key | Swing reset | hold **DELETE** + **SWING** |
| Copy pattern | hold Track knob + Drum key 2 s | Paste pattern | hold Track knob + **PAGE** + Drum key |
| Delete pattern | hold **DELETE** + Track knob | Copy / paste steps | hold Drum key 2 s · hold **PAGE** + Drum key |
| Mute / solo track | hold **MUTE** / **SOLO** + Track knob | Unmute all | hold **MUTE** + **ALL** |
| Quantize on/off | hold **ALL** + **REC** | Keyboard input | hold **ALL** + **KEY** |
| Step input (synth) | hold **PAGE** + synth knob | Note length | hold lit Drum key + turn **ALL** |
| Count-in | hold **ALL** + **REC SAMPLE** | Cancel sampling | hold **DELETE** + **REC SAMPLE** |
| Save sound | hold **ALL** + press **SOUND 1** | Undo / redo sound | **UNDO/REDO** |
| Mixer mode | hold **ALL** + **VOL+** | Mute mode | hold **ALL** + **MUTE** |
| Song mode | hold **ALL** + **PROJECT↑** | Bluetooth pairing | hold **ALL** + **SWING** |

## Mixer mode



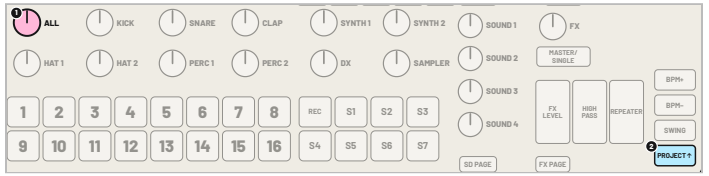

Hold **ALL** + **VOL+** (same to leave). Press **SOUND 1**–**SOUND 4** for PAN · VOLUME · REVERB · DELAY, then turn Track knobs per track; **ALL** sets the project / return level. Reverb or delay picked: **FX** chooses the preset.

## Mute mode



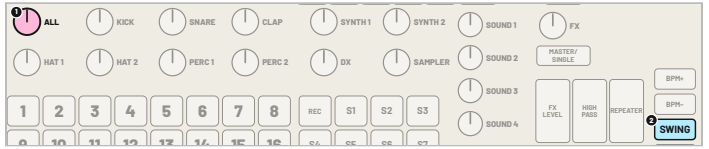

Hold **ALL** + **MUTE**: now a press on any Track knob mutes it; **ALL** unmutes all; **MUTE** leaves.

## Song · scene mode




Hold **ALL** + **PROJECT↑** = Song mode (again = Scene mode, which loops one scene). Drum keys are scenes (up to 16): an empty key adds a copy; turn Track knobs to set its patterns; **DELETE** + red key removes. **PLAY** plays; double-tap a scene to loop it; hold **PAGE** + turn **ALL** sets its length.

## Bluetooth · volume



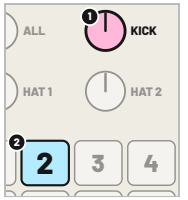

Pair with the app: hold **ALL** + **SWING** (waits 30 s; also shows the link status). Master volume: **VOL+** / **VOL–**, or hold one and turn **ALL**.

## MASTER SHORTCUT TABLE

| Function | Input | Function | Input |
|---|---|---|---|
| Power on / off | hold **PLAY** 2 s | Metronome | hold **ALL** + **BPM+** |




## Switch patterns



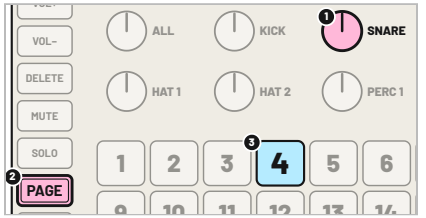

Turn a Track knob = switch now. Press and turn = switch at the next Launch Quantize. Or hold the knob + **key 1**–**key 6** (double-tap = now). **ALL** does the same for all 11 tracks.

## Pattern length




**BAR LENGTH** steps through 1 · 2 · 4 · 8 bars. Hold **BAR LENGTH** and turn a Track knob for 1–128 steps. Drum tracks also: hold **PAGE** + turn the drum knob.

## Copy · paste · delete a pattern




Copy: hold a Track knob + any Drum key for 2 s (meter flashes). Paste: hold the Track knob + **PAGE** + a Drum key. Delete: hold **DELETE** + press the Track knob (**ALL** = all tracks).

## Mute · solo a track




Hold **MUTE** + press a Track knob (lit green); hold **SOLO** + press a Track knob (lit cyan). Press again to undo. Hold **MUTE** + **ALL** unmutes everything.

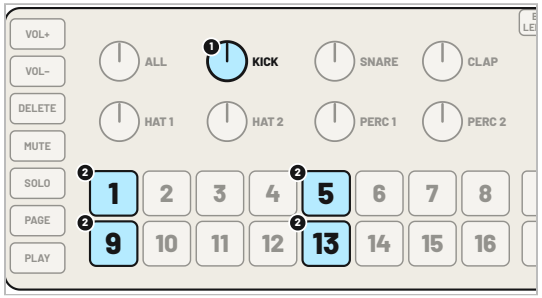
| Do this | Input | Result |
|---|---|---|
| **Launch Quantize** | hold **PROJECT↑** + turn **ALL** | When reserved pattern switches land (default 16 steps); press and turn = per bar |

| Do this | Input | Result |
|---|---|---|
| **Temporary save / restore** | hold PROJECT↑ + the yellow key / the cyan key | One slot; cleared when you switch project or power off |
| **3 ↔ 6 patterns** | hold a Track knob + key 4 – key 6 | Press the blue keys 4–6 for six patterns; press all three together to go back to three |
| **Long patterns** | PAGE · hold PAGE + turn ALL | Shows the next 16 steps (page flashes cyan on the meter) |
| **Battery level** | hold ALL + PLAY | Meter: cyan = charging, white = on battery |
| **Force power off** | hold PLAY + PROJECT↑ | Only if it hangs – changes since power-on are lost |
| **Auto power off** | power on while holding key 9 | Toggles the 30-minute auto power off |
| **Factory reset** | power on while holding SAMPLER + UNDO/REDO | Restores demo projects and settings (meter lights red) |

# Drums & synths

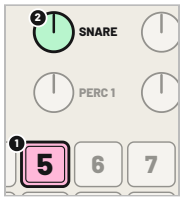
Steps · micro timing · substeps · probability · track types · synth input · chords

### Enter drum steps




Press a drum Track knob, then press Drum keys to toggle steps. Patterns longer than 16 steps: PAGE for the next page.

### Micro timing




Hold a lit Drum key (or several) and turn a Track knob: –60 to +59 ticks (one step = 120).



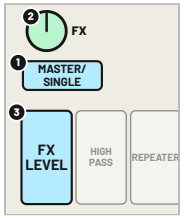
## SOUND DESIGN PAGES (KNOBS 1-4, TOP TO BOTTOM)

| Track | Pages 1 · 2 | Advanced pages (hold SD PAGE 2 s) |
|---|---|---|
| **Drum / DrumKit** | SOUND · PITCH · PAN · VOLUME · ATTACK · DECAY · FILTER · RESONANCE | 3: REVERB · DELAY · EQ HIGH · EQ LOW |
| **SYNTH 1 / 2** (and Synth-type drums) | SOUND · MONO/POLY/CHORD · PAN · VOLUME · ATTACK · DECAY/RELEASE · FILTER · RESONANCE | 3: REVERB · DELAY · EQ HIGH · EQ LOW · 4: PORTAMENTO · ARP TYPE · ARP GATE · ARP SPEED |
| **DX** | as SYNTH (DECAY instead of DECAY/RELEASE) | 3 and 4 as SYNTH · 5: FM ALGORITHM · MOD AMOUNT · MOD FREQUENCY · MOD FEEDBACK |
| **SAMPLER** | SOUND · PITCH · PAN · VOLUME · ATTACK · DECAY · FILTER · RESONANCE | 3: REVERB · DELAY · EQ HIGH · EQ LOW · 4: START · END · LOOP ON/OFF · LOOP LENGTH · 5: pitch EG attack/decay level and time |

# FX, mixer & modes

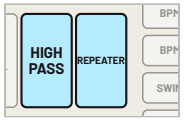
Effects · mixer · mute · song and scenes · every shortcut on one page

### Effects



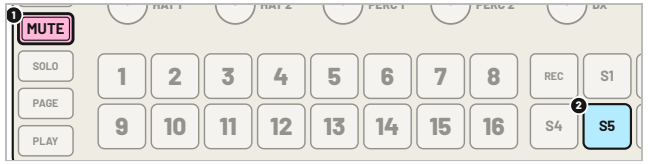

MASTER/SINGLE: MASTER = whole mix, SINGLE = selected track. Turn FX for the type (8 categories × 8). The sliders set its parameters; FX PAGE swaps slider pages. CLEAR FX drops the current parameter to minimum.

### HIGH PASS · REPEATER




Performance sliders: on page 1 they always act on every track, and stop when you lift your finger.

## Per-sample mute · clear



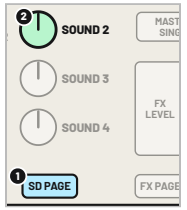

With SAMPLER selected: hold **MUTE** + a Synth key mutes that sample (lit green); hold **DELETE** + a Synth key clears that sample's pattern.

## Choose a sound




Select a track, turn **SOUND 1** on page 1 (SAMPLER: press the Synth key first). Category jump: hold **SOUND 1** + a Drum key (**key 16** = your favourites).

## Sound Design pages




**SOUND 1**–**SOUND 4** edit four parameters; **SD PAGE** moves to the next page. Hold **SD PAGE** 2 s for the advanced pages. Press and turn = bigger moves.

## Parameter lock




Hold a lit Drum key (or several) and turn **SOUND 1**–**SOUND 4** or slide **FX LEVEL**: the step turns purple. Clear: hold **DELETE** + press that knob (add the Drum key for one step).

## Motion recording · save




Hold **REC** and turn SOUND knobs or slide the touch sliders to record moves. Clear: hold **DELETE** + press the knob. Save a sound: hold **ALL** + press **SOUND 1** (added as "_editNN" and to favourites).



## Substeps (ratchets)



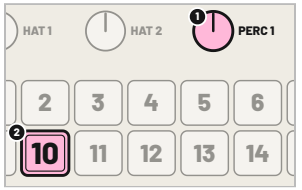

Hold a lit Drum key for 2 s; five keys light on the other row: none · ×2 · ×3 (8th triplet) · ×3 (16th triplet) · ×4.

## Step probability



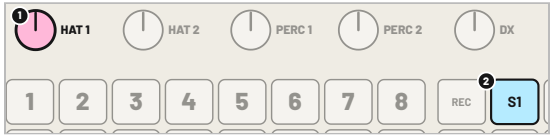

Hold a lit Drum key + press **MUTE**: each press lowers the chance one of 8 levels (meter shows it); from the lowest it wraps to 100%.

## Drum track type (OS 2.00)



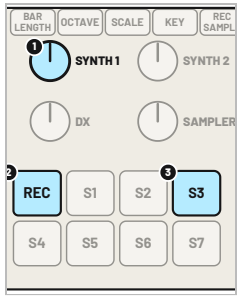

Stopped only. Hold the drum Track knob, then hold **key 9** Drum · **key 10** DrumKit (sounds on S1–S7) · **key 11** Synth for 5 s until it lights purple. Erases that track's notes.

## Play drums live




Hold a drum Track knob + press a Synth key to toggle real-time input; then play the Synth keys and press **REC** to record.

## Play & record synths



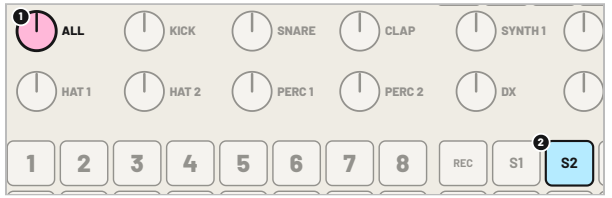

Press **SYNTH 1**, **SYNTH 2** or **DX**, play S1–S7, press **REC** to record (overdubs keep earlier notes). Quantize on/off: hold **ALL** + **REC**.

## Octave · scale · key



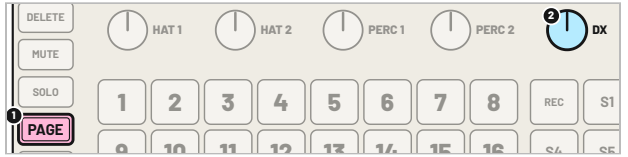

Press **OCTAVE** / **SCALE** / **KEY**, or hold one and turn **ALL**. Octave –3 to +2; 8 scales per project; key in semitones. Recorded notes don't change.

## Chords




**SOUND 2** on page 1 picks MONO · POLY · CHORD (7 chords on S1–S7). Edit one: hold **ALL** + its Synth key, then toggle up to 4 notes on the Drum keys.

## Keyboard input · step input




Hold **ALL** + **KEY**: the Drum keys become a keyboard. Step input: hold **PAGE** + press a synth-section knob; keys enter the last note played. Hold a lit key + turn **ALL** = note length.

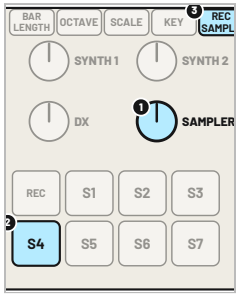
Default scales, in **SCALE** order: Minor · Major · Minor pentatonic · Major pentatonic · Lydian · Dorian · Mixolydian · Phrygian (edit them in the app).



# Sampler & sound design

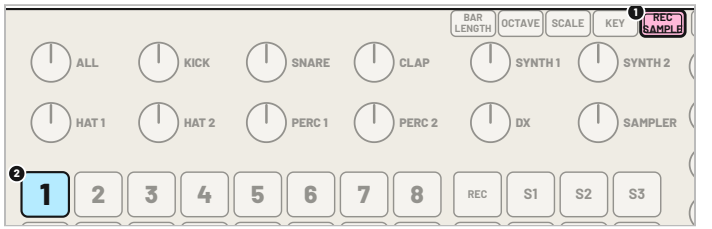
Sampling · sounds · Sound Design pages · parameter lock · motion recording

## Sample a sound




Press **SAMPLER**, press the Synth key to fill (flashes red), then **REC SAMPLE** to start and again to stop (16 s max). A cable in AUDIO IN is sampled instead of the mic.

## Sampling source · cancel




Hold **REC SAMPLE** 2 s + the white Drum key: mic / AUDIO IN · USB audio · resample. Cancel a take: hold **DELETE** + **REC SAMPLE**.

## Count-in · input level




Count-in on/off: hold **ALL** + **REC SAMPLE**. Input meter (monitoring): hold **REC SAMPLE** + **VOL+**, same again to leave.