

N4 Cervical Acupressure Module


Basic setting

(REPLACING CHAIN)

- HEATER ROD VERSION -

(REPLACING CHAIN)
- HEATER ROD VERSION -

STEP 1: Before disassembling the cervical module

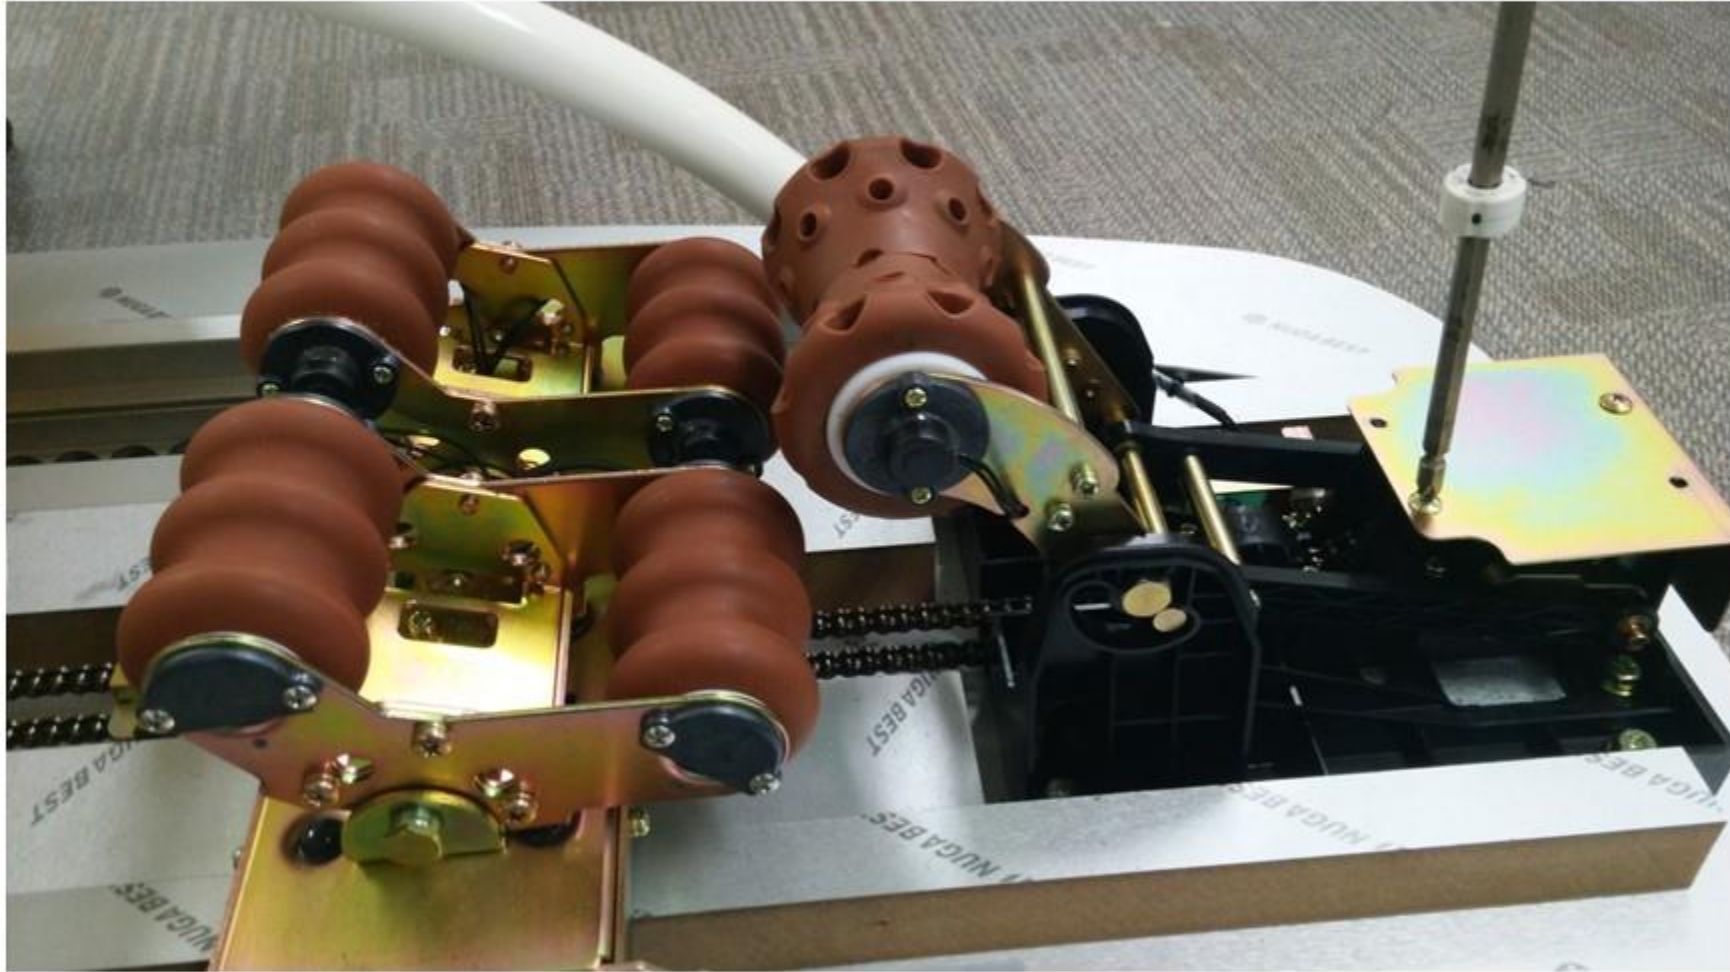

(REPLACING CHAIN)
- HEATER ROD VERSION -

Step 2: Remove the TENSION B/K COVER.



(REPLACING CHAIN)
- HEATER ROD VERSION -

Step 3: LINK ARM(2) and rotary ARM(1) position setting





The yellow arrows ((1) and (2)) in the upper left picture are
1 character as shown

Position the chiropractor to overlap.

The chain corresponding to the red arrow ()
in the upper right picture must be pulled tight.



(REPLACING CHAIN)
- HEATER ROD VERSION -

Step 4: Set the distance value of the contact part (A) of the internal transmitter and the end of the rail (B).

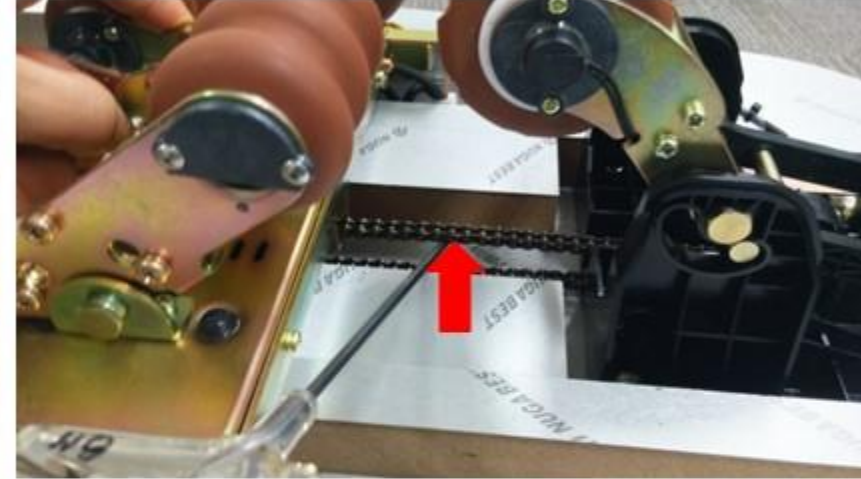
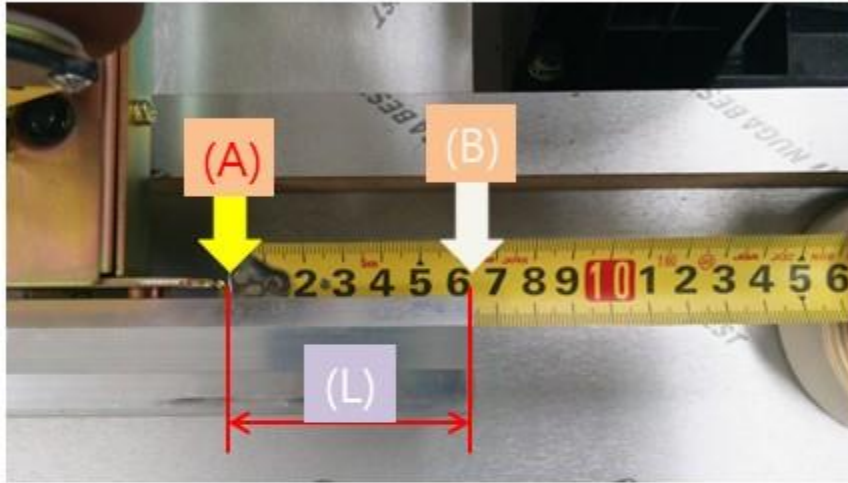


The distance between the inside transmitter contact (A) and the end of the rail (B) Adjust to be 60~65mm. However, the most important thing to note here Cervical vertebra angle (maintaining overlapping shape of LINK ARM and rotating ARM) and Set 60~65mm while pulling the internal transmitter tightly.

Conclusion

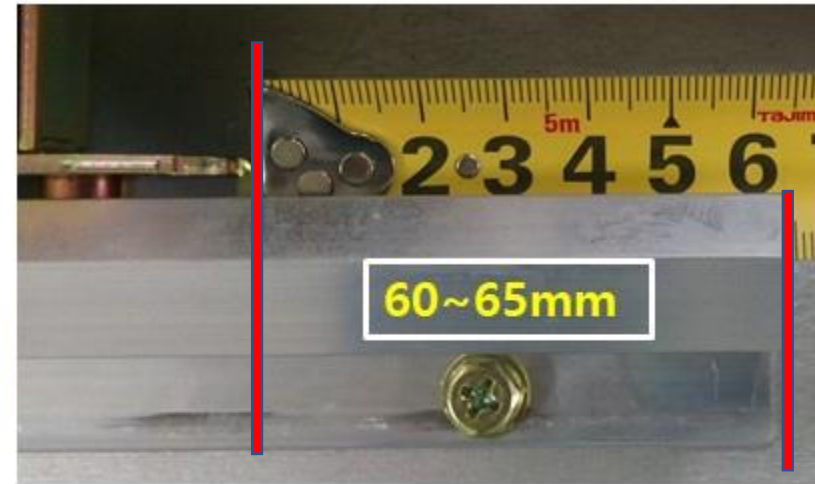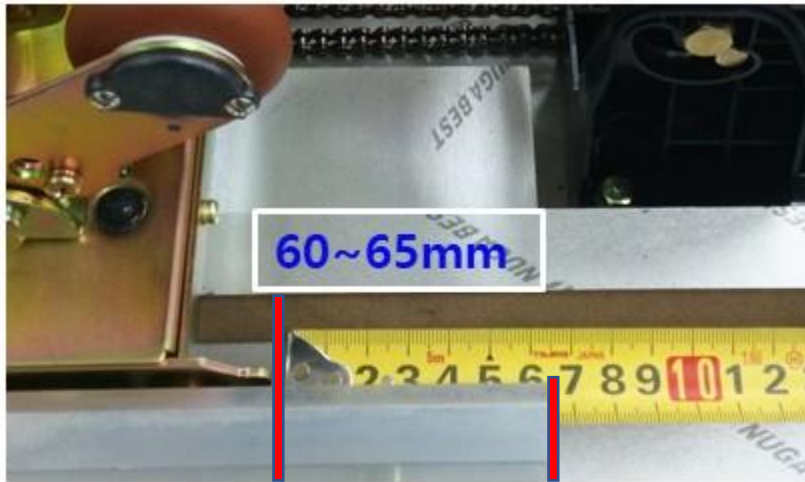

(REPLACING CHAIN)
- HEATER ROD VERSION -

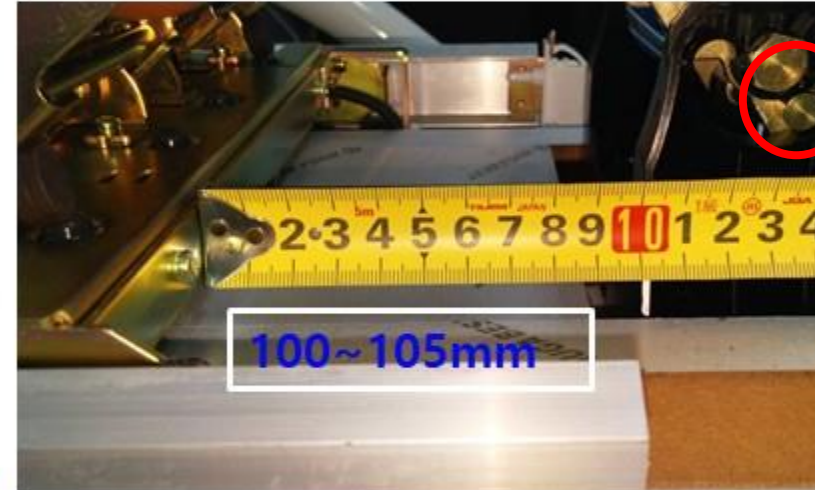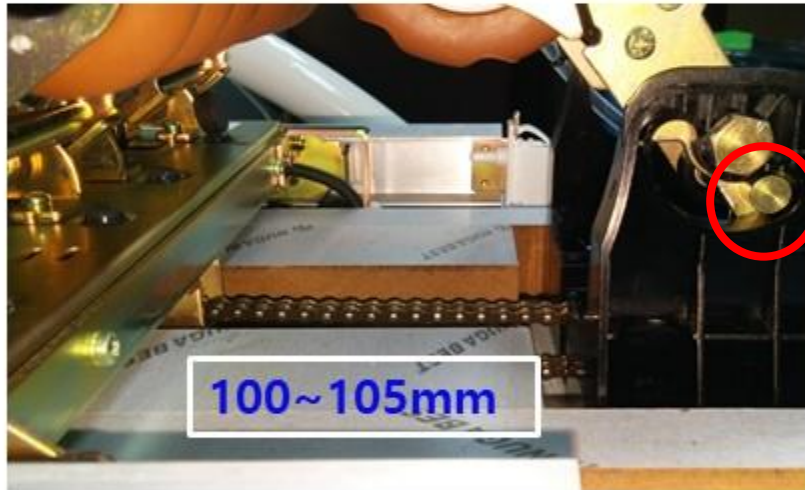

Distance from 1-RAIL to the touch part of the internal transmitter: 60~65mm (may be up to 68mm in case of deviation) Distance from the end of 2-TENSION BK to the internal floodlight: 100~105mm (may be up to 108mm in case of deviation) (This dimension must be in the state where the cervical vertebra massage angle is completely tilted (=LINK and ARM overlapped). The chain (upper) must be assembled while pulled up to get the correct setting.-----!!!! <Very important>