

BAY PROCEDURE


Tacoma RV Center · Document Library

CONCERN	Icing up on rear wall - only about half from the top down		
MODEL	Furrion FCR10DCGTA-BL	DATE	2026-09-19
PRIMARY	Furrion fridge service manual, Ice and Moisture section (Fig. 36).		
	WO#	WO-ICE	

WHAT THIS PATTERN USUALLY MEANS

Ice or frost on the rear wall, including a pattern that starts about halfway down from the top, is an Ice and Moisture problem. A light sheet on the back wall alone can be normal cycling. This is a moisture, door gasket, drain, and cooling path.

VISUAL FLOWCHART

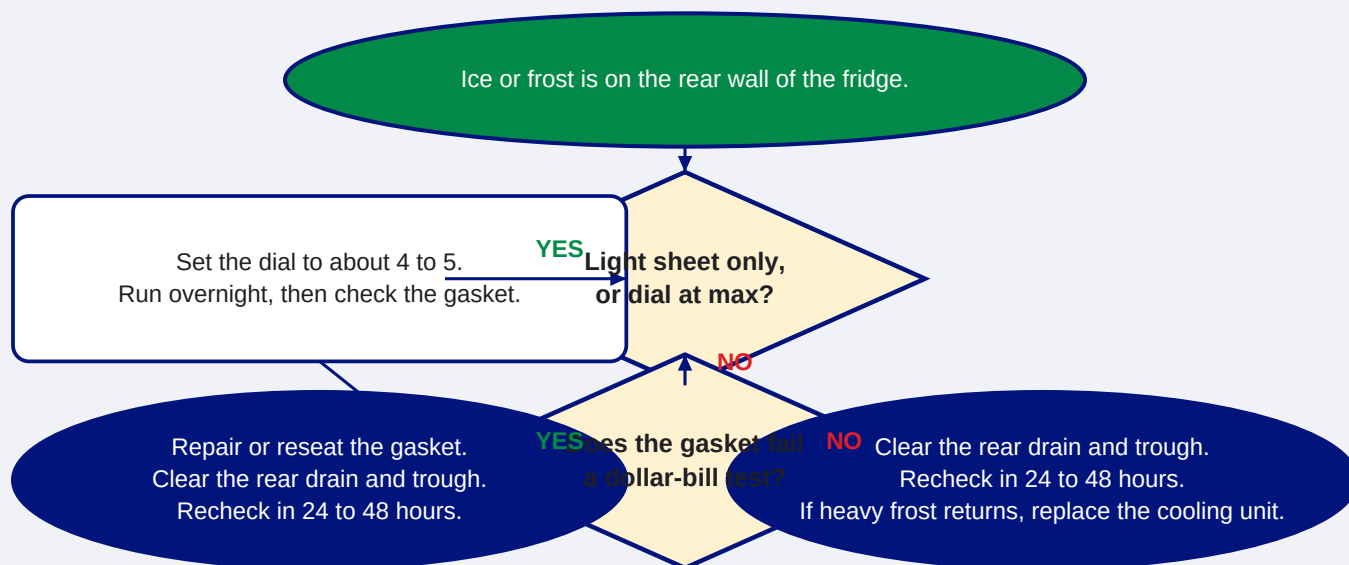

BAY ORDER (DO THIS FIRST)

- ☐ 1. Look at the frost pattern on the rear wall. If it is only a light sheet, that can be normal cycling: set the dial to mid, about 4 to 5, run overnight, then look again. If frost is heavy or starts halfway down, keep going.
- ☐ 2. Check the temperature dial. If it is at max, set it to about 4 to 5, let the fridge run overnight, then look at the pattern again. If the dial is already mid, go to the gasket next.
- ☐ 3. Check the door gasket with a dollar-bill test. If the bill slides out with no drag, reseal or repair the gasket, then clear the rear drain and trough and recheck in 24 to 48 hours. If the gasket holds, clear the rear drain and trough next.
- ☐ 4. Clear the rear drain and trough so melt water can leave. If the drain is open and the gasket is good, recheck the frost pattern in 24 to 48 hours.
- ☐ 5. After 24 to 48 hours, if the frost is gone or only a light sheet remains, you are done. If heavy frost returns, replace the cooling unit.

DO NOT

- Do not knife the ice off the rear wall.
- Do not assume a sealed-system failure from top-half frost alone.

SOURCES (SHOP DOCUMENT LIBRARY)

- Furrion FCR08/FCR10 SM CCD-0008122 page 36
Figures: Fig. 36 - Furrion FCR08/FCR10 SM CCD-0008122 p.36

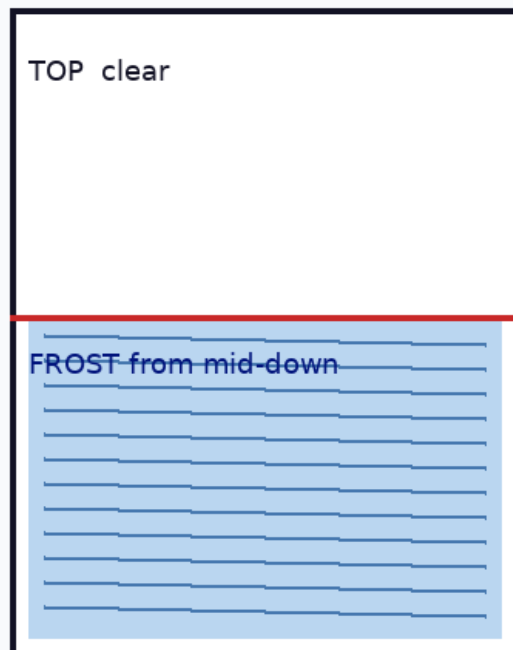


Fig. 36 Rear-wall frost pattern

A light sheet on the back wall alone can be normal cycling.

Heavy frost starting halfway down is the Ice and Moisture pattern. Stay on that section.

Furrion fridge service manual
Ice and Moisture section