

# BAY PROCEDURE


Tacoma RV Center · Document Library

|         |                                                                                                             |      |            |
|---------|-------------------------------------------------------------------------------------------------------------|------|------------|
| CONCERN | Level Up Advantage 807662 Manual Mode flashes then dumps home. Auto Level still works.<br>Brinkley Firefly. |      |            |
| MODEL   | Level Up Advantage controller (Brinkley / Firefly)                                                          | DATE | 2026-09-19 |
| PRIMARY | Level Up controller and Firefly panel. Leave the rubber-boot terminator in.                                 | WO#  | WO-FIREFLY |

## WHAT THIS PATTERN USUALLY MEANS

When Manual Mode flashes back to the home screen and Auto Level still works, diagnose Firefly / OneControl CAN communication first. Do not start diagnosing a Level Up controller fault until Firefly / OneControl CAN communication is ruled out. The Level Up controller has two ports labeled CAN. One is the rubber-boot terminator - leave that one plugged in. The other is the CAN cable to Firefly / OneControl - unplug that one only. Then try Manual Mode again.

## VISUAL FLOWCHART

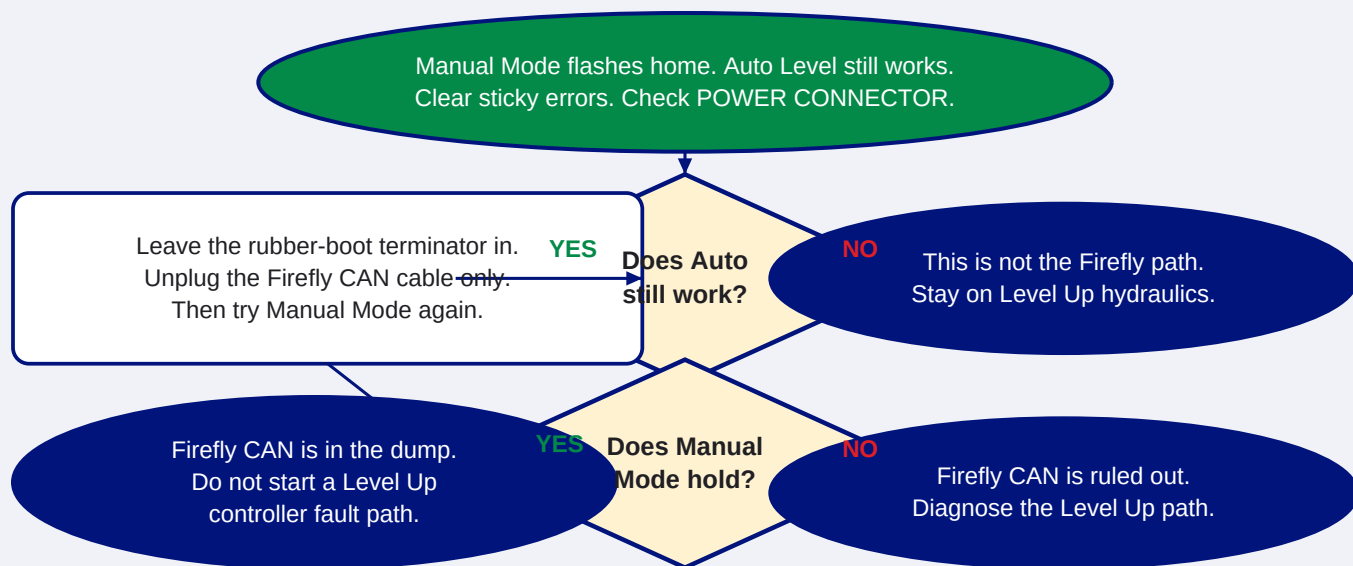

## BAY ORDER (DO THIS FIRST)

- ☐ 1. Confirm Auto Level still works and clear sticky Low Voltage, Excess Angle, or External Sensor text if it is present. If Auto is dead, this is not the Firefly path - stay on Level Up hydraulics. If Auto works, check the POWER CONNECTOR next.
- ☐ 2. Back-probe the labeled POWER CONNECTOR. Measure Red versus Green ground. You want solid 12V+. Note Yellow. If you do not have solid 12V+, fix power first. If power is solid 12V+, do the CAN prove next.
- ☐ 3. The Level Up controller has two ports labeled CAN. One is the rubber-boot terminator - leave that one plugged in. The other is the CAN cable to Firefly / OneControl - unplug that one only. Then try Manual Mode again.
- ☐ 4. If Manual Mode holds with the Firefly CAN cable unplugged, Firefly / OneControl CAN communication is in the dump. Do not start diagnosing a Level Up controller fault. If Manual Mode still dumps, Firefly / OneControl CAN is ruled out - now diagnose the Level Up path that remains.


## DO NOT

- Do not pull the rubber-boot terminator.
- Do not condemn the Level Up controller or start pump and valve replacement while Auto Level still works.
- Do not swap another Level Up controller for Firefly blame.
- Do not push Firefly USB firmware unless Manual Mode holds with the Firefly CAN cable unplugged.

## SOURCES (SHOP DOCUMENT LIBRARY)

- Shop writeup - Level Up Advantage Manual Mode flash-home and Firefly

Level Up Advantage controller - two ports labeled CAN -- Shop writeup - Level Up Advantage Manual...

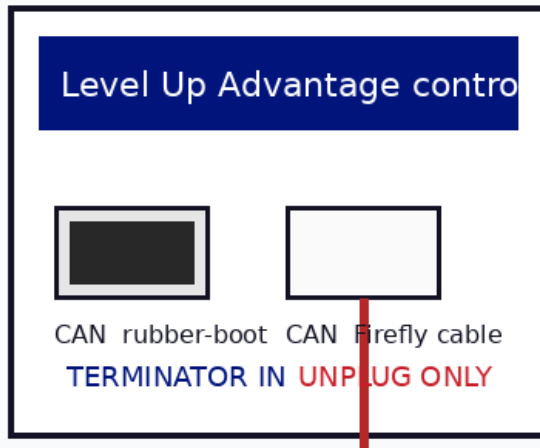

### Two ports labeled CAN

Leave the rubber-boot terminator plugged in.

Unplug only the CAN cable to Firefly / OneControl.

### POWER CONNECTOR

Red versus Green ground.

Want solid 12V+. Note Yellow.

Shop PN 807662 (Sources only)