

BrewMaster Pro

Premium Fully Automatic Smart Coffee Machine — User Manual

Front illustration of BrewMaster Pro

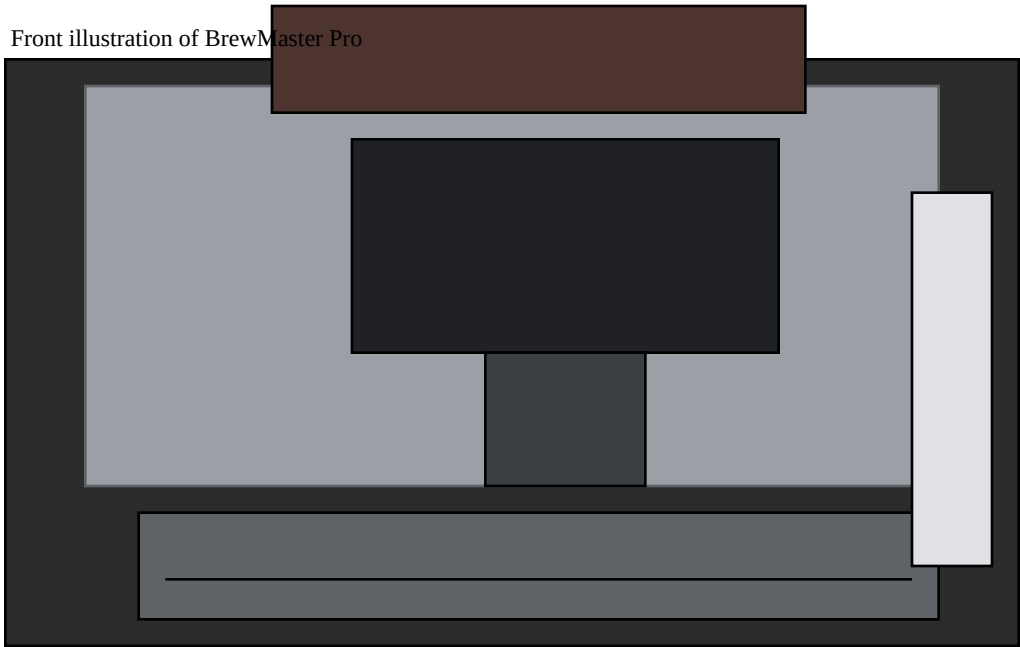


Image description: A front view shows the bean hopper on top, a central touchscreen, dual spouts above the drip tray, and a detachable milk carafe on the right—helpful for identifying the exterior parts quickly.

Introduction

BrewMaster Pro is a premium, fully automatic smart coffee machine designed to make cafe-quality drinks at home or in small offices with minimal effort. It grinds whole beans on demand, controls temperature and pressure precisely, textures milk automatically, and guides you through every step with an intuitive touchscreen. This manual explains safe operation, first-time setup, daily use, cleaning, maintenance, troubleshooting, and recipes. Although compact, BrewMaster Pro delivers consistent results through programmable profiles, a conical burr grinder, and adaptive brewing algorithms that balance dose, grind, temperature, and flow rate for each beverage.

Machine Overview

The machine includes a top-mounted bean hopper with a freshness lid, an internal conical burr grinder with an external grind-size wheel, a side-fill removable water tank with a charcoal filter seat, a front brew unit with dual spouts, a removable drip tray with a hidden waste-puck bin, an integrated milk carafe on the right with a stainless wand and auto-clean valve, a color touchscreen, a cup-height adjustable nozzle, and a rear power switch and detachable power cord. Inside, the thermal block heats water rapidly while a pump pushes water through the coffee puck, and digital sensors monitor temperature, flow, and tank level.

Safety Instructions

Read all safety notes before use. Place the machine on a level, dry surface with at least 10 cm of clearance on all sides for ventilation. Connect only to a grounded household outlet that matches the voltage on the rating label, and never use damaged cords. Do not immerse any part of the machine in water; to clean, unplug and wipe with a damp cloth. Keep the appliance away from children and pets during operation: hot water and steam can cause burns. Operate the machine only with the brew unit, drip tray, and waste bin correctly installed. Use potable water and roasted coffee beans only; do not insert flavored beans coated with sugar or oil, unroasted beans, or spices. Never open the service doors during brewing or rinsing. Allow the machine to cool before servicing, descaling, or transporting. If the machine is dropped, damaged, or leaking, unplug it and contact service.

Setup and First Use

Unpack and inspect the machine and accessories. Rinse the water tank, fill with cold potable water, and seat the optional charcoal filter if provided. Add fresh whole beans to the hopper and close the lid. Insert the milk carafe if using milk drinks. Place a large empty cup under the spouts, then plug in the power cord and switch the rear rocker to ON. The touchscreen will start the guided first-use wizard: select language, set time, choose water hardness (use the included test strip and select Soft/Medium/Hard), and run the automatic priming cycle, which flushes the hydraulic system. When prompted, discard the rinse water and empty the drip tray. The machine is now ready for brewing.

Touchscreen and Navigation

The touchscreen home shows drink tiles (Espresso, Lungo, Americano, Cappuccino, Latte, Flat White, Mocha, Hot Water), plus More for specialty items. Tap a drink to open the recipe card, then adjust Strength (dose), Size (volume), Temperature, and Milk level with plus/minus controls. Settings reveals global preferences such as standby timer, brightness, water hardness, sound, language, and maintenance tools (rinsing, descaling, milk clean). Swipe from the left edge to open Profiles; you can save up to four named profiles, each storing custom defaults for all drinks. During brewing the screen shows a progress bar and live tips; tap Cancel to stop.

Brewing Drinks

For any coffee drink, start with fresh beans and a clean machine. Place a cup under the spouts. Choose your beverage and adjust Strength, Size, and Temperature as desired. Press Brew. The grinder doses beans, the brew unit tamps automatically, and hot water is forced through the puck. For milk drinks, the carafe draws milk, textures it according to the recipe, and dispenses it in the correct order (for example, cappuccino: foam first, then espresso; latte: espresso first, then steamed milk). For Americanos, espresso is pulled and hot water is added to reach the target volume. For iced versions, brew into a cup pre-filled with ice; select the Iced option to automatically reduce brew temperature and volume to compensate for dilution.

Grind Size Adjustment

Grind size strongly affects taste and flow. The top grind wheel adjusts from fine to coarse. Turn toward Fine for slower flow, higher extraction, and stronger flavors; turn toward Coarse for faster flow and milder taste. Adjust only while the grinder is running to protect the burrs: start a shot, then turn the wheel a single click at a time and taste. Aim for espresso to finish in about 20–30 seconds for a standard dose and size. If shots are sour or watery, go finer or increase strength; if shots are harsh or excessively bitter, go coarser or reduce strength.

Maintenance — Daily

Daily: Empty and rinse the drip tray and waste bin, wipe the brew spouts, and run Milk Clean if you used milk. Refill the water tank and beans. After the last drink of the day, run Rinse Cycle from Maintenance to flush coffee oils.

Maintenance — Weekly

Weekly: Remove and rinse the brew unit with lukewarm water—do not use soap. Brush residual grounds from the chamber. Wash the milk carafe and lid, ensuring the siphon tube and froth chamber are clear. Clean the hopper with a dry cloth and check the gasket on the lid.

Maintenance — Advanced

Advanced: Descale when prompted or if flow slows, taste degrades, or steam weakens. Replace the water filter every two months or as indicated. Every three months, apply food-safe lubricant sparingly to the brew unit o-rings. Inspect the power cord and fittings for wear.

Descaling

Descaling: Enter Maintenance > Descale. Empty the drip tray and waste bin. Fill the tank with a descaling solution mixed to the product's ratio (or a citric acid solution, 25–30 g per liter of water). Place a large container under the spouts and start. The machine cycles solution through the hydraulic paths. When prompted, empty the container, flush the tank, and fill with fresh water to run the rinse phase until the message indicates completion.

Grinder Maintenance

Grinder care: Run the hopper nearly empty, then power OFF. Vacuum loose beans from the throat. With the service door open, use the included brush to sweep fines from the burrs. Do not use water or oil. If flavors become muddy, grind cleaning tablets can be used per the tablet maker's instructions by grinding them like beans and discarding the residue.

Milk System Care

Milk system care: After each milk drink, the auto-clean valve purges steam to minimize residue. At day's end, run Milk Clean with warm water and a drop of food-safe detergent, then rinse thoroughly. Store leftover milk in the refrigerator; do not leave milk in the carafe overnight while attached to the warm machine.

Long-Term Storage

Long-term storage: Empty the tank and carafe, run a rinse cycle, and let parts dry fully. Remove beans from the hopper to prevent oils from becoming rancid. Store the machine in a dry place above freezing, with the power cord loosely coiled and the brew unit reinserted.

Troubleshooting

If the machine will not brew: Ensure the tank has water, the waste bin and drip tray are seated, and the brew unit is fully locked. Restart the machine to clear transient sensor faults. Weak coffee usually indicates a too■coarse grind, low dose, or stale beans; adjust Strength up and turn the grind one click finer while grinding. Bitter coffee points to over■extraction or overheated water; reduce Strength or size, coarsen the grind, and use fresh beans roasted within the last month. If the grinder stalls or squeals, check for stones or flavored beans; remove contaminants and try again. Water leaks typically come from an overfilled drip tray, a mis■seated tank, or a dirty o■ring on the brew unit; clean and re■seat. For milk problems (large bubbles or no foam) ensure the siphon tube is attached, the carafe lid is tight, and the milk is cold (1–4°C). Sensor or temperature errors can often be cleared by power cycling; if persistent, perform a descale and check for limescale blockages. Touchscreen issues may resolve after cleaning with a soft, slightly damp microfiber cloth; avoid solvents. If automation fails (no grinding or no pumping), confirm the machine is not in Cleaning or Descale mode and that the rear power switch is firmly ON.

Recipes

Popular recipes: Espresso (30–40 ml, high strength, fine grind); Ristretto (20–25 ml, very high strength, finer grind, short time); Lungo (80–120 ml, medium strength, slightly coarser); Americano (30–40 ml espresso topped with 120–160 ml hot water); Cappuccino (30 ml espresso with ~120 ml steamed milk and dense foam); Latte (30 ml espresso with ~200 ml milk, light foam); Flat White (double espresso with ~120 ml silky microfoam); Mocha (espresso with steamed milk and chocolate syrup to taste); Cortado (equal parts espresso and warm milk, little foam); Macchiato (espresso marked with a spoon of foam); Latte Macchiato (steamed milk first, then espresso to create layers); Affogato (vanilla ice cream with hot espresso); Iced Latte (espresso over ice with cold milk); Iced Americano (espresso over ice with cold water). Use the drink's card to adjust dose, milk level, and temperature to your preference and save to a Profile for one-tap results.

Frequently Asked Questions

FAQs: Q: Can I use pre-ground coffee? A: BrewMaster Pro is optimized for whole beans; pre-ground is not supported. Q: Why does the machine rinse on startup? A: Rinsing heats and cleans the brew path for consistent taste. Q: Do I need a water filter? A: If your water is hard, a filter reduces scale and improves flavor; otherwise, plan to descale more frequently. Q: How loud is grinding? A: Similar to a blender's low setting for a few seconds per drink. Q: Can I adjust temperature? A: Yes, per drink and globally in Settings. Q: What cups fit? A: Most cups up to 14 cm tall; raise or lower the spout to reduce splashing. Q: How often should I descale? A: When prompted, or every 2–3 months with hard water. Q: Where can I get support? A: Refer to the retailer or service provider that supplied BrewMaster Pro; provide the model name and serial label details when contacting support.