

INTERIOR TRIM AND ORNAMENTATION

A-PILLAR TRIM PANEL (G1822134)

REMOVAL AND INSTALLATION

76.13.31	A-POST UPPER TRIM PAD - RENEW	ALL DERIVATIVES	0.10	USED WITHINS	
----------	--	--------------------	------	--------------	--

REMOVAL



CAUTION:


Use a suitable plastic trim tool to release the component.



NOTES:


- This procedure contains some variation in the illustration depending on the vehicle specification, but essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1.

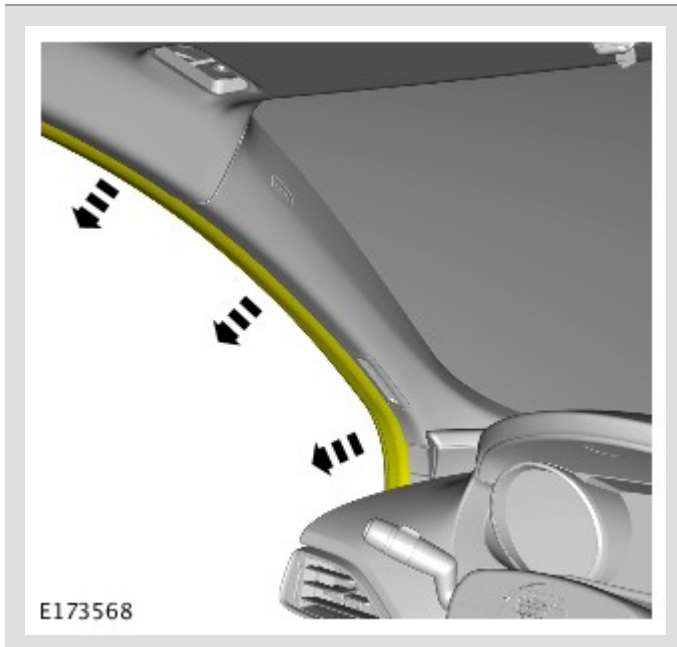


Release the door aperture seal.

2.

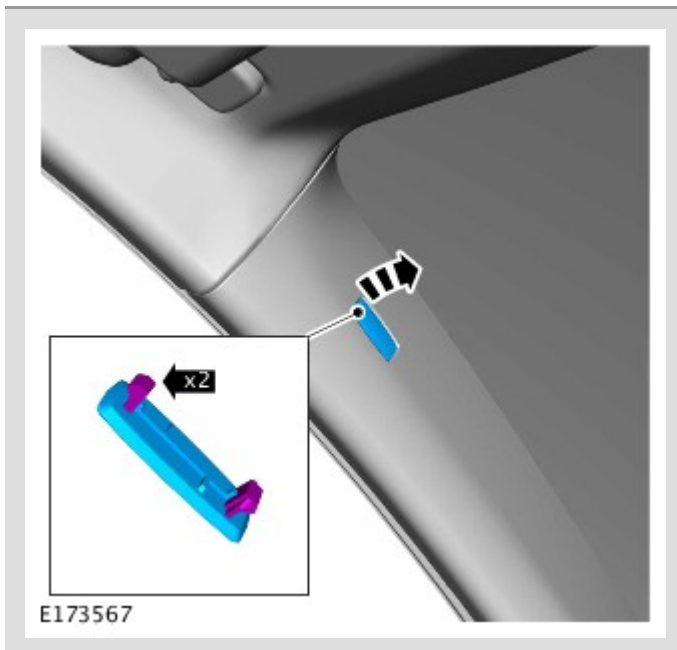

Remove the access cover.

3.

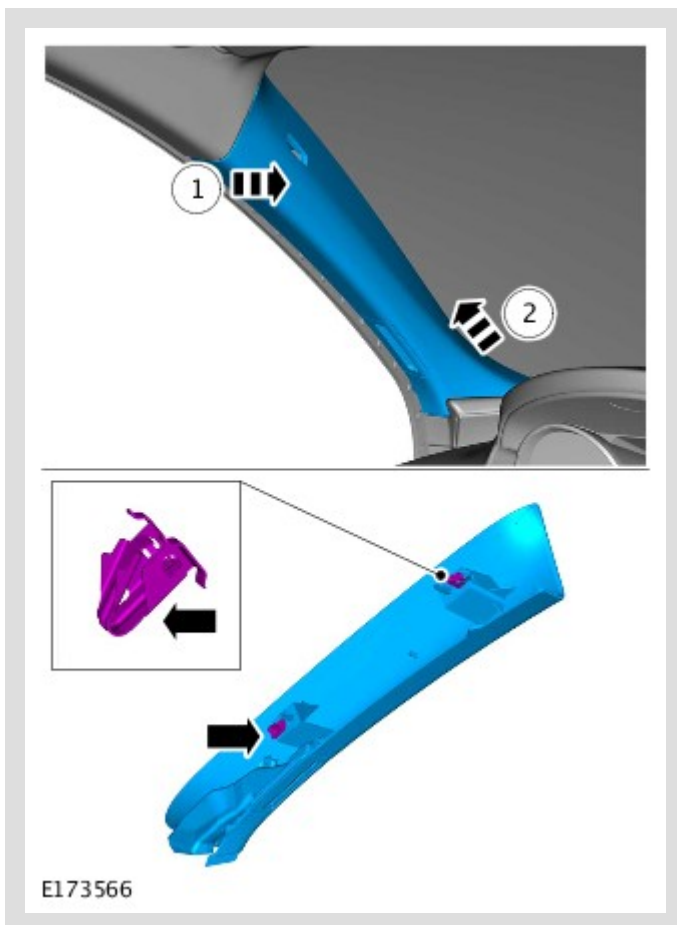

- Release the 2 clips.
- Remove the A-pillar trim panel.

INSTALLATION

1.

Install the A-pillar trim panel.

2.

Install the access cover.

3.

Install the door aperture seal.