

INTERIOR TRIM AND ORNAMENTATION

B-PILLAR LOWER TRIM PANEL (G1904985)

REMOVAL AND INSTALLATION

76.13.28	B-POST UPPER TRIM PAD - RENEW	ALL DERIVATIVES	0.20	USED WITHINS	
76.13.29	B-POST LOWER TRIM PAD - RENEW	ALL DERIVATIVES	0.40	USED WITHINS	

PART(S)

STEP	PART NAME	QUANTITY
Removal Step 4	Retaining clips	4

REMOVAL



CAUTION:

Do not use tools during this operation, removal of the component(s) must be carried out by hand.



NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1.

Refer to: B-Pillar Upper Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).

2.

Refer to: Rear Scuff Plate Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).


3.

Refer to: Front Scuff Plate Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).

4.

NOTE:

Install new retaining clips.

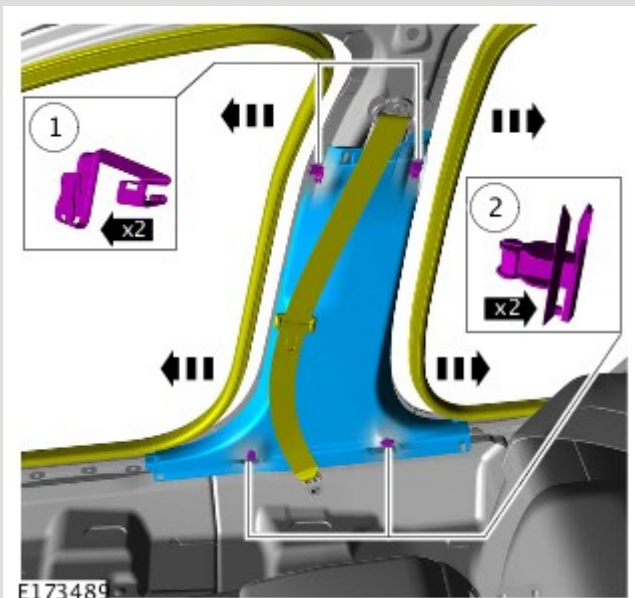

Renew Part: [Retaining clips](#) Quantity: 4 .

INSTALLATION

1.

To install, reverse the removal procedure.