

INTERIOR TRIM AND ORNAMENTATION

B-PILLAR UPPER TRIM PANEL (G1904986)


REMOVAL AND INSTALLATION

REMOVAL


NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.


1.

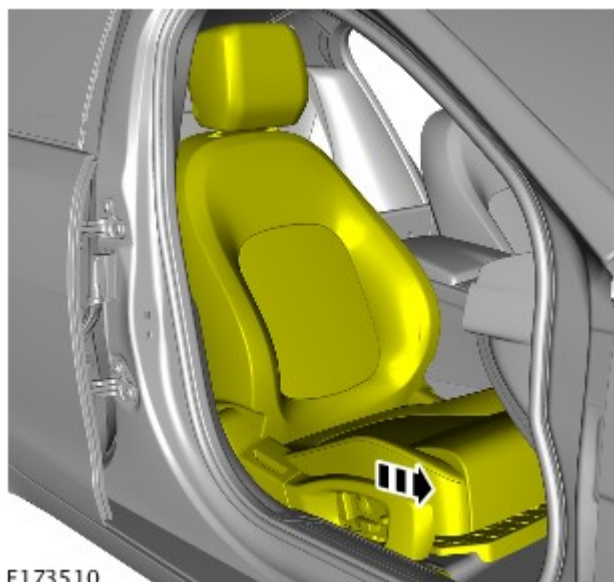

2.

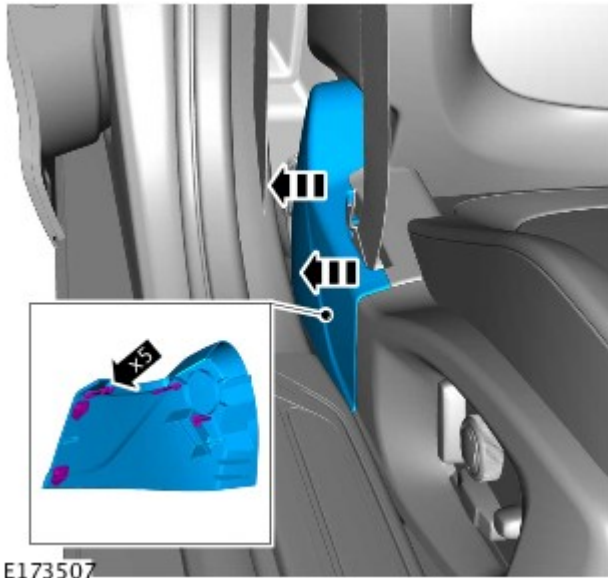


3.

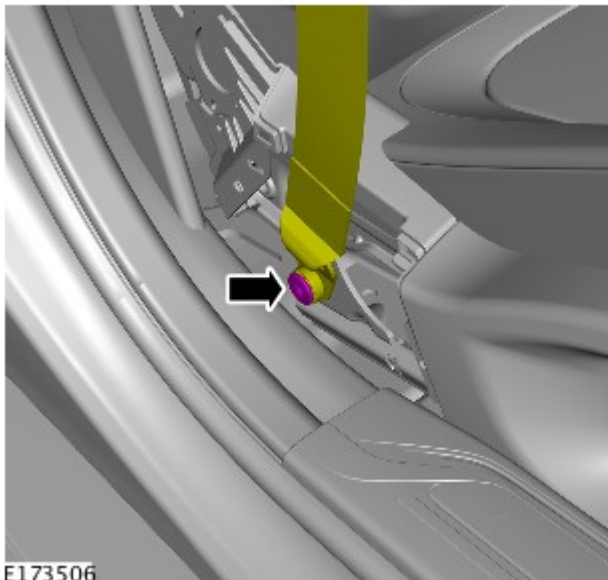


Torque: 40 Nm

4.

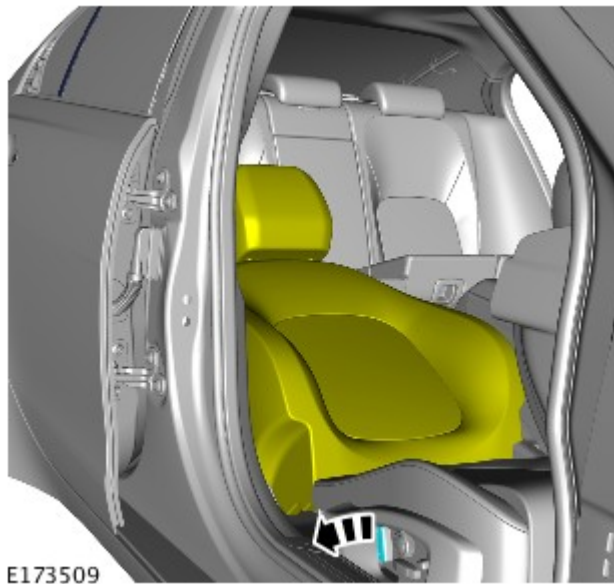

5.



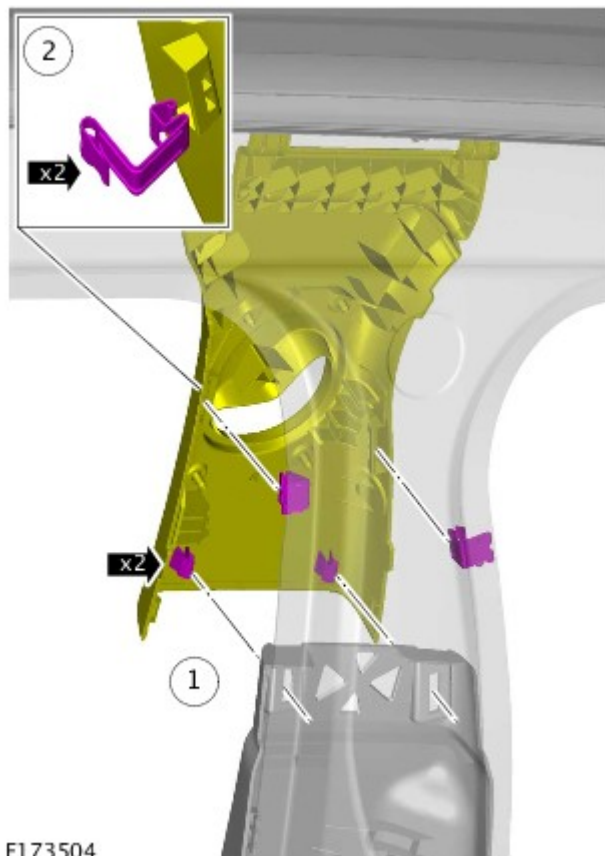


**WARNING:**

Failure to follow this instruction may cause damage to the vehicle.

**CAUTION:**

Make sure the locating dowels are installed correctly.

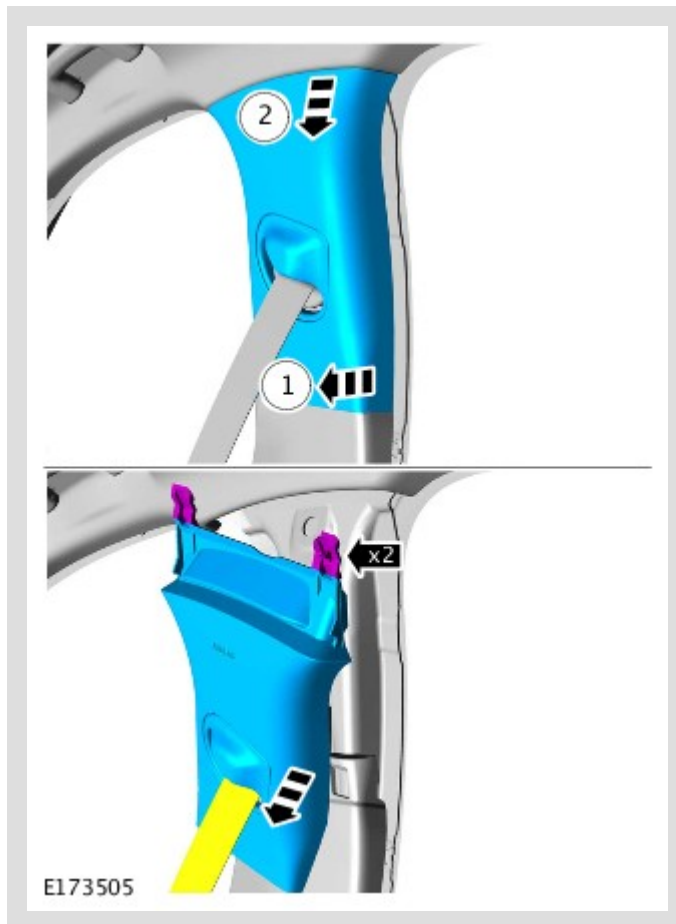**INSTALLATION****1.**

To install, reverse the removal procedure.