

FRONT END BODY PANELS

HOOD (G1914967)

REMOVAL AND INSTALLATION

76.16.01	HOOD - RENEW	ALL DERIVATIVES	0.60	USED WITHINS	
----------	-----------------	--------------------	------	--------------	--

REMOVAL



CAUTION:

Always protect paintwork and windows when removing exterior components.



NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1.

 NOTE:

Mark the position of the component prior to removal.




E174044

Torque: 25 Nm

2.


 NOTE:

Do not disassemble further if the component is removed for access only.

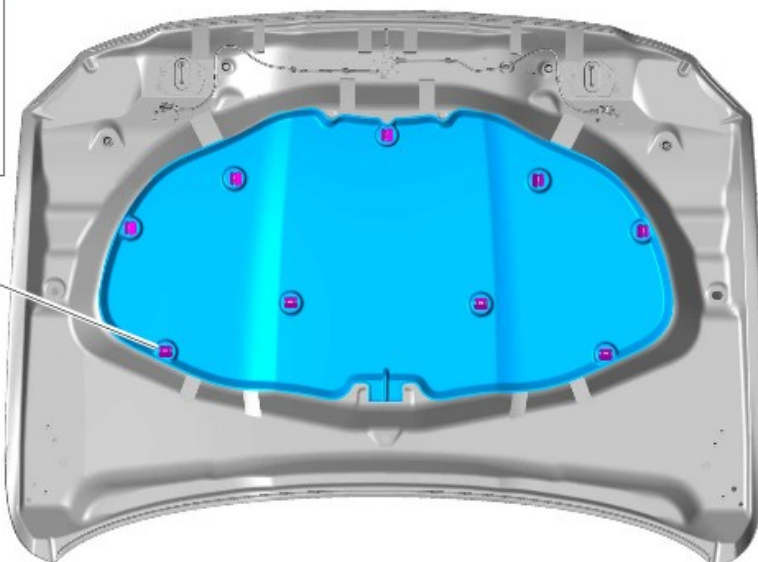

E184468

3.

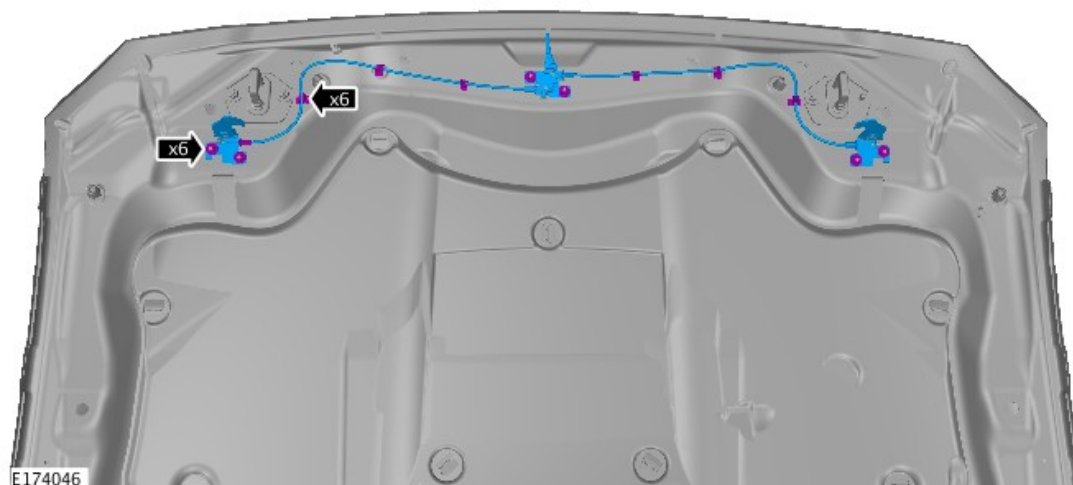


Torque: 10 Nm

4.

NOTE:

Mark the position of the component prior to removal.

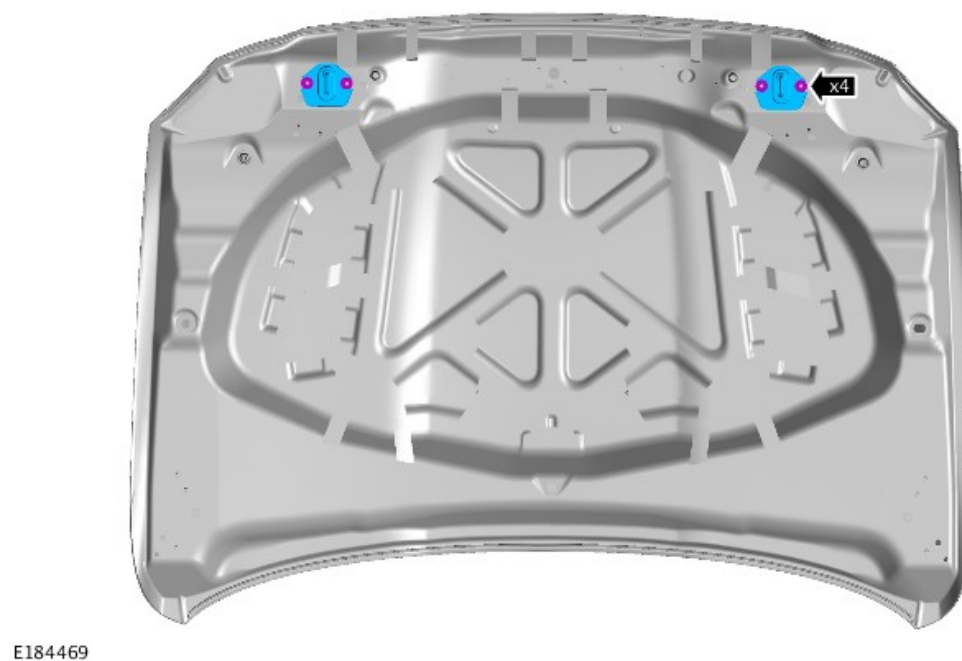

Torque: 25 Nm

5.



INSTALLATION

1.

NOTE:

Make sure that the component is installed to the marked position in the removal steps.

To install, reverse the removal procedure.

2.

Refer to: Hood Alignment (501-26, General Procedures).