

INTERIOR TRIM AND ORNAMENTATION

LOADSPACE TRIM PANEL (G1913774)

REMOVAL AND INSTALLATION

76.19.22	LUGGAGE COMPARTMENT SIDE LINER - LEFT HAND - RENEW	ALL DERIVATIVES	1.10	USED WITHINS	
76.19.30	LUGGAGE COMPARTMENT FLOOR CARPET - RENEW	ALL DERIVATIVES	0.10	USED WITHINS	

REMOVAL




NOTES:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

 NOTE:

Note the installed position of the loadspace trim panel.

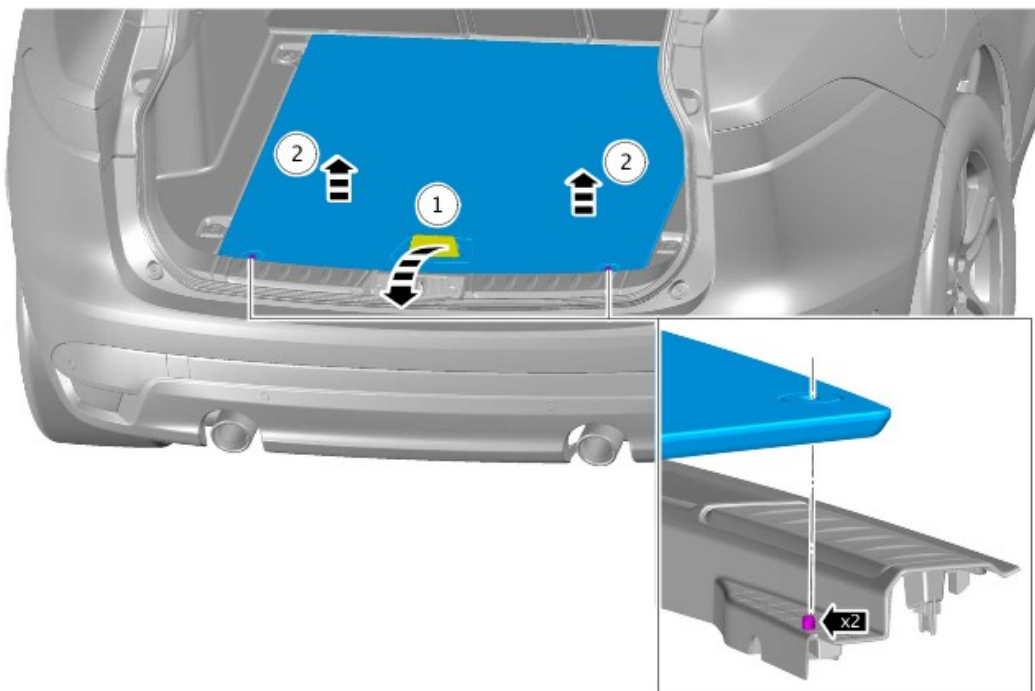

E184933


1. Release the loadspace trim.
 2. Remove the loadspace trim.
-

⚠ CAUTION:

Protect the surrounding trim to avoid damage.

△ NOTE:

Do not disassemble further if the component is removed for access only.

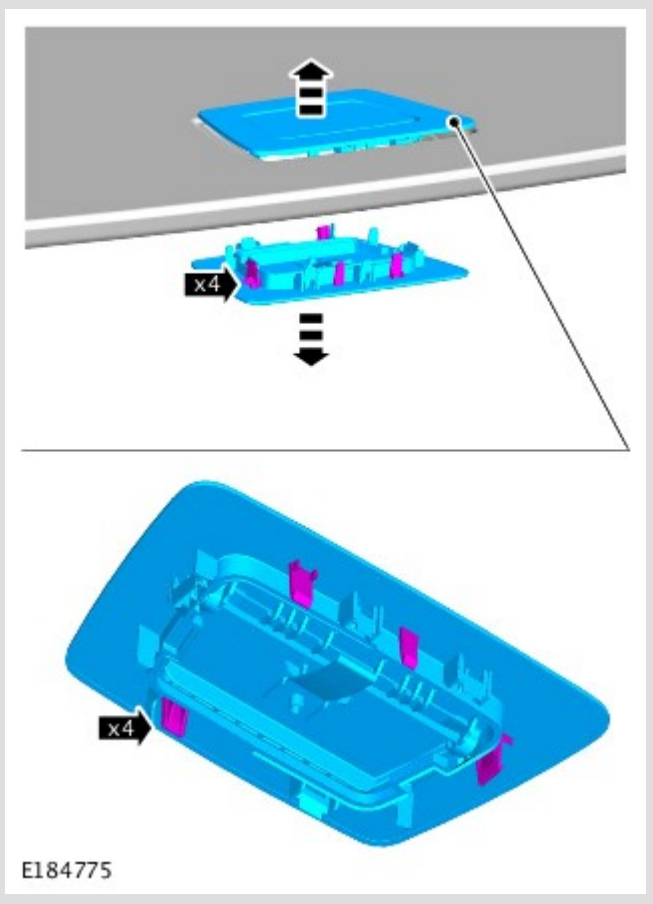

- Using a suitable trim tool, release the 4 clips.
- Remove the loadspace trim handle.

1.

 NOTE:

Only do this step if the component was previously removed.

- Install loadspace trim handle.
- Secure the 4 clips.

2.

 NOTE:

Make sure that the component is installed on the noted position prior to removal.

- Install the loadspace trim panel.