

INTERIOR TRIM AND ORNAMENTATION

LOADSPACE SCUFF PLATE TRIM PANEL (G1913773)

REMOVAL AND INSTALLATION

76.19.90	LUGGAGE COMPARTMENT SCUFF PLATE TRIM - RENEW	ALL DERIVATIVES	0.10	USED WITHINS	
----------	---	--------------------	------	--------------	--

REMOVAL



NOTES:

- Removal steps in this procedure may contain installation details.
- Use new retaining clips.

1.


Refer to: Loadspace Trim Panel (501-05, Removal and Installation).

**WARNING:**


The component(s) may be heavy. Take extra care when handling.

**NOTE:**


If equipped.

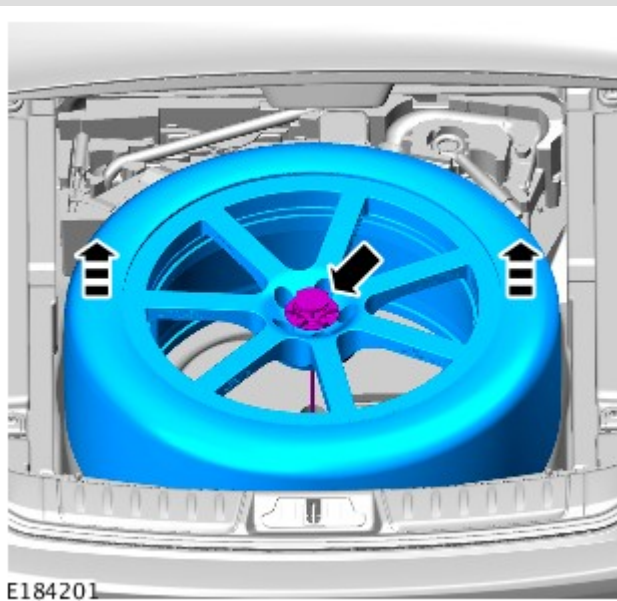**NOTE:**


Loosen the nuts, but do not fully remove.

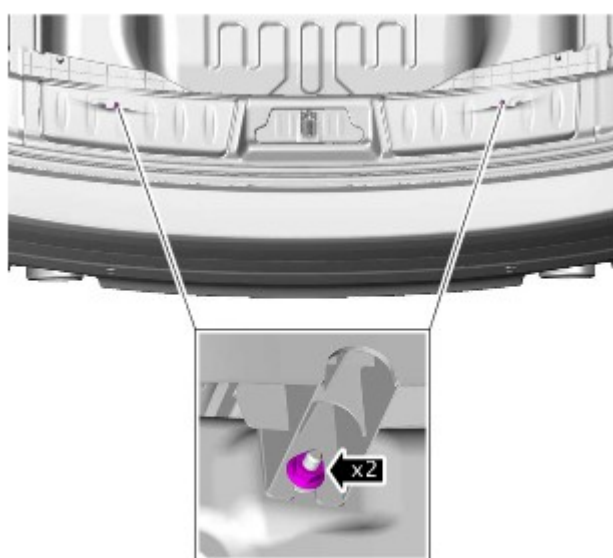

4.

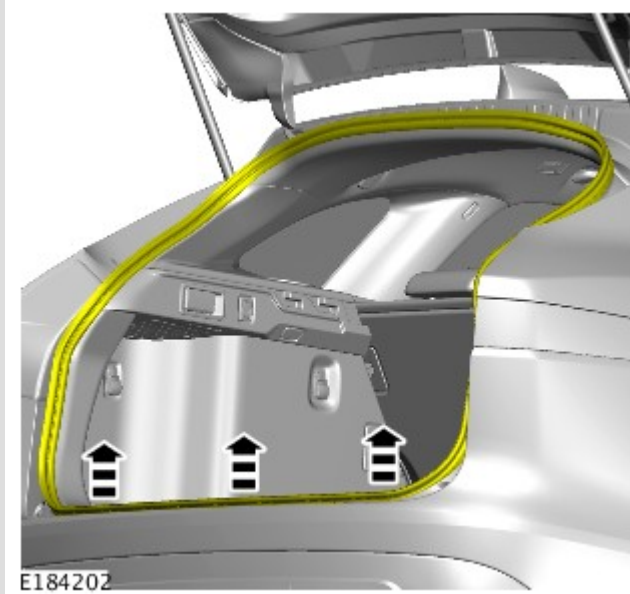

5.

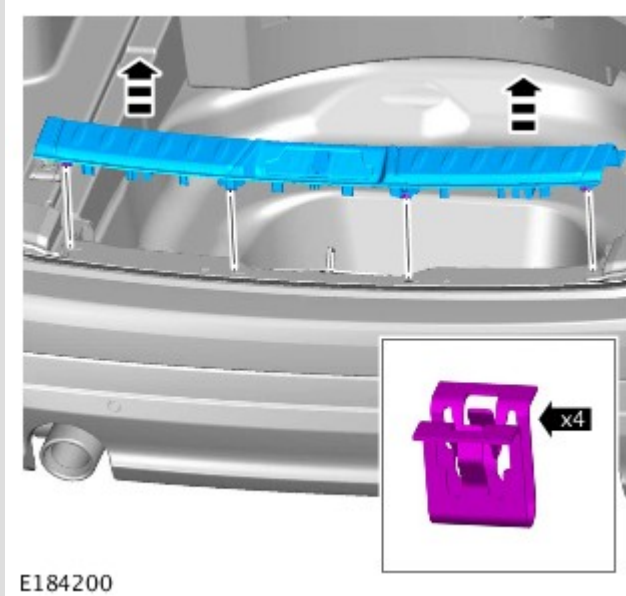

INSTALLATION

1.

To install, reverse the removal procedure.