

INTERIOR TRIM AND ORNAMENTATION

LOADSPACE SIDE TRIM PANEL (G2003065)

REMOVAL AND INSTALLATION

76.19.22	LUGGAGE COMPARTMENT SIDE LINER - LEFT HAND - RENEW	ALL DERIVATIVES	1.10	USED WITHINS	
76.19.23	LUGGAGE COMPARTMENT SIDE LINER - RIGHT HAND - RENEW	ALL DERIVATIVES	0.90	USED WITHINS	

REMOVAL



CAUTION:

Use a suitable trim tool.



NOTE:

- Removal steps in this procedure may contain installation details.
- LH illustration shown, RH is similar.

1.

Refer to: Loadspace Scuff Plate Trim Panel (501-05, Removal and Installation).


2.

Refer to: Rear Seat Bolster (501-10, Removal and Installation).


3.

 NOTE:

If equipped.

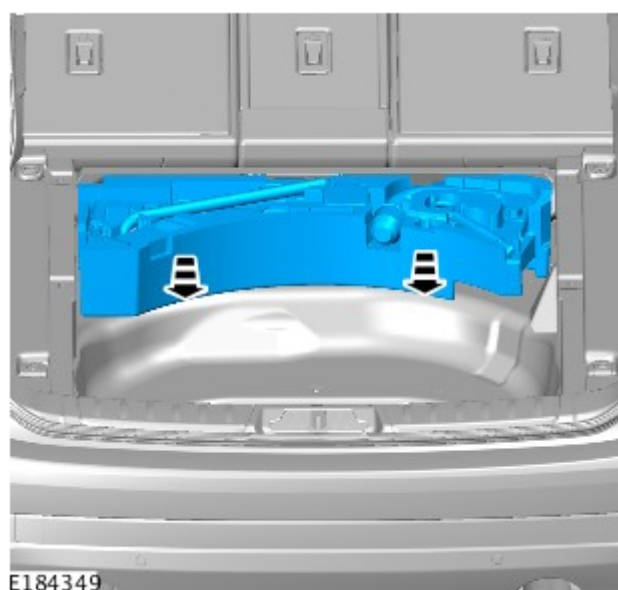

4.

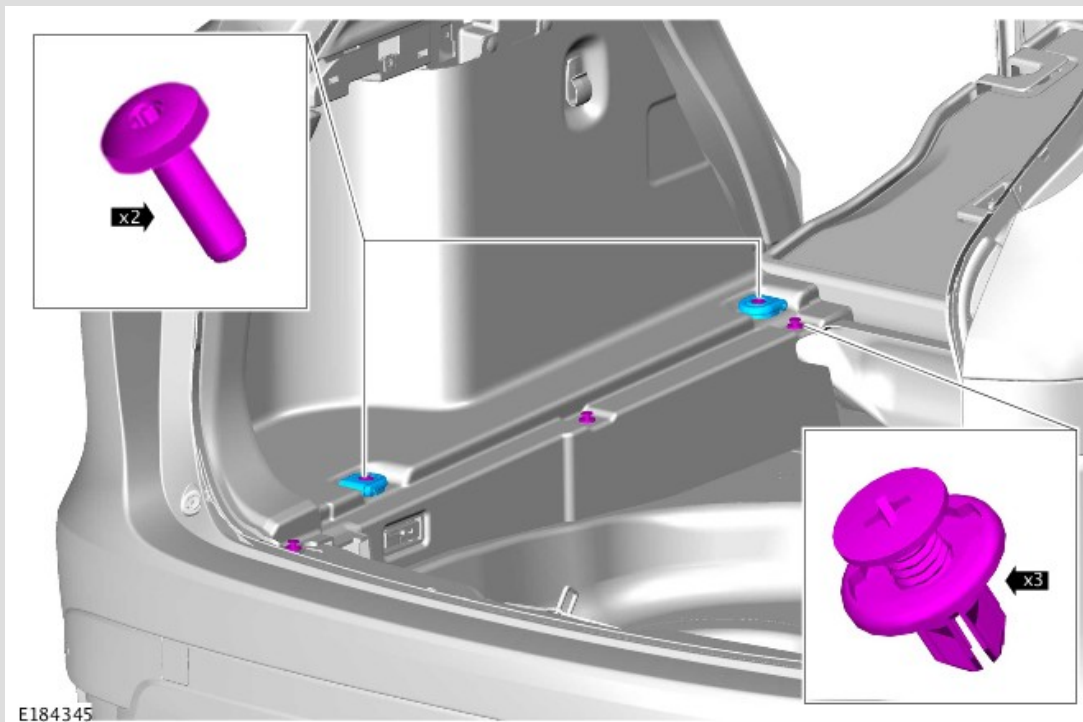


Torque: 24 Nm

5.


 NOTE:


If equipped.

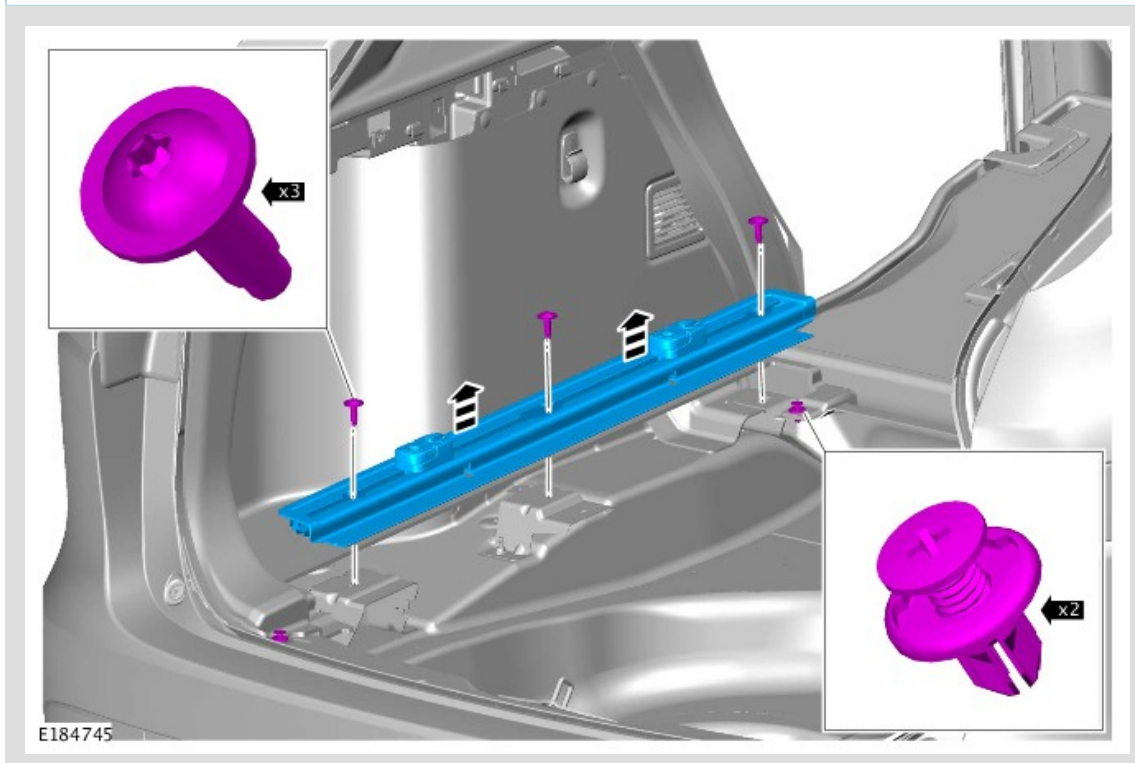

Torque: 24 Nm

6.

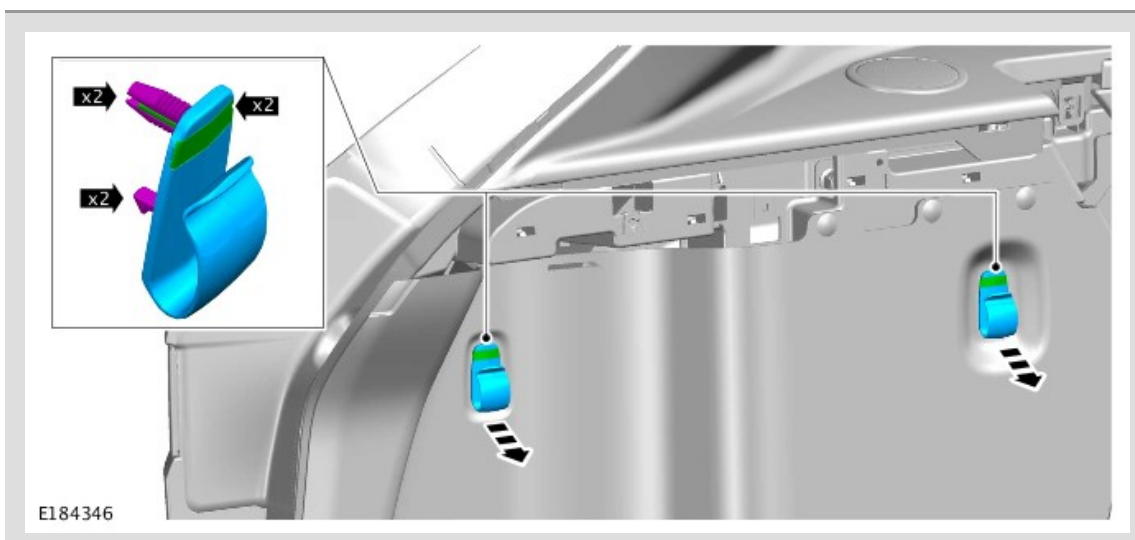


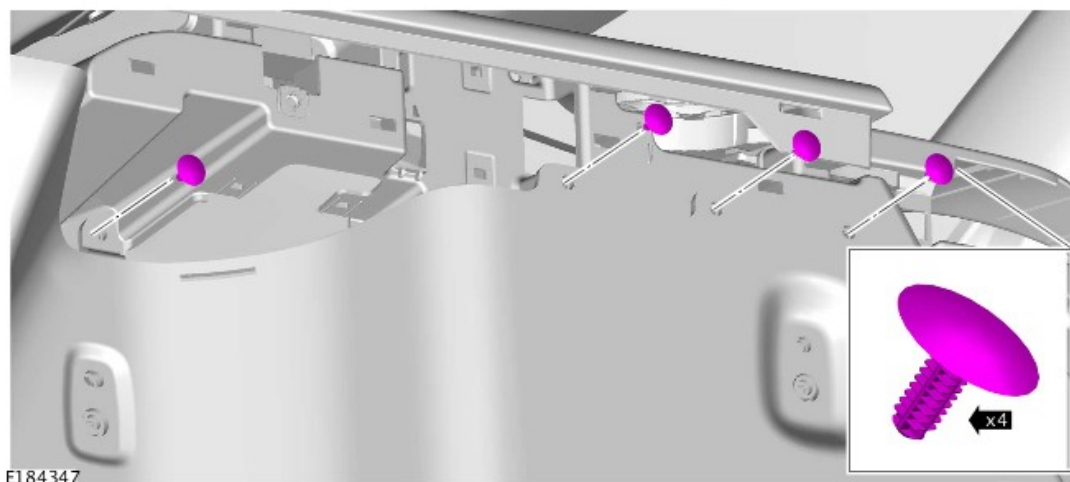

E184347

⚠ CAUTION:

Extreme care must be taken when removing and installing the trim. Excessive force may result in damage to the component.

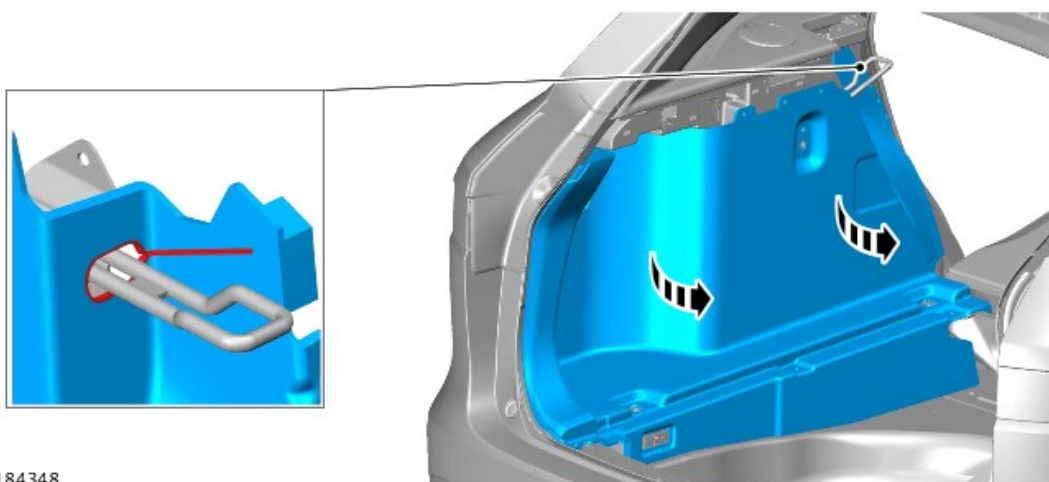


E184348

9.

 NOTE:

Do not disassemble further if the component is removed for access only.

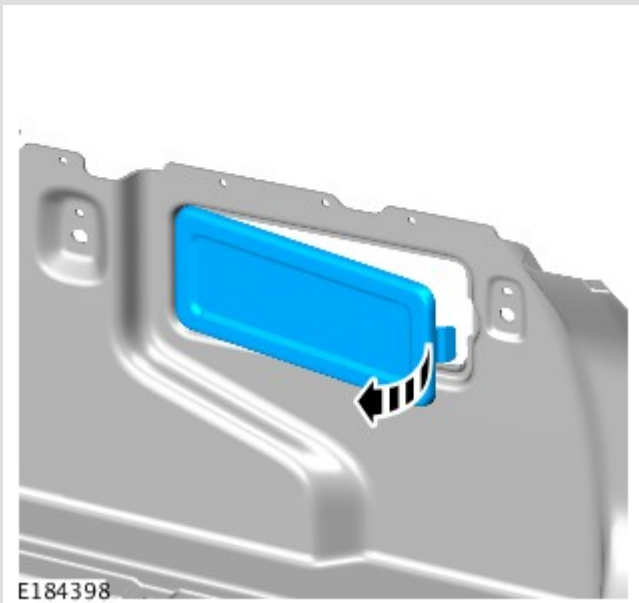

This step is for the right side only.

INSTALLATION

1.

 NOTE:

Use new retaining clips.

To install, reverse the removal procedure.