

FRONT DISC BRAKE

BRAKE CALIPER - INGENIUM I4 2.0L DIESEL (G1822042)

REMOVAL AND INSTALLATION

70.55.02	FRONT BRAKE CALIPER - RENEW	ALL DERIVATIVES	0.70	USED WITHINS	
70.55.03	REAR BRAKE CALIPER - RENEW	ALL DERIVATIVES	1.10	USED WITHINS	
70.55.05	FRONT BRAKE CALIPER - VEHICLE SET - RENEW	ALL DERIVATIVES	1.00	USED WITHINS	

REMOVAL



WARNING:

If the brake pad wear warning light has been activated, a new brake pad wear sensor must be installed.



CAUTION:

If brake fluid is spilt on the paintwork, the affected area must be immediately washed down with cold water.



NOTE:

Make sure that all openings are sealed.

1.



WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

2.

Remove the wheel and tire.


Refer to: Wheel and Tire (204-04 Wheels and Tires, Removal and Installation).

3.

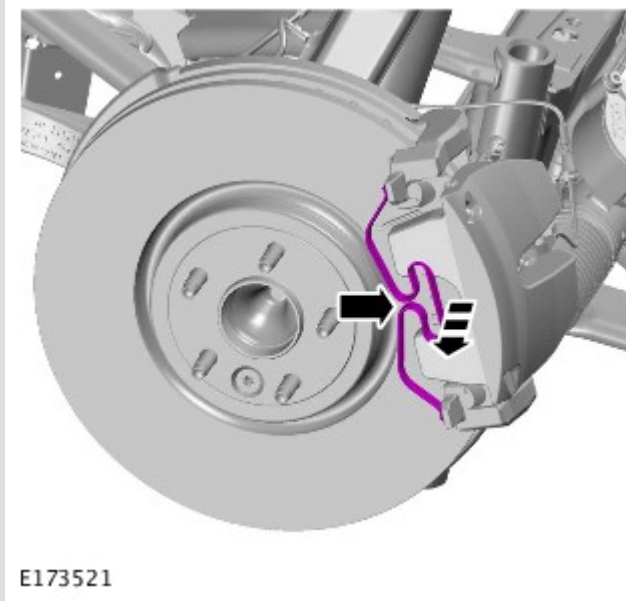

 NOTE:

The brake pad wear indicator sensor is easily damaged. Do not use a lever to remove the sensor. Use fingers only.

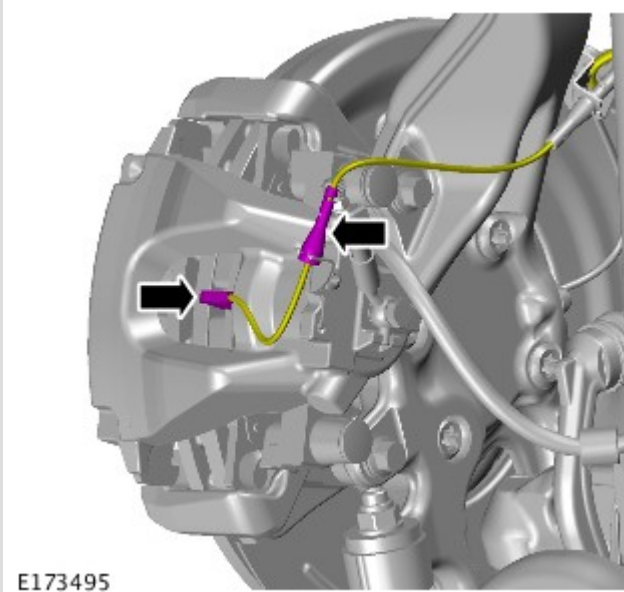

Inspect the brake pad wear sensor for signs of wear or damage. Install a new sensor if necessary.




CAUTIONS:

- Inspect the brake hose sealing washers for signs of damage, if damage is present discard the sealing washers.
- Be prepared to collect escaping fluids.




NOTE:


Make sure that all openings are sealed.

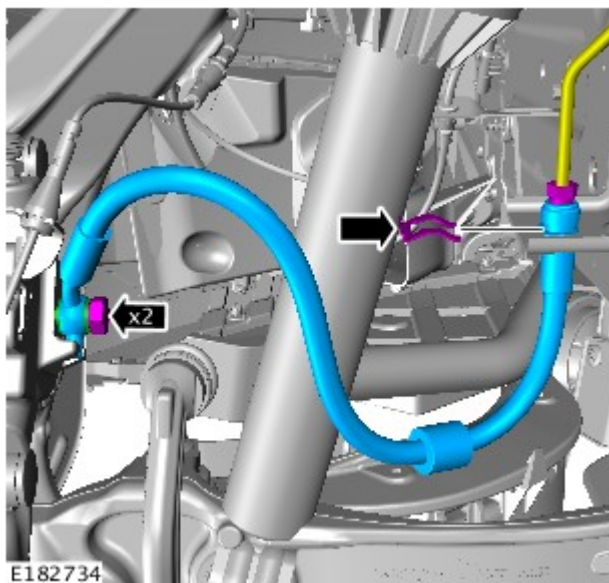

Remove the flexible brake hose.

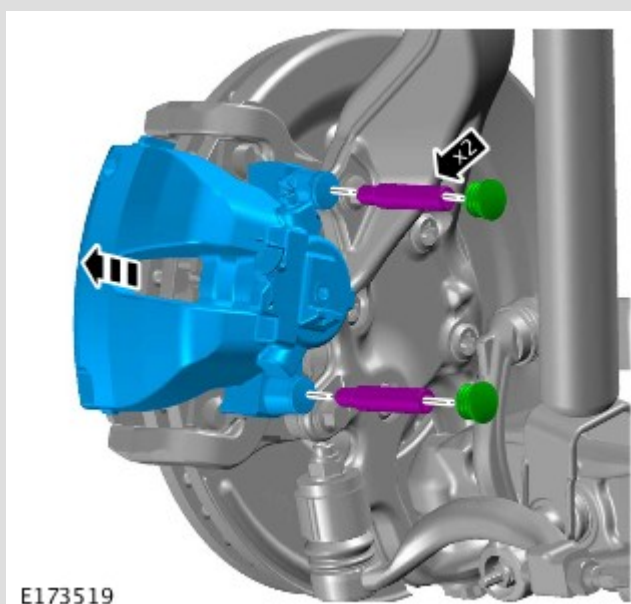


1.

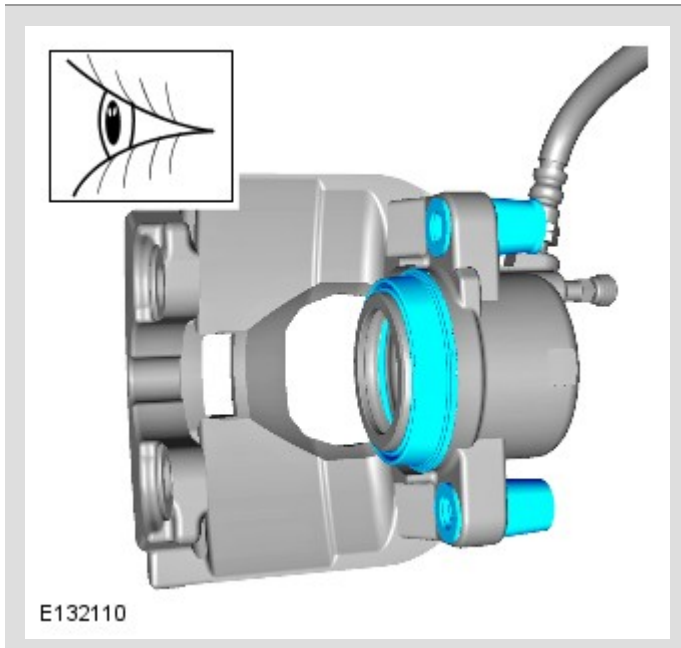

Inspect the caliper piston and slide pin seals for damage.

2.

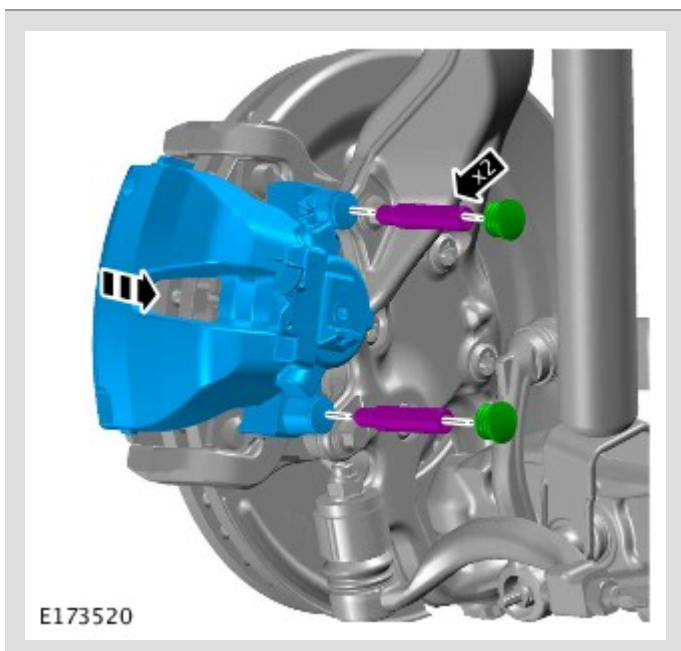


Torque: **33 Nm**



CAUTIONS:

- Inspect the brake hose sealing washers for signs of damage, if damage is present install new sealing washers.
- Make sure that the brake hose is not twisted and is correctly located.

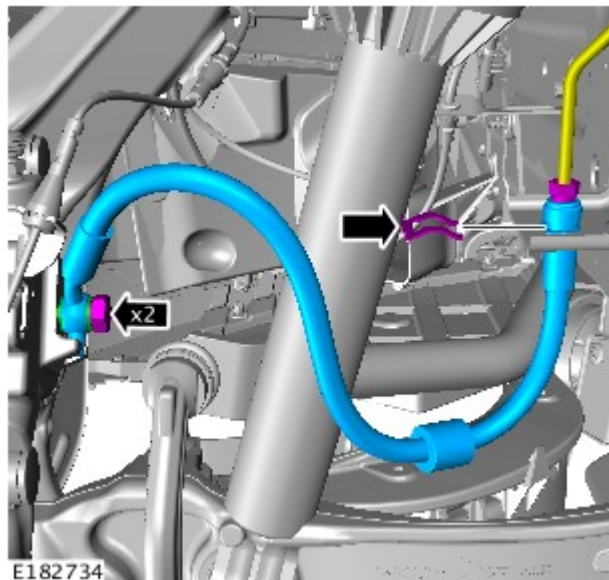


Install the flexible brake hose.


Torque:

Brake pipe union **15 Nm**

Banjo bolt **32 Nm**

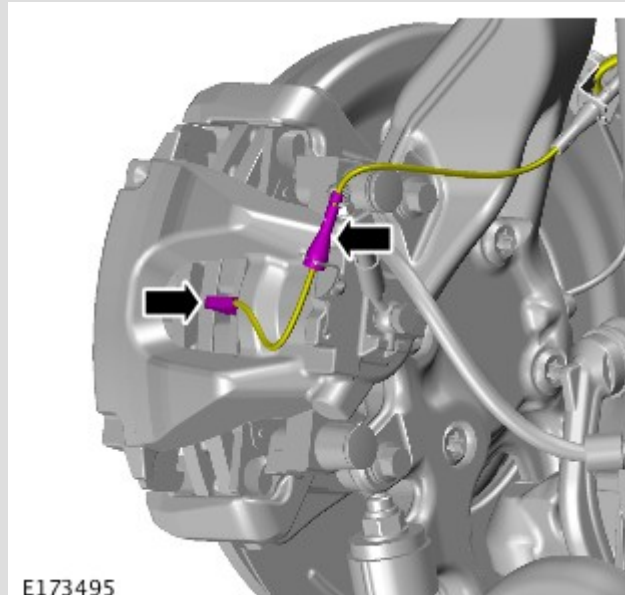

5.

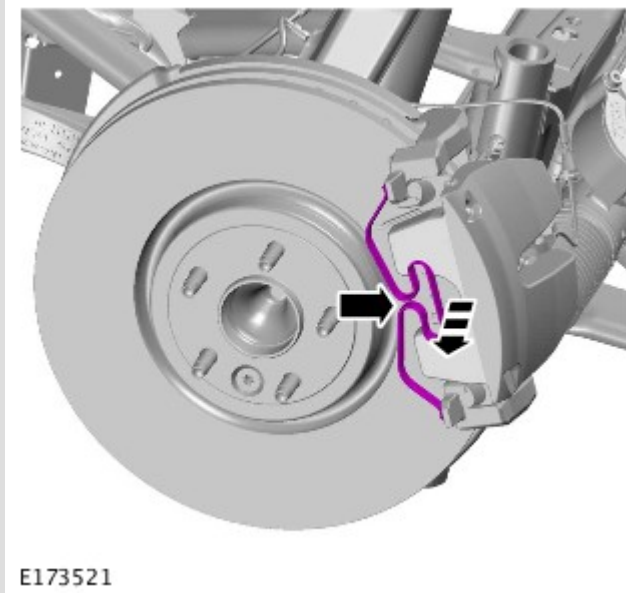

6.

Bleed the braking system.

Refer to: Brake System Bleeding (206-00 Brake System - General Information, General Procedures).

7.

Install the wheel and tire.

Refer to: Wheel and Tire (204-04 Wheels and Tires, Removal and Installation).