

FRONT END BODY PANELS

SECONDARY BULKHEAD LEFT PANEL - INGENIUM I4 2.0L DIESEL

(G1817278)

REMOVAL AND INSTALLATION

76.11.28	ENGINE COMPARTMENT LEFT HAND COVER - RENEW	2000 CC, INGENIUM DIESEL	1.10	USED WITHINS	
----------	--	--------------------------------	------	--------------	--

REMOVAL



NOTE:

Removal steps in this procedure may contain installation details.


1.

Disconnect the battery ground cable.
Refer to: Startup Battery Disconnect and Connect (414-01, General Procedures).

2.


Remove the RH secondary bulkhead panel.
Refer to: Secondary Bulkhead Right Panel - INGENIUM I4 2.0L Diesel (501-02, Removal and Installation).

3.

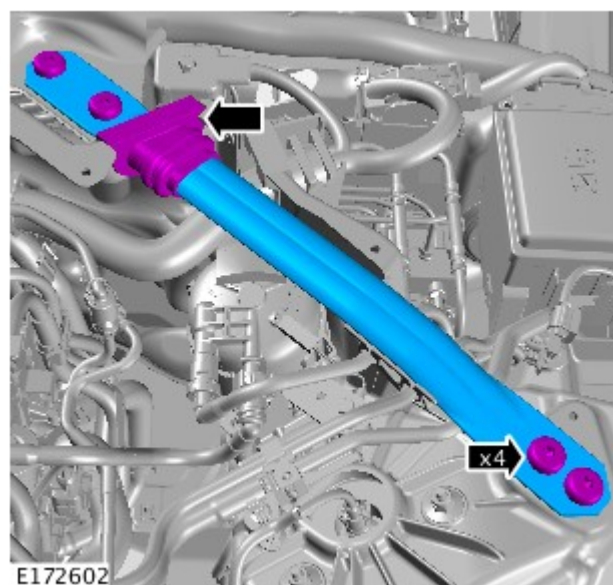


Torque: 55 Nm

4.

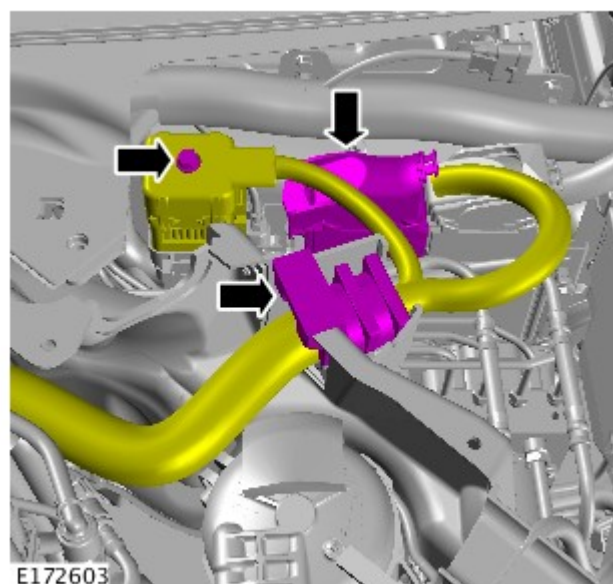

Torque: 8 Nm

5.

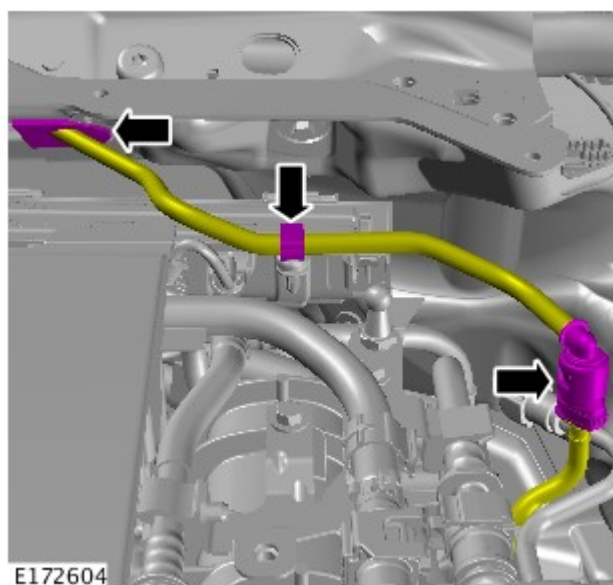


6.

Remove the fuel filter.

Refer to: Fuel Filter (310-01, Removal and Installation).

7.

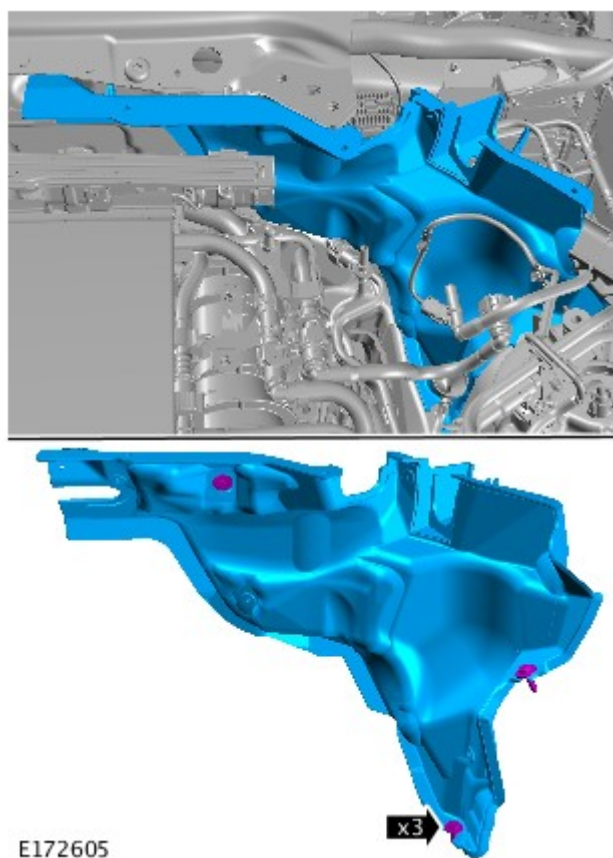

Torque: 10 Nm

To install, reverse the removal procedure.