

INTERIOR TRIM AND ORNAMENTATION

FRONT DOOR TRIM PANEL (G1899214)

REMOVAL AND INSTALLATION

76.34.01	FRONT DOOR TRIM PAD - RENEW	ALL DERIVATIVES	0.90	USED WITHINS
----------	--------------------------------------	--------------------	------	--------------

REMOVAL


ⓘ CAUTION:

Use a suitable trim tool.

△ NOTES:


- Removal steps in this procedure may contain installation details.
- Left illustration shown, right is similar.

1.

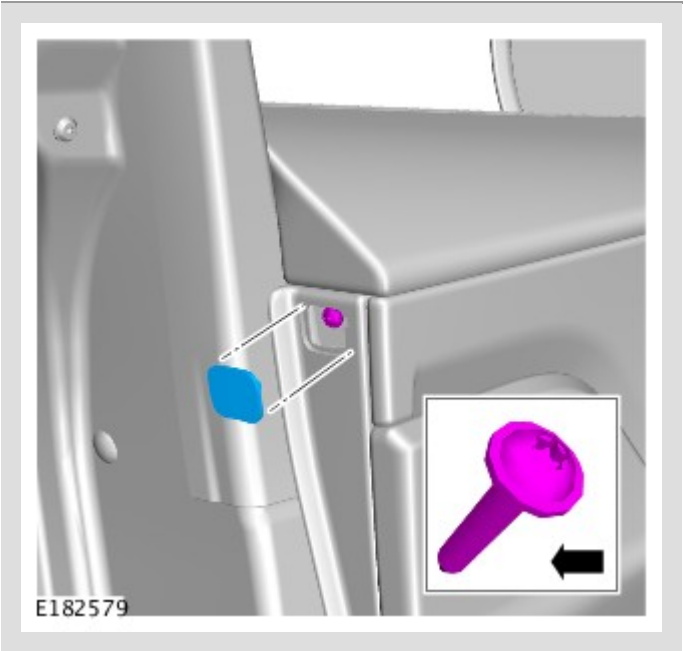


Torque: 1.3 Nm

2.

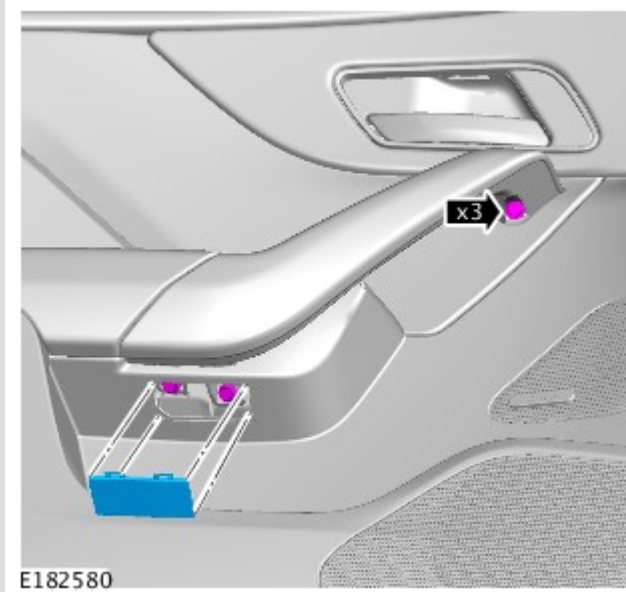

Torque: 5.4 Nm


3.

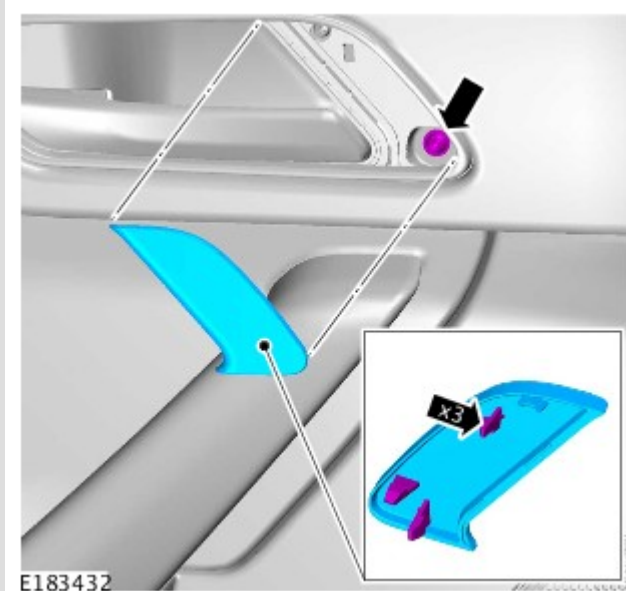

Torque: 1.3 Nm


 NOTE:

Do not remove the component at this stage.

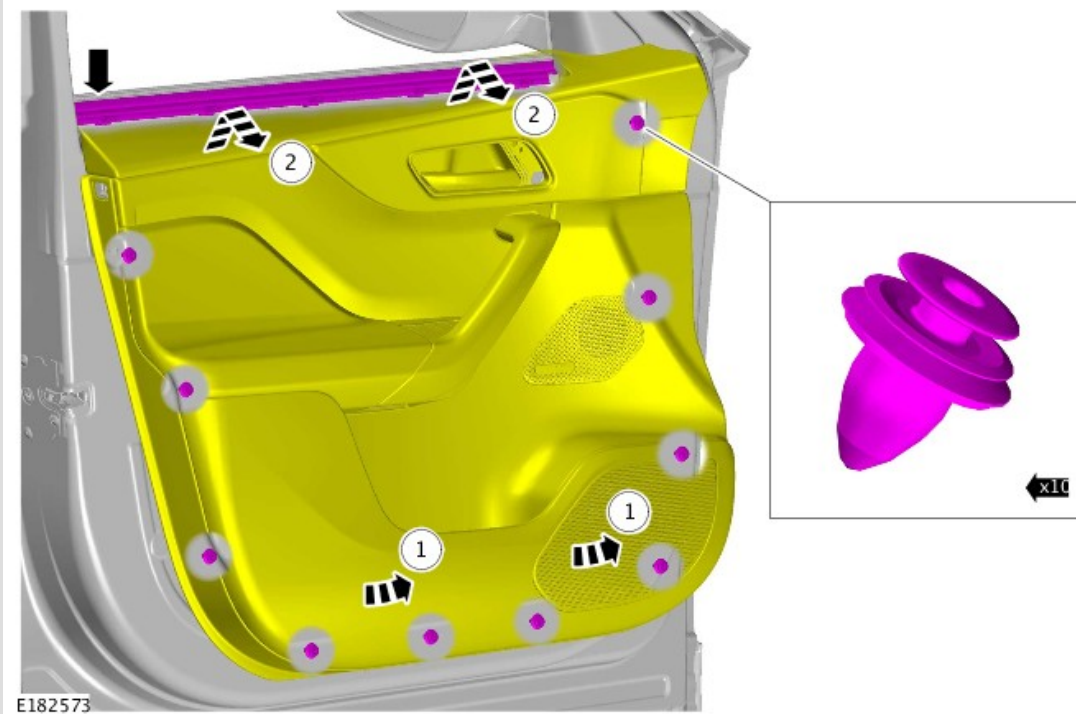

 NOTE:

Some components shown removed for clarity.

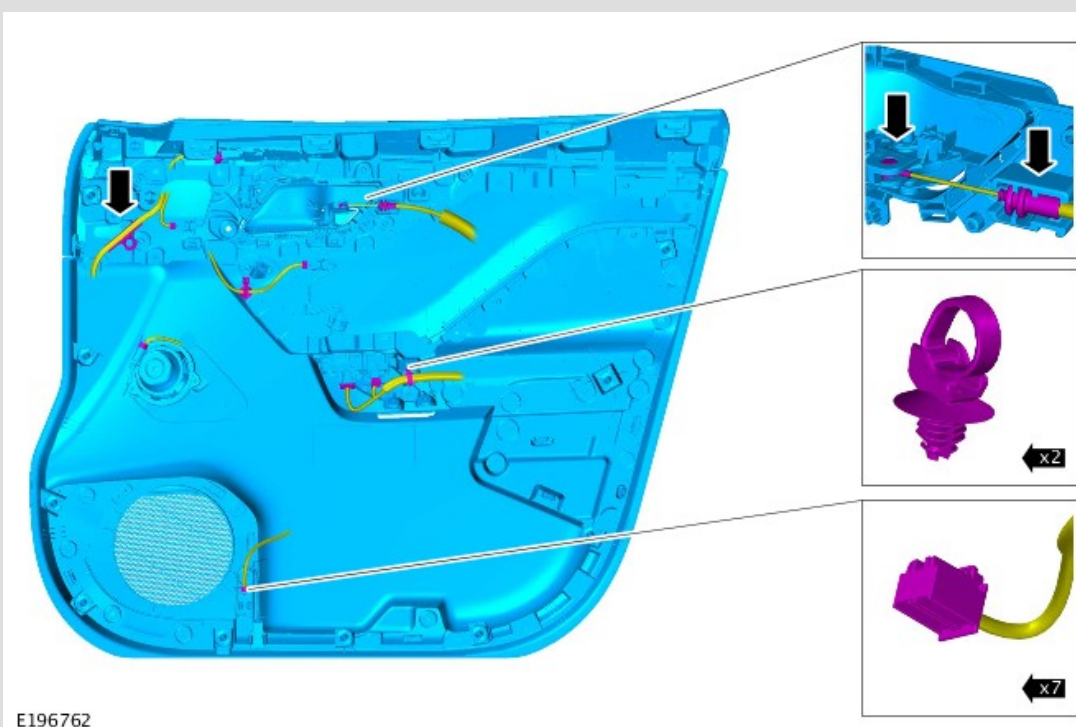


⚠ CAUTION:

Take extra care not to damage the surrounding components.


△ NOTE:

Do not disassemble further if the component is removed for access only.

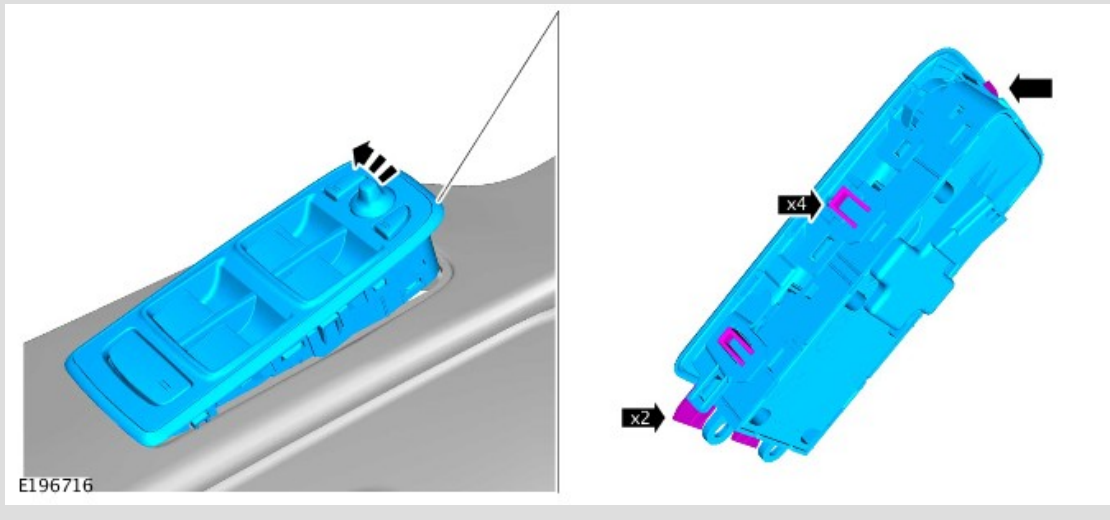


⚠ CAUTION:

Take extra care not to damage the surrounding components.

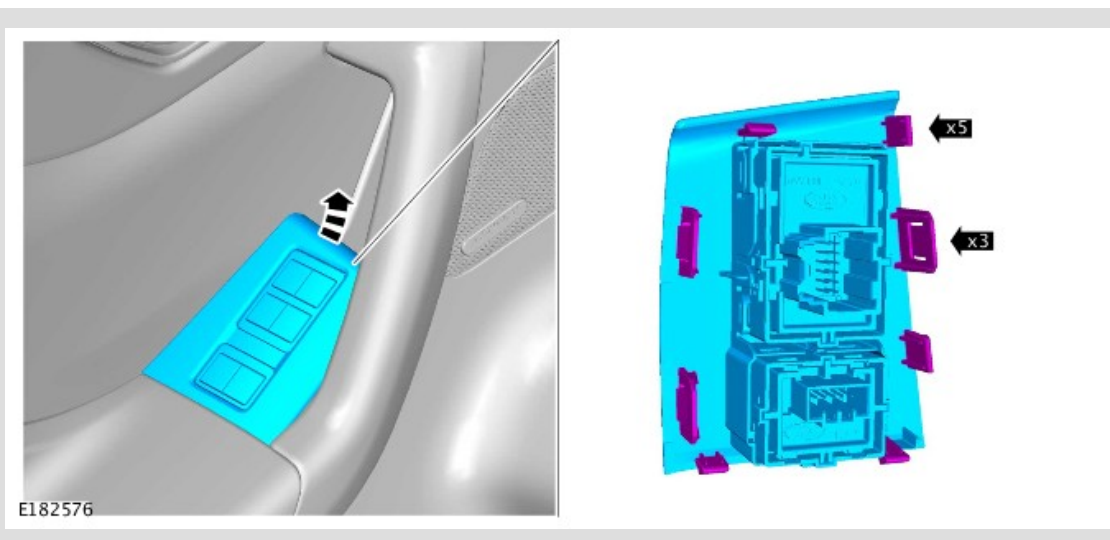

8.

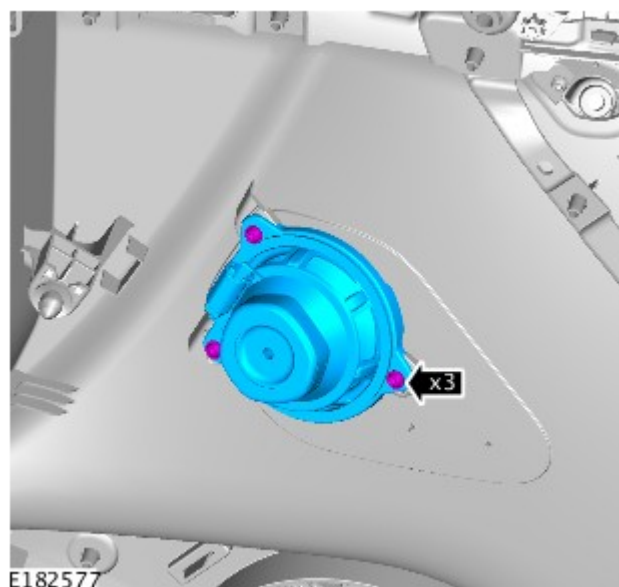




Torque: 2.5 Nm

9.

△ NOTE:


If equipped.

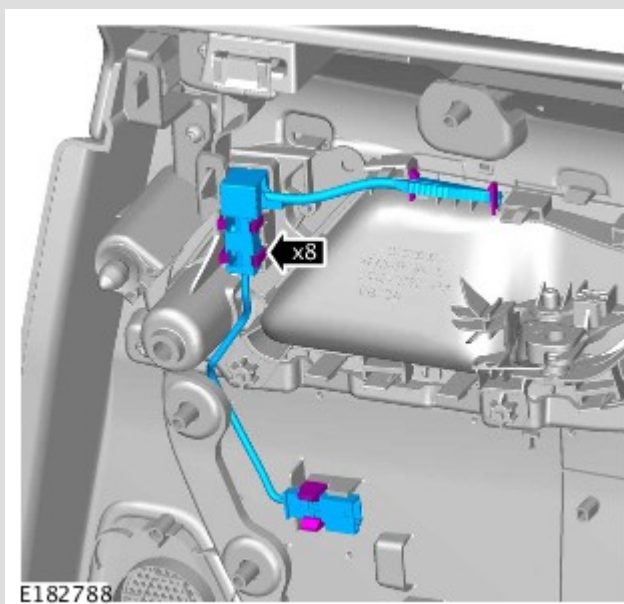

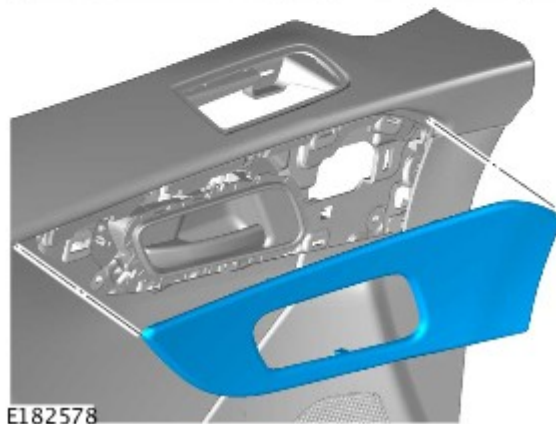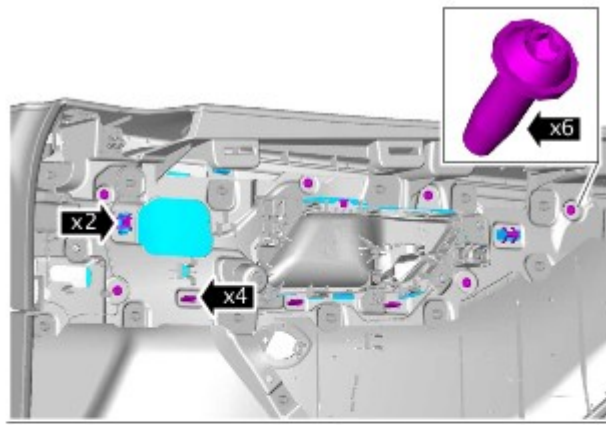


E182578

Torque: 1.1 Nm

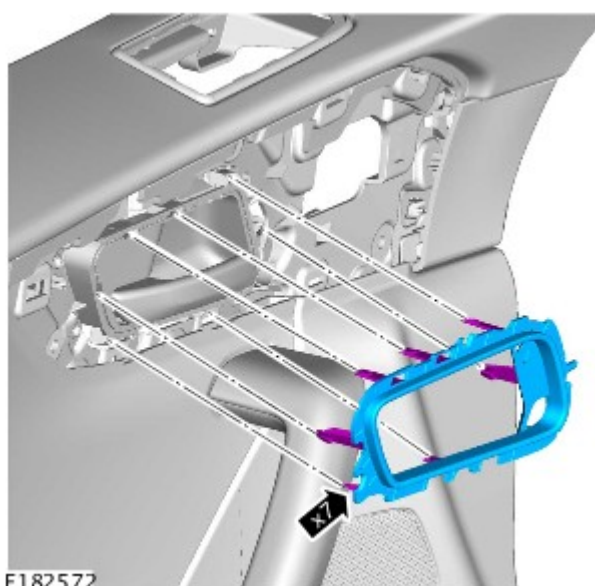

E182572

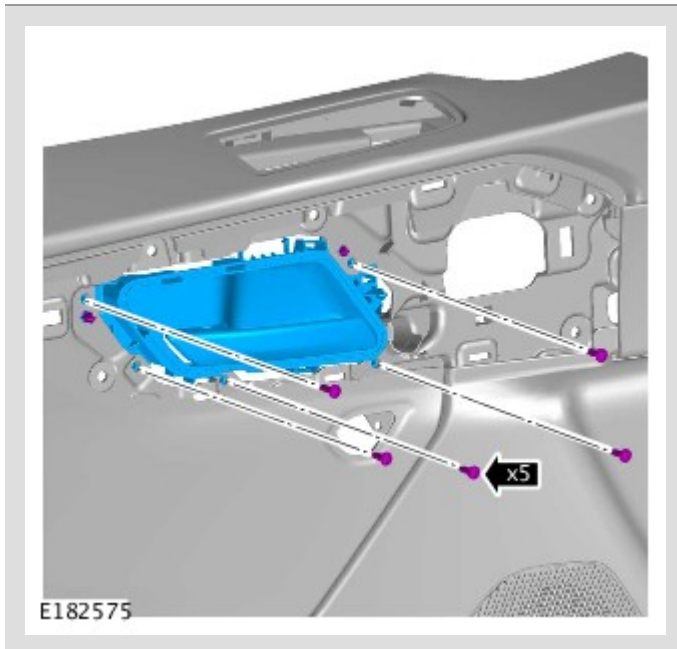

Torque: 6 Nm

INSTALLATION

1.

To install, reverse the removal procedure.

2.

Refer to: Door Window Motor Initialization (501-11 Glass, Frames and Mechanisms, General Procedures).