

BODY CLOSURES

REAR DOOR (G1913788)

REMOVAL AND INSTALLATION

76.28.02

REAR DOOR
- RENEW

ALL
DERIVATIVES

1.90

USED WITHINS

REMOVAL



CAUTION:

Make sure to protect the paintwork.



NOTES:

- If a new door is installed a weatherstrip must be installed.
- Removal steps in this procedure may contain installation details.

1.

Refer to: Supplementary Restraint System Health and Safety Precautions (100-00, Description and Operation).

2.

Refer to: Rear Door Speaker (415-01, Removal and Installation).

3.

Refer to: Rear Door Window Regulator and Motor (501-11, Removal and Installation).


4.

Refer to: Startup Battery Disconnect and Connect (414-01, General Procedures).

5.

Refer to: Rear Door Latch (501-14, Removal and Installation).

6.

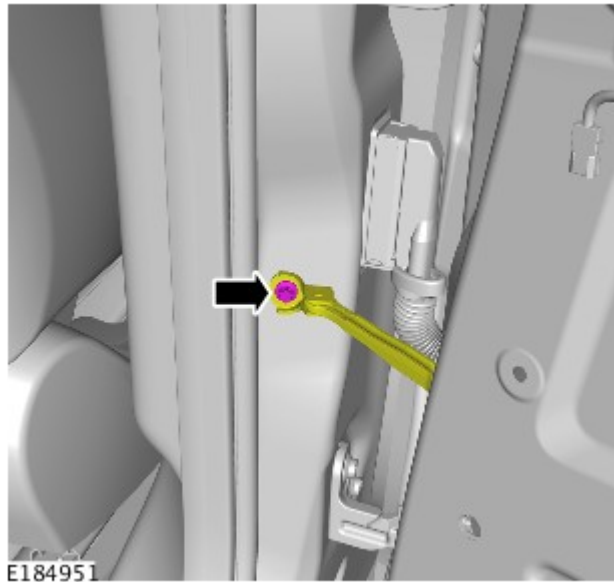


Torque: 24 Nm

7.



**WARNING:**


The component(s) may be heavy. Take extra care when handling.

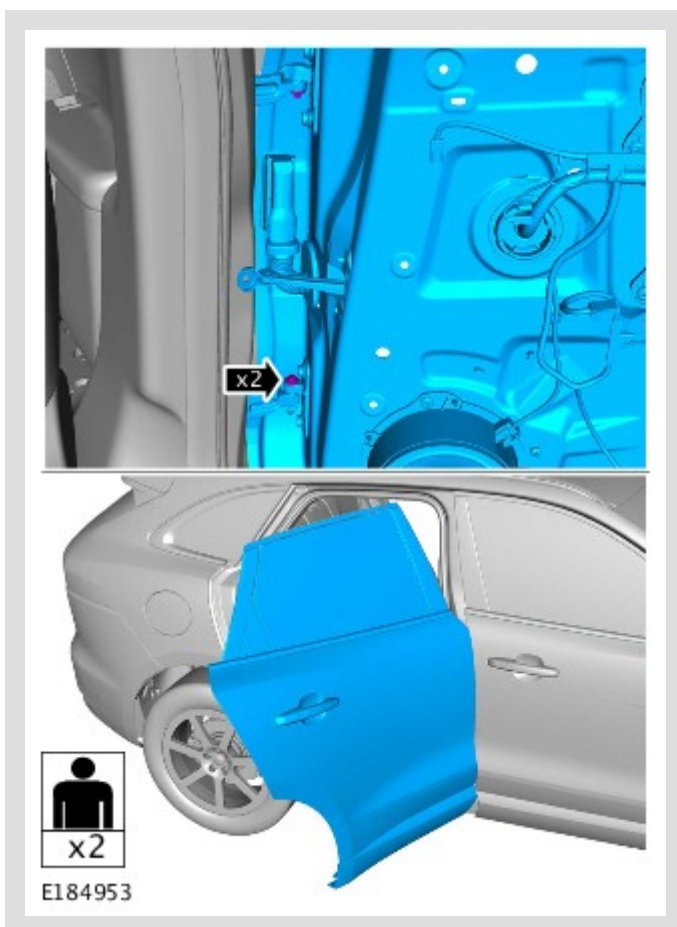

Torque: 13 Nm


 NOTE:

Do not disassemble further if the component is removed for access only.

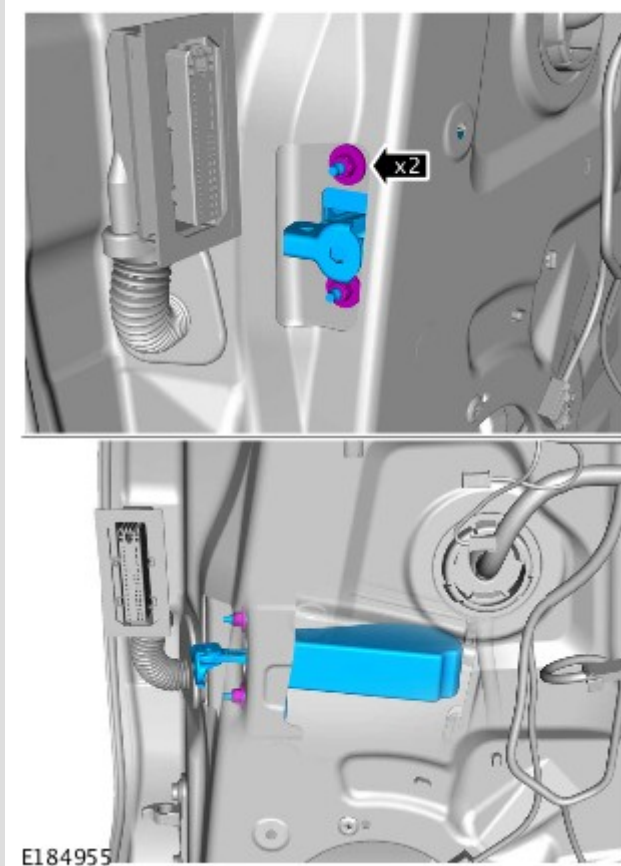


Torque: 10 Nm



11.

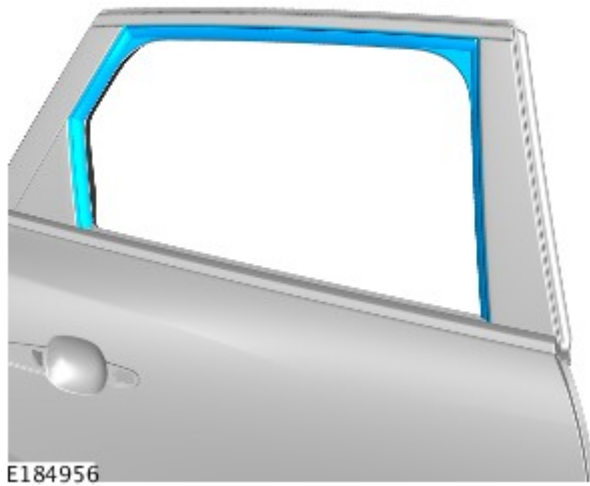

12.

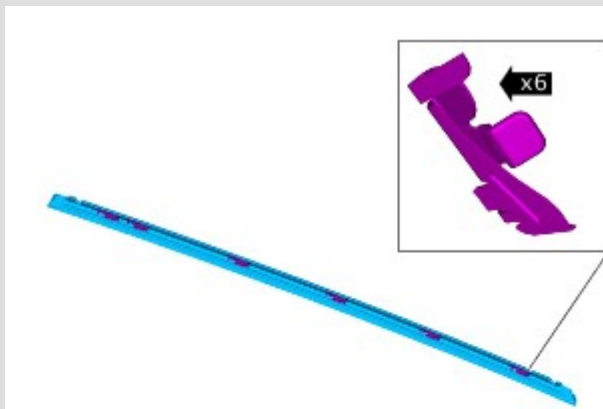


13.

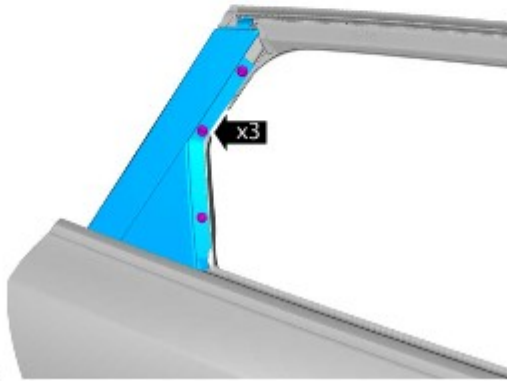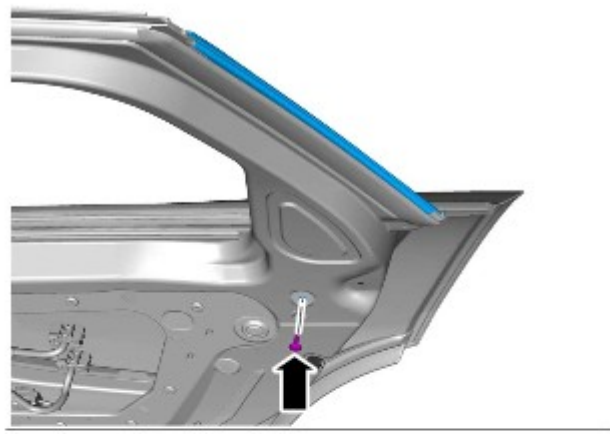

E184958

Torque: 1.5 Nm


14.

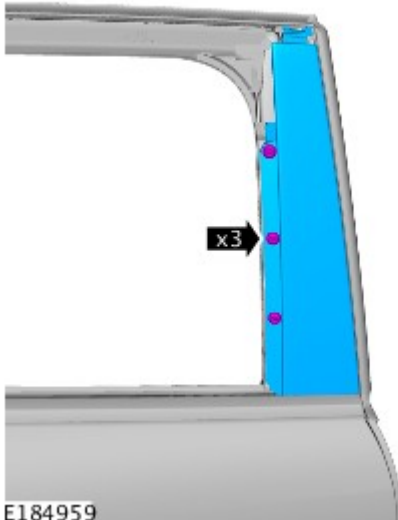


E184959


Torque: 1.5 Nm

15.

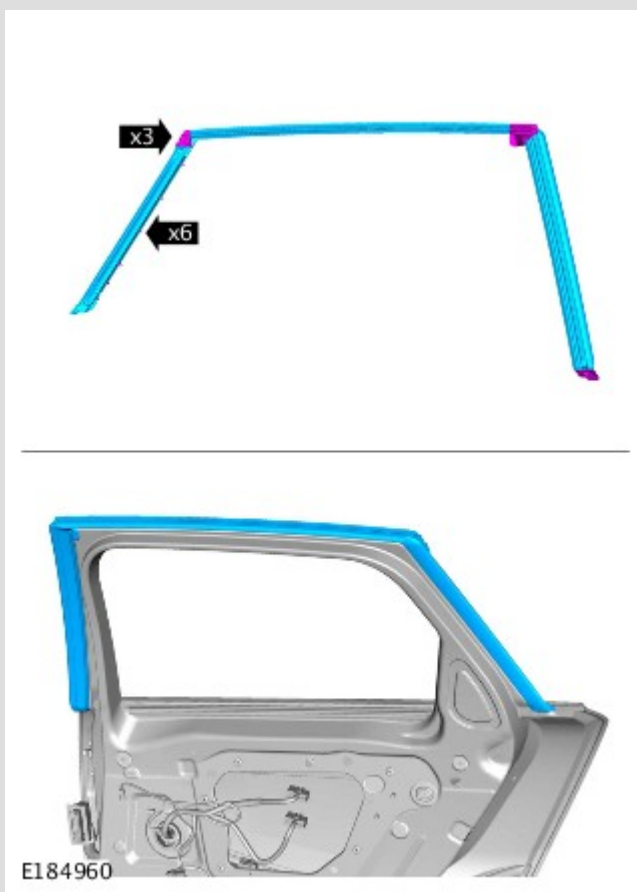

16.

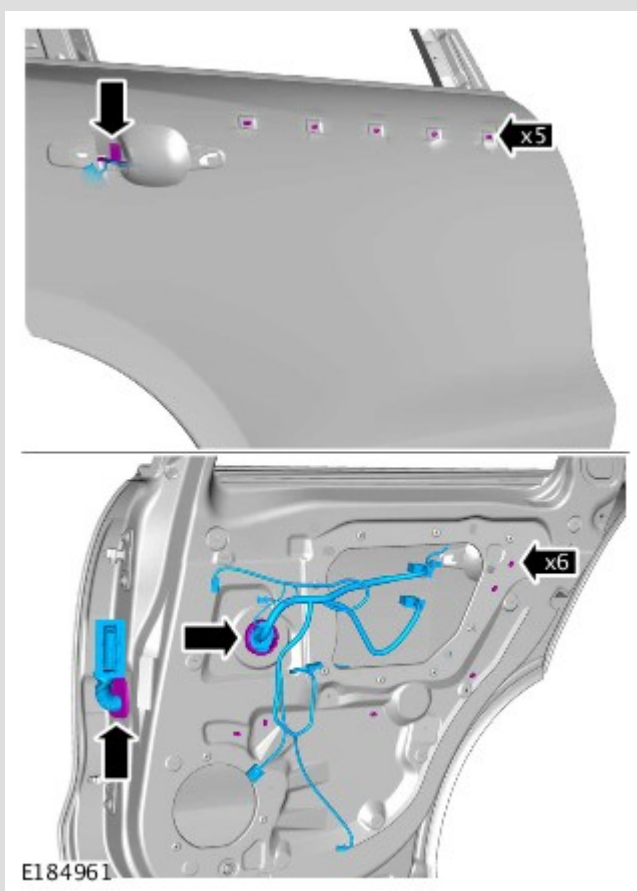

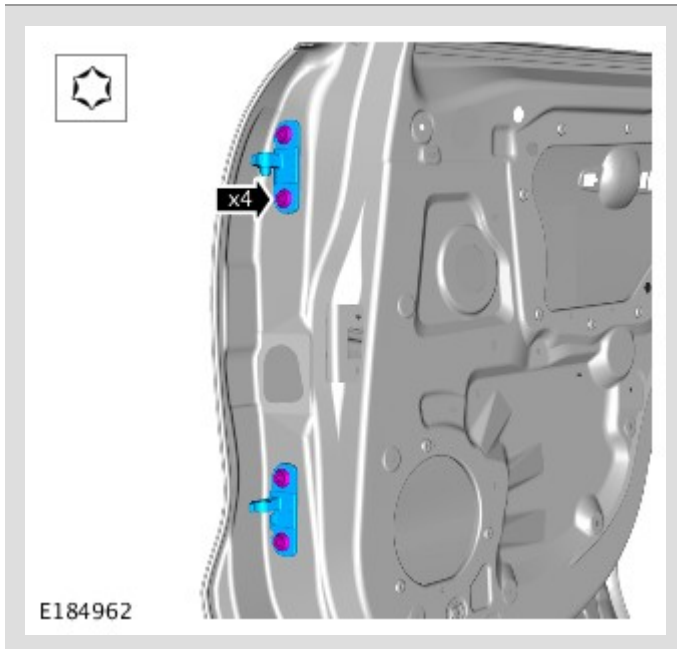

Torque: **35 Nm**

INSTALLATION

1.

To install, reverse the removal procedure.

2.

Check the gap and profiles of the door are correct.
Refer to: Body and Frame (501-26, Description and Operation).