

EXTERIOR LIGHTING

REAR LAMP ASSEMBLY (G1904230)

REMOVAL AND INSTALLATION

86.40.70	TAIL, STOP AND FLASHER LAMP ASSEMBLY - LEFT HAND - RENEW	ALL DERIVATIVES	1.20	USED WITHINS	
----------	--	--------------------	------	--------------	--


REMOVAL

NOTES:

- Removal steps in this procedure may contain installation details.
- Left illustration shown, right is similar.

1.

Refer to: Loadspace Trim Panel LH (501-05, Removal and Installation).

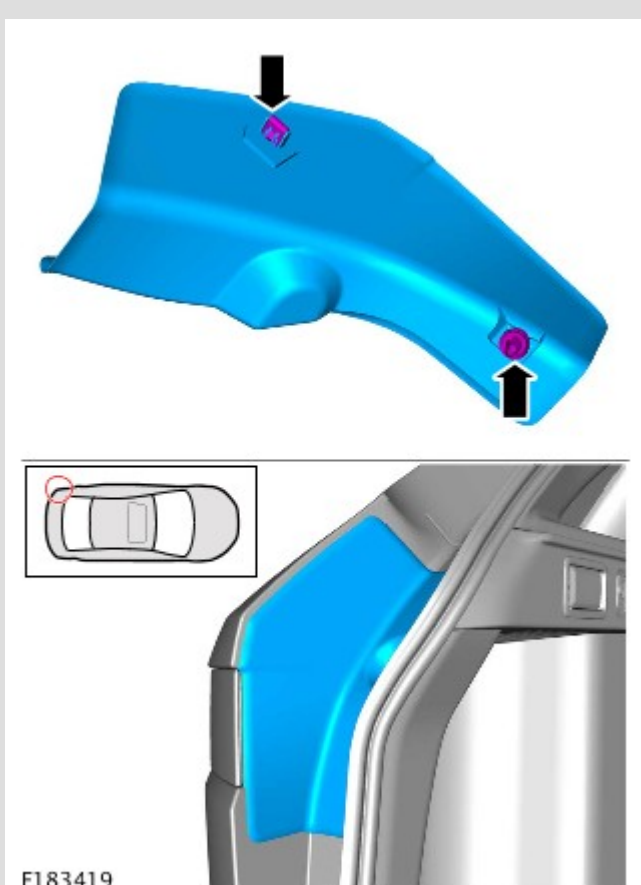


⚠ CAUTION:


Take extra care not to damage the edges of the component.

⚠ NOTE:

Do not remove the component at this stage.

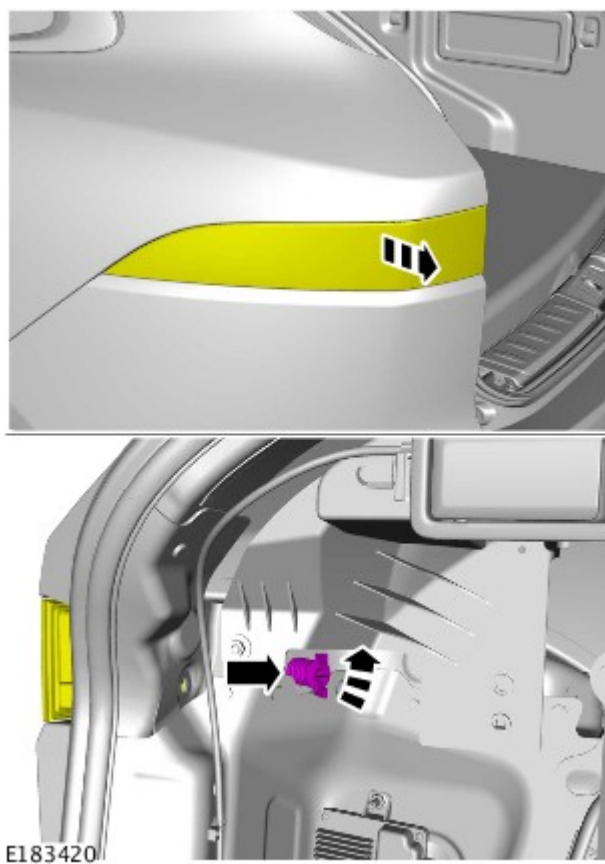

Torque: 2.5 Nm

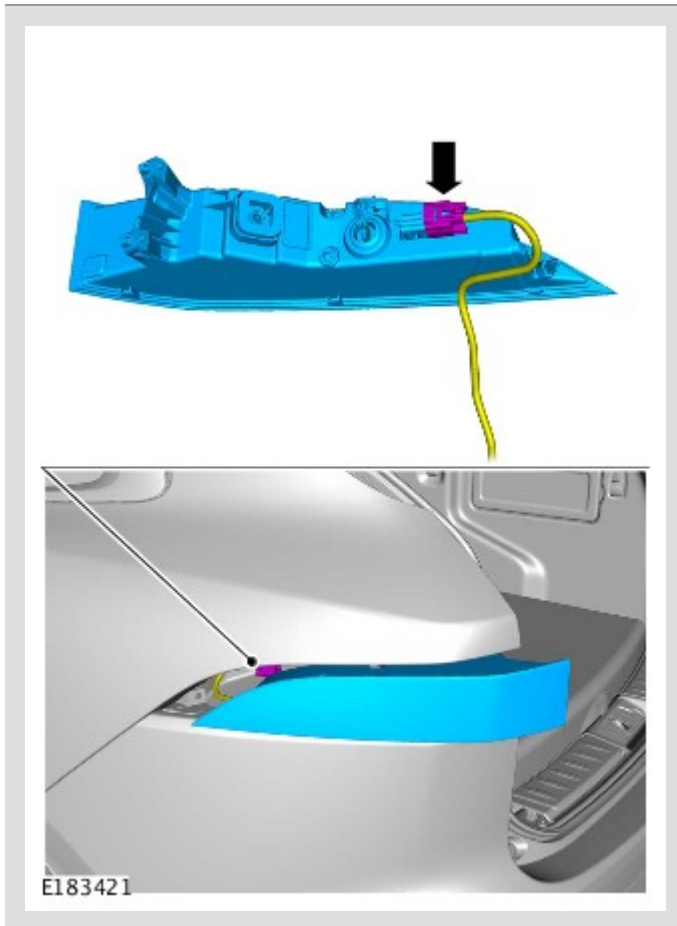

INSTALLATION

1.

To install, reverse the removal procedure.