

SEATING

REAR SEAT BACKREST COVER (G2172854)

REMOVAL AND INSTALLATION

76.70.45	REAR SEAT BACKREST - LEFT HAND - RENEW	ALL DERIVATIVES	1.10	USED WITHINS	
----------	---	--------------------	------	--------------	--

REMOVAL



NOTE:

Removal steps in this procedure may contain installation details.

1.




NOTE:

This procedure must be carried out on both sides.

Refer to: C-Pillar Trim Panel (501-05, Removal and Installation).

 NOTE:



Do not remove the component at this stage.

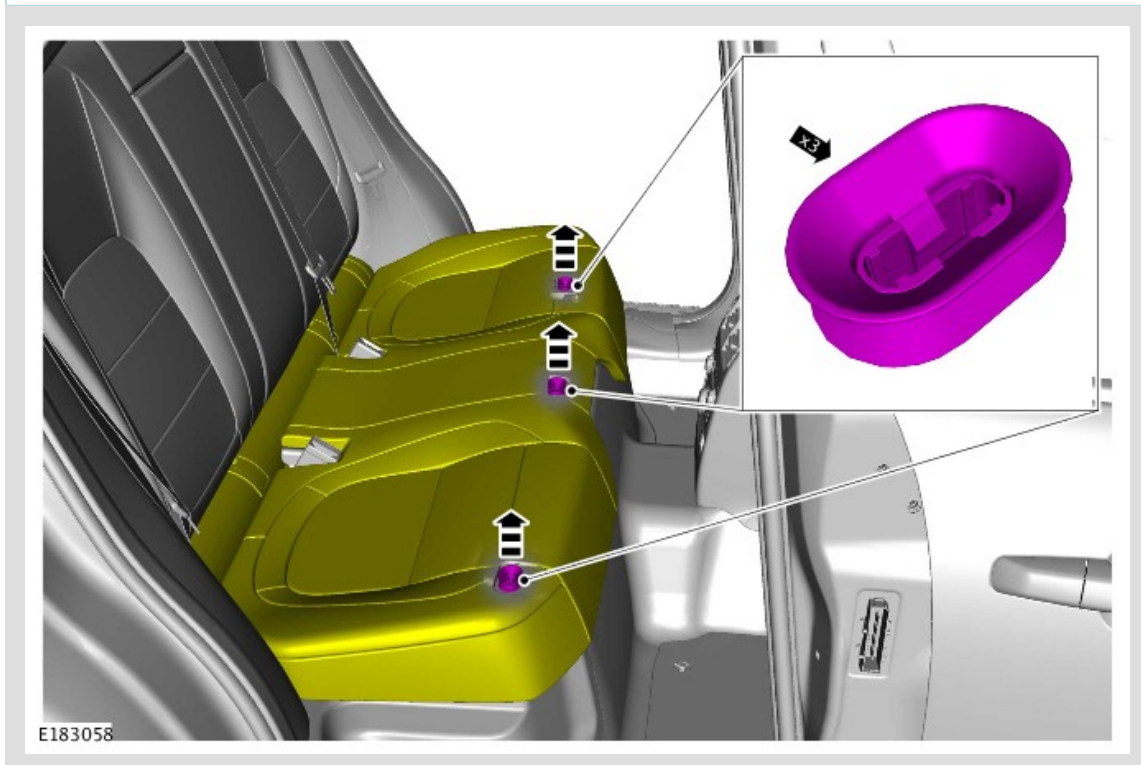


Remove and discard the rear seat cushion retaining clips. Make sure new clips are fitted.

ⓘ CAUTION:


Take extra care not to damage the wiring harness clips.

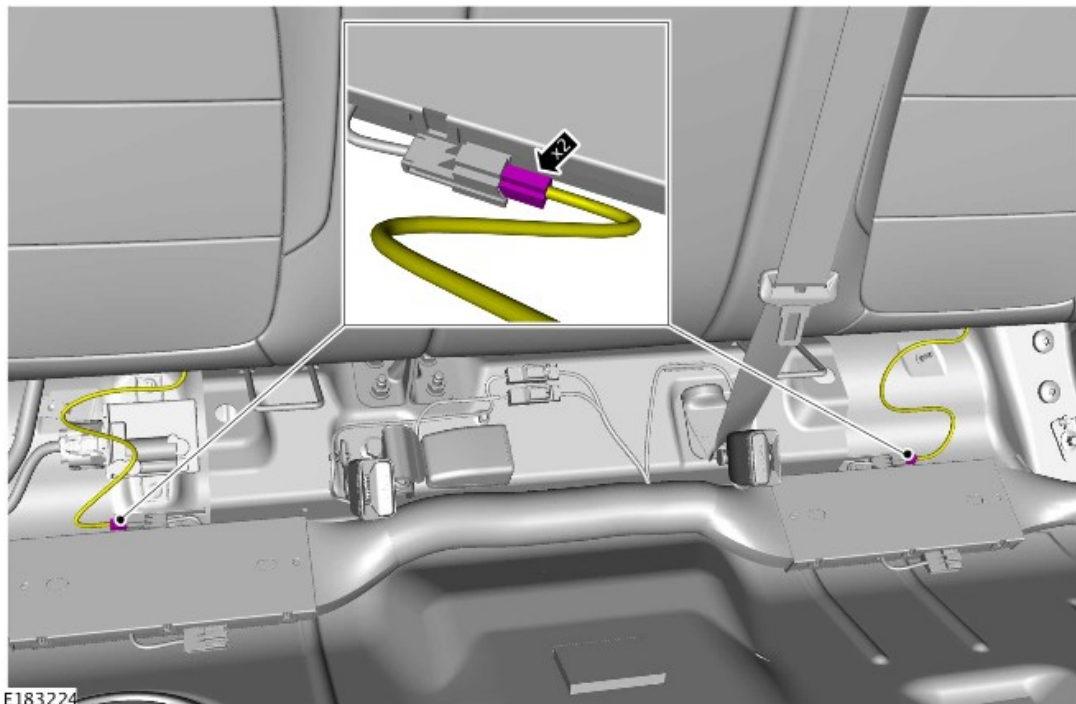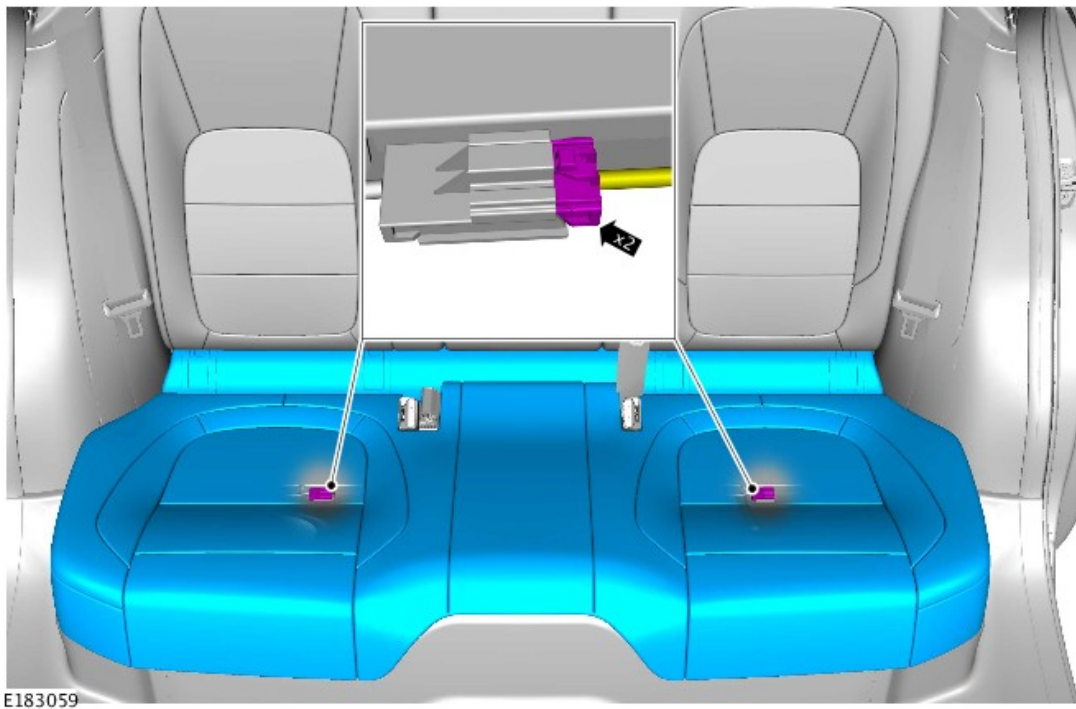

5.

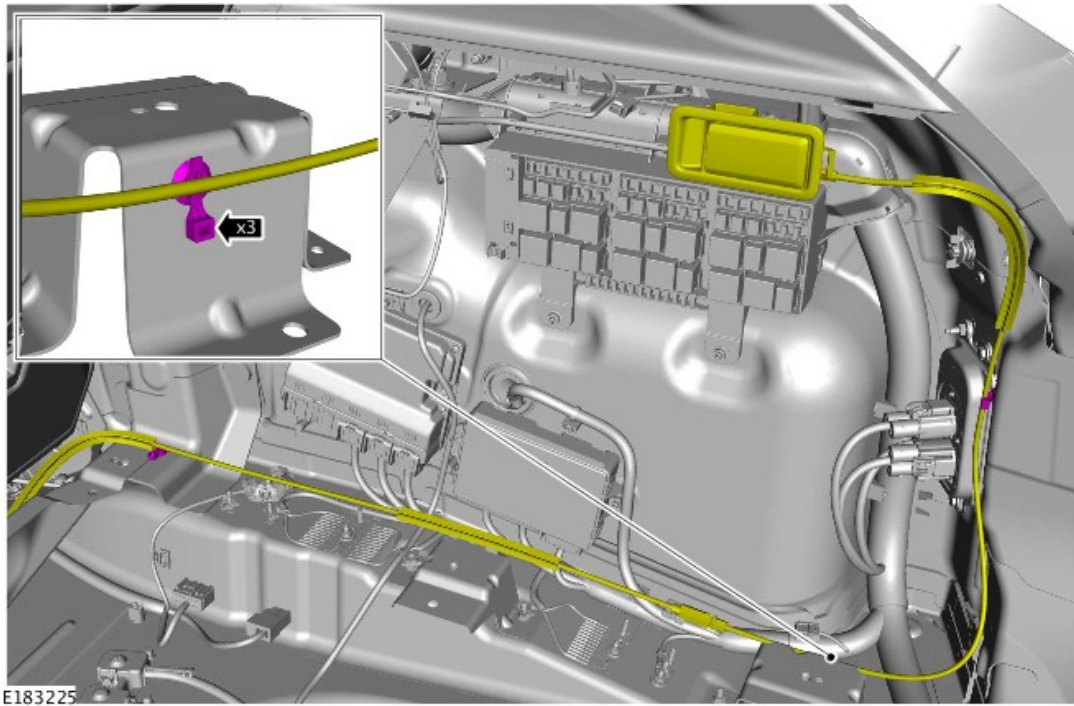


6.

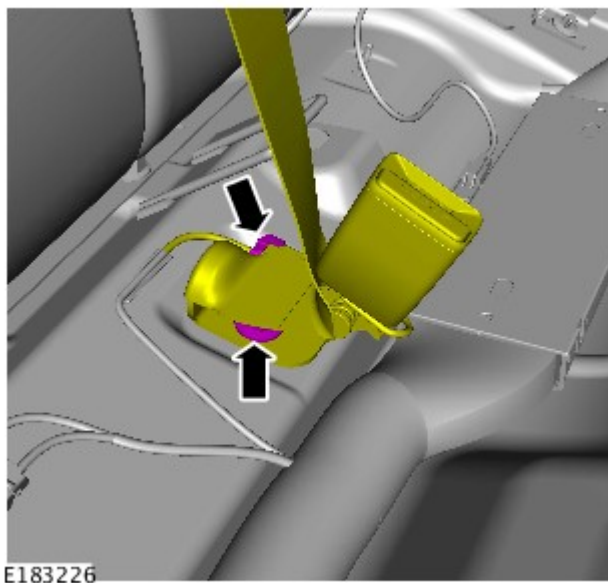

Torque: 48 Nm

7.

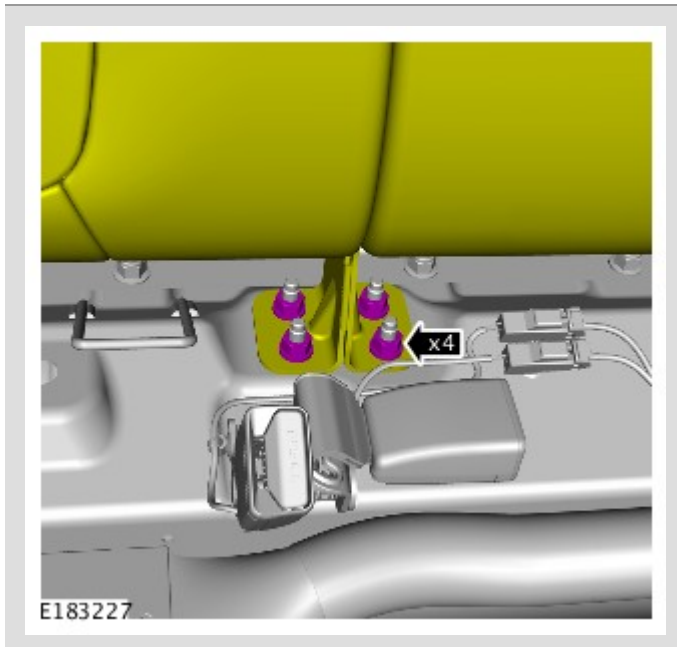


Torque: 40 Nm

8.

⚠ CAUTION:


Protect the surrounding paintwork to avoid damage.

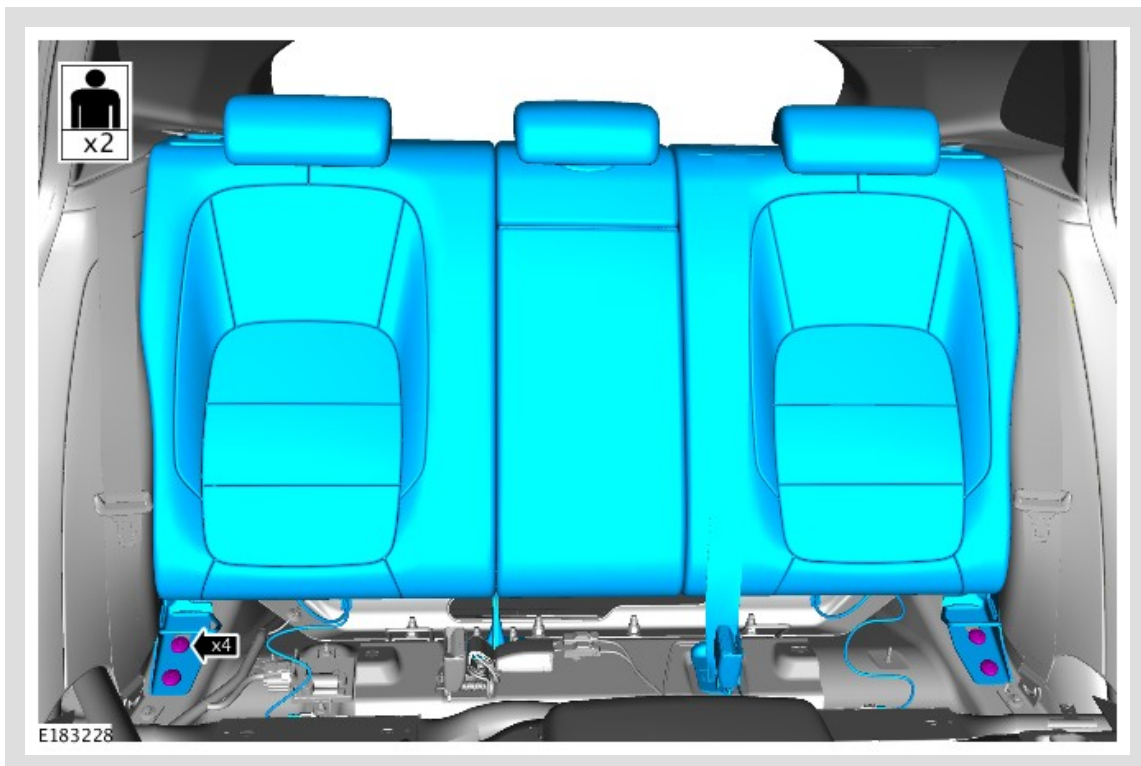

Torque: 40 Nm


 NOTES:

- Do not disassemble further if the component is removed for access only.
- Raise the head restraint to its highest point.


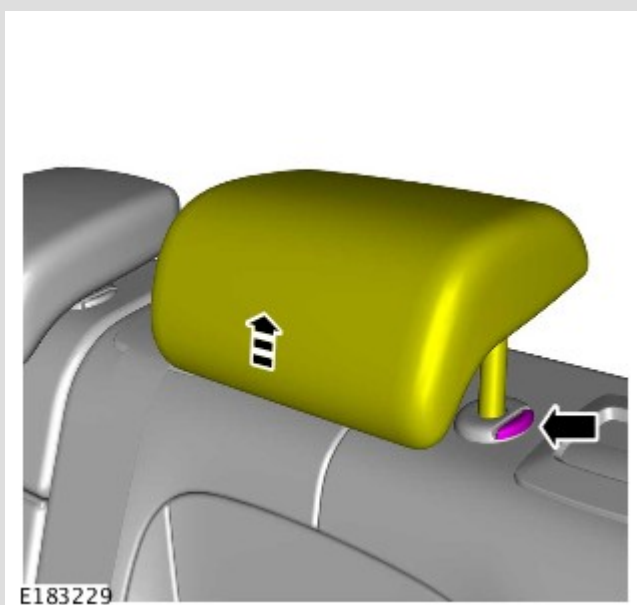


⚠ CAUTION:



A suitable tool must be used during this step to avoid damage to the head restraint retaining clip.

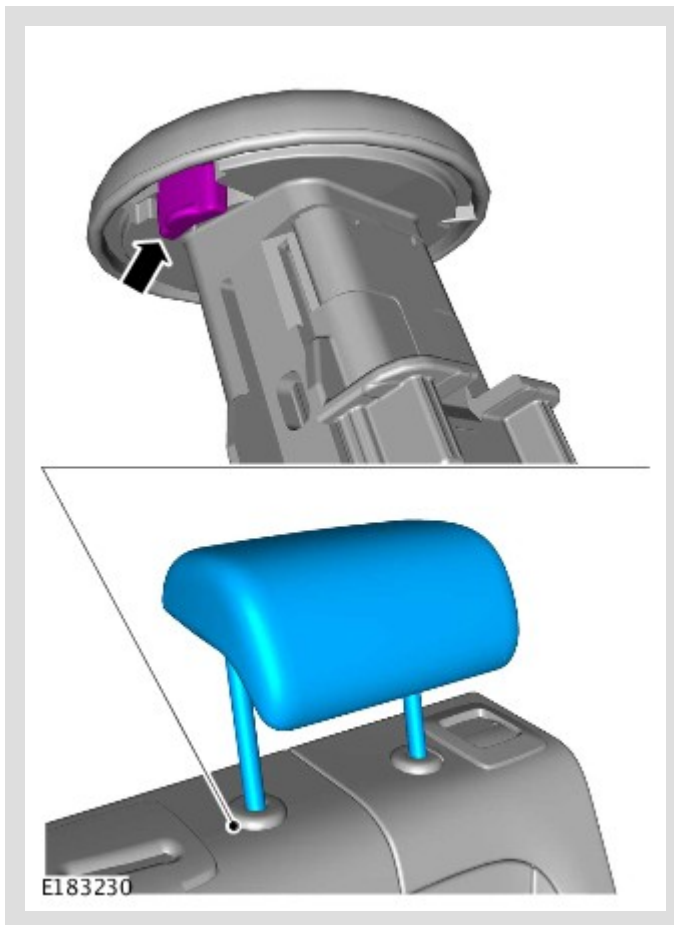


11.

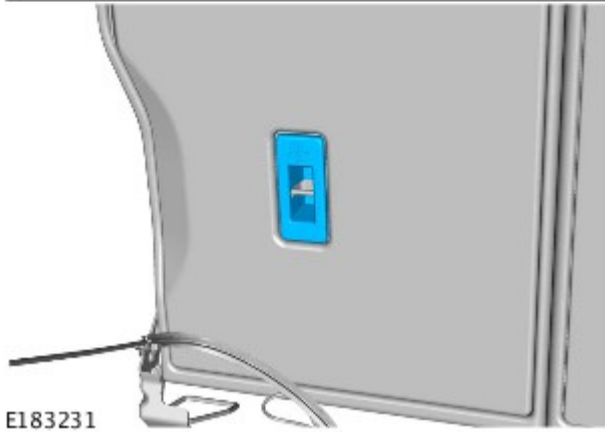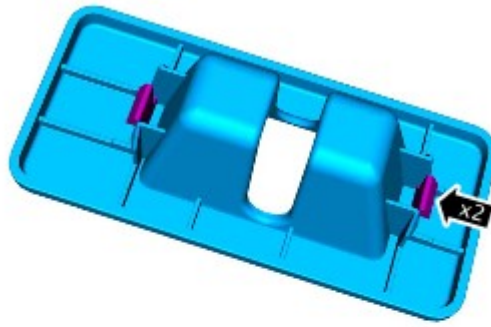


12.

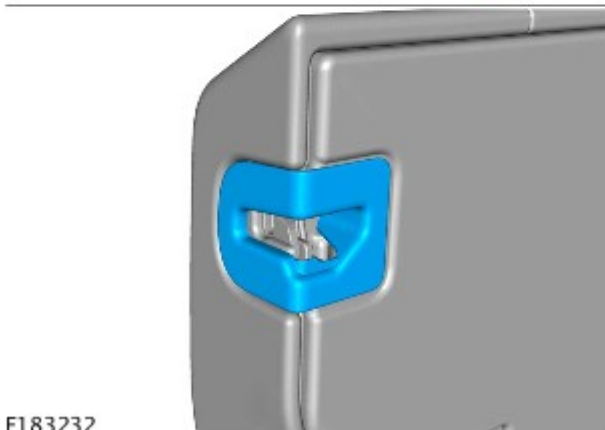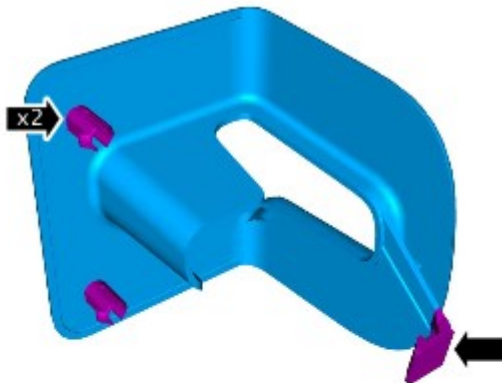



13.


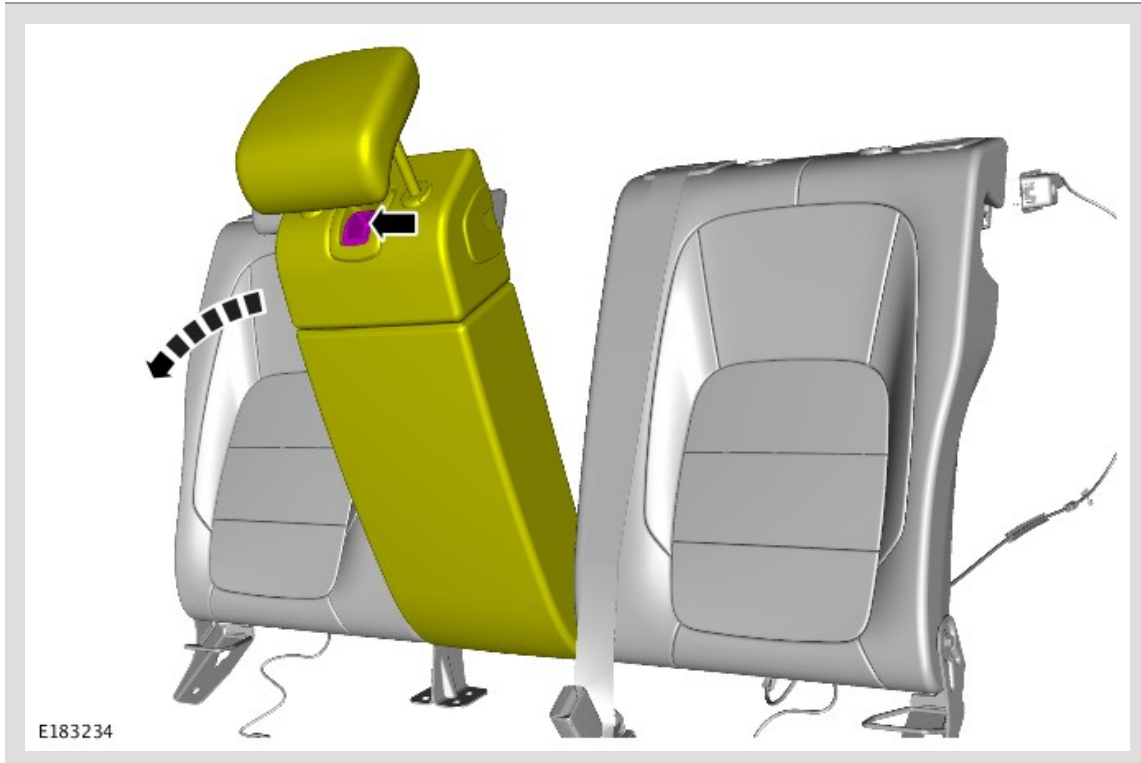



14.

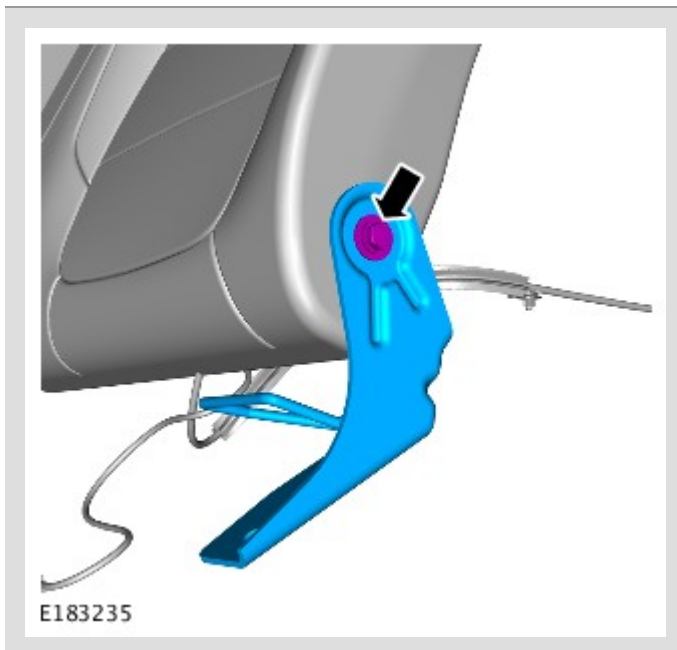

Torque: 40 Nm

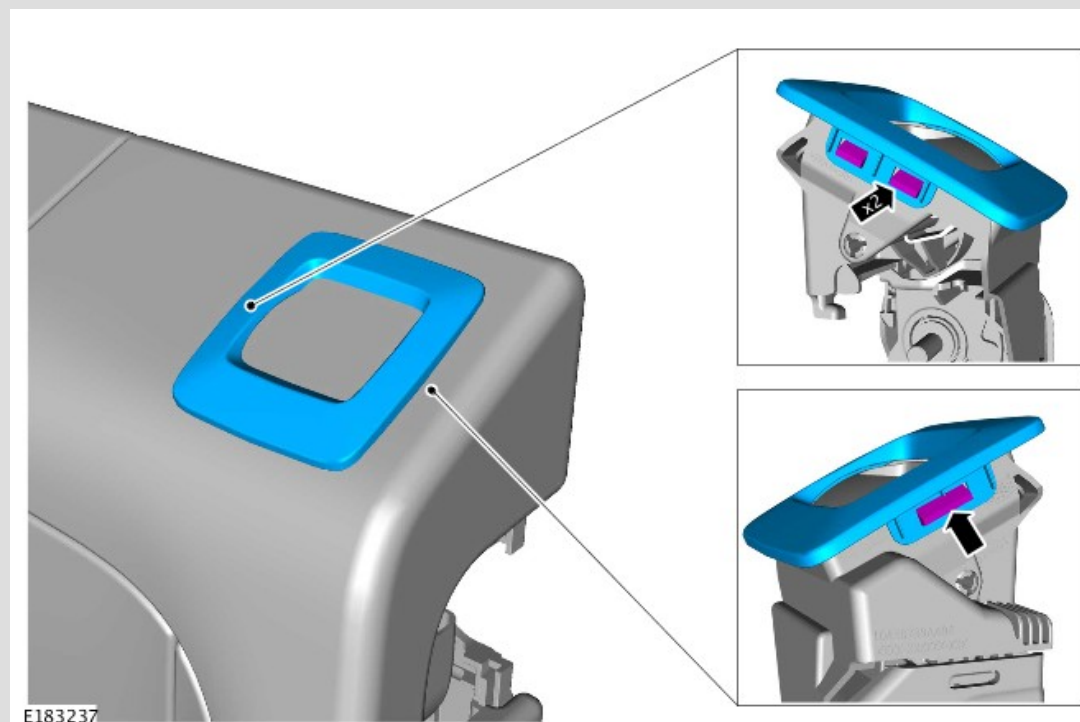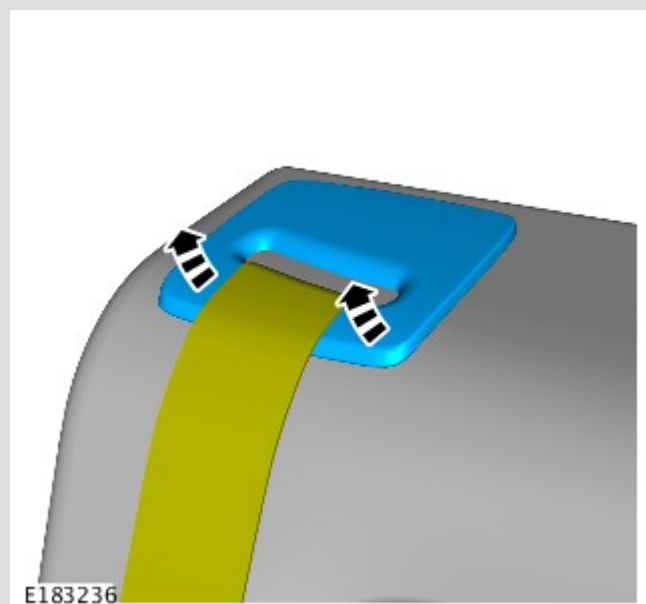

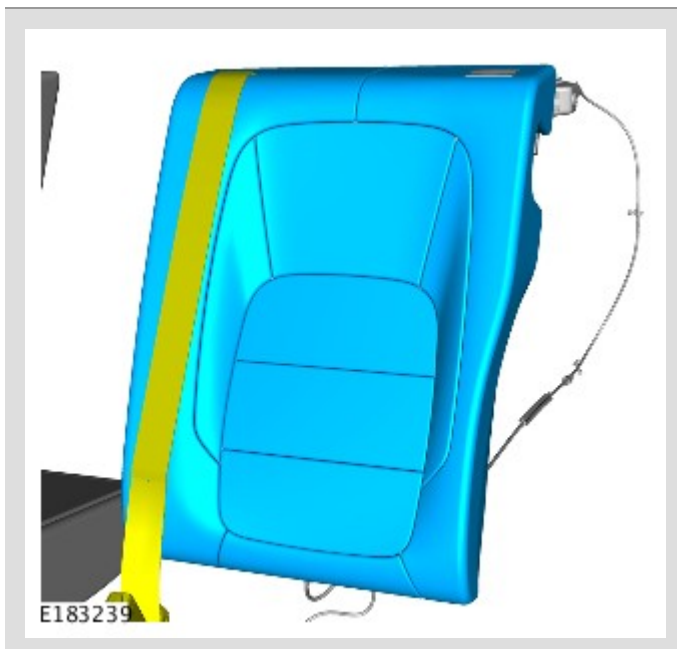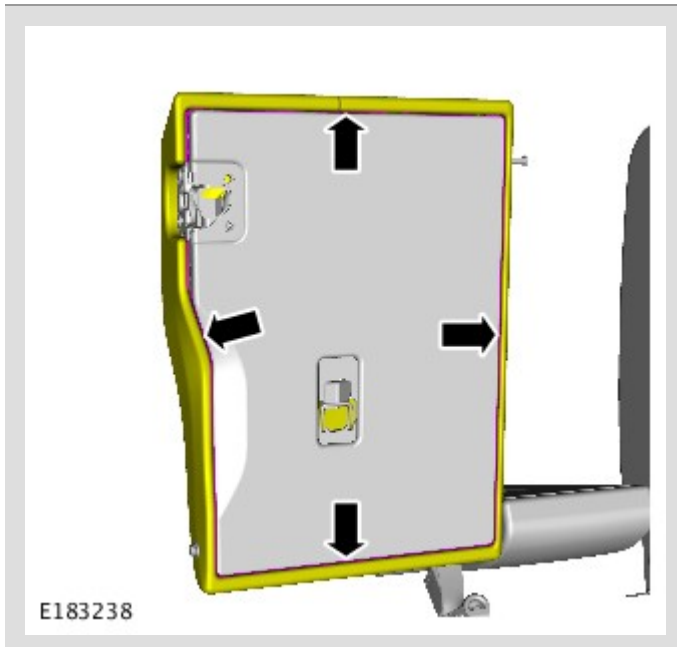

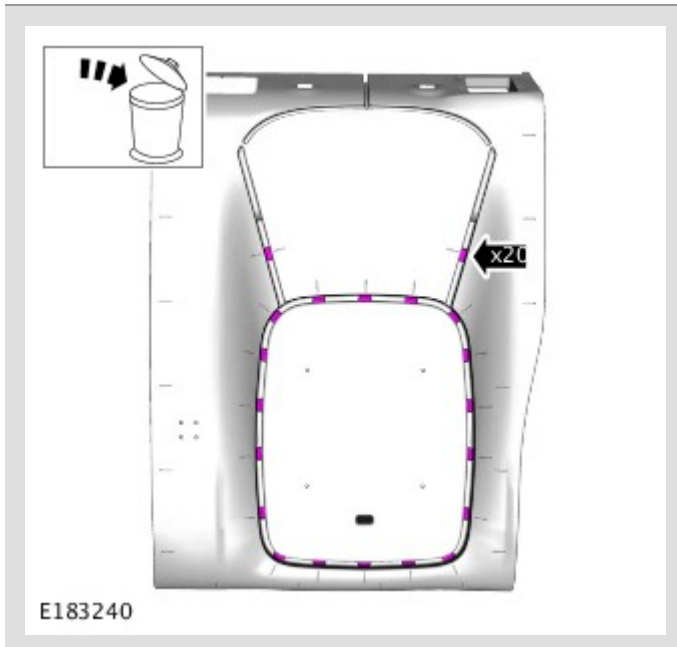


INSTALLATION

1.


NOTES:

- Make sure that new hog rings are installed.
- Use hog ring pliers to close the hog rings. Do not use any other tool. The hog rings must be closed to overlap as illustrated.

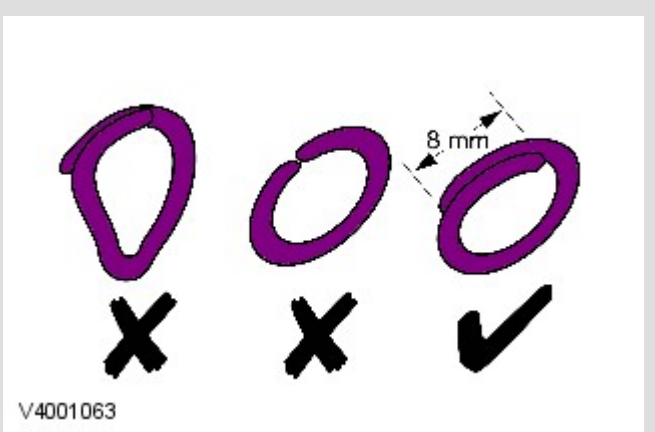

⚠ CAUTION:

Make sure that new hog rings are installed in the sequence shown.

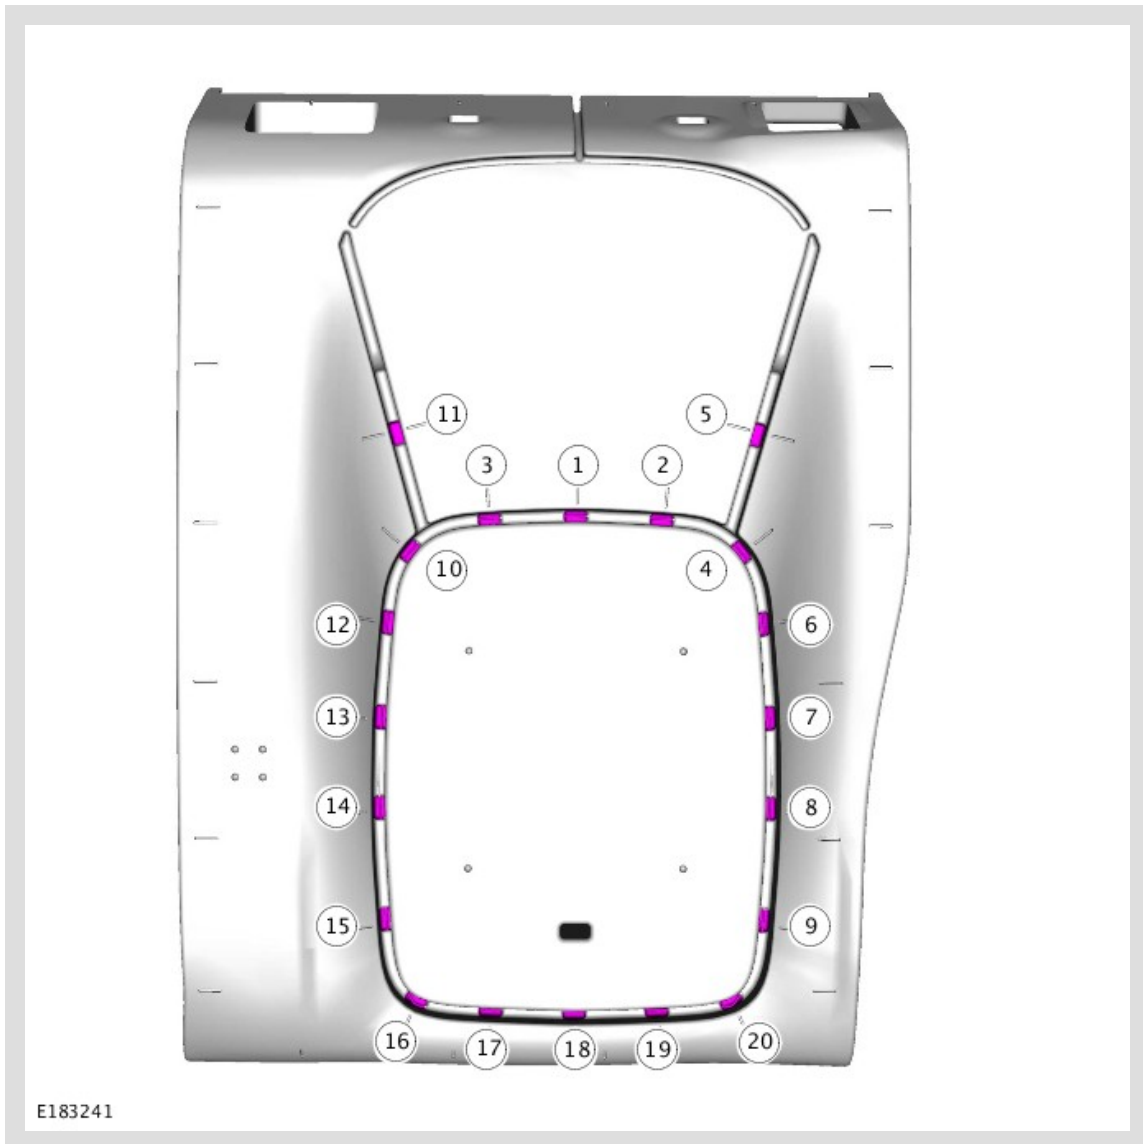

To install, reverse the removal procedure.