

EXTERIOR TRIM AND ORNAMENTATION

REAR SPOILER (G1913792)

REMOVAL AND INSTALLATION

18.30.97	CYLINDER HEAD TEMPERATURE SENSOR - RENEW	2000 CC, INGENIUM DIESEL	0.20	USED WITHINS	
76.19.86	TAILGATE SPOILER - RENEW	ALL DERIVATIVES	0.40	USED WITHINS	

REMOVAL





NOTE:

Removal steps in this procedure may contain installation details.


1.

 NOTE:

Repeat the step for the other side.

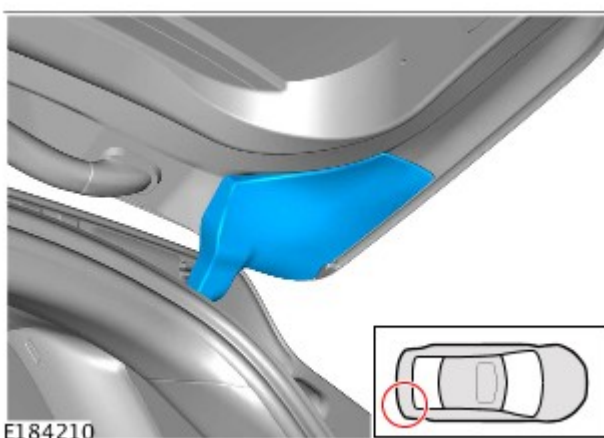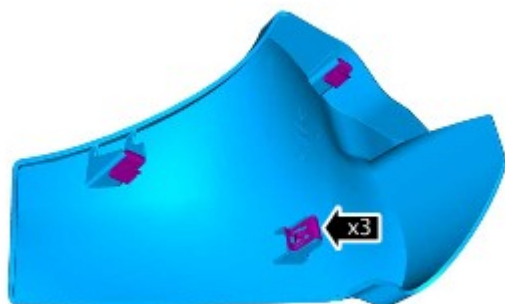

2.

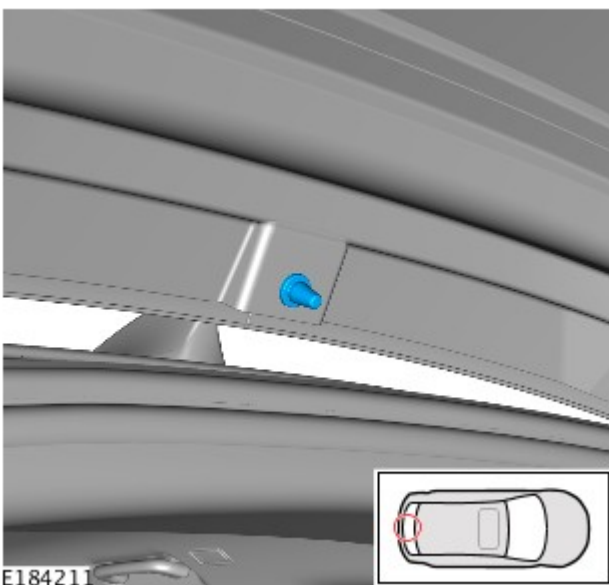


⚠ CAUTION:

Note the fitted position of the component prior to removal.

⚠ NOTE:

Do not remove the component at this stage.

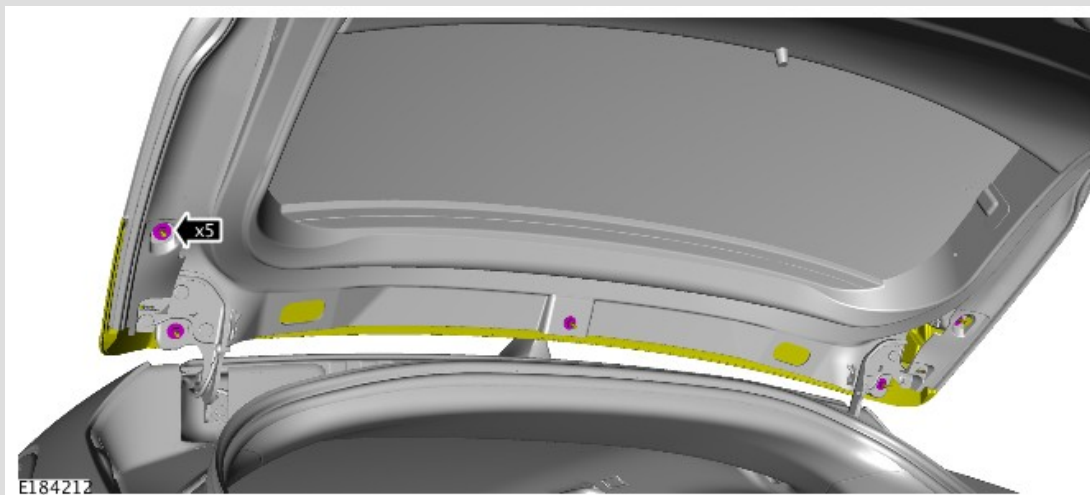



Torque: 7 Nm


⚠ CAUTIONS:

- Be prepared to collect escaping fluids.
- Protect the surrounding paintwork to avoid damage.

⚠ NOTE:

Do not disassemble further if the component is removed for access only.

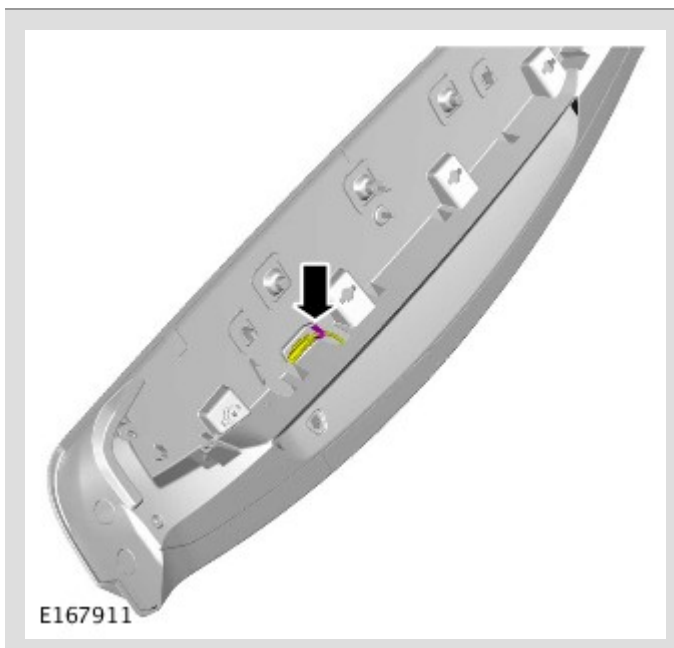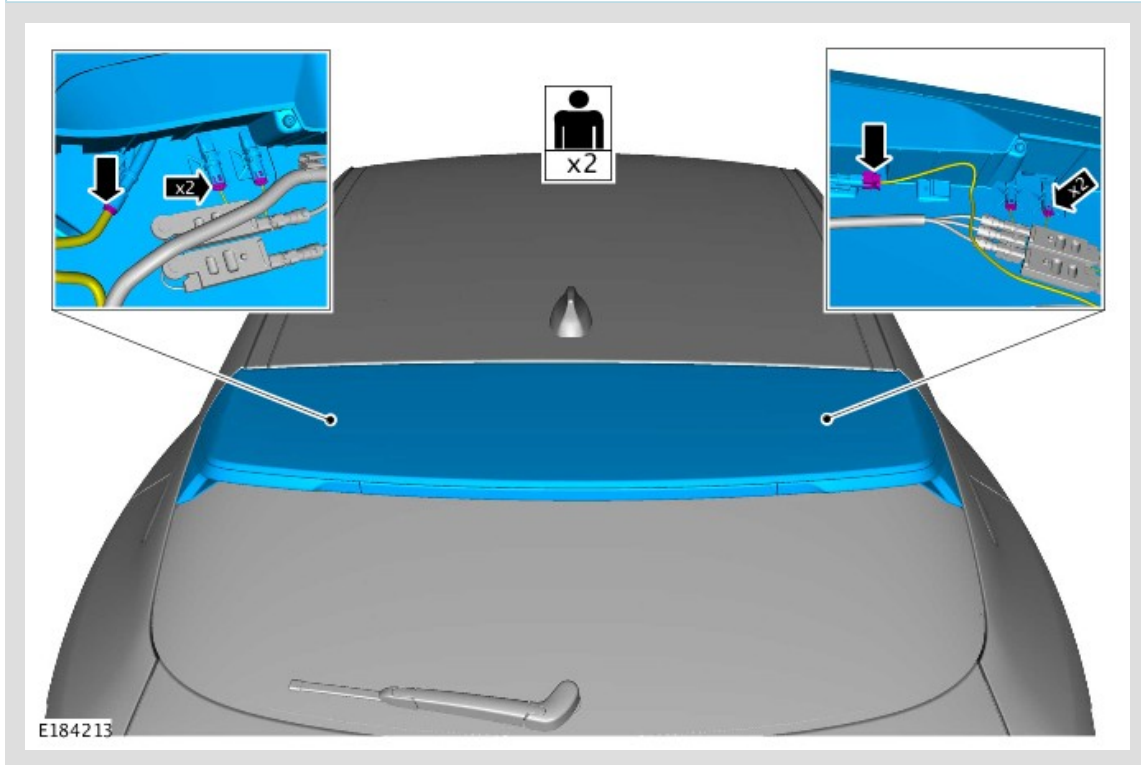

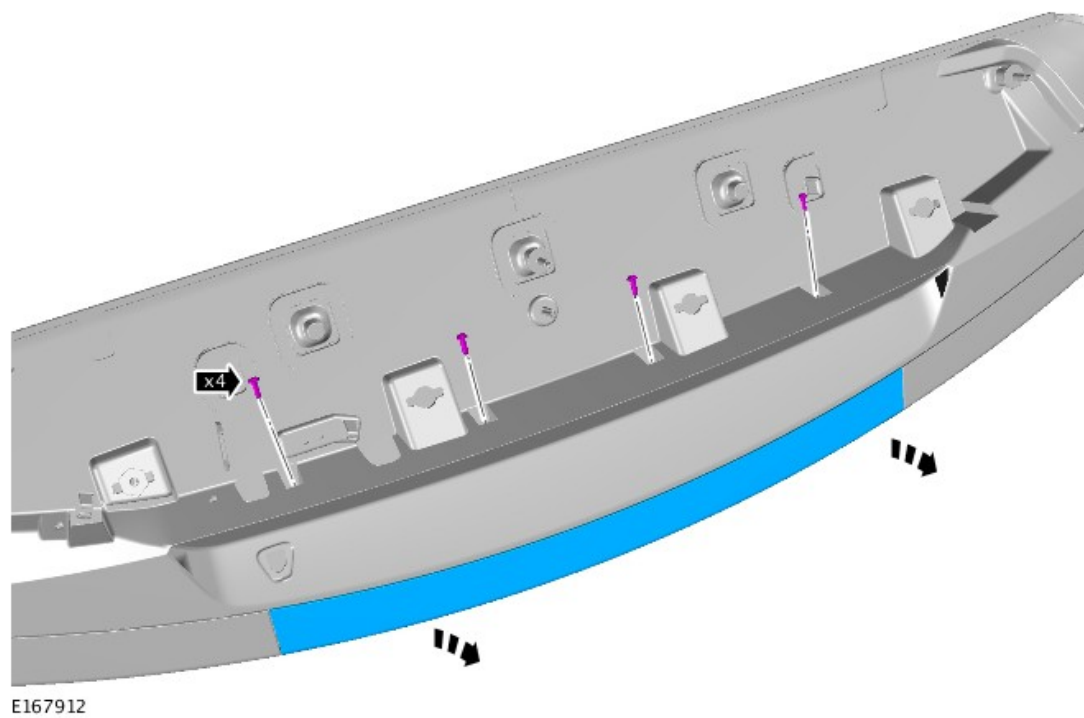


Torque: 2 Nm

INSTALLATION

1.

⚠ CAUTION:

Make sure that the gap is even between the rear spoiler and the rear quarter panel moulding and the rear spoiler is flush with the roof panel (use a suitable plastic straight edge).

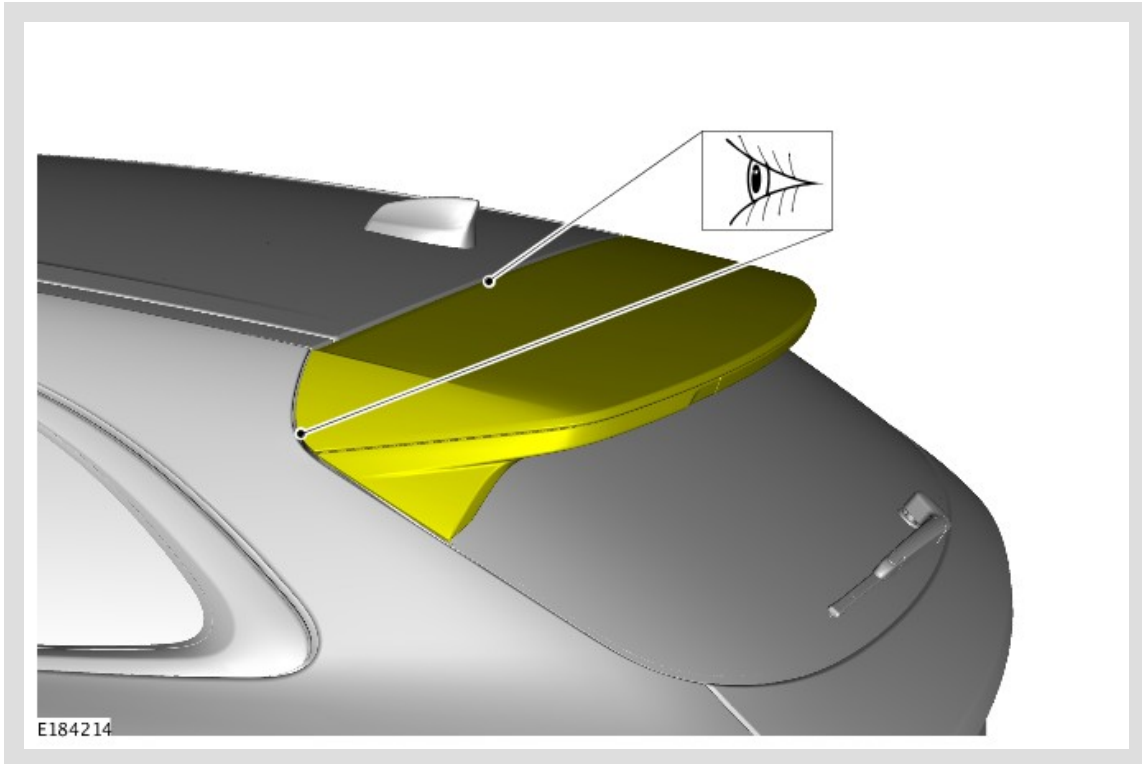

2.

To install, reverse the removal procedure.