



INFORMATION AND ENTERTAINMENT SYSTEM - VEHICLES WITH: INCONTROL TOUCH PRO

DESCRIPTION AND OPERATION

COMPONENT LOCATION - SPEAKERS - INCONTROL TOUCH - 6 SPEAKER SYSTEM

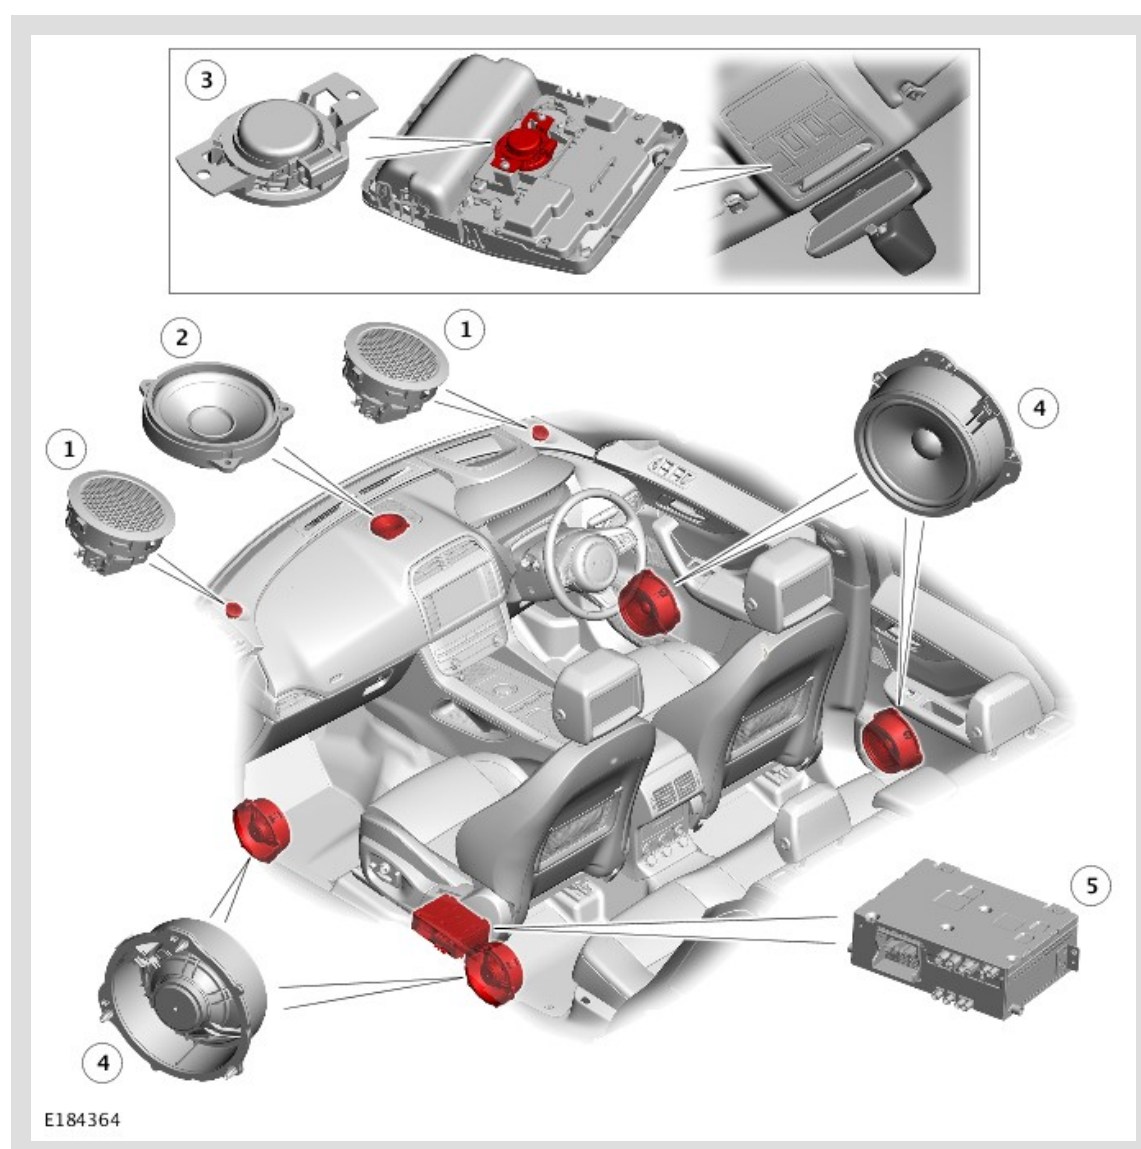


ITEM	DESCRIPTION
1	Front tweeter speaker (2 off)
2	Telematics speaker (Russia markets only)
3	Telematics speaker (All markets except Russia)
4	Bass speaker (4 off)
5	Audio Head Unit (AHU)

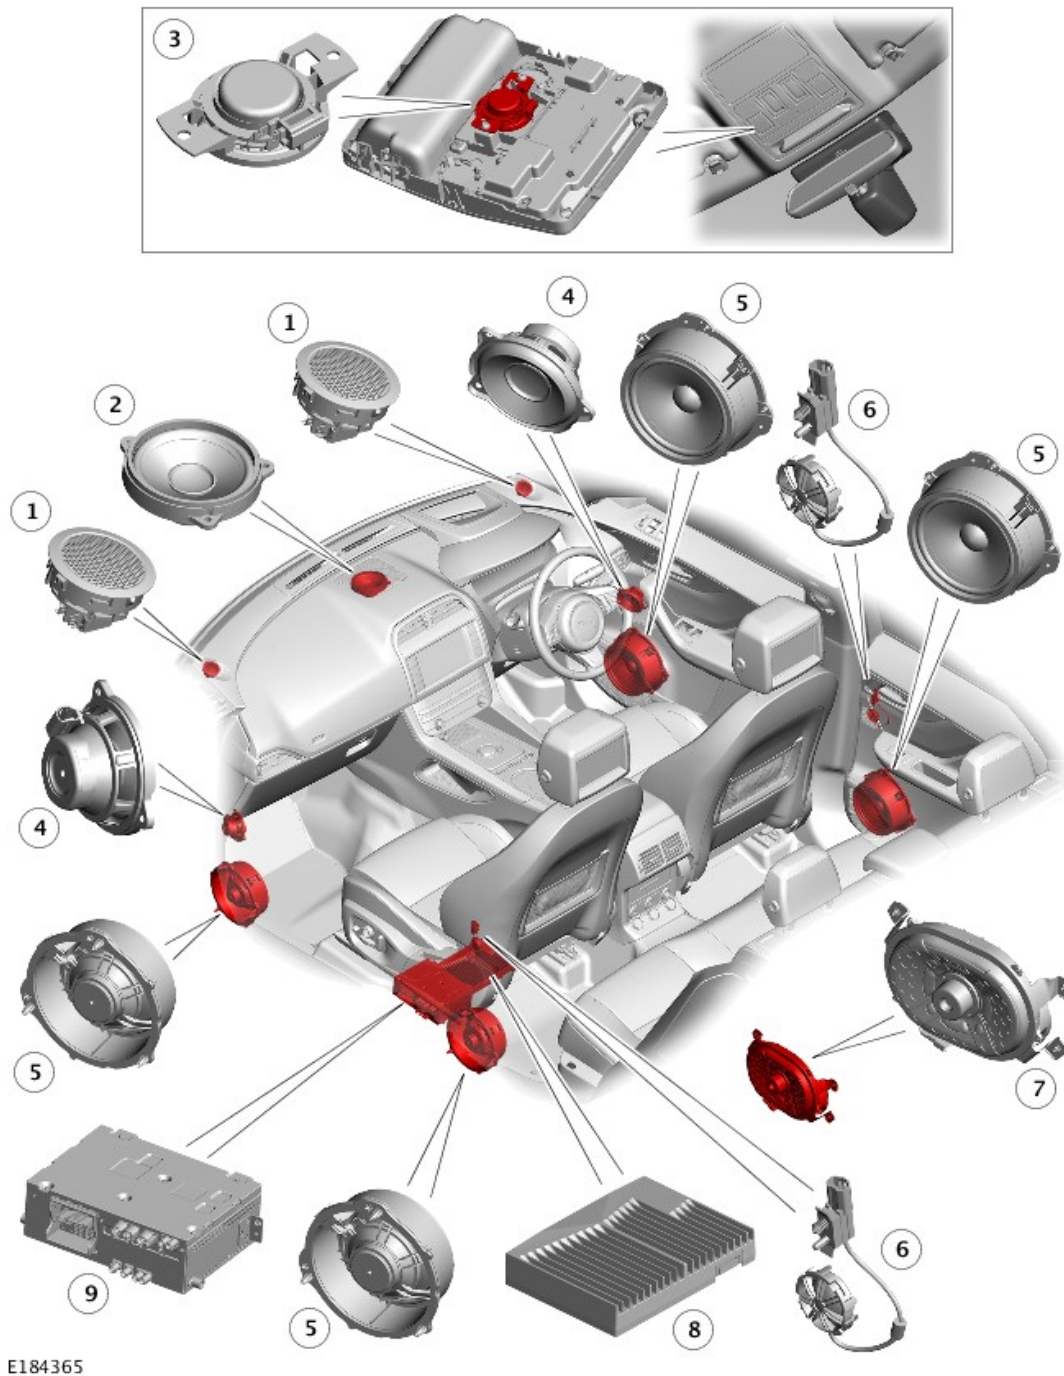

E184365

ITEM	DESCRIPTION
1	Front tweeter speaker (2 off)
2	Telematics speaker (Russia markets only)
3	Telematics speaker (All markets except Russia)
4	Front mid-range speaker (2 off)
5	Bass speaker (4 off)
6	Rear tweeter speaker (2 off)
7	Sub-woofer speaker
8	Audio Amplifier Module (AAM)

COMPONENT LOCATION - SPEAKERS - INCONTROL TOUCH PRO MERIDIAN® - 11 SPEAKER SYSTEM

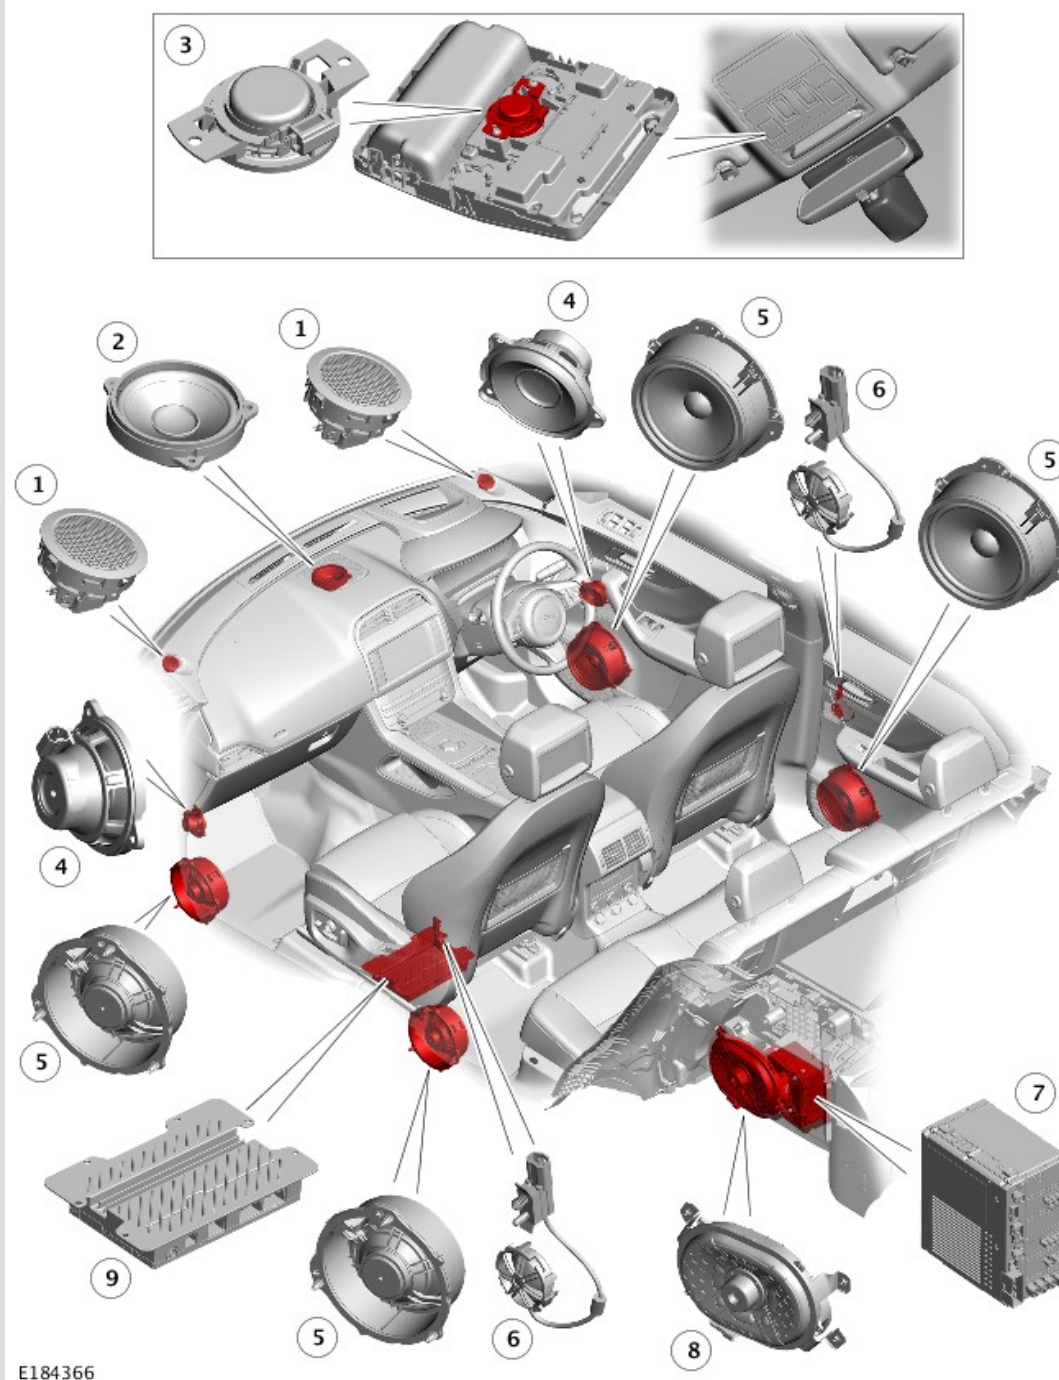


E184366

ITEM	DESCRIPTION
1	Front tweeter speaker (2 off)
2	Telematics speaker (Russia markets only)
3	Telematics speaker (All markets except Russia)
4	Front mid-range speaker (2 off)
5	Bass speaker (4 off)
6	Rear tweeter speaker (2 off)
7	Infotainment Master Controller (IMC)

8	Sub-woofer speaker
9	Audio Amplifier Module (AAM)

COMPONENT LOCATION - INCONTROL TOUCH PRO - MERIDIAN® SURROUND - 17 SPEAKER SYSTEM

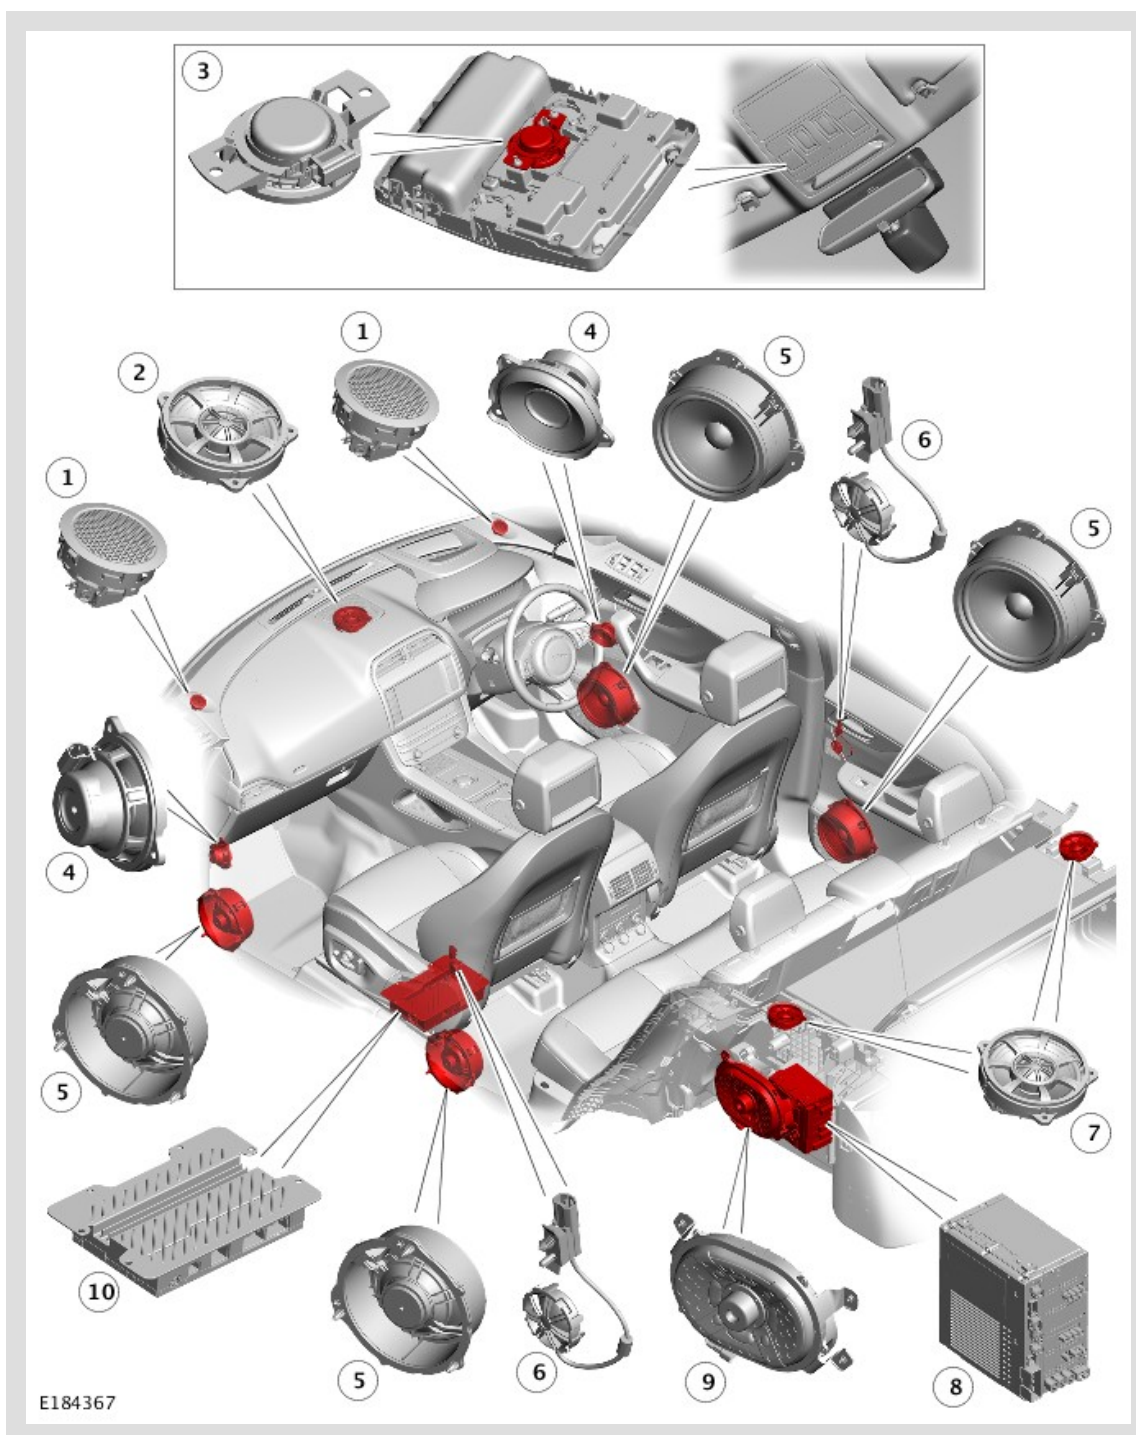

ITEM	DESCRIPTION
1	Front tweeter speaker (2 off)
2	Instrument panel co-axial speaker
3	Telematics speaker
4	Front mid-range speaker (2 off)
5	Bass speaker (4 off)
6	Rear tweeter speaker (2 off)

7	Luggage compartment co-axial speaker (2 off)
8	Infotainment Master Controller (IMC)
9	Sub-woofer speaker
10	Audio Amplifier Module (AAM)

DEPLOYABLE TOWBAR SPEAKER (IF FITTED)



OVERVIEW

The vehicle has four levels of audio system available:

- InControl Touch 6 speaker 80W audio system with Audio Head Unit (AHU) integrated 4 channel audio amplifier
- InControl Touch 11 Meridian® speaker 380W audio system with external 12 channel Audio Amplifier Module (AAM) and sub-woofer speaker.
- InControl Touch Pro 11 speaker 380W Meridian® audio system with external 12 channel AAM and sub-woofer speaker
- InControl Touch Pro 17 speaker 825W Meridian® Surround audio system with external 16 channel AAM and sub-woofer speaker.

NOTE:

The telematics speaker located in the top of the instrument panel is only fitted to Russian specification vehicles. Other markets have a telematics speaker located in the overhead console when telematics option is specified. The telematics speaker is not part of the audio system and is controlled by the Telematics Control Module.

All audio systems, except for the InControl Touch 6 speaker system, are powered by an external Audio Amplifier Module (AAM) located below the front left seat. The AAM is controlled by the Audio Head Unit (AHU) or the Infotainment Master Controller (IMC). The speakers are hard wired to the AAM.

On the InControl Touch 6 speaker system the speakers are hardwired directly to an internal amplifier within the AHU.

DEPLOYABLE TOWBAR SPEAKER (IF FITTED)

On vehicles with an electrically operated deployable towbar, a speaker is installed in the left side of the luggage compartment. The speaker is secured to two studs on the luggage compartment side trim bracket with two nuts.

The speaker is controlled by the Deployable Towbar Control Module (DTCM) and is not connected to the audio system.

The speaker informs the user when the deployable towbar is being deployed or stowed by means of an audible tone. For additional information, refer to: Towbar (502-03, Description and Operation).

DESCRIPTION

INCONTROL TOUCH 6 SPEAKER SYSTEM

The system comprises 6 speakers:

- 2 tweeters, aluminium dome, 25mm, 4 Ohm, 50W maximum
- 4 bass, Glass Fibre, Poly Resin cone, 165mm, 2 Ohm, 100W maximum.

INCONTROL TOUCH MERIDIAN® 11 SPEAKER SYSTEM

The system comprises 11 speakers:

- 4 tweeters, aluminium dome, 25mm, 4 Ohm, 50W maximum
- 4 bass, Glass Fibre, Poly Resin cone, 165mm, 2 Ohm, 100W maximum.
- 2 mid-range, Glass Fibre, Poly Resin cone, 80mm, 2 Ohm, 100W maximum
- Sub-woofer, paper cone, rubber edge, 250mm, 2 x 2 Ohm, 2 x 100W max

INCONTROL TOUCH PRO MERIDIAN® 11 SPEAKER SYSTEM

The system comprises 11 speakers:

- 4 tweeters, aluminium dome, 25mm, 4 Ohm, 50W maximum
- 4 bass, Glass Fibre, Poly Resin cone, 165mm, 2 Ohm, 100W maximum.
- 2 mid-range, Glass Fibre, Poly Resin cone, 80mm, 2 Ohm, 100W maximum

- Sub-woofer, paper cone, rubber edge, 250mm, 2 x 2 Ohm, 2 x 100W max

INCONTROL TOUCH PRO MERIDIAN® SURROUND 17 SPEAKER SYSTEM

The system comprises 17 speakers:

- 4 tweeters, aluminium dome, 25mm, 4 Ohm, 50W maximum
- 4 bass, paper cone, rubber edge, 165mm, 2 Ohm, 100W maximum
- 2 mid-range, Glass Fibre, Poly Resin cone, 80mm, 2 Ohm, 100W maximum
- 3 co-axial (contains 1 25mm tweeter and 1 100mm mid-range per speaker), tweeter aluminium cone, mid-range Poly Resin cone, rubber edge, 2 Ohm, 100W maximum
- Sub-woofer, paper cone, rubber edge, 250mm, 2 x 2 Ohm, 2 x 100W max

SUB-WOOFER SPEAKER

The dual voice coil sub-woofer speaker is located in the left side of the luggage compartment. A single 4 pin connector, connects the sub-woofer to the vehicle wiring harness. The low-frequency bass sound from the sub-woofer complements the higher frequency sounds from the other system speakers.

The sub-woofer speaker is powered by the AAM.

OPERATION

INCONTROL TOUCH 6 SPEAKER SYSTEM

The InControl™ Touch 6 speaker system uses an Audio Head Unit (AHU) which contains an integral 4 channel audio amplifier. The speakers are connected directly to the AHU for this system.

Audio signals originate from the AHU and are passed to the vehicle speakers via hardwired connections. Audio signals can also be generated by other vehicle systems which are passed to the AHU on the high speed CAN comfort systems bus. The AHU processes the signals and passes the audio output to the speakers via the high speed CAN infotainment systems bus.

The AHU receives a fused power supply from the Battery Junction Box (BJB), via the Quiescent Current Control Module (QCCM).

INCONTROL TOUCH MERIDIAN® 11 SPEAKER SYSTEMS

The InControl Touch Meridian® 11 speaker system uses an external Audio Amplifier Module (AAM). The speakers for these systems are connected directly to the AAM.

Audio signals originate from the AHU and are passed to the AAM via hardwired connections. The speakers are connected directly to the AAM.

Audio signals can also be generated by other vehicle systems. The AHU processes the signals and passes the output to the AAM via the high speed CAN comfort systems bus and hardwired connections.

The AHU receives a fused power supply from the BJB, via the QCCM. The AAM receives a permanent fused power supply from the Rear Junction Box (RJB).

INCONTROL TOUCH PRO MERIDIAN® 11 SPEAKER SYSTEM

The InControl Touch Pro Meridian® System uses an external Audio Amplifier Module (AAM). The speakers for these systems are connected directly to the AAM.

Audio signals originate from the Infotainment Master Controller (IMC) and are passed to the AAM on a BroadR-Reach® Ethernet communication protocol. Audio signals processed by other infotainment systems are passed to the IMC for transmission to the AAM on the high speed CAN comfort systems bus.

The IMC receives a fused power supply from the BJB, via the QCCM. The AAM receives a permanent fused power supply from the Rear Junction Box (RJB).

INCONTROL TOUCH PRO MERIDIAN® SURROUND 17 SPEAKER SYSTEM

The InControl Touch Plus with Meridian Surround System uses an external Audio Amplifier Module (AAM). The speakers for these systems are connected directly to the AAM.


Audio signals originate from the Infotainment Master Controller (IMC) and are passed to the AAM on a BroadR-Reach® Ethernet communication protocol. Audio signals processed by other infotainment systems are passed to the IMC for transmission to the AAM on the high speed CAN comfort systems bus.

The IMC receives a fused power supply from the BJB, via the QCCM. The AAM receives a permanent fused power supply from the Rear Junction Box (RJB).

CONTROL DIAGRAM - INCONTROL TOUCH 6 SPEAKER SYSTEM

NOTE:

A = Hardwired; **AV** = High speed CAN comfort systems bus

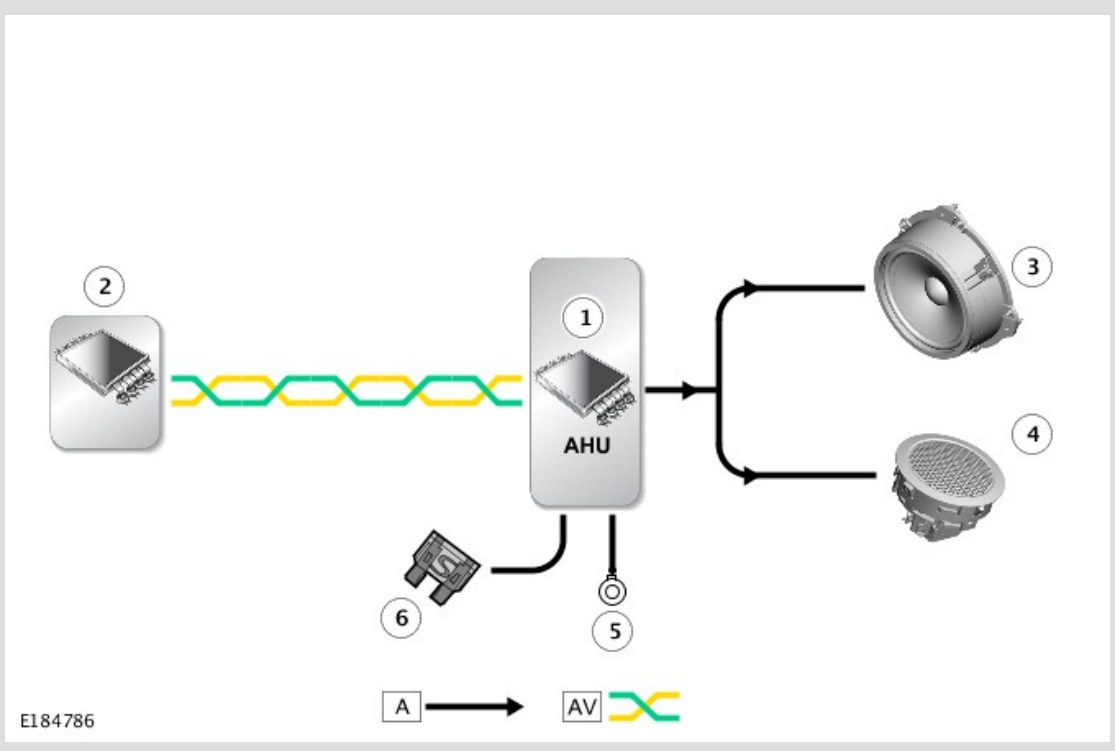


ITEM	DESCRIPTION
1	Audio Head Unit (AHU)
2	Audio inputs from other vehicle systems
3	Bass speaker (4 off)
4	Tweeter speaker (Instrument panel 2 off)
5	Ground
6	Fused power supply from Battery Junction Box (BJB) and Quiescent Current Control Module (QCCM)

CONTROL DIAGRAM - INCONTROL TOUCH MERIDIAN® 11 SPEAKER SYSTEM

NOTE:

A = Hardwired; **AS** = High speed CAN infotainment systems bus; **AV** = High speed CAN comfort systems bus

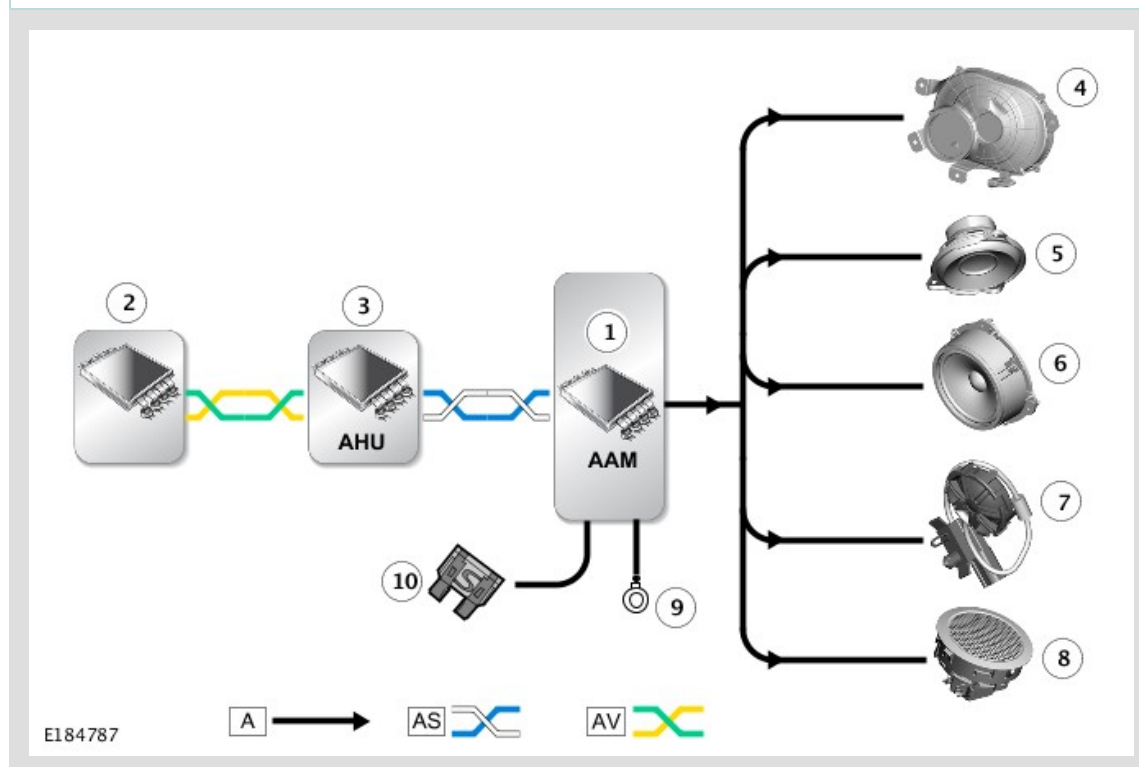


ITEM	DESCRIPTION
1	Audio Amplifier Module (AAM)
2	Audio inputs from other vehicle systems
3	Audio Head Unit (AHU)
4	Sub-woofer speaker
5	Mid-range speaker (2 off)
6	Bass speaker (4 off)
7	Tweeter speaker (Rear door 2 off)

8	Tweeter speaker (Instrument panel 2 off)
9	Ground
10	Fused power supply from Battery Junction Box (BJB) and Quiescent Current Control Module (QCCM)

CONTROL DIAGRAM - INCONTROL TOUCH PRO MERIDIAN® 11 SPEAKER SYSTEM AND INCONTROL TOUCH PRO MERIDIAN® SURROUND 17 SPEAKER SYSTEM

NOTE:

A = Hardwired; **AV** = High speed CAN Comfort Systems bus; **AW** = BroadR-Reach® Ethernet

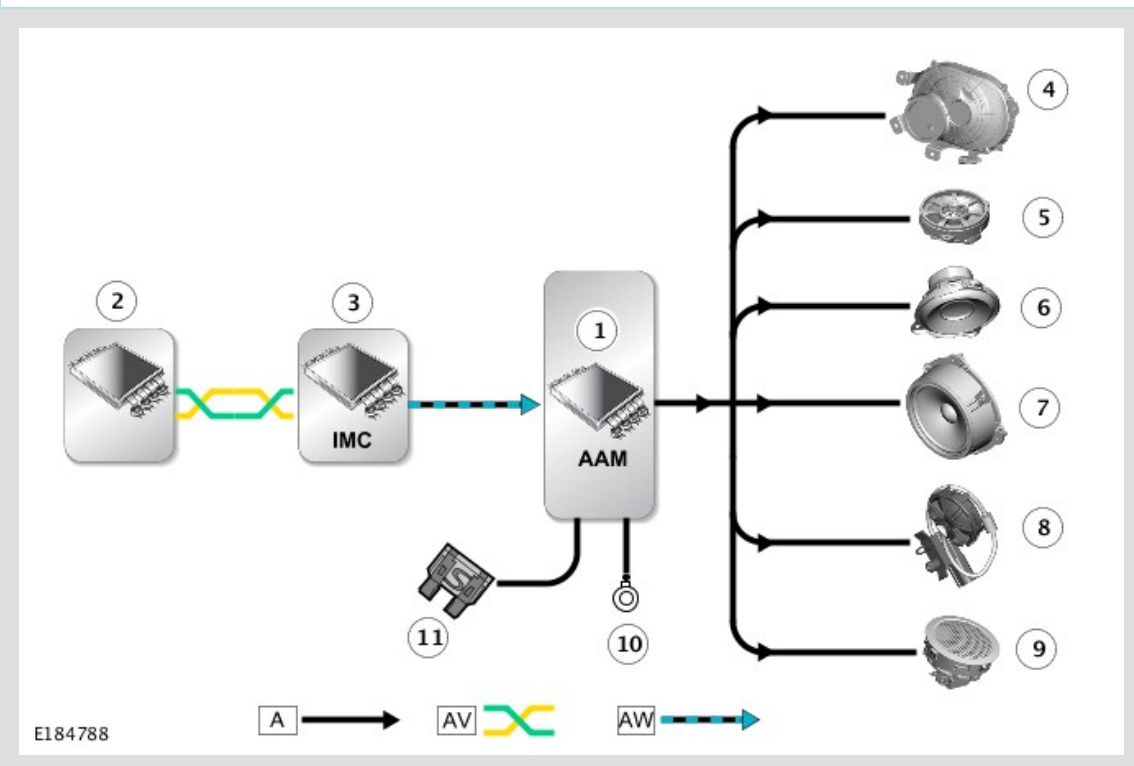

ITEM	DESCRIPTION
1	Audio Amplifier Module (AAM)
2	Touch Screen (TS)
3	Integrated Audio Module (IAM)
4	Sub-woofer speaker
5	Co-axial speaker (3 off Meridian Surround system only)
6	Mid-range speaker (Front door 2 off)
7	Bass speaker (4 off)
8	Tweeter speaker (Rear door 2 off)
9	Tweeter speaker (Instrument panel 2 off)
10	Ground
11	Fused power supply via the RJB

