

INTERIOR TRIM AND ORNAMENTATION

SUN VISOR (G1823598)

REMOVAL AND INSTALLATION

76.10.48	ILLUMINATED SUN VISOR ASSEMBLY - RENEW	ALL DERIVATIVES	0.20	USED WITHINS
----------	---	--------------------	------	--------------


REMOVAL



NOTE:

This procedure contains illustrations showing certain components removed to provide extra clarity.

1.

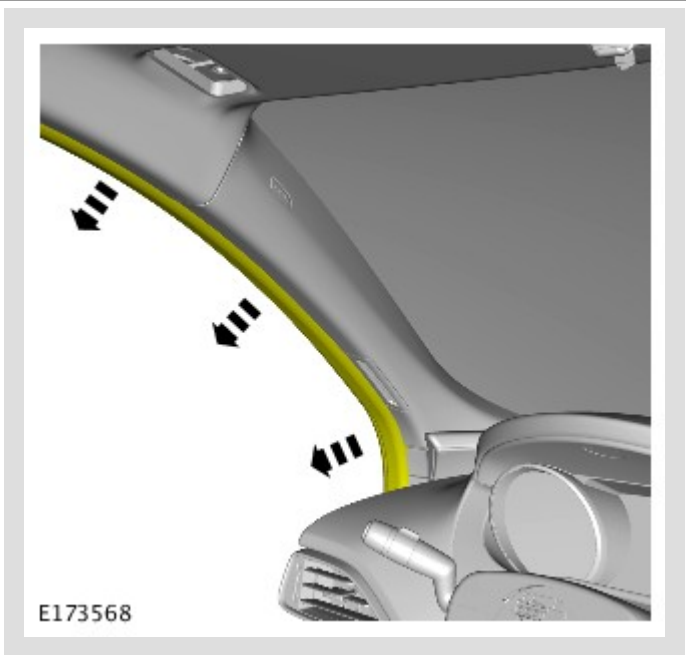


Remove the door weatherstrip.

2.




CAUTION:

Use a suitable trim tool.

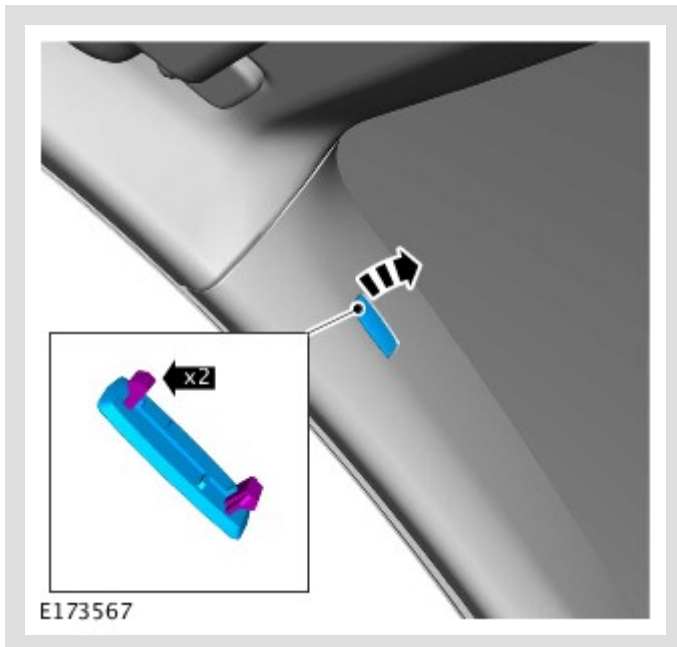

Remove the access cover.

3.

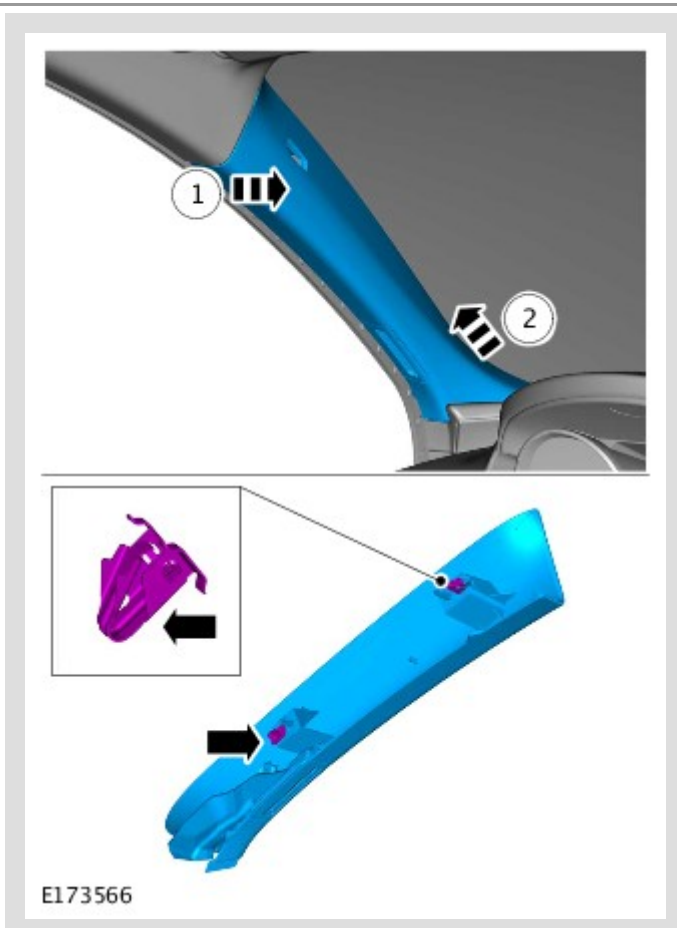


Remove the A-pillar trim.

4.


⚠ CAUTION:

Use a suitable trim tool.

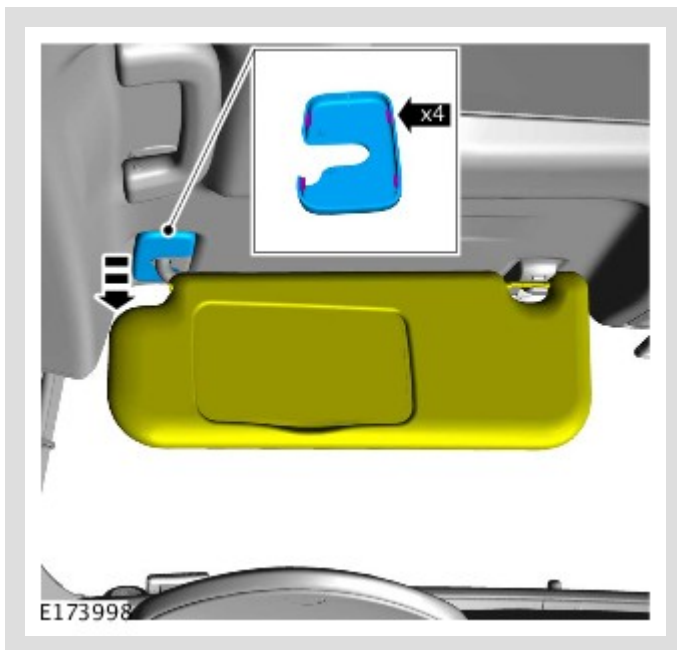

Remove the access cover.

5.

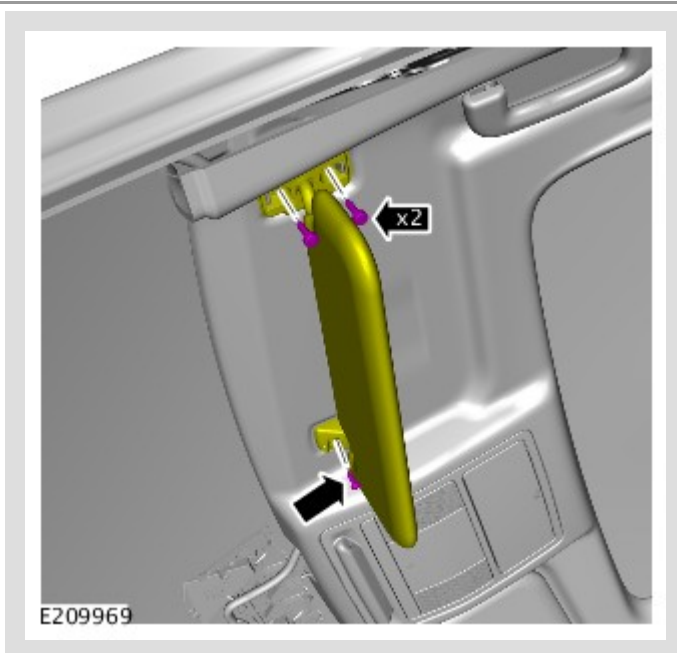


Remove the 2 bolts.

Remove the screw.


6.

⚠ CAUTION:

Care must be taken not to damage the headliner.

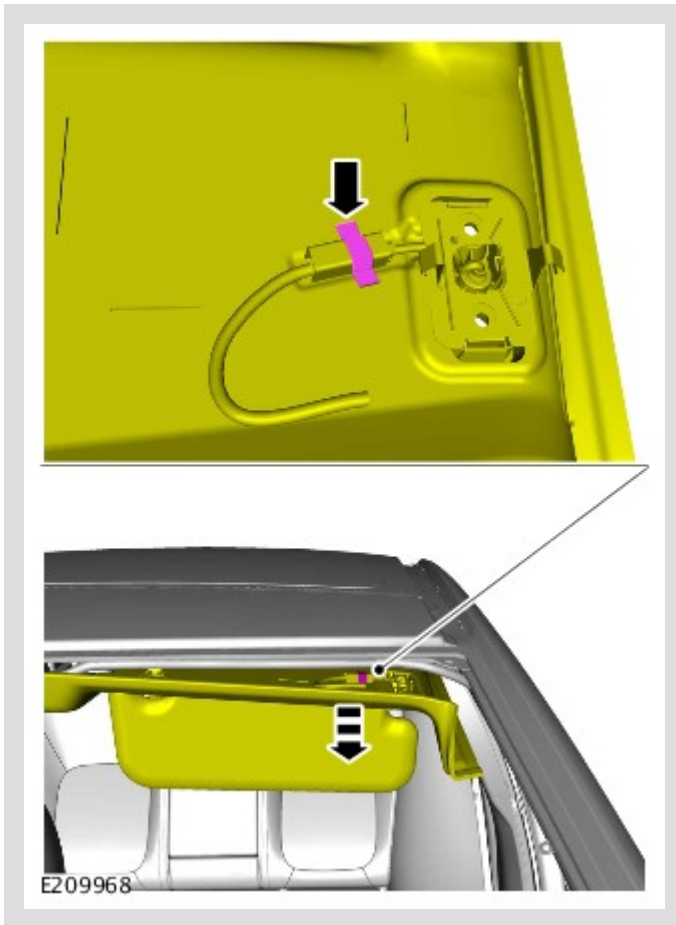

Carefully remove the adhesive tape.

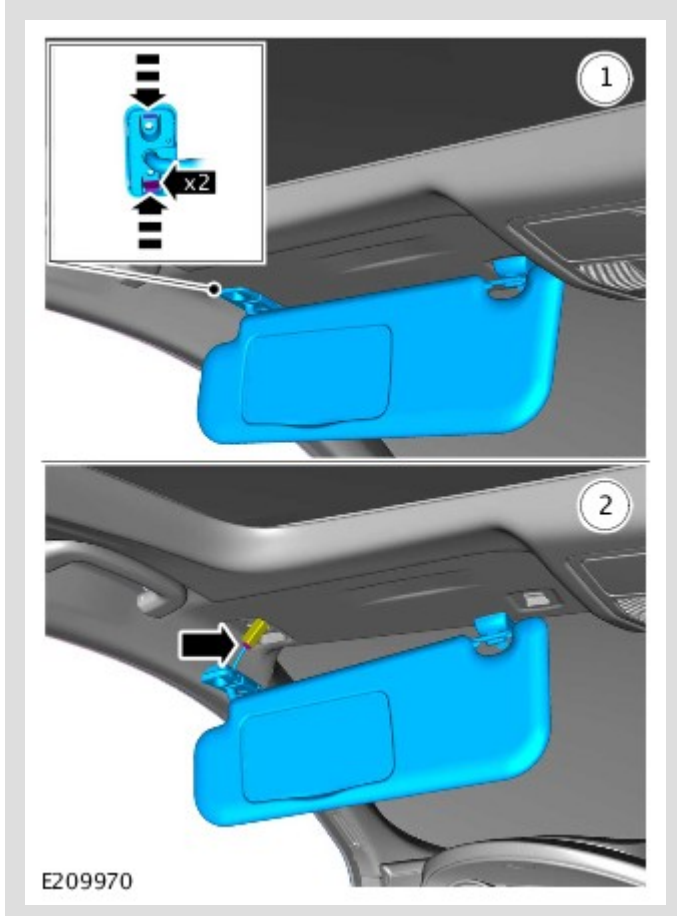

Release the 2 clips.

Disconnect the electrical connector.

Remove the sun visor.

INSTALLATION

1. Connect the electrical connector.
Install the sun visor.
2. Install and tighten the 2 bolts to 4 Nm.
Install and tighten the screw to 2 Nm.
3. Install the sun visor access cover.
4. Install the A-pillar trim.
5. Install the A-pillar access cover.
6. Install the door weatherstrip.

