

EXTERIOR LIGHTING

STOPLAMP SWITCH (G1671469)

REMOVAL AND INSTALLATION

86.65.51	STOP LAMP SWITCH - RENEW	ALL DERIVATIVES	0.20	USED WITHINS	
----------	--------------------------	-----------------	------	--------------	--

REMOVAL




NOTES:

- Removal steps in this procedure may contain installation details.
- Some components shown removed for clarity.
- Some variation in the illustrations may occur, but the essential information is always correct.


1.

Disconnect the battery ground cable.
Refer to: Startup Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).


2.

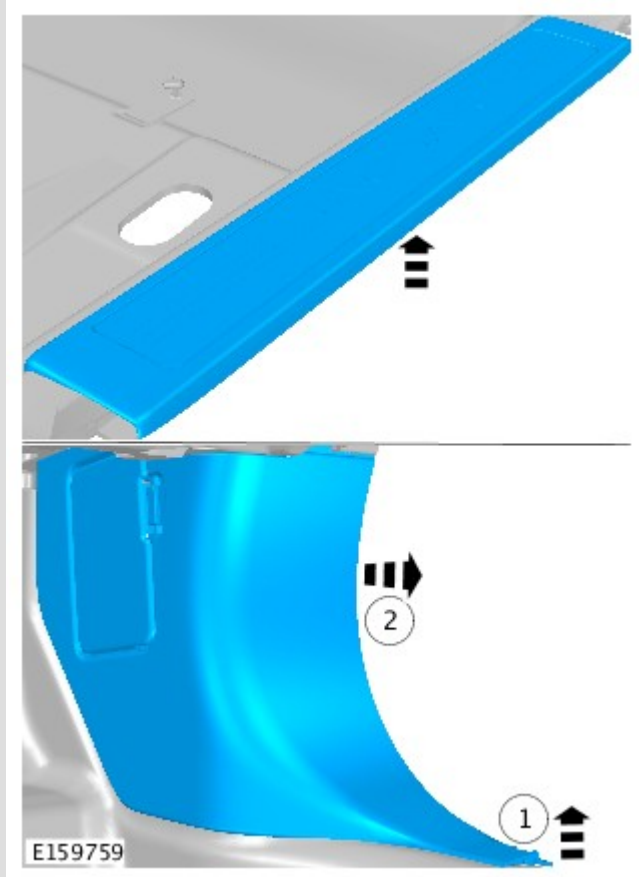

3.

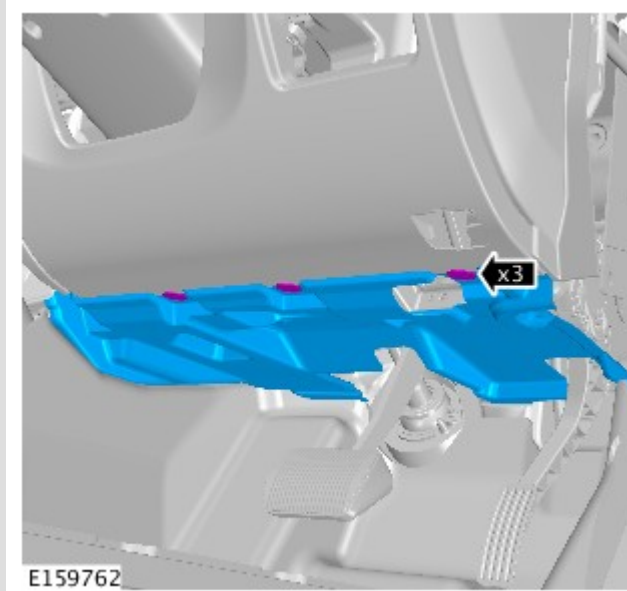


4.

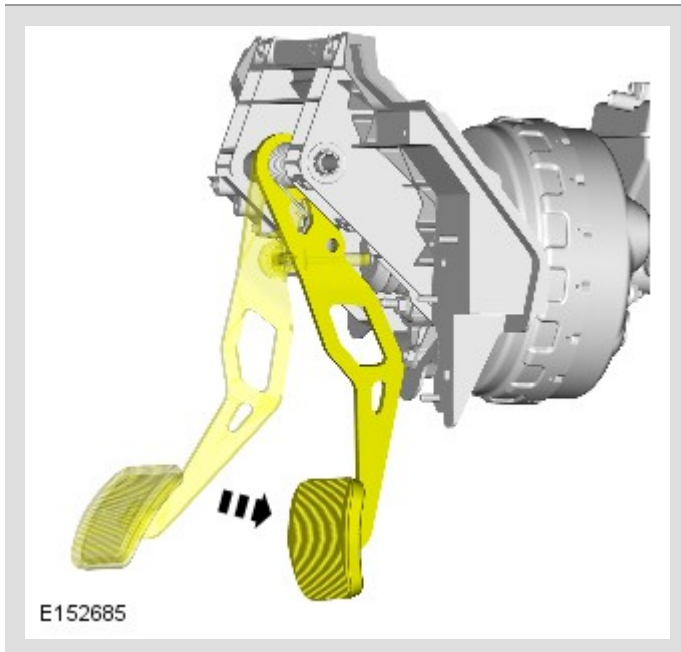

Press the brake pedal.

5.

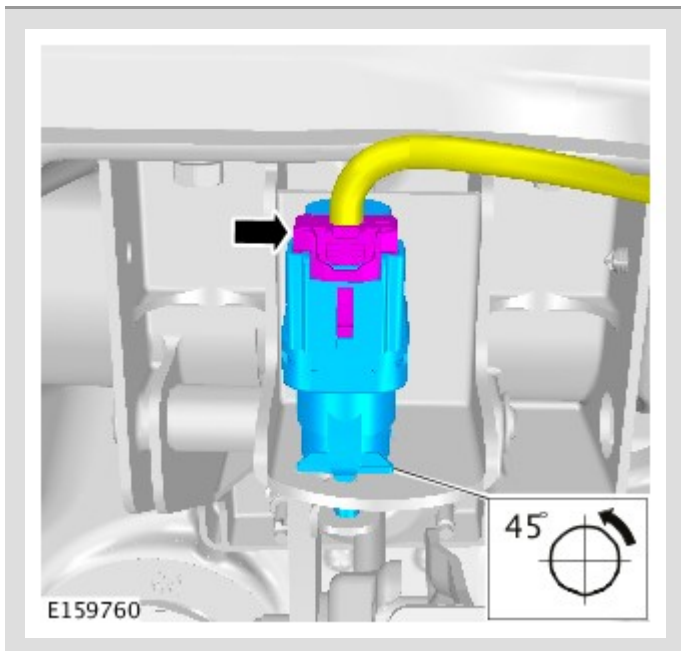

INSTALLATION

1.



CAUTIONS:

- The brake pedal **MUST NOT** be depressed during this operation. Failure to follow this instruction will result in damage to the stoplamp switch.
- Make sure that excessive force is not used when installing the stoplamp switch. Failure to follow this instruction may result in damage to the stoplamp switch.

Install the following items:

1. Install the stoplamp switch.
1. Rotate the switch counterclockwise.
1. Connect the electrical connector.

2.

To install, reverse the removal procedure.