

BODY CLOSURES

POWER TAILGATE MODULE (G1933095)

REMOVAL AND INSTALLATION

76.20.10	LUGGAGE COMPARTMENT LID LIFT CONTROL MODULE - RENEW	ALL DERIVATIVES	0.40	USED WITHINS	
----------	--	--------------------	------	--------------	--

REMOVAL


 NOTE:

Removal steps in this procedure may contain installation details.

1.

Remove the tailgate trim panel.
Refer to: Tailgate Trim Panel (501-05, Removal and Installation).

2.

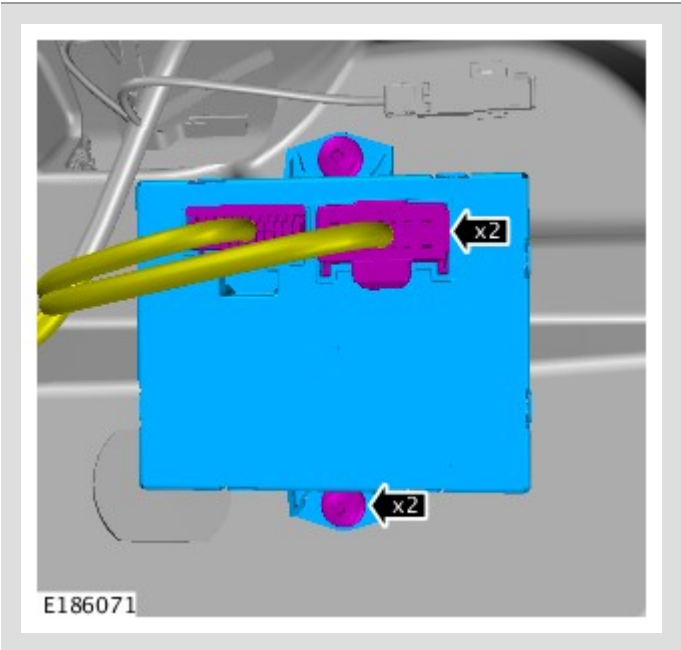

1.

To install, reverse the removal procedure.

2.

Using the approved diagnostic tool, configure the module.