

SYSTEM SETTINGS

System Settings can be accessed by clicking the 'Settings' tab at any time during a session. System Settings include User Preferences, Dealer Information, System Information, and System Utilities.

User Preferences

User Preferences

Options

Use VMM: ☐

Language: English

Measurement Units

Distance: Kilometers (km)

Pressure: Kilopascal (kPa)

Temperature: Celsius (°C)

Time: Milli seconds (ms)

[Save](#)

SDDJLR159

Dealer Information

The user is prompted to enter the correct dealer information when SDD is first started after installation.

i Dealer Information

Dealer details must be entered to use SDD.

Selection Options

Country: United States of America ▼

Town / City: Mahwah ▼

Dealer Name: Land Rover University - East ▼

Dealer Details

Use selection options to select dealer, or enter / amend details. * indicates mandatory fields.

Dealer Name: * Land Rover University - East

Dealer Code: PAGUSND002

Address: 555 MacArthur Blvd.

Continue Clear

SDDJLR160

Dealer information can be viewed at any time during a session.

Vehicle Settings Sessions

User Preferences **Dealer Information** System Information System Utilities On-Demand Feedback

i Dealer Information

Selection Options

Country: -- Please select -- ▼

Town / City:

Dealer Name:

Dealer Details

Use selection options to select dealer, or enter / amend details. * indicates mandatory fields.

Dealer Name: * JLRNA - Service Diagnostics Diagnostics

Dealer Code: PAGUSFF007

Address: 555 MacArthur Boulevard

Town / City: * Mahwah

County / State: NJ

Post / ZIP Code: 07430

Country: * USA

Telephone: (201) 818-8500

Save Clear

SDDJLR161

System Information

The System Information screen offers the user assistance with system maintenance by providing more detail about the status of important system elements. Click on 'Details' in the right-hand column for more information on each of these elements.

System Information


Section	Status	More Information
PC SYSTEM STATUS	✗	Details
NETWORK STATUS	✗	Details
SDD UPDATE STATUS	✓	Details
VEHICLE COMMUNICATIONS INTERFACE STATUS	✓	Details

[Refresh](#)

SDDJLR162

PC System Status Details

The example shows that an early (now unsupported) CF-18 is in use, and that the RAM is not up to specification.

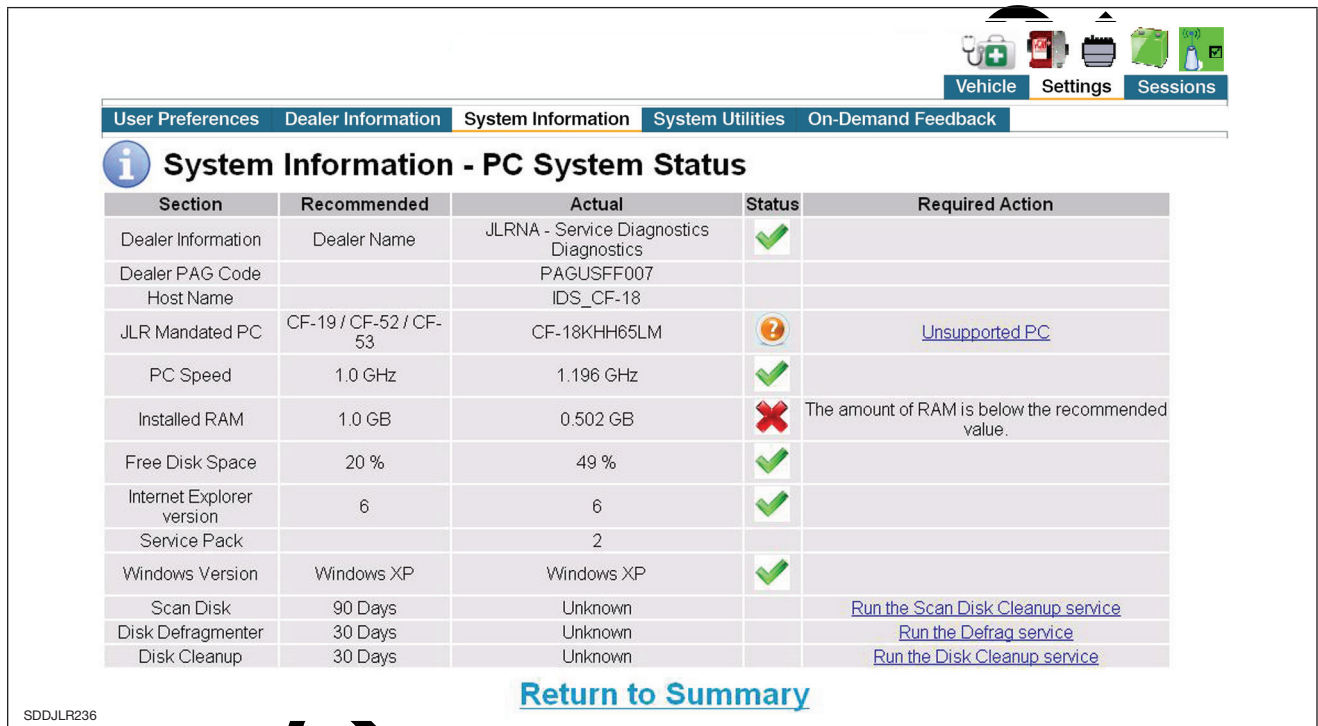

System Information - PC System Status


Section	Recommended	Actual	Status	Required Action
Dealer Information	Dealer Name	JLRNA - Service Diagnostics	✓	
Dealer PAG Code		PAGUSFF007		
Host Name		IDS_CF-18		
JLR Mandated PC	CF-19 / CF-52 / CF-53	CF-18KHH65LM	?	Unsupported PC
PC Speed	1.0 GHz	1.196 GHz	✓	
Installed RAM	1.0 GB	0.502 GB	✗	The amount of RAM is below the recommended value.
Free Disk Space	20 %	49 %	✓	
Internet Explorer version	6	6	✓	
Service Pack		2		
Windows Version	Windows XP	Windows XP	✓	
Scan Disk	90 Days	Unknown		Run the Scan Disk Cleanup service
Disk Defragmenter	30 Days	Unknown		Run the Defrag service
Disk Cleanup	30 Days	Unknown		Run the Disk Cleanup service

[Return to Summary](#)

SDDJLR236

Network Status Details

The system uses a diagnostic to verify that these resources are available.

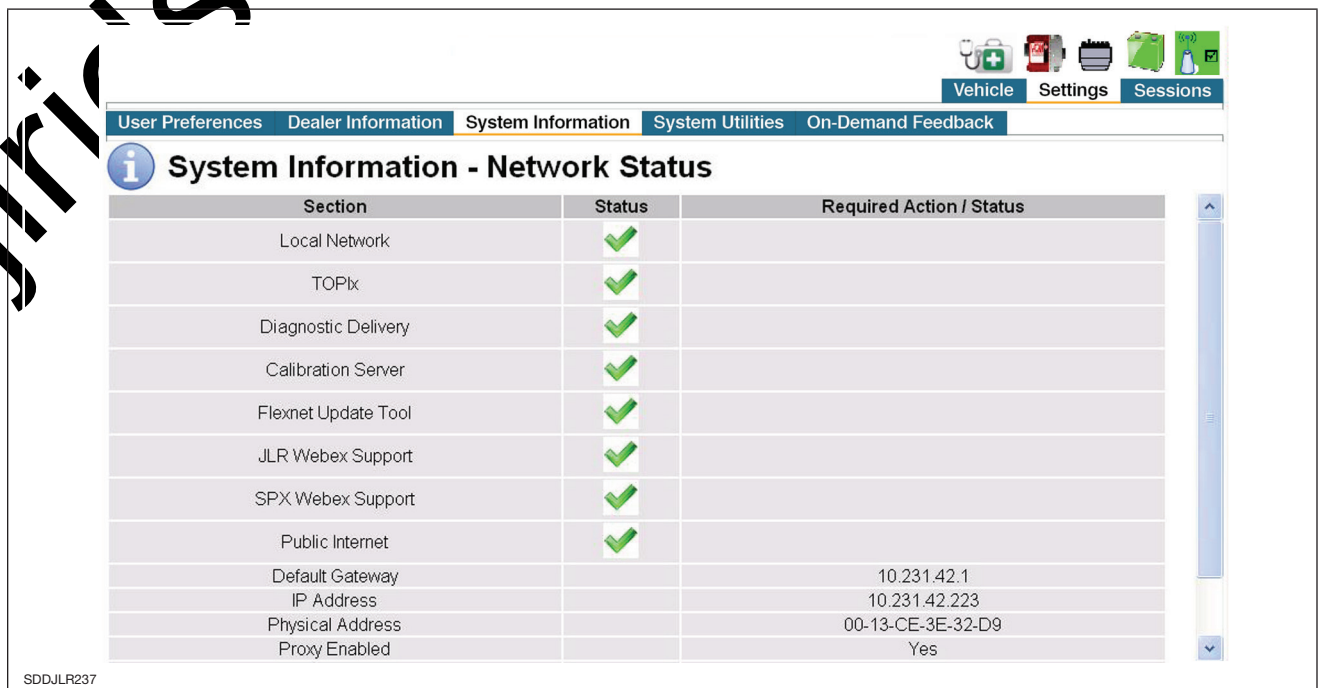

System Information - Network Status

Section	Status	Required Action / Status
Local Network	✓	
TOPIx	✓	
Diagnostic Delivery	✓	
Calibration Server	✓	
Flexnet Update Tool	✓	
JLR Webex Support	✓	
SPX Webex Support	✓	
Public Internet	✓	
Default Gateway		10.231.42.1
IP Address		10.231.42.223
Physical Address		00-13-CE-3E-32-D9
Proxy Enabled		Yes

SDDJLR237

SDD Update Status Details

This screen summarizes the status of software and calibration files.



User Preferences Dealer Information **System Information** System Utilities On-Demand Feedback

 **System Information - SDD Update Status**

Section	Recommended	Actual	Status	Required Action
Recent SDD Software Update	21 Days	1 Days		
SPA Software Version	DVD 128	DVD 128		
Calibration/As-built Version		93		
Software Update download progress				
Software Update download time				
Software Update download status				
Software Update download name				

[Return to Summary](#)

SDDJLR238

Vehicle Communication Interface Status Details



User Preferences Dealer Information **System Information** System Utilities On-Demand Feedback

 **System Information - Vehicle Communications Interface Status**

Name	Vendor	Fully supported vehicles	Partially supported vehicles	Status
VCM				Select Device

[Return to Summary](#)

SDDJLR239

System Utilities

Vehicle Settings Sessions

User Preferences Dealer Information System Information **System Utilities** On-Demand Feedback

i System Utilities

Set Up

- [Network Options](#)
- [Software Update](#)
- [Clear VCM](#)

System

- [Run System Diagnostics](#)

Vehicle calibration software

- [Combined as-built and calibration file update](#)
- [Calibration file update only](#)
- [As-built file update only](#)
- [Speed test reset](#)

SDDJLR163

On-Demand Feedback

Vehicle Settings Sessions

User Preferences Dealer Information System Information System Utilities **On-Demand Feedback**

i On-Demand Feedback

Transfer options

- ☒ [Transfer all unsent session files](#)
- ☐ [Transfer all session files](#)
- ☐ [Transfer selected VIN session files](#)
- ☐ [Transfer manually selected files](#)

Unsent session files

SDD Sessions


[Manually select other files](#) [Transfer](#)

SDDJLR240


WORKING WITH SDD

NOTE: Communication with the vehicle is via the 16-pin Data Link Connector (DLC), with ignition switched to the 'ON' position.

Click the SDD icon on the main menu:

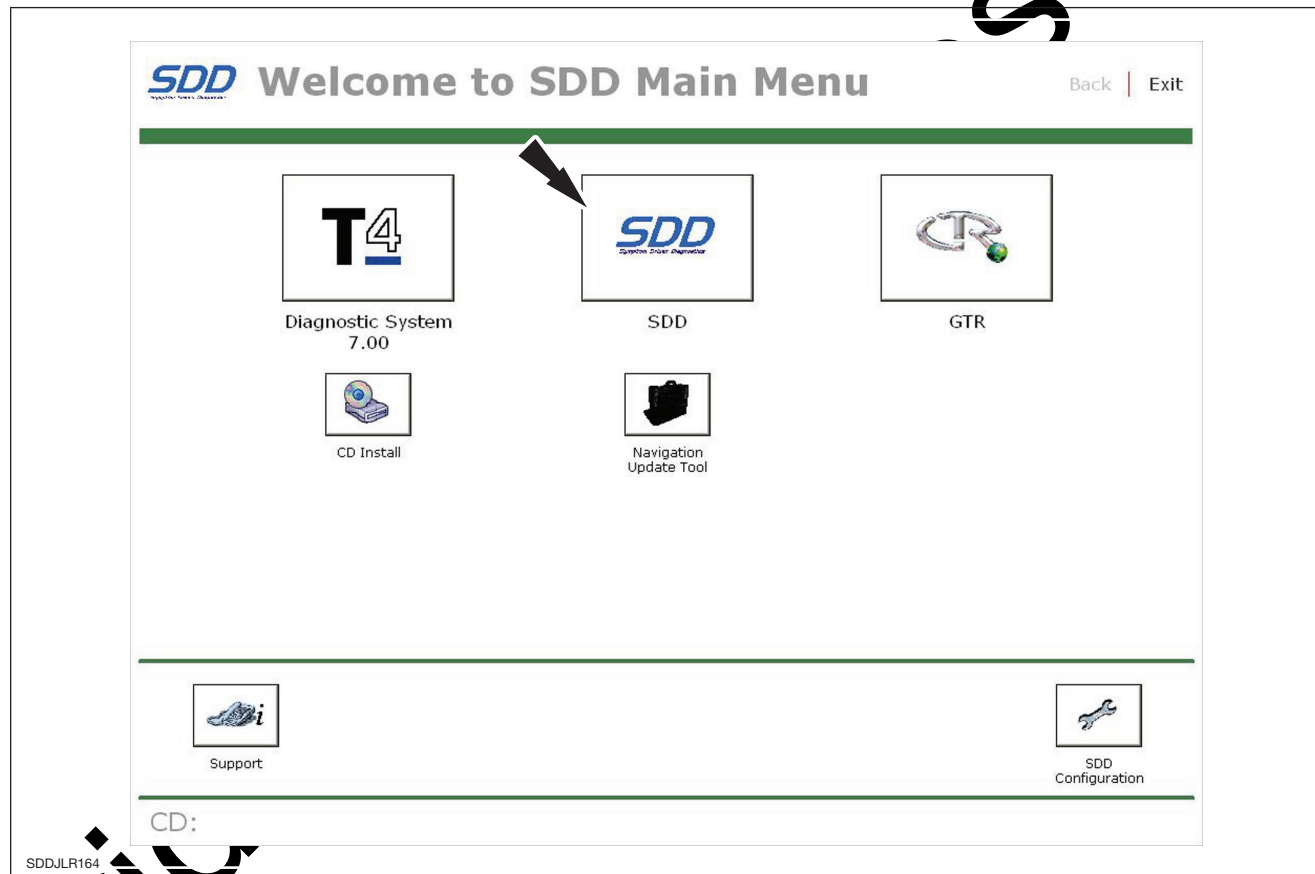

The initial display is a general 'Warning' screen with important safety precautions that must be observed when performing any procedure.

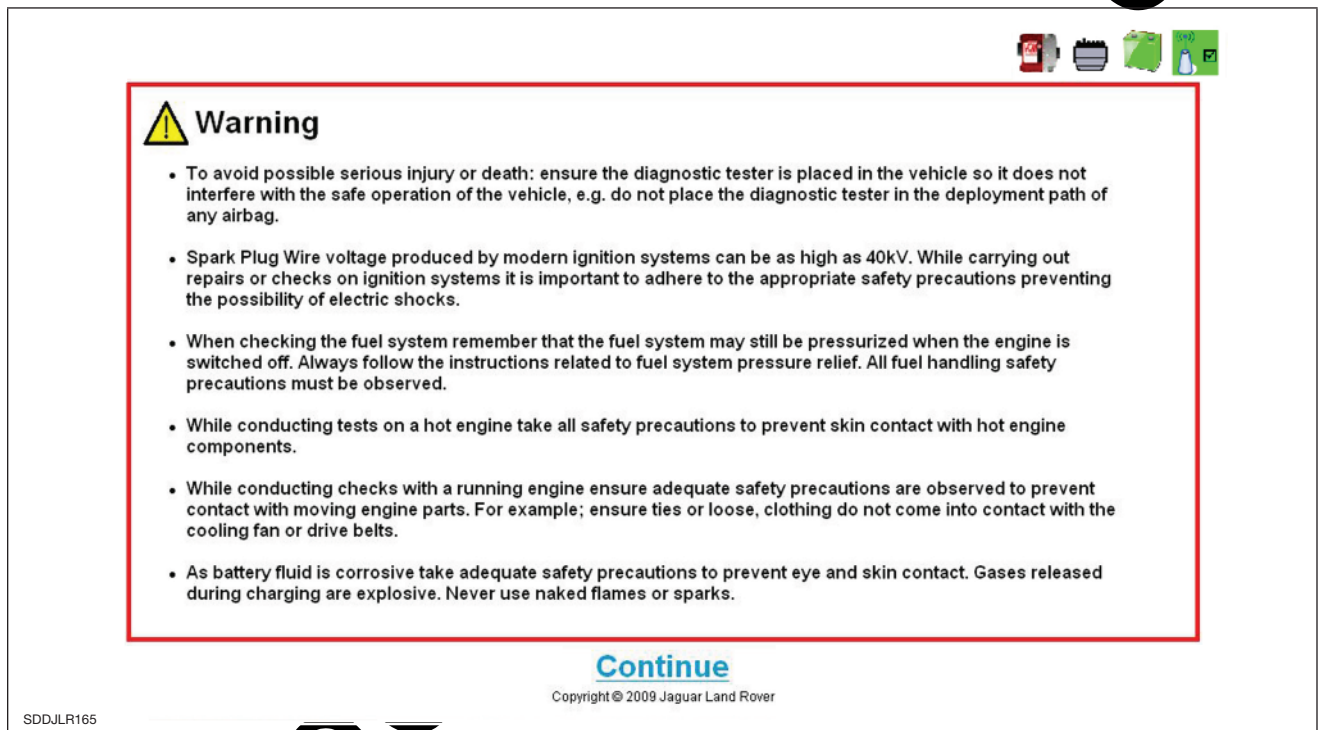

When the warnings have been read and understood, click 'Continue'.

VIN Entry

Session

Vehicle Settings

i VIN Entry

Information

Please connect communication device, and switch ignition ON, to automatically read the VIN from the vehicle. If the system fails to read the VIN, or you are not near the vehicle, manually enter the full 17 characters of the VIN below.

Vehicle Identification Number (VIN): SALAK2D46AA511126 [Read](#)

Identify Vehicle

SDDJLR166

The VIN entry screen allows for identification of the vehicle using the 17-digit Vehicle Identification Number (VIN). With the communication device connected to the vehicle and the ignition switched ON, the operator can automatically retrieve the VIN from the vehicle by selecting the 'Read' option. The operator should then select 'Identify Vehicle' to continue.

If, during the automatic retrieval of the VIN, it is not possible to establish communications with the vehicle, the VIN field will be fully populated with 'X', or if invalid data is read from the vehicle, the VIN field will be fully populated with '?????'.

If it is not possible to establish communications with the vehicle, or the system fails to automatically retrieve the VIN, the VIN can be entered manually. After manually entering the full 17-digit VIN, as displayed on the vehicle's VIN plate, the operator should then select 'Identify Vehicle' to continue.

If, after entering the VIN manually and selecting 'Identify Vehicle', a screen is displayed stating 'Invalid VIN Entered', it is likely that the VIN has been entered incorrectly. If this window is displayed, ensure that the correct VIN has been entered as displayed on the vehicle VIN plate.

If this screen is NOT displayed, it is likely that the VIN manually entered at the VIN Entry screen is of an incorrect format that cannot be decoded.

Vehicle Confirmation

The information displayed in the Vehicle Summary field describes the basic specification of the vehicle identified by decoding of the 17-digit alphanumeric VIN entered at the VIN Entry screen.

Vehicle Confirmation

Vehicle Summary

Model: Land Rover L319 Land Rover LR3/LR4
Engine: 508PN - V8 5.0 Petrol
Model Year: 2010

Image for illustration purposes only

Does this accurately describe the vehicle? [Yes](#) [No](#)

SDDJLR167

The operator should verify the details and proceed if correct by selecting 'Yes', or return to the VIN Entry screen to input the correct VIN by selecting 'No'. Once the correct vehicle has been identified, the 'Session Type Selection' screen will be displayed.

Session Type Selection

The various SDD functions are accessed based on Session Type. From the Session Type Selection screen, the operator is able to select from the functions supported for the current vehicle.

Session Type Selection

Vehicle Summary

Model: Jaguar X150 XK
Engine: 5.0L sc AJ133
Model Year: 2010

Image for illustration purposes only

Please select session type to continue.

[Pre Delivery Inspection](#) [Measurement Applications](#) [Service Functions](#) [Campaigns](#) [Diagnosis](#)

SDDJLR169

Session Types

Pre Delivery Inspection (PDI)

Select this to access the Pre Delivery Inspection application and other PDI-related items for the selected vehicle. These functions are utilized in conjunction with the Pre-Delivery Inspection sheet.

Measurement Applications

Select this to access the Measurement Applications for the selected vehicle.

NOTE: Some Measurement Application functions can only be utilized in conjunction with the Vehicle Measurement Module (VMM).

Service Functions

Select this to access any Service Function applications relevant to the selected vehicle and system/area.

Campaigns

Select this to access all mandated Service Actions or Service Recalls associated with the selected vehicle.

Diagnosis

Select this to access the SDD Diagnosis application. This application enables the operator to diagnose an identified concern via the Symptom Maps.

Session Selection Shortcuts

Beginning with L538, direct short cuts are being phased in which allow the user to select the PDI or Service Interval Reset functions directly from the Vehicle Confirmation screen.

Session Type Icons



Session
Vehicle Settings Sessions

Vehicle Confirmation

Vehicle Summary

Model: Land Rover L538 Evoque

Engine: GTDi - 2.0 PETROL (High power)

Model Year: 2012

Image for illustration purposes only

Please confirm that the vehicle above is correct and select from the options below:

Pre-delivery inspection.

Service interval reset.


Enter Session

Close Session

SDDJLR263

Status Indicators

Several onscreen features are employed to keep the user informed about system status. Status icons indicate session type, communications readiness, vehicle battery condition, and download completion. The range of icons is shown here, although not all of them will be present at all times.

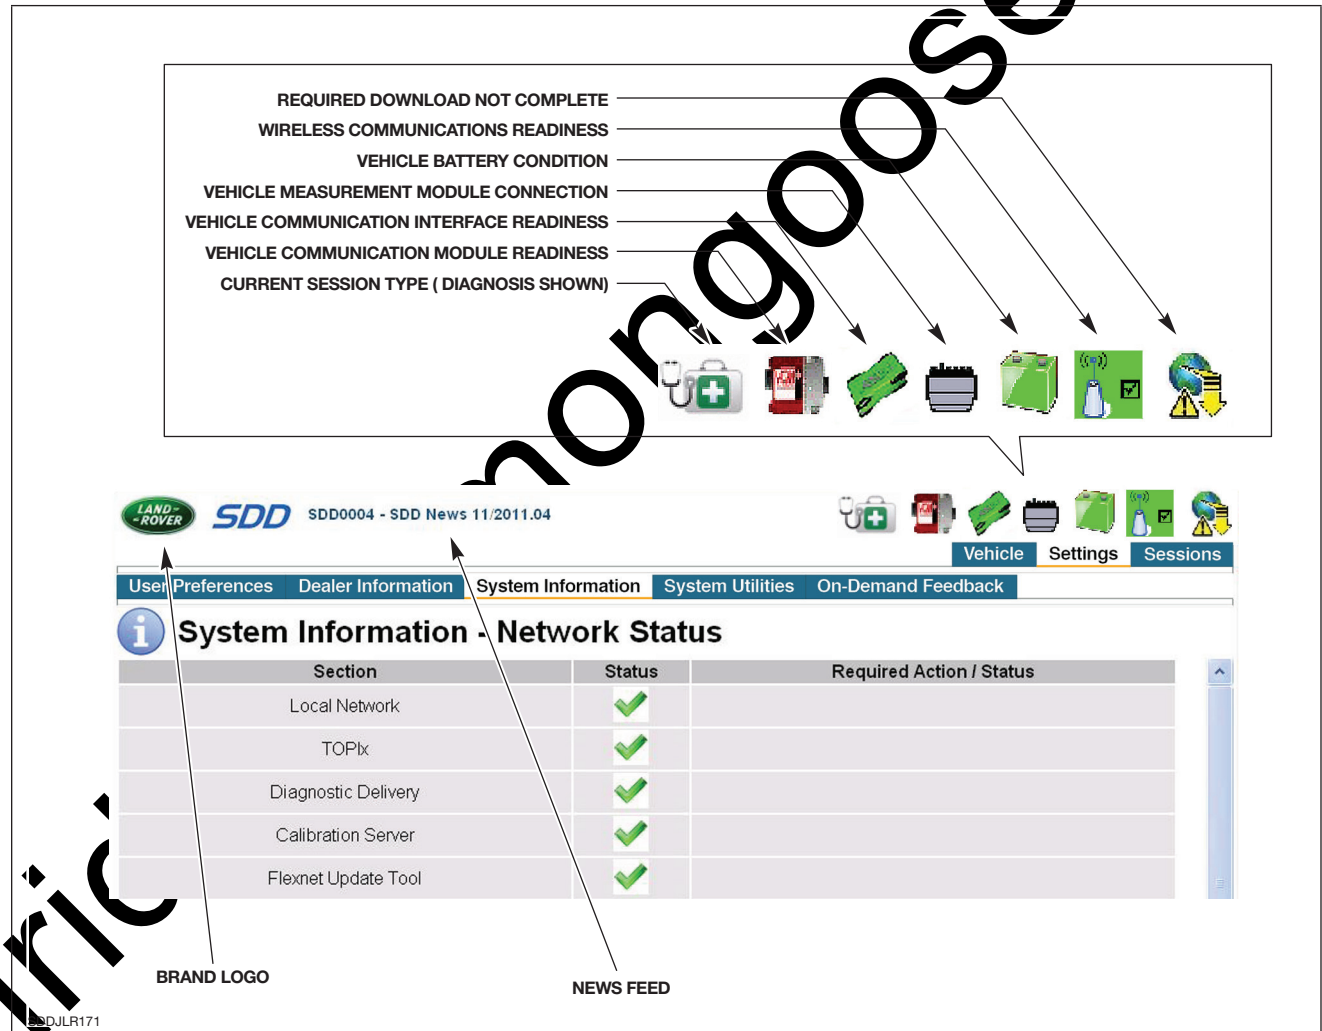


News Feed

A scrolling banner lists headlines from the latest SDD news document on TOPIx. Clicking on the banner will lead the user to the document in TOPIx.


NOTE: The brand logo and news feed are omitted from screen shots throughout this section.

Vehicle Specification

When Vehicle Specification is displayed during a Session, the small window at the left of the screen shows basic details of the currently selected vehicle (model, model year).

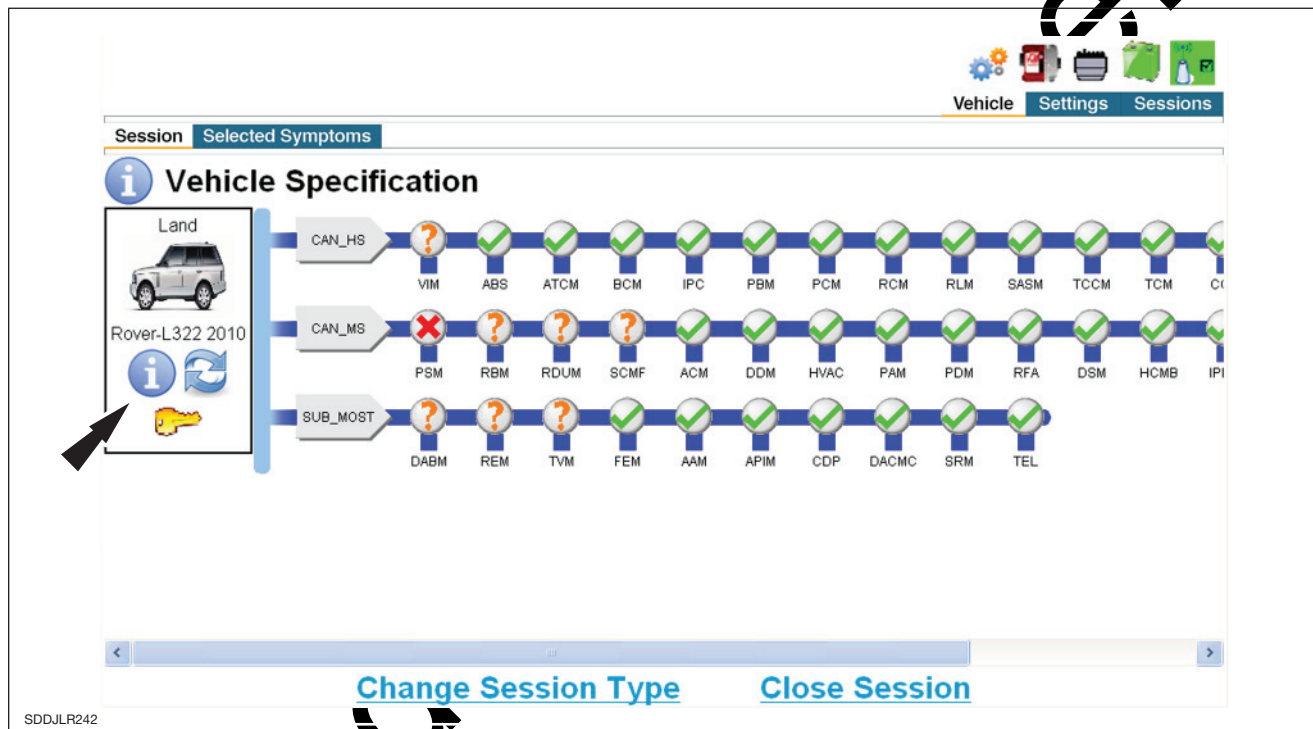

Clicking on the Information icon (i) displayed in this field will launch a pop-up window showing more detailed vehicle specification information that has been retrieved from the vehicle, decoded from the VIN, and from operator input during the currently selected session.

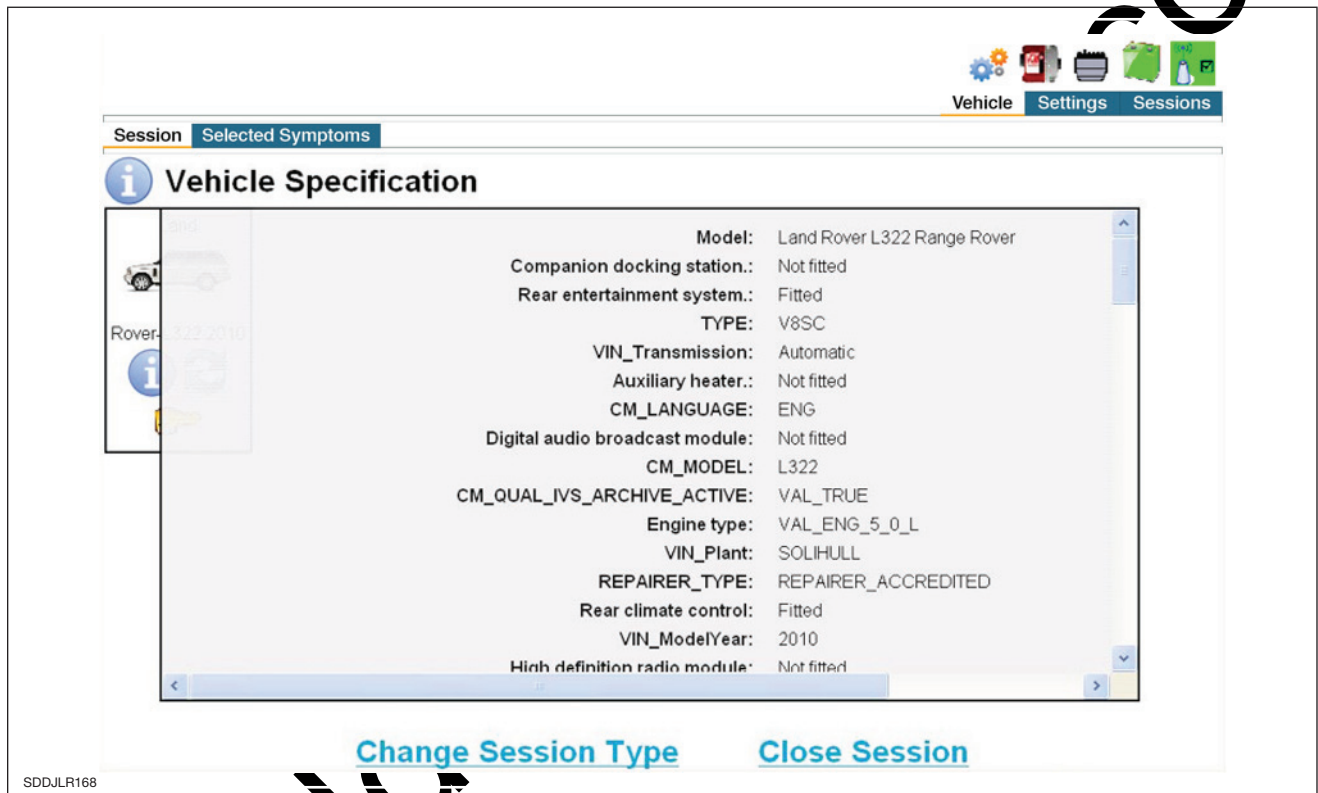

NOTE: Options for changing Session Type or closing the Session are available at the bottom of the screen.

The Importance of DTCs to the SDD Process

SDD relies on logged DTCs in conjunction with vehicle symptoms to perform diagnostics. Clearing DTCs will clear the vehicle fault history and erase important data required for correct diagnosis of a concern.

- If DTCs are cleared then diagnostics CANNOT be carried out.

⚠ DO NOT CLEAR DTCs unless instructed to do so by SDD.

- Before clearing DTCs, save the session for possible later use.

PRE DELIVERY INSPECTION (PDI) SESSION TYPE



Select this Session Type to access the Pre Delivery Inspection application and other PDI related tools for the selected vehicle. Click on the icon on the Session Type Selection screen to launch the Session.

The screenshot displays the 'Session Type Selection' interface. At the top, there are tabs for 'Vehicle', 'Settings', and 'Sessions'. Below these, a 'Session' header is followed by an information icon and the title 'Session Type Selection'. A 'Vehicle Summary' box contains the following details:

- Model:** Land Rover L322 Range Rover
- Engine:** 508PS - V8 5.0 SC Petrol
- Model Year:** 2010

To the right of the text is an image of a silver Land Rover Range Rover, with a caption below it stating 'Image for illustration purposes only'. Below the vehicle summary, the text 'Please select session type to continue.' is displayed. A row of five buttons is shown, each with an icon and a label: 'Pre Delivery Inspection' (clipboard icon), 'Measurement Applications' (waveform icon), 'Service Functions' (gears icon), 'Campaigns' (warning triangle icon), and 'Diagnosis' (stethoscope icon). A red arrow points to the 'Pre Delivery Inspection' button. In the bottom left corner, the text 'SDDJLR172' is visible.


Data Collection

As SDD launches a Session Type, it performs a process of collecting data to be used throughout the session to maximize the efficiency of the system and support various tool functions.

Data collection includes:


- Establishing communication with the vehicle's control modules
- Performing a 'silent' read of logged DTCs
- Qualifying details of the vehicle specification

The progress bar indicates that the Data Collection process is underway.

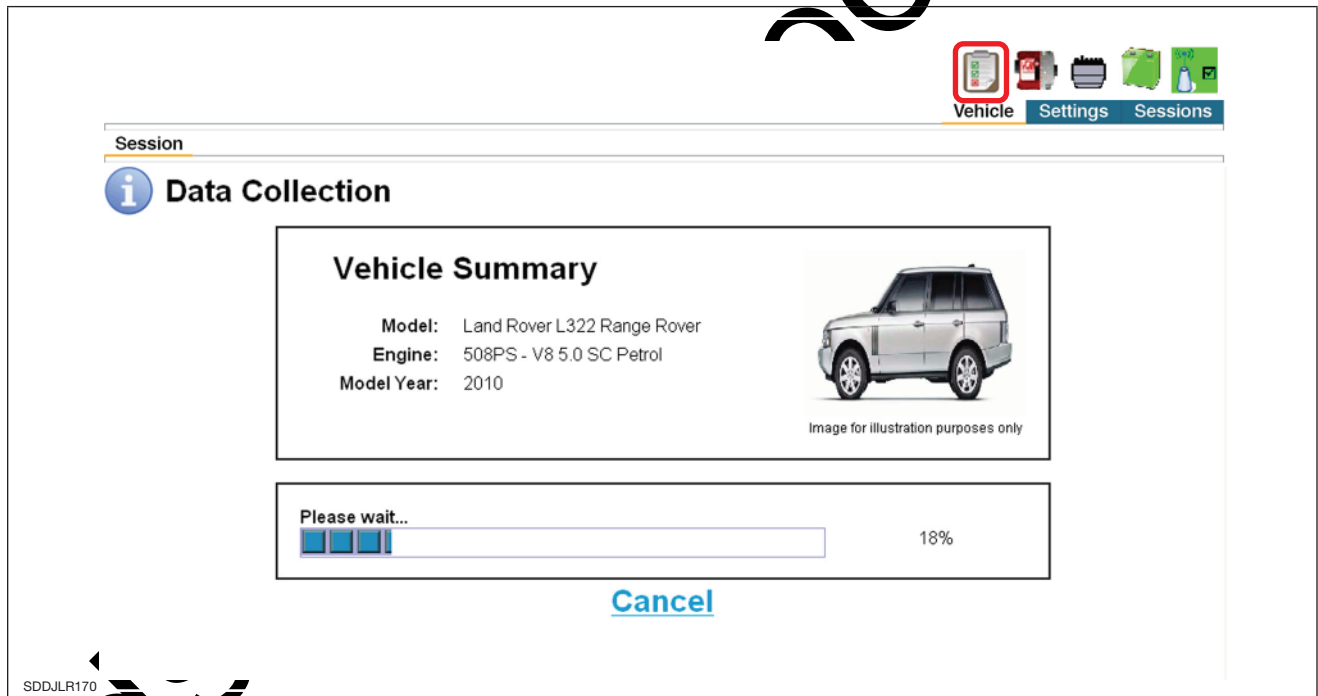


Once Data Collection is complete, SDD will display the Vehicle Specification screen.

The Vehicle Specification screen includes a summary of vehicle control module communication.

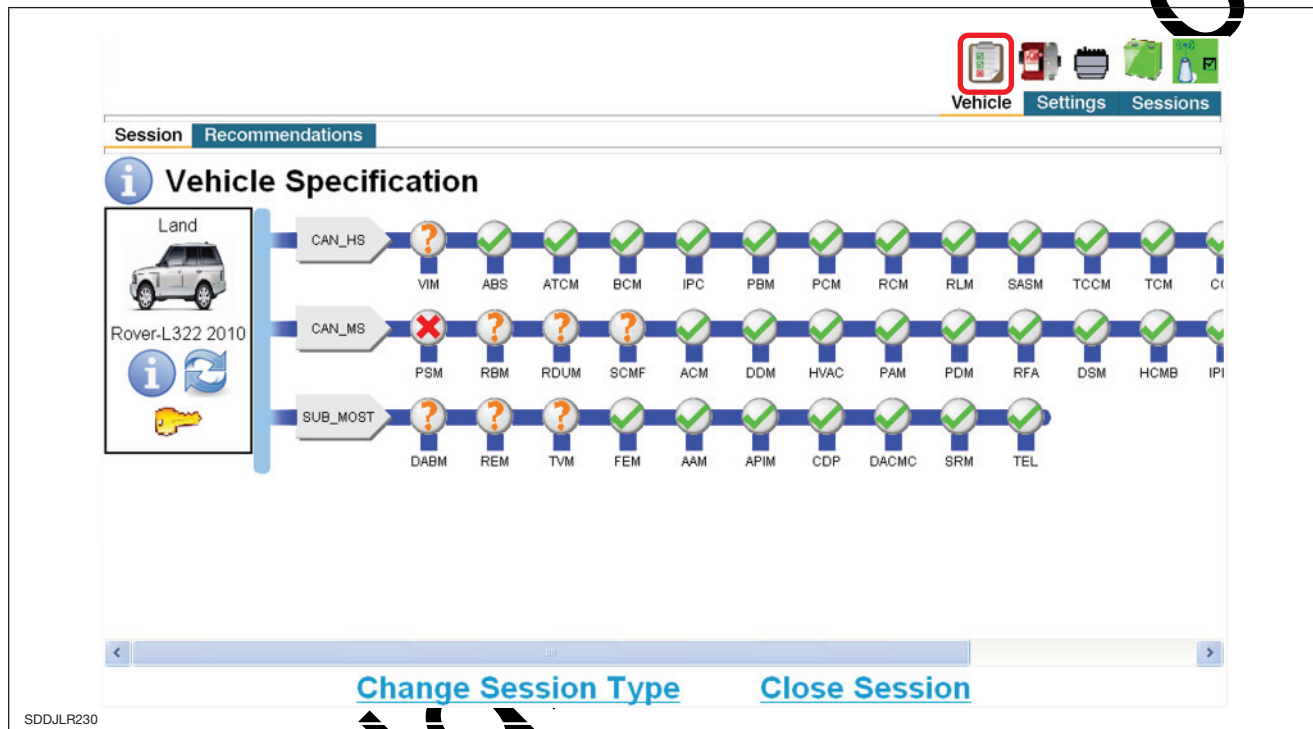

Clicking on the 'Recommendations' tab will prompt SDD to load 'Recommended Candidates' related to the session type.

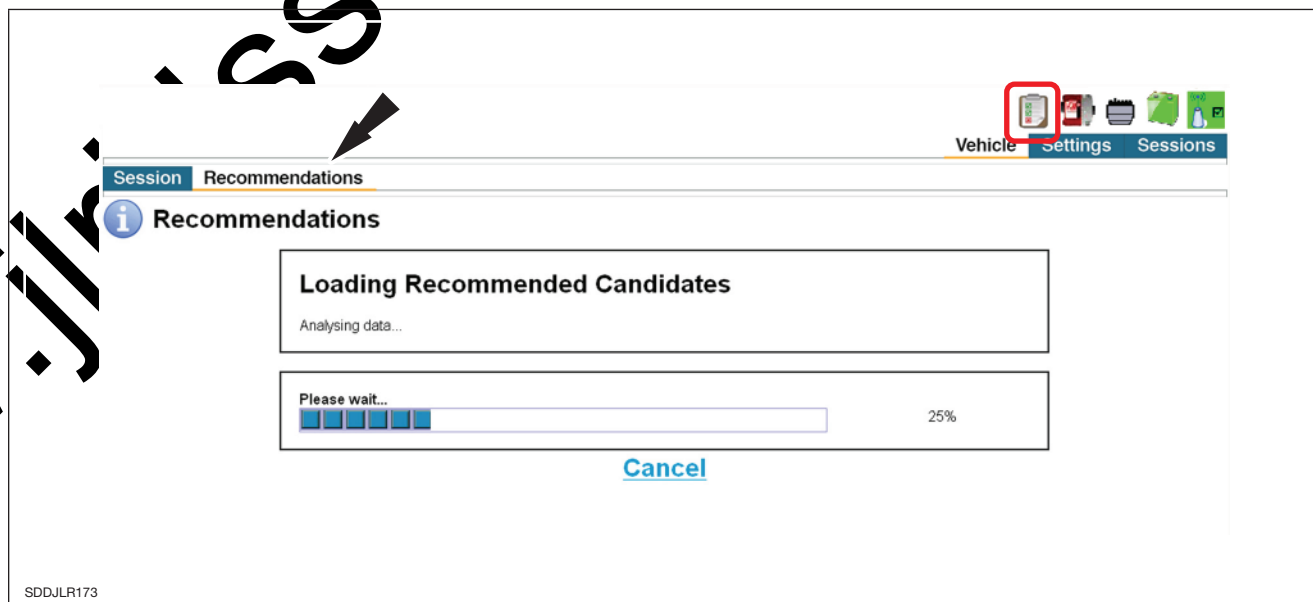

Recommended Candidates

A Candidate is a recommendation made by SDD for targeted diagnosis of a concern based on selected symptoms and DTCs read from the vehicle. A Candidate may be a Pinpoint Test, Pre-Configured Tool, Technical Service Bulletin, or other Document supported by SDD.

Recommendations may fall into a number of categories, represented by a series of icons for identification.



Recommended Candidates are displayed in 3 categories:

- Highly Recommended
- Recommended
- General Diagnostics and Tools

Candidates are displayed in order of priority relevant to the current session.

The right-hand 'Options' column gives the user the option to 'Run' or 'Read' the Recommended Candidate. The 'Status' column will indicate whether or not the candidate has been Run or Read.

Recommendations (Ordered by priority)

Highly Recommended

Type	Description	Status	Options
	Special applications - Pre-delivery inspection.	Not run	Run
	Clear all stored Diagnostic Trouble Codes	Not run	Run
	Special applications - Transportation mode	Not run	Run

Recommended

Type	Description	Status	Options
	Car configuration management - Current vehicle car configuration modification	Not run	Run
	Lighting - Daylight running lamps mode	Not run	Run
	Add/remove accessories - Tire size (rolling circumference)	Not run	Run
	Add/remove accessories - Parking aid control module.	Not run	Run

General Diagnostics and Tools

None

SDDJLR174

In this case, the highest priority Candidate is the Pre-Delivery Inspection (PDI), which is performed using the latest PDI sheet. To launch the application, click on 'Run' in the right-hand 'Options' column.

When the application is launched, SDD will display any outstanding updates – Update Prior to Sale Notice (UPS) or Technical Service Bulletins (TSBs), for example.


NOTE: It is important that all outstanding updates be carried out before continuing with the session.

NOTE: Always check TOPIx for the latest publications.

MEASUREMENT APPLICATIONS SESSION TYPE



Select this Session Type to access the Measurement Applications for the selected vehicle. Click on the icon on the Session Type Selection screen to launch the Session.

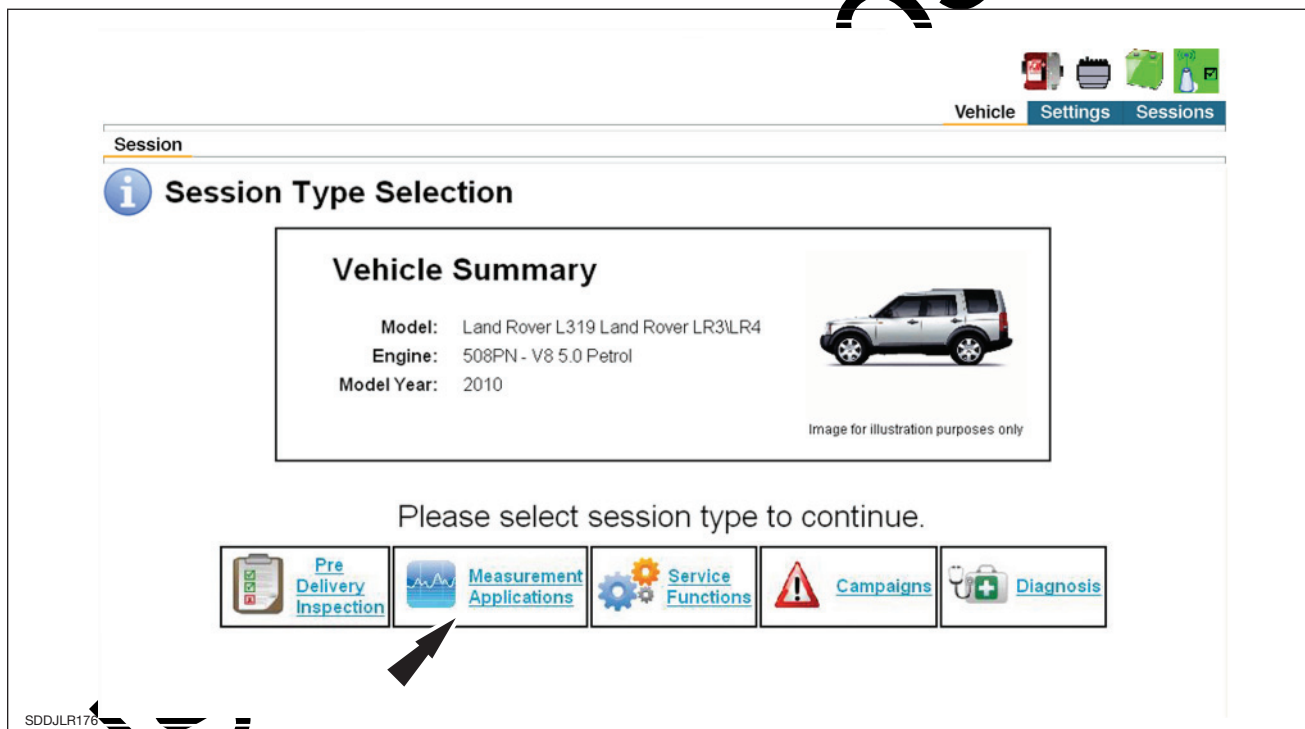

Measurement applications may include:


- Datalogger
- Digital multimeter *
- Oscilloscope *
- Vehicle Vibration Analyzer *
- Driveshaft balancing tool *

* These tools must be used in conjunction with the Vehicle Measurement Module (VMM), currently supported only for Jaguar vehicles. The appearance and function of these tools is unchanged.

Vehicle Measurement Module (VMM)



When using the VMM with Measurement Applications, the option must be selected in User Preferences in order for SDD to make accurate recommendations.

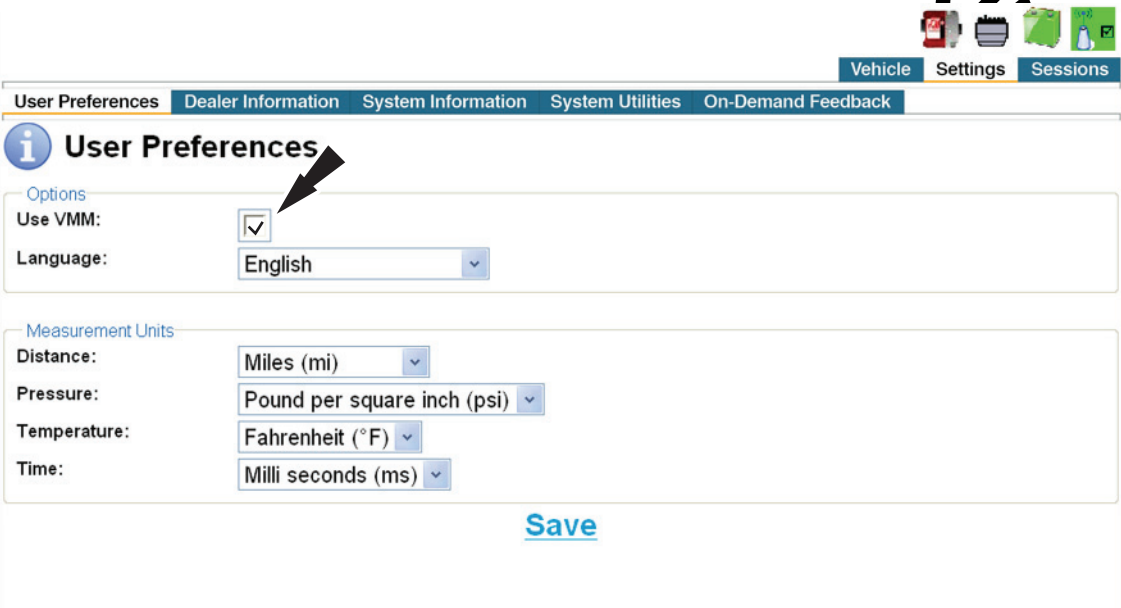

User Preferences

Options

Use VMM: ☒

Language: English

Measurement Units

Distance: Miles (mi)

Pressure: Pound per square inch (psi)

Temperature: Fahrenheit (°F)



Time: Milli seconds (ms)

[Save](#)

SDDJLR180


NOTE: This is an option for Land Rover vehicles.

As the Measurement Applications session is launched, SDD will perform the Data Collection process and then display the Vehicle Specification screen.

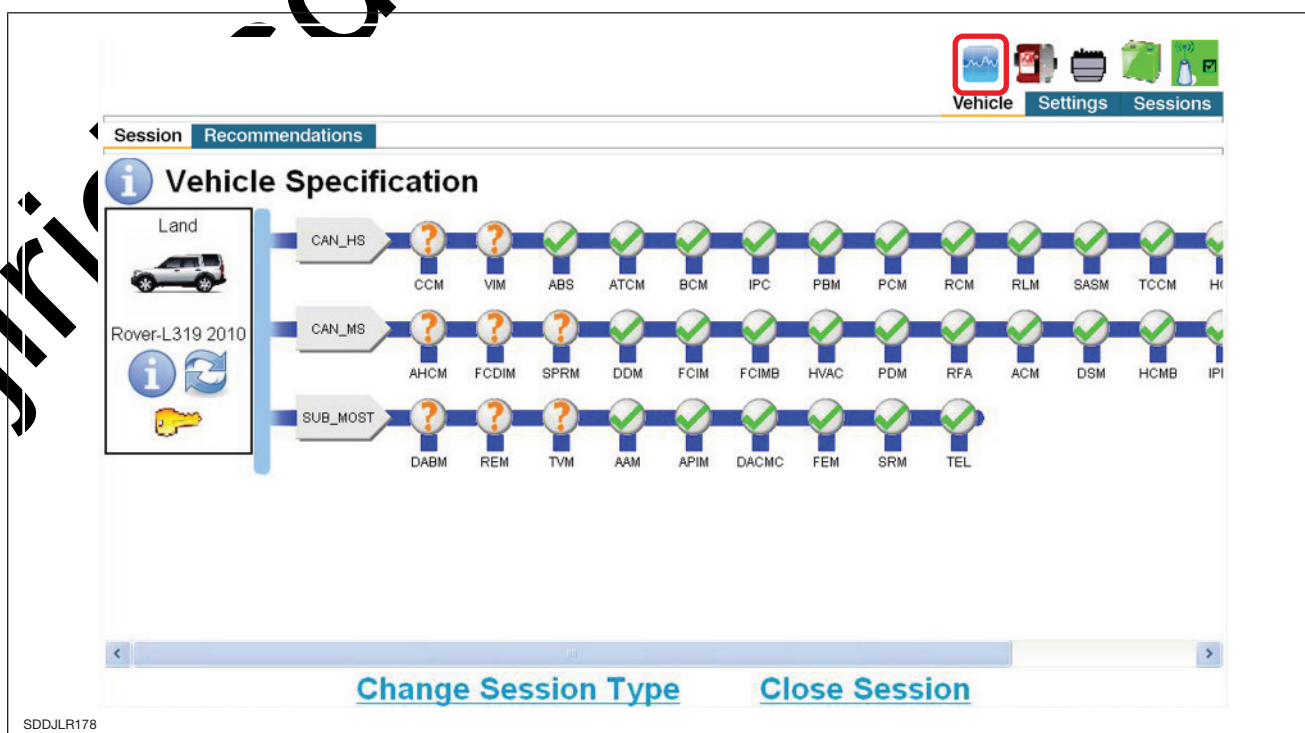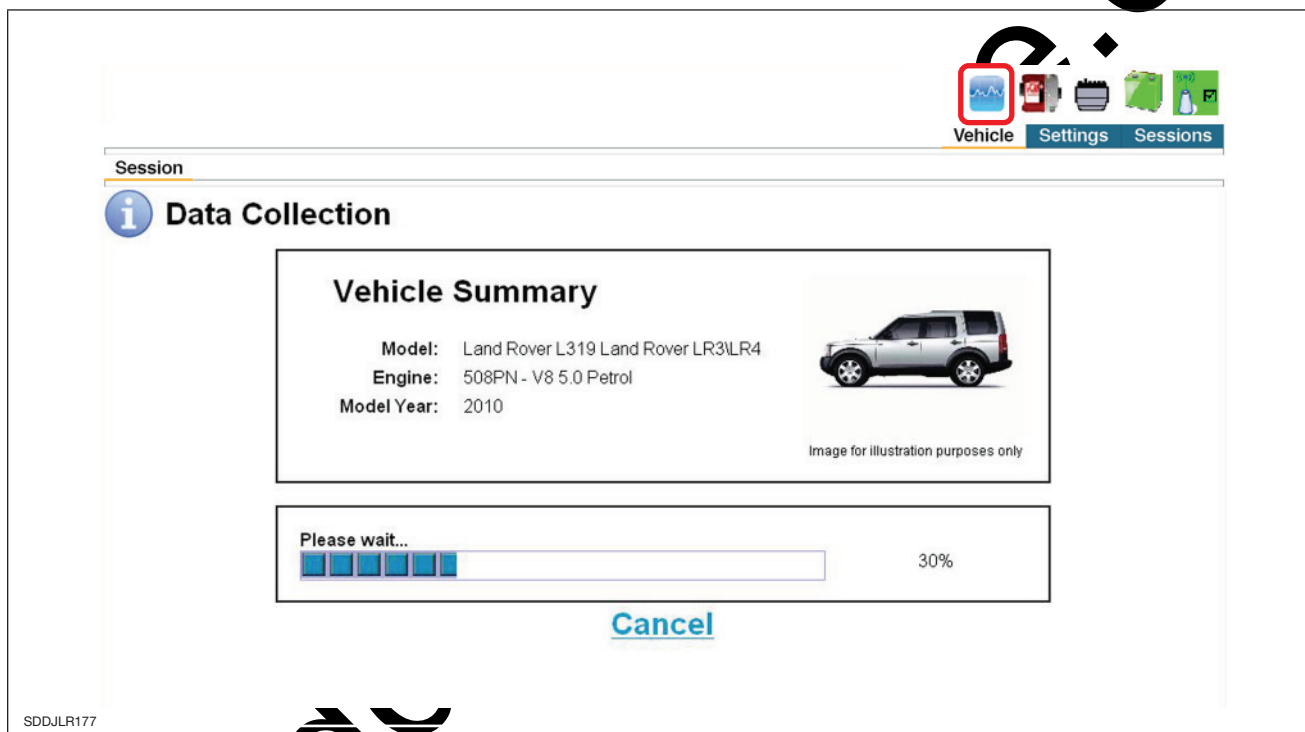

Recommendations

Click on the 'Recommendations' tab to load Recommended Candidates.

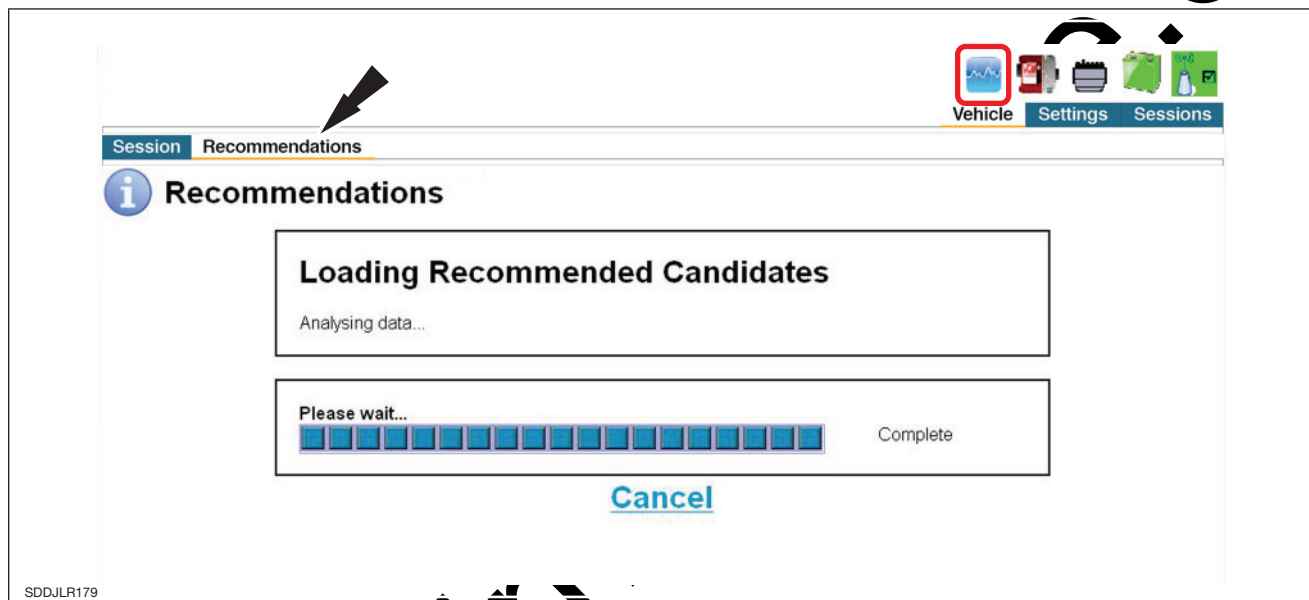

The recommendations displayed will depend on whether or not VMM is being used.

Recommendations without VMM

Vehicle Settings Sessions

Session Recommendations

Recommendations (Ordered by priority)

Highly Recommended

None

Recommended

Type	Description	Status	Options
	Complete vehicle - Datalogger	Not run	Run

General Diagnostics and Tools

None

SDDJLR181

NOTE: Datalogger is also available in the 'Diagnosis' session type.

Recommendations with VMM

Vehicle Settings Sessions

Session Recommendations

Recommendations (Ordered by priority)

Highly Recommended

Type	Description	Status	Options
	Complete vehicle - Digital multimeter.	Not run	Run
	Complete vehicle - Oscilloscope	Not run	Run

Recommended

Type	Description	Status	Options
	Complete vehicle - Datalogger	Not run	Run

General Diagnostics and Tools


Type	Description	Status	Options
	Digital multimeter help	Not read	Read
	Oscilloscope help	Not read	Read

SDDJLR182

NOTE: These applications only function with the Vehicle Measurement Module, currently supplied with Jaguar systems.

System Tools


Selecting 'Run' for any of the 'Highly Recommended' candidates will launch the System Tools.

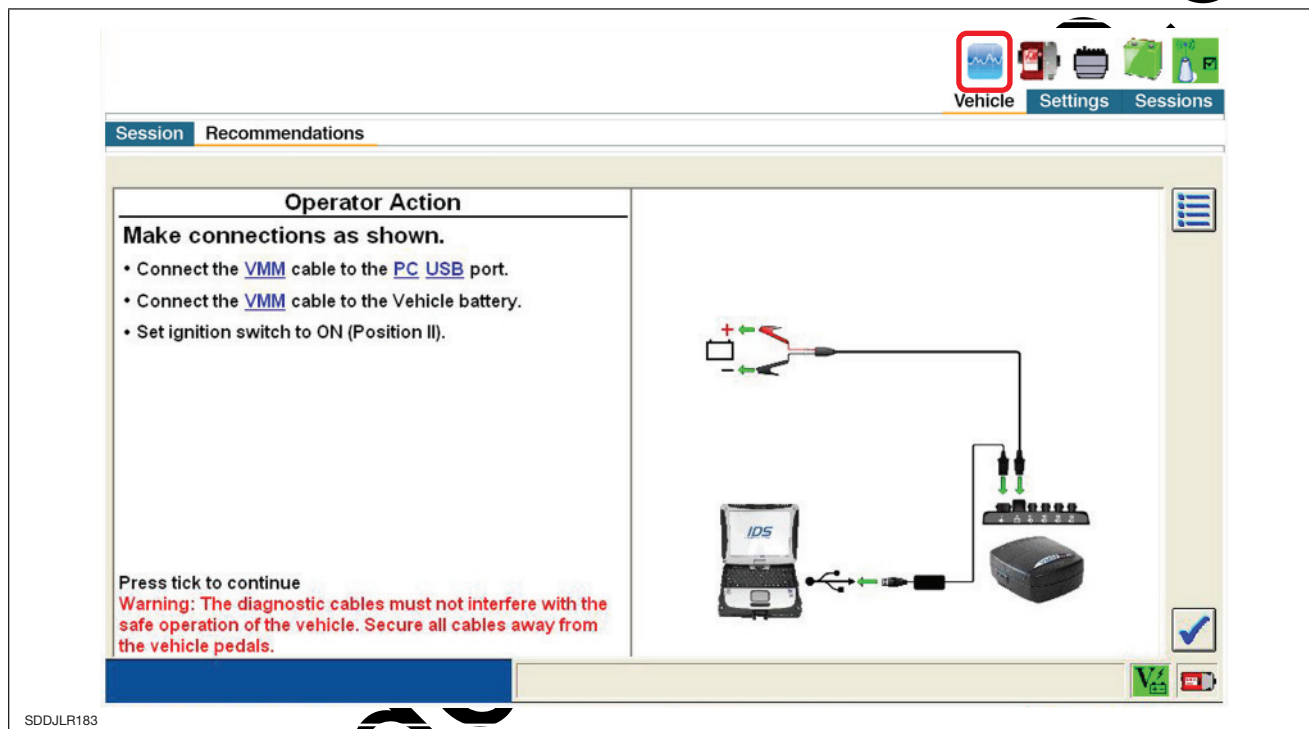


Help Screens

Selecting 'Read' for any of the Help options will display a Help screen for that tool.


Oscilloscope Help screen

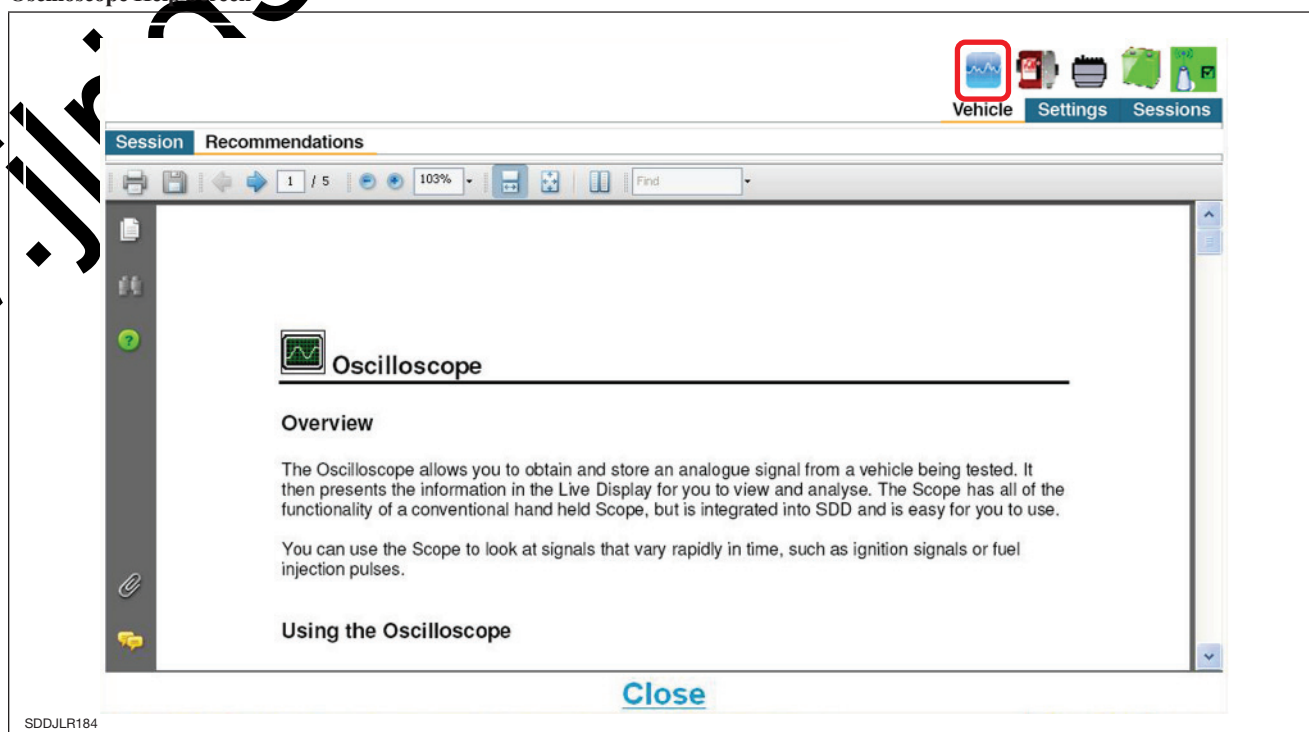

Digital Multimeter Help Screen

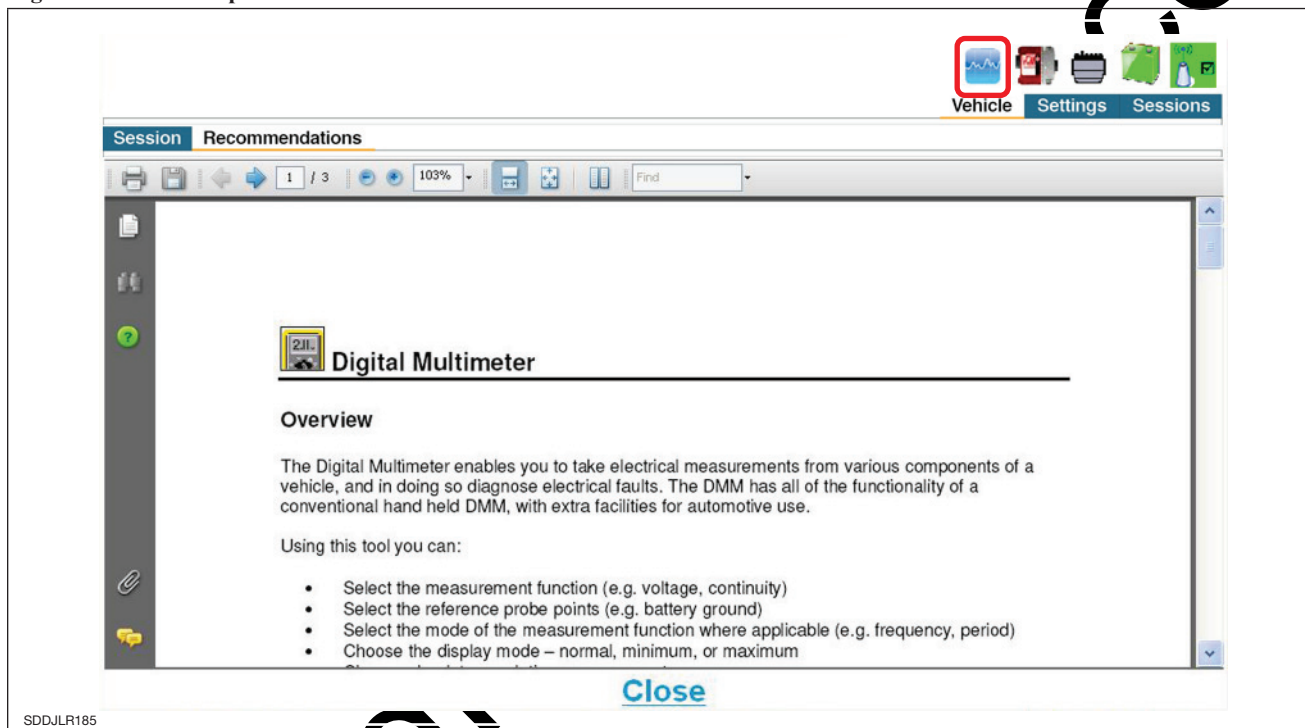


Vibration Analyzer Help Screen

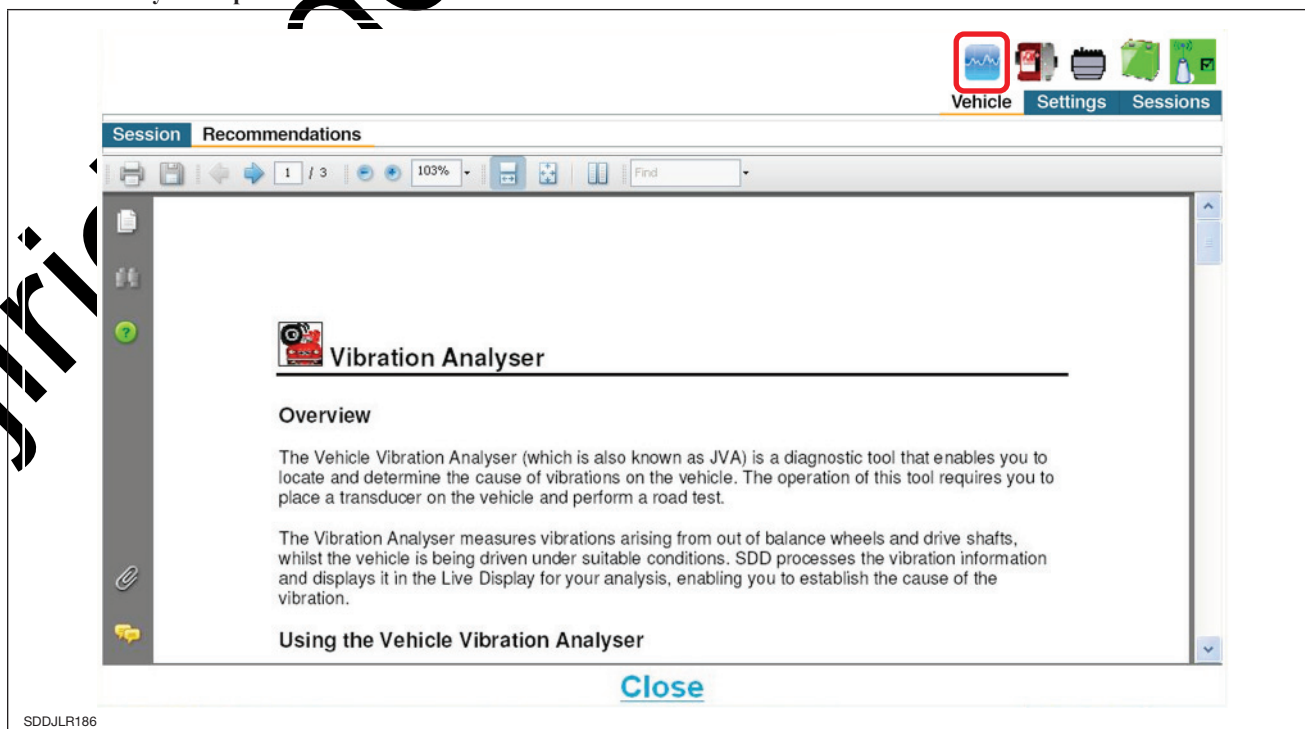

Exiting Measurement Tools

To exit the measurement tools, click on the System Options icon at the top of the Function Button bar, select 'Exit' from the pop-up window, and select the conformation 'tick'.

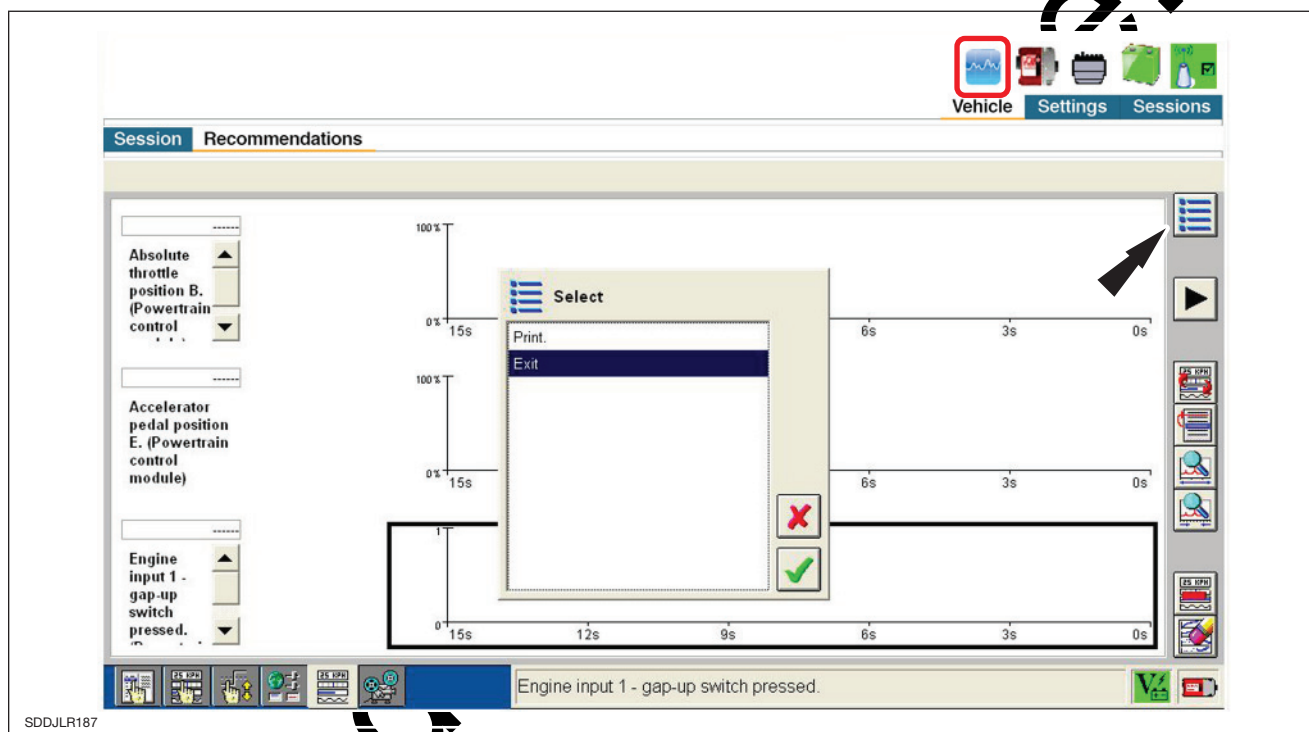


NOTE: Datalogger shows values similar.

SERVICE FUNCTIONS SESSION TYPE





Select this Session Type to access the Service Functions for the selected vehicle. Click on the icon on the Session Type Selection screen to launch the Session.

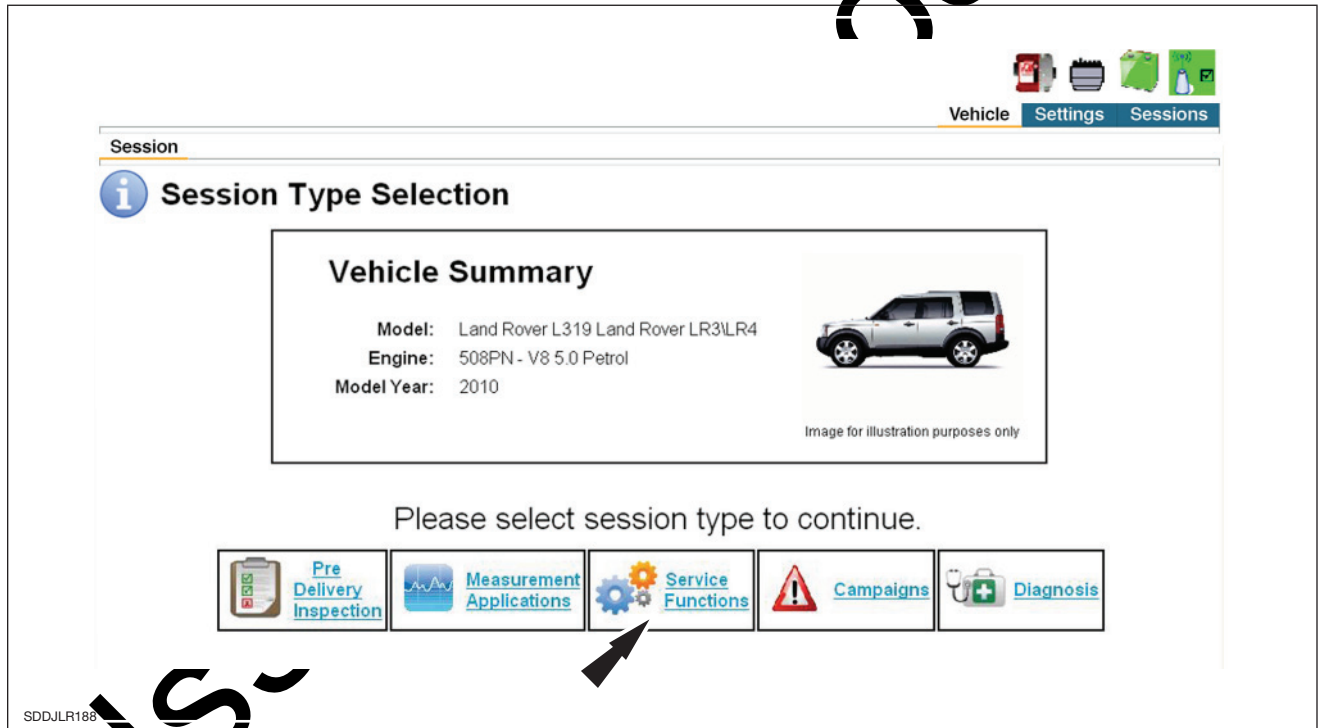

Service Functions include:

- Recalibrations
- Network Tests
- Set Ups
- Clear Adaptations
- Service Resets

Once the Data Collection process is complete and the Vehicle Specification screen is displayed, click on the 'Selected Systems' tab to display the System Selection screen.

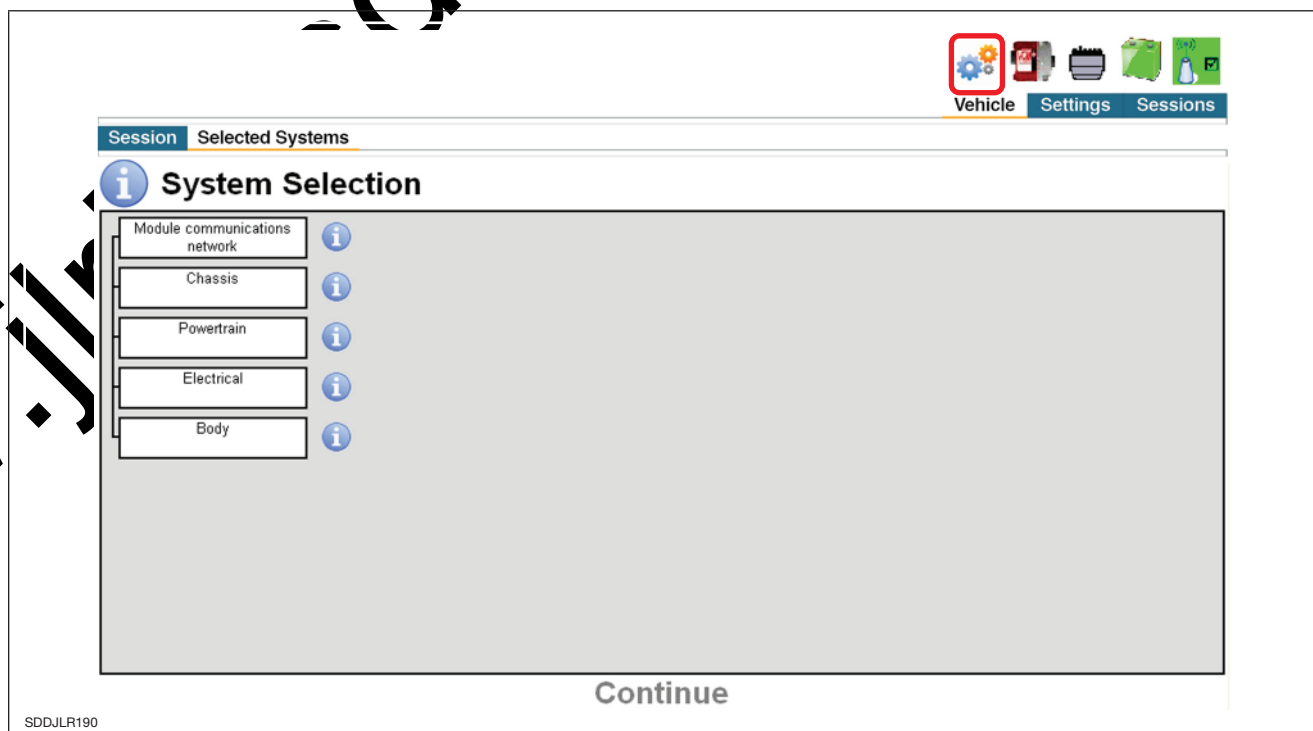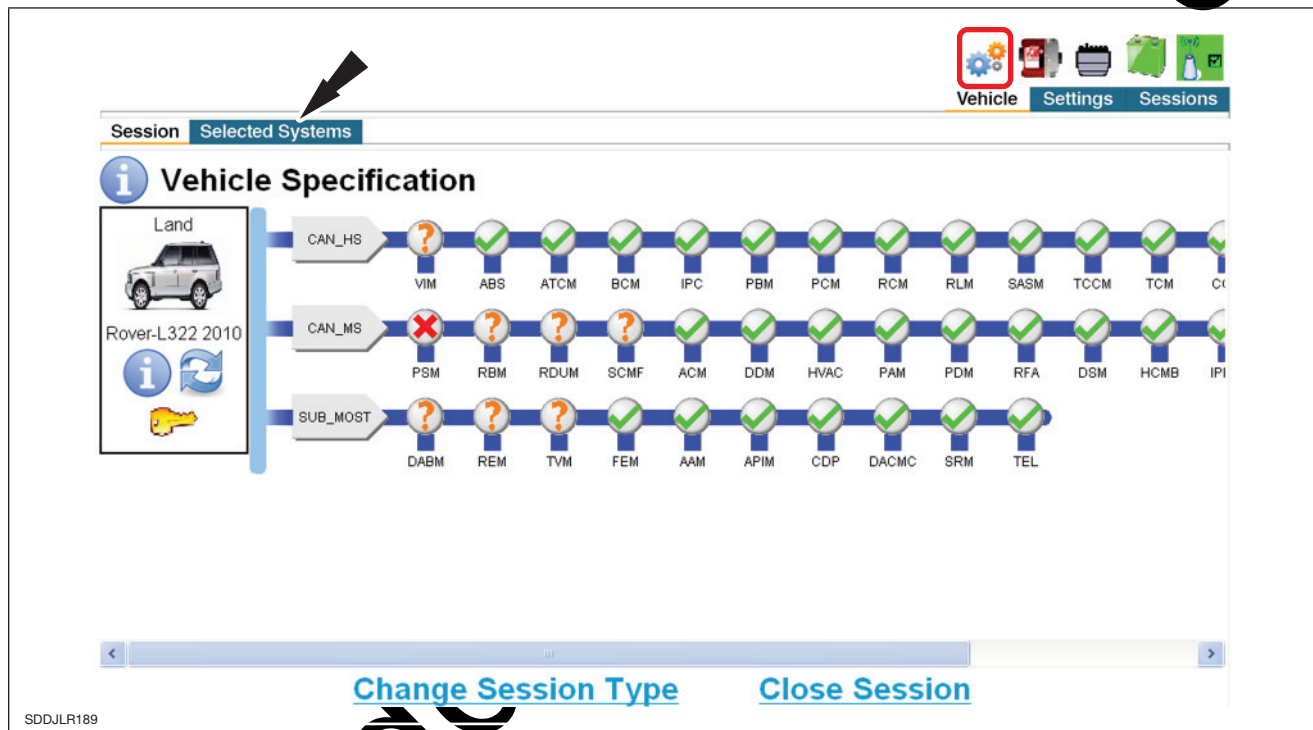

The map displayed in a Service Functions sessions offers a choice of systems, but no symptoms, since no diagnostics are performed in this Session Type.

CAMPAIGNS SESSION TYPE



Select this Session Type to access all mandated Service Actions or Service Recalls associated with the selected vehicle. Only recommendations for the selected vehicle will be displayed. Click on the icon on the Session Type Selection screen to launch the Session.

Vehicle Summary

Model: Land Rover L319 Land Rover LR3/LR4
Engine: 508PN - V8 5.0 Petrol
Model Year: 2010

Image for illustration purposes only


Please select session type to continue.

Pre Delivery Inspection Measurement Applications Service Functions Campaigns Diagnosis


SDDJLR191


NOTE: It is possible that there will be no Campaigns currently required for the selected vehicle.

As the Campaigns session is launched, SDD will perform the Data Collection process and then display the Vehicle Specification screen.

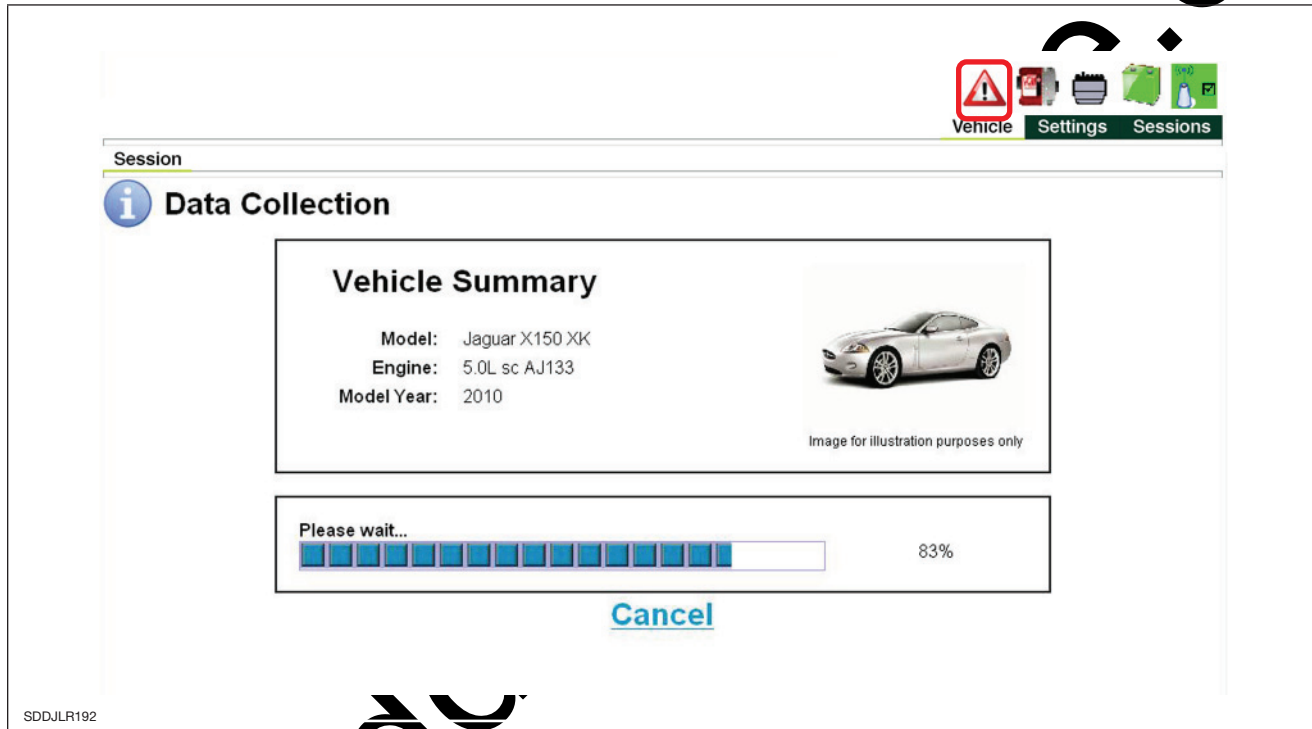

Clicking on the 'Recommendations' tab will prompt SDD to load 'Recommended Candidates' related to the session type.

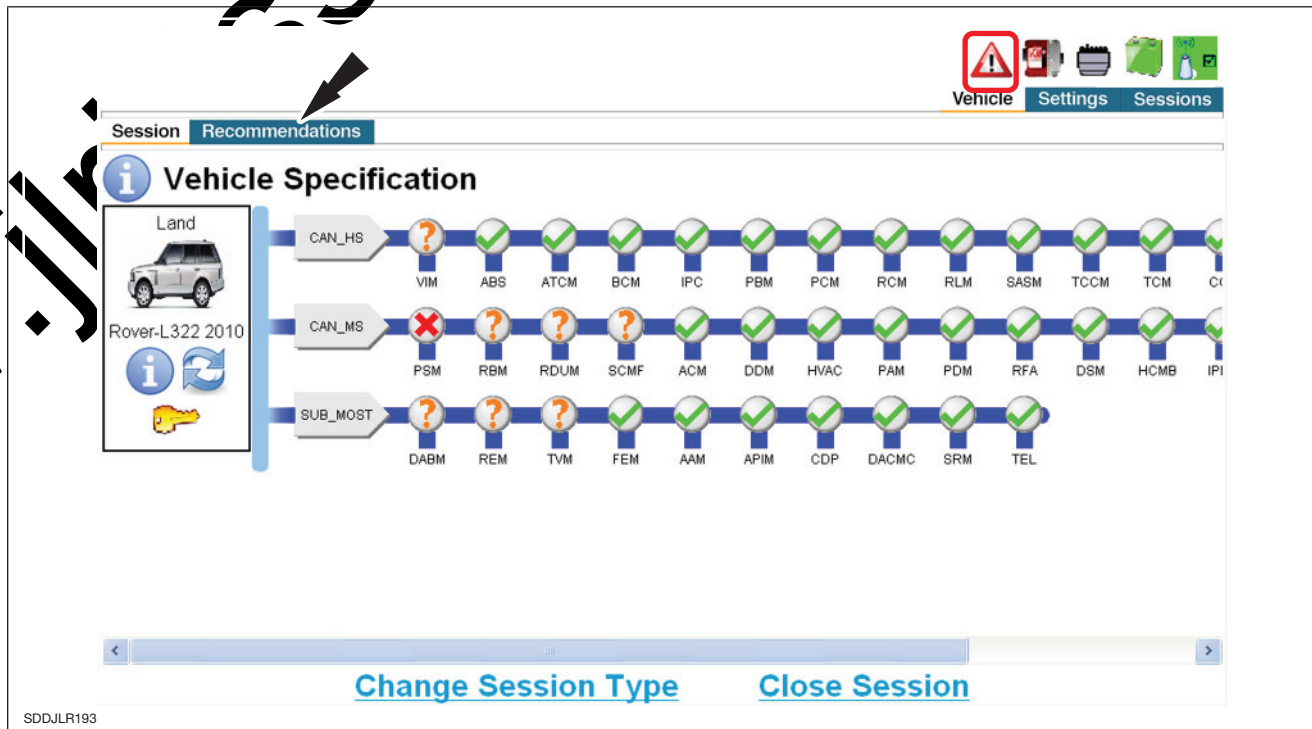

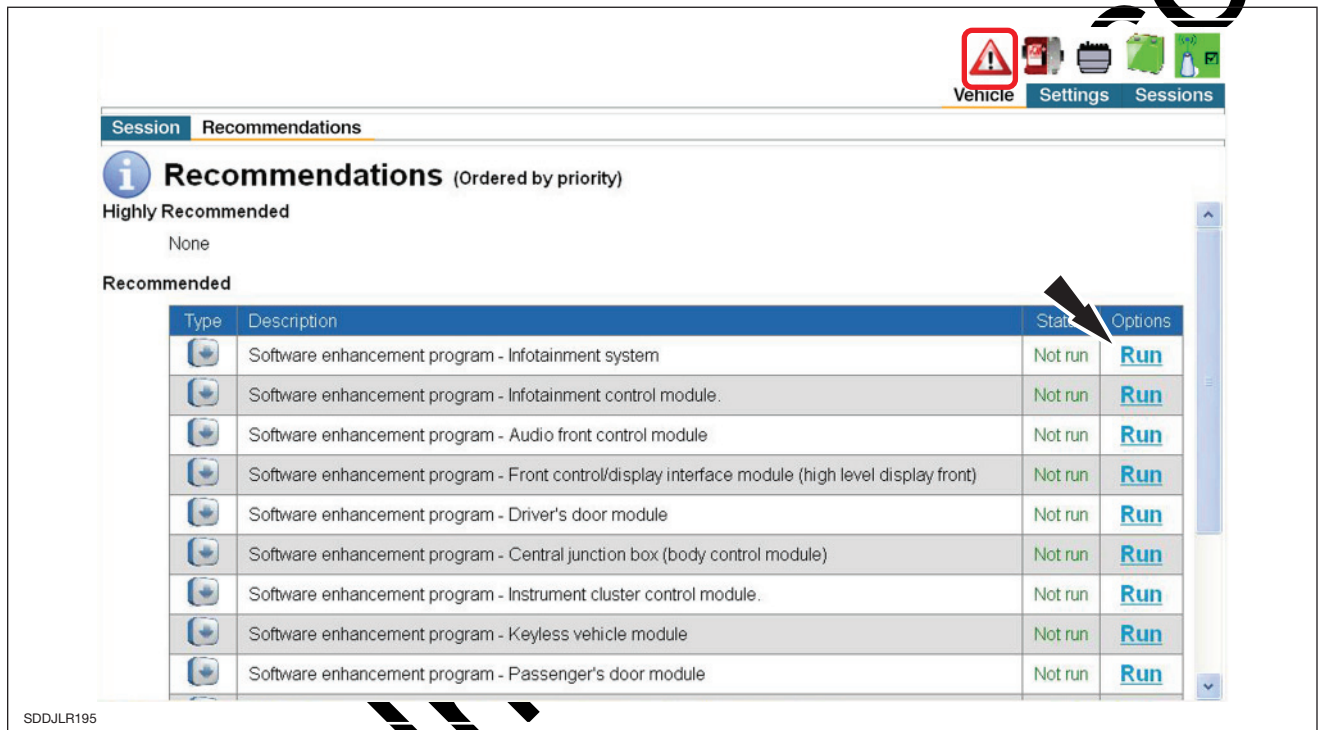

Session Recommendations (Ordered by priority)

Highly Recommended: None

Recommended:

Type	Description	Status	Options
	Software enhancement program - Infotainment system	Not run	Run
	Software enhancement program - Infotainment control module.	Not run	Run
	Software enhancement program - Audio front control module	Not run	Run
	Software enhancement program - Front control/display interface module (high level display front)	Not run	Run
	Software enhancement program - Driver's door module	Not run	Run
	Software enhancement program - Central junction box (body control module)	Not run	Run
	Software enhancement program - Instrument cluster control module.	Not run	Run
	Software enhancement program - Keyless vehicle module	Not run	Run
	Software enhancement program - Passenger's door module	Not run	Run

SDDJLR195

Campaign Recommendations may include:

- Recalls
- Recalibrations
- Software updates and enhancements

It is possible that there will be no Campaigns currently required for the selected vehicle.


To perform a recommended Campaign, click on 'Run' in the right-hand 'Options' column.

NOTE: Always check DDW to confirm which campaigns are open for a specific VIN. Do not perform a campaign if it is closed for that vehicle.

DIAGNOSIS SESSION TYPE





Select this Session Type to perform diagnostics on the selected vehicle. Click on the icon on the Session Type Selection screen to launch the Session.

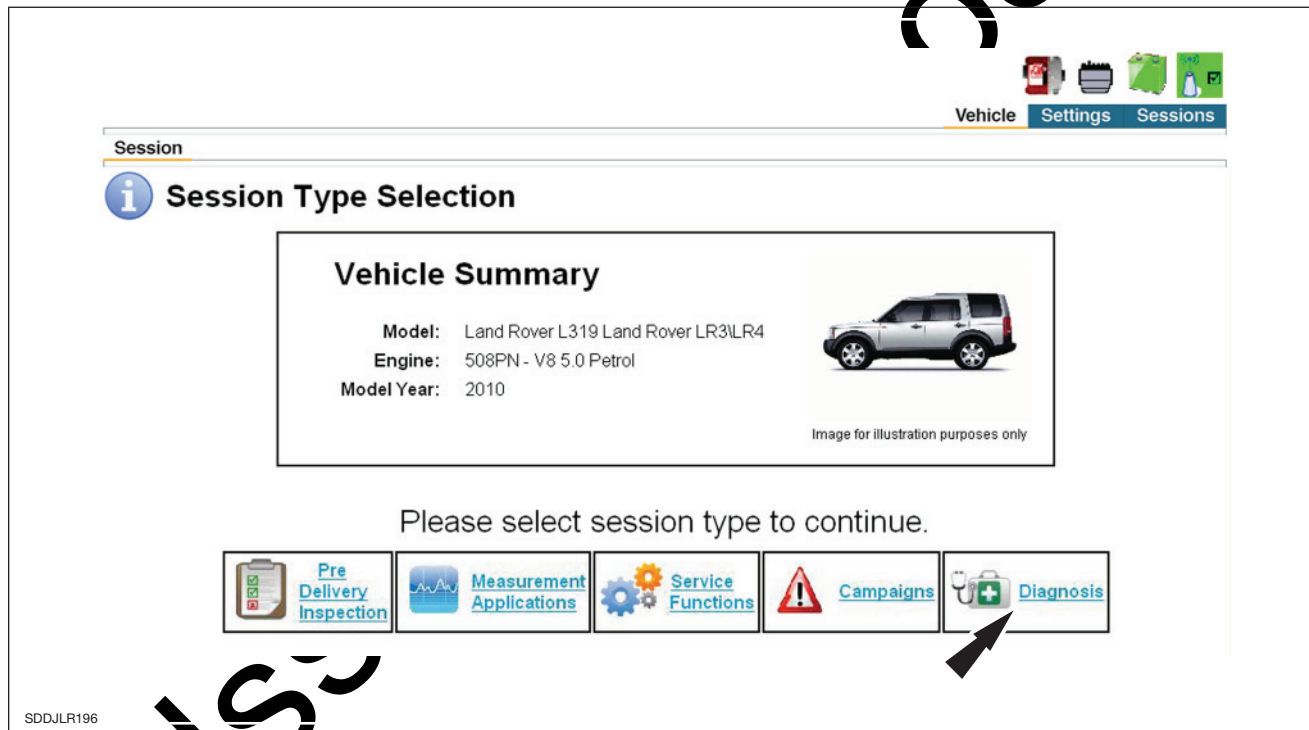


⚠ IMPORTANT NOTE: Because SDD relies on logged DTCs in conjunction with vehicle symptoms to perform diagnostics, it is very important that you **DO NOT CLEAR DTCs** unless instructed to do so by SDD. Clearing DTCs will clear the vehicle fault history and erase important data required for correct diagnosis of a concern.

As the Diagnosis session is launched, SDD will perform the Data Collection process and then display the Vehicle Specification screen.

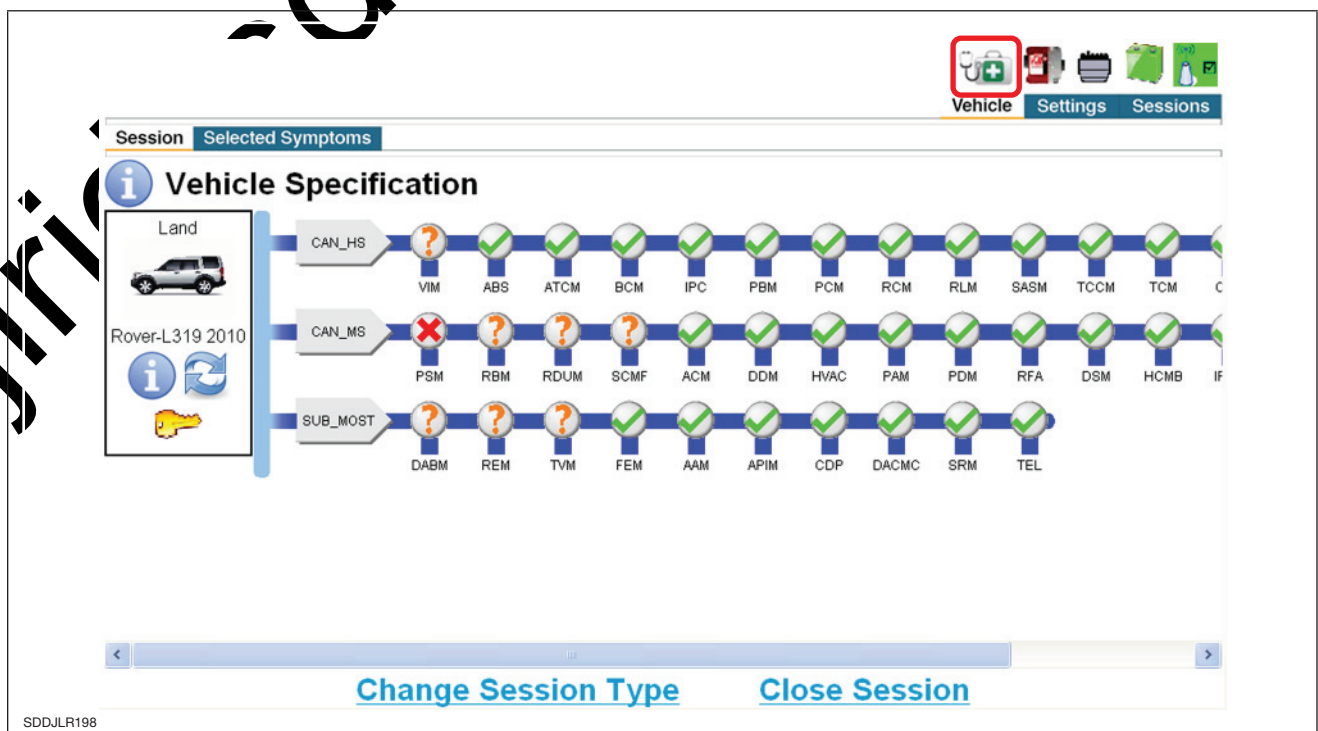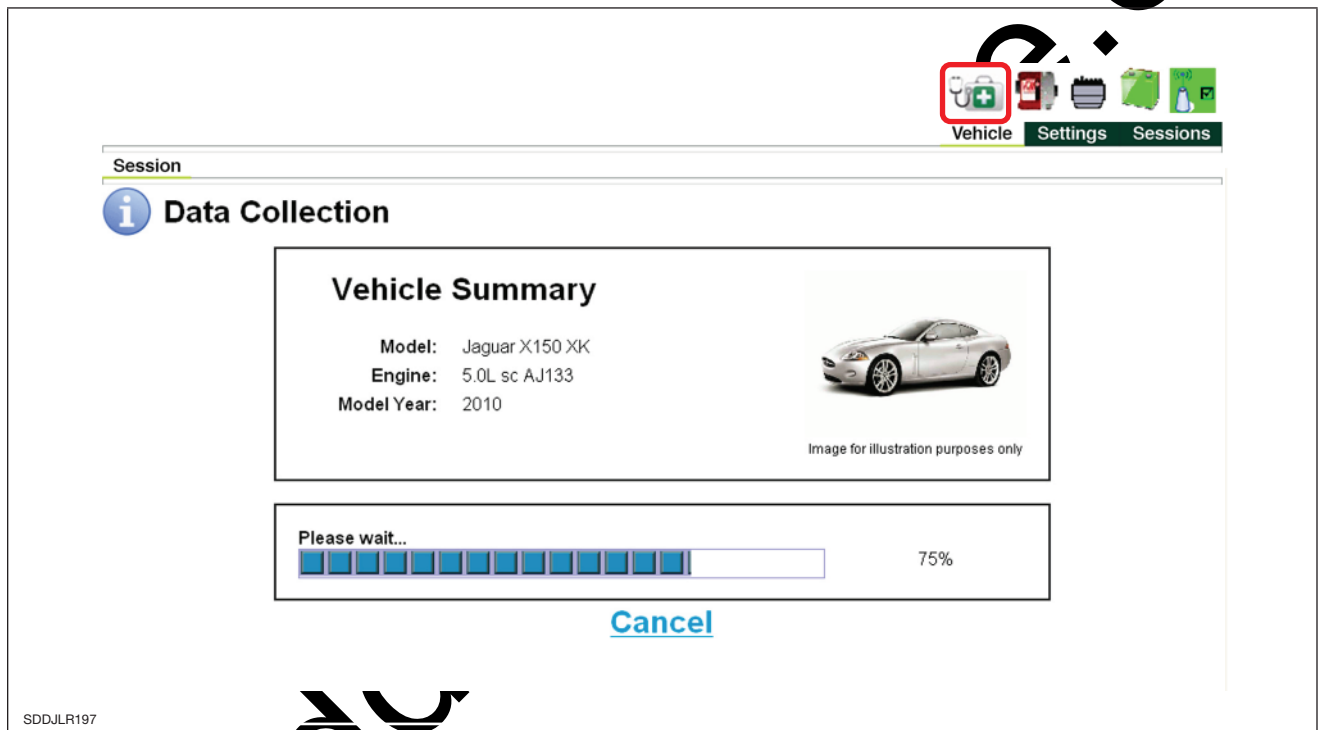

Network Summary

The Vehicle Specification screen includes the Network Summary, which shows the results of IDS's attempt to establish communication with each of the vehicle control modules. Possible communication faults can be identified from the Network Summary.

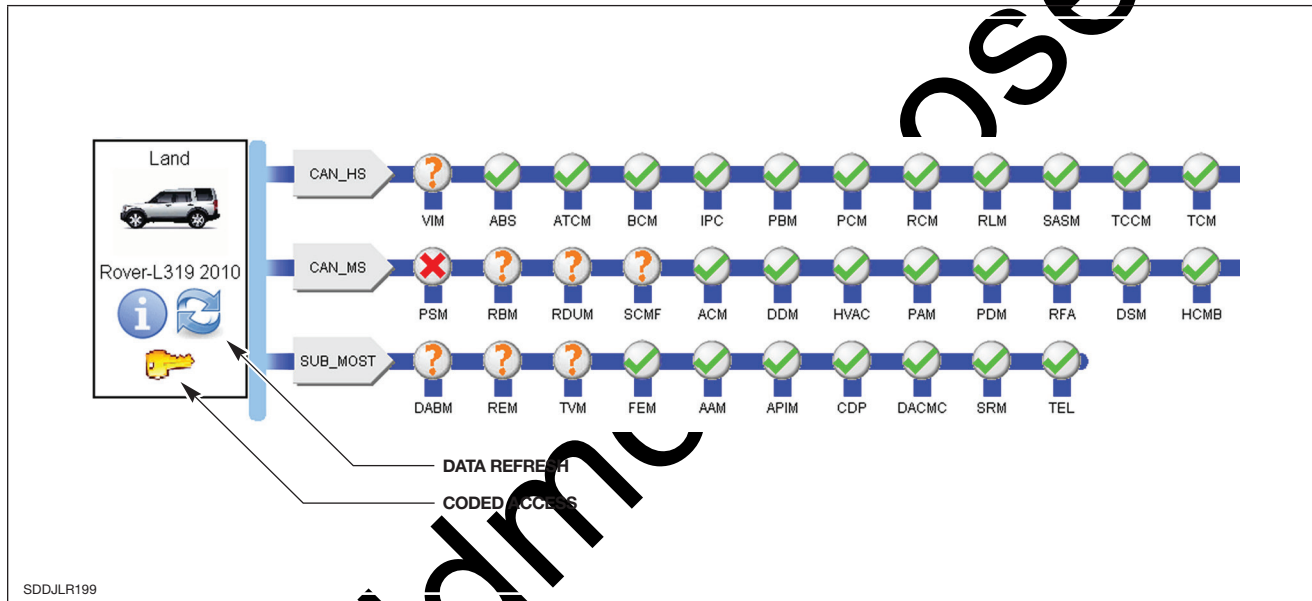

The graphic depicts each of the major networks and the modules associated with them. Within each network, the modules are grouped alphabetically by response status. The response status depends on whether the module is required or optional on the selected vehicle. Status is represented by one of the following icons:

- Red 'X' – indicates that a required module did not respond
- Amber '?' – indicates that an optional module did not respond; this may indicate a communication failure, or it may simply mean that, as an optional module, the module is not installed on the selected vehicle
- Green 'Tick' – indicates that the module is installed on the vehicle and has responded to SDD

If installed modules have failed to respond, attempt to establish communication by cycling the ignition, disconnecting and reconnecting IDS cables, then clicking the 'Refresh' icon.



NOTE: The Network Summary does not represent actual vehicle network architecture and does not offer a direct evaluation of vehicle network failures.

The summary is an indication of communication between IDS and the control modules. Once communication is established with all functioning modules, the user may proceed with the session.

Network Summary Communication Failures

If the Network Summary indicates communications failures, the user must investigate the causes before performing diagnostic work using SDD, and in particular before clearing any DTCs. It is important that users understand the potential problems that can be created when IDS fails to capture all possible DTC information at the start of a diagnostic session.

In most cases, if the IDS equipment is properly maintained, and the vehicle's DLC is not damaged, a negative result seen in the Network Summary will simply indicate a problem within the vehicle network or specific control module.

However, IF the communication failures seen in the Network Summary are actually the result of a problem with the IDS equipment or vehicle DLC, valuable DTC information from those control modules will not be available. This can compromise the ability of SDD to offer or effectively prioritize recommended tools.

If a session is started under such conditions, and a successful DTC clear procedure is performed before all available DTC data was captured from the vehicle, diagnostic data can be lost with no ability to recover it.

If symptoms of a customer concern are intermittent, and the stored DTC information is inadvertently cleared, the effectiveness of SDD will be greatly reduced, and FRFT will be difficult to achieve.

 **IMPORTANT NOTE:** Because SDD relies on logged DTCs in conjunction with vehicle symptoms to perform diagnostics, it is very important that you **DO NOT CLEAR DTCs** unless instructed to do so by SDD.

Best Practices

When the Network Summary indicates communication problems for one or more control modules, first perform some basic visual checks of the IDS hardware and vehicle DLC. It may be effective to cycle the ignition as well.

Reconnect the cables, and then click the 'Refresh' icon on the Network Summary screen

If the Network Summary now indicates complete success, it will be 'safe' to proceed with whatever diagnostic/service work is required for this session, as all the vehicle DTC information will have been collected and saved for use.

If the Network Summary still indicates negative results, consider which modules are being reported as 'off line', and compare that to the vehicle behavior.

For example, if the ABS module displays a red 'X' on the Network Summary, and the ABS module itself is not communicating on the vehicle networks, there should be numerous warning lamps and error messages displayed on the vehicle's instrument panel.

Network Integrity Test

The option to run a Network Integrity Test is found in the Recommendations under 'General Diagnostics and Tools'.

Recommendations (Ordered by priority)

Highly Recommended

Type	Description	Status	Options
	LOST COMMUNICATIONS WITH THE PARKING AID MODULE.	Not run	Run
	LOST COMMUNICATIONS WITH THE ANTI-LOCK BRAKING SYSTEM.	Not run	Run
	LOST COMMUNICATIONS WITH THE BODY CONTROL MODULE.	Not run	Run

Recommended

None

General Diagnostics and Tools

Type	Description	Status	Options
	Car configuration management - Session active car configuration selection	Not run	Run
	Car configuration management - Current vehicle car configuration modification	Not run	Run
	Module information - Network integrity test	Not run	Run
	Special applications - Vehicle reset	Not run	Run

SDDJLR233

The results from the Network Test are displayed in a similar format to IDS 'classic'.

Extras

- 17:39:44 Network integrity test
- 17:39:44 VIN: 306676
- 17:40:17 Network test results.
- 17:40:19 Module : ABS control module
- 17:40:20 Module : Adaptive damping control module
- 17:40:22 Module : All terrain control module
- 17:40:23 Module : Body control module
- 17:40:25 Module : Speed control module
- 17:40:26 Module : Headlamp control module
- 17:40:27 Module : Instrument cluster control module.


SDDJLR200

SAMPLE DIAGNOSTIC ROUTINE


ABS Warning Light Illuminated

⚠ IMPORTANT NOTE: Because SDD relies on logged DTCs in conjunction with vehicle symptoms to perform diagnostics, it is very important that you **DO NOT CLEAR DTCs** unless instructed to do so by SDD. Clearing DTCs will clear the vehicle fault history and erase important data required for correct diagnosis of a concern.

Click on 'Diagnosis' on the Session Type Selection screen to launch the Session.

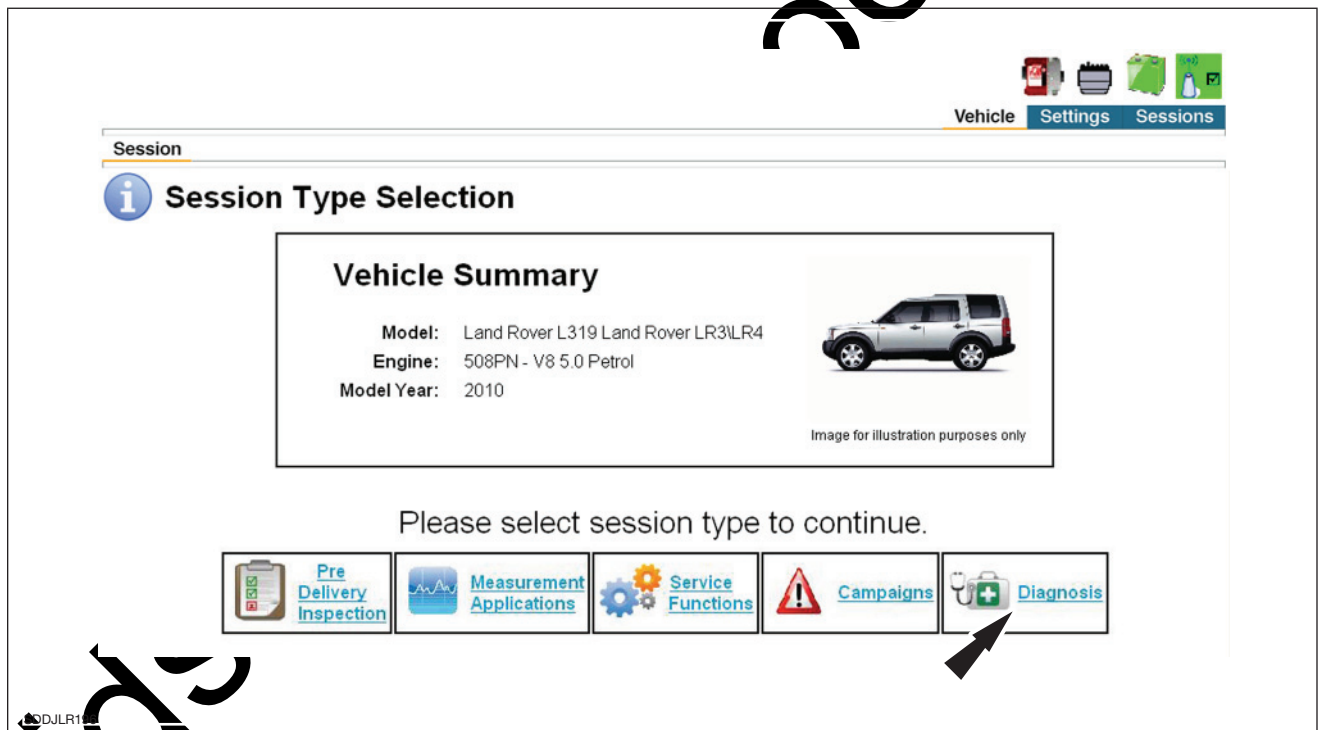

As the Diagnosis session is launched, SDD will perform the Data Collection process and then display the Vehicle Specification screen.

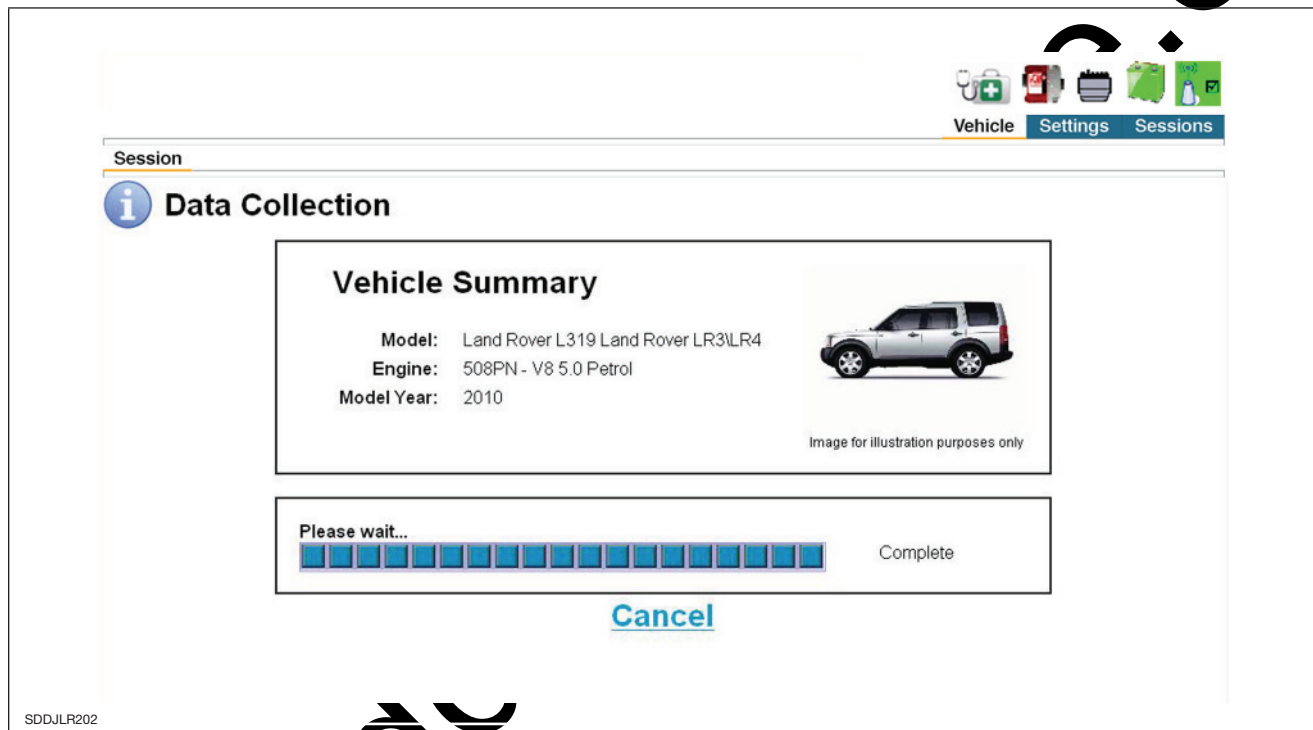

Click on the 'Selected Symptoms' tab to access the Symptom Selection screen.

