

Extras

Click on the 'Extras' tab for further recommendations.

Extras (Ordered by priority)

Type	Description	Status	Options
	Configure existing module - Instrument cluster control module.	Not run	Run
	Configure existing module - Central junction box (body control module)	Not run	Run
	Configure existing module - Auxiliary junction box (body control module B)	Not run	Run
	Configure new modules - Central junction box (body control module)	Not run	Run
	Configure new modules - Instrument cluster control module.	Not run	Run

SDDJLR220

⚠ CAUTION: Module programming and configuration must only be performed once all suggested routines and repairs have been completed.

VEHICLE SESSIONS

All Session files for the current vehicle can be viewed by clicking on the 'Sessions' tab.

The screenshot shows the 'Sessions' tab selected in the top navigation bar. Below the navigation bar are tabs for 'Load', 'Export', and 'Import'. The main content area is titled 'Load Sessions (SALAC44P795B32381)' and contains a table with the following data:

Created	Last Updated	Status	Session Type	Options
21-Jul-2009 14:12:20	21-Jul-2009 15:07:03	Viewing recommendations	Diagnosis	[Icons: Restore Session, Brief Summary, Full Description]
21-Jul-2009 14:09:22	21-Jul-2009 14:11:16	Collected data	Pre-Delivery Inspection	[Icons: Restore Session, Brief Summary, Full Description]
21-Jul-2009 13:59:58	21-Jul-2009 14:09:13	Collected data	Pre-Delivery Inspection	[Icons: Restore Session, Brief Summary, Full Description]
16-Jun-2009 09:35:15	16-Jun-2009 09:44:49	Viewing recommendations	Pre-Delivery Inspection	[Icons: Restore Session, Brief Summary, Full Description]
10-Jun-2009 11:17:58	10-Jun-2009 11:40:38	Running recommendations	Diagnosis	[Icons: Restore Session, Brief Summary, Full Description]
10-Jun-2009 10:22:05	10-Jun-2009 11:03:01	Running recommendations	Diagnosis	[Icons: Restore Session, Brief Summary, Full Description]
10-Jun-2009 09:36:35	10-Jun-2009 10:04:06	Running recommendations	Diagnosis	[Icons: Restore Session, Brief Summary, Full Description]
10-Jun-2009 07:27:23	10-Jun-2009 07:28:25	Viewing recommendations	Diagnosis	[Icons: Restore Session, Brief Summary, Full Description]

The 'Options' column contains three icons for each session: a green folder with a checkmark (Restore Session), a blue folder (Brief Summary), and a green folder with a magnifying glass (Full Description). An arrow points to the 'Sessions' tab in the top navigation bar.

SDDJLR222

For each Session, the user has the option to Restore the session or to view a Brief Summary or Full Description. Click on the appropriate icon for the desired option.

The diagram shows three options for each session, each with a corresponding icon:

- RESTORE SESSION**: Represented by a green folder with a checkmark icon.
- BRIEF SUMMARY**: Represented by a blue folder icon.
- FULL DESCRIPTION**: Represented by a green folder with a magnifying glass icon.

SDDJLR231

For each Session, a Brief Summary and a Full Description are available. These may be viewed onscreen or printed.

Brief Summary

SALAK2D46AA511126 date time Brief Summary

```

jlrFeedback: time="2009-10-20T17:00:10-0400" xsi:noNamespaceSchemaLocation="http://
vehicleId: time="2009-10-20T17:00:16-0400"
vinRead: vin="SALAK2D46AA511126" type="auto"
gradexProductSpec: grid="L319_UNKNOWN" odysseyDeliverable="L319_UNKNOWN"
sessionType="diag" time="2009-10-20T17:00:50-0400"
dataCollect: time="2009-10-20T17:04:25-0400"
qualifierList:
  CM_QUAL_PHONE_VOICE_CONTROL="VAL_N_PHONE_VOICE_CONTROL"
  VIN_Transmission="Automatic"
  VIN_TRANSMISSION="Automatic"
  VIN_BRAND="Land Rover"
  YEAR="MY10"
  MARQUE="LandRover"
  REPAIRER_TYPE="REPAIRER_ACCREDITED"
  CM_QUAL_TV="VAL_N_TV"
  CM_QUAL_HCMCB="VAL_AHBC"
  
```

Session Type	Options
Diagnosis	[Icons]
Unknown	[Icons]
Diagnosis	[Icons]

SDDJLR224

Full Description

SALAK2D46AA511126 date time Full Description

```


jlrFeedback: time="2009-10-20T17:00:10-0400" xsi:noNamespaceSchemaLocation="http://
vehicleId: time="2009-10-20T17:00:16-0400"
vinRead: vin="SALAK2D46AA511126" type="auto"
gradexProductSpec: grid="L319_UNKNOWN" odysseyDeliverable="L319_UNKNOWN"
sessionType="diag" time="2009-10-20T17:00:50-0400"
dataCollect: time="2009-10-20T17:04:25-0400"
pagmcpDidRead: id="ecu_vin" moduleId="IPC" moduleAddress="0x720" did="0xF190"
response="53414C414B32443436414135313132360000000000000000"
pagmcpDidRead: id="vm_ecu_hw_pn" moduleId="IPC" moduleAddress="0x720" did="
error="unknown"
pagmcpDidRead: id="vm_ecu_sw_pn" moduleId="IPC" moduleAddress="0x720" did="
response="414832322D3134433032362D414500000000000000000000"
pagmcpDidRead: id="ecu_sn" moduleId="IPC" moduleAddress="0x720" did="0xF18C"
response="4D4C543303032473900000000000000000000000000"
pagmcpDidRead: id="ecu_cal_01_pn" moduleId="IPC" moduleAddress="0x720" did="
response="414832322D3134433038382D414530310000000000000000"
  
```

Session Type	Options
Diagnosis	[Icons]
Unknown	[Icons]
Diagnosis	[Icons]

SDDJLR223

Export Sessions

Sessions can also be imported and exported from the 'Sessions' tab. To export a Session, select the desired session from the left-hand column and click on the 'Export' tab.

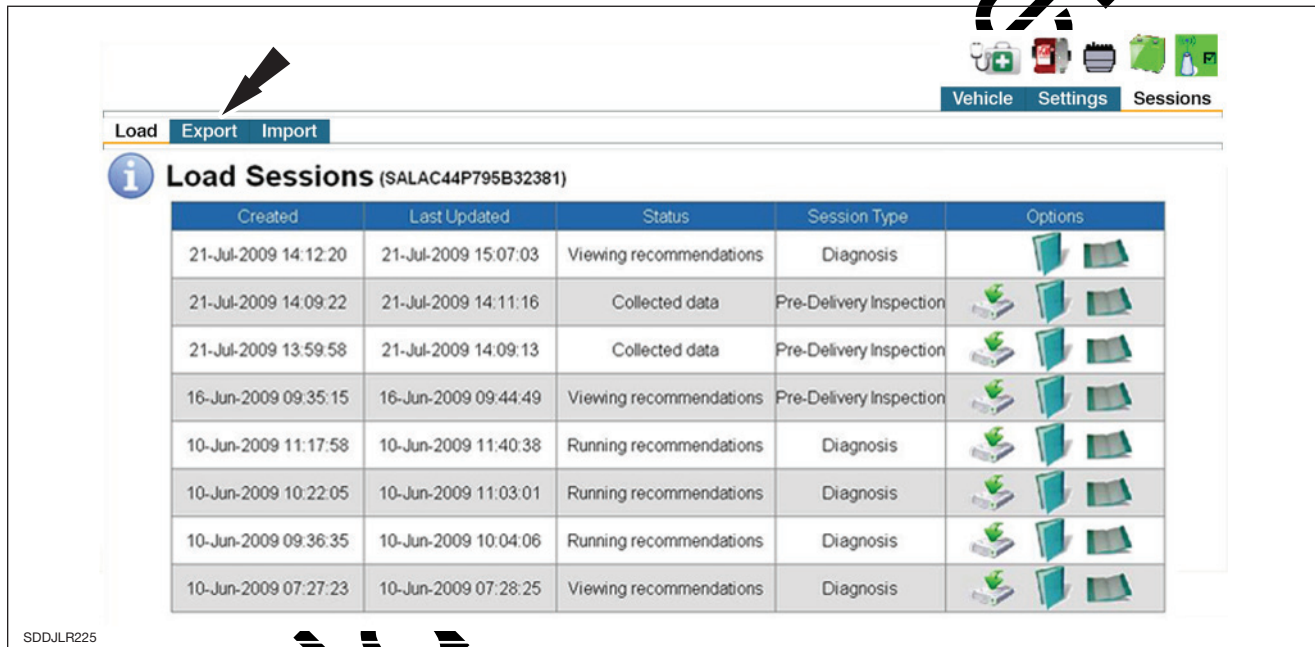

The screenshot shows the 'Vehicle Sessions' interface. At the top, there are tabs for 'Vehicle', 'Settings', and 'Sessions'. The 'Sessions' tab is active. Below the tabs, there is a sub-tab bar with 'Load', 'Export', and 'Import'. The 'Export' tab is selected, indicated by a black arrow. Below the sub-tab bar, there is a section titled 'Load Sessions (SALAC44P795B32381)' with an information icon. This section contains a table with the following data:

Created	Last Updated	Status	Session Type	Options
21-Jul-2009 14:12:20	21-Jul-2009 15:07:03	Viewing recommendations	Diagnosis	
21-Jul-2009 14:09:22	21-Jul-2009 14:11:16	Collected data	Pre-Delivery Inspection	
21-Jul-2009 13:59:58	21-Jul-2009 14:09:13	Collected data	Pre-Delivery Inspection	
16-Jun-2009 09:35:15	16-Jun-2009 09:44:49	Viewing recommendations	Pre-Delivery Inspection	
10-Jun-2009 11:17:58	10-Jun-2009 11:40:38	Running recommendations	Diagnosis	
10-Jun-2009 10:22:05	10-Jun-2009 11:03:01	Running recommendations	Diagnosis	
10-Jun-2009 09:36:35	10-Jun-2009 10:04:06	Running recommendations	Diagnosis	
10-Jun-2009 07:27:23	10-Jun-2009 07:28:25	Viewing recommendations	Diagnosis	

SDDJLR225

From the 'Export drive' drop-down, select the drive to which the session is to be saved, then click on 'Start Export'.


The screenshot shows the 'Export Sessions' window for vehicle ID SALWA4EC1AMB35150. At the top, there are tabs for 'Load', 'Export', and 'Import', with 'Export' being the active tab. Below the tabs, there's a section for 'Export drive' with a dropdown menu currently set to 'E:\'. To the right of the dropdown is a refresh icon. Below this, there's a checkbox for 'Overwrite existing export file:' which is currently unchecked. Further down, there are two radio buttons: 'Sessions for current vehicle' (which is selected) and 'All vehicles'. At the bottom of the main content area, there is a large, light gray button labeled 'Start Export'. The top right of the window features a toolbar with icons for various functions like vehicle selection, settings, and sessions. The bottom left corner of the window displays the text 'SDDJLR226'.

Once the Export is complete, the screen will display a 'File.....created' confirmation, as shown in the screen below.


This screenshot shows the same 'Export Sessions' window after the export process has completed. The 'Export drive' dropdown remains at 'E:\'. The 'Overwrite existing export file:' checkbox is now checked, indicated by a green checkmark. Below the radio buttons, a green message appears: 'File "E:\SDD_SA_JWA4EC1AMB35150.zip" created'. The 'Start Export' button is now highlighted in blue. The bottom left corner of the window displays the text 'SDDJLR227'.

Import Sessions

From the following screen select 'Import'. The screen will display file details and vehicle chassis VIN. Click on 'Start Import' to load session.

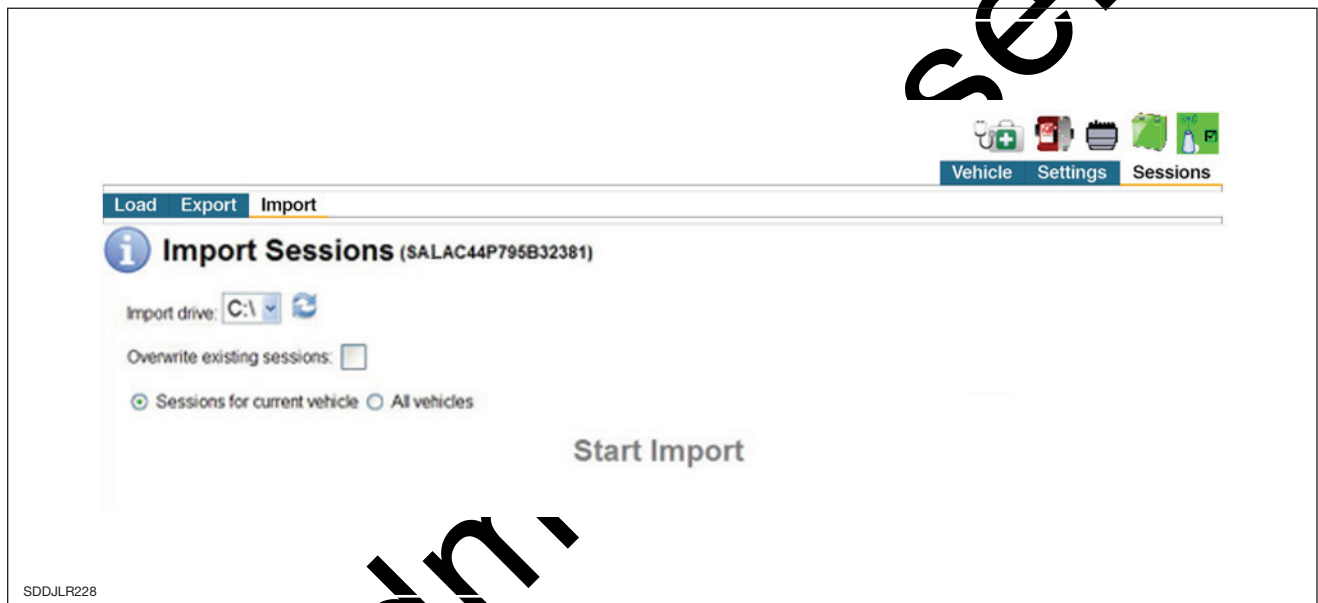

Once the Import is complete, the screen will display a 'Files imported from...' confirmation, as shown in the screen below.

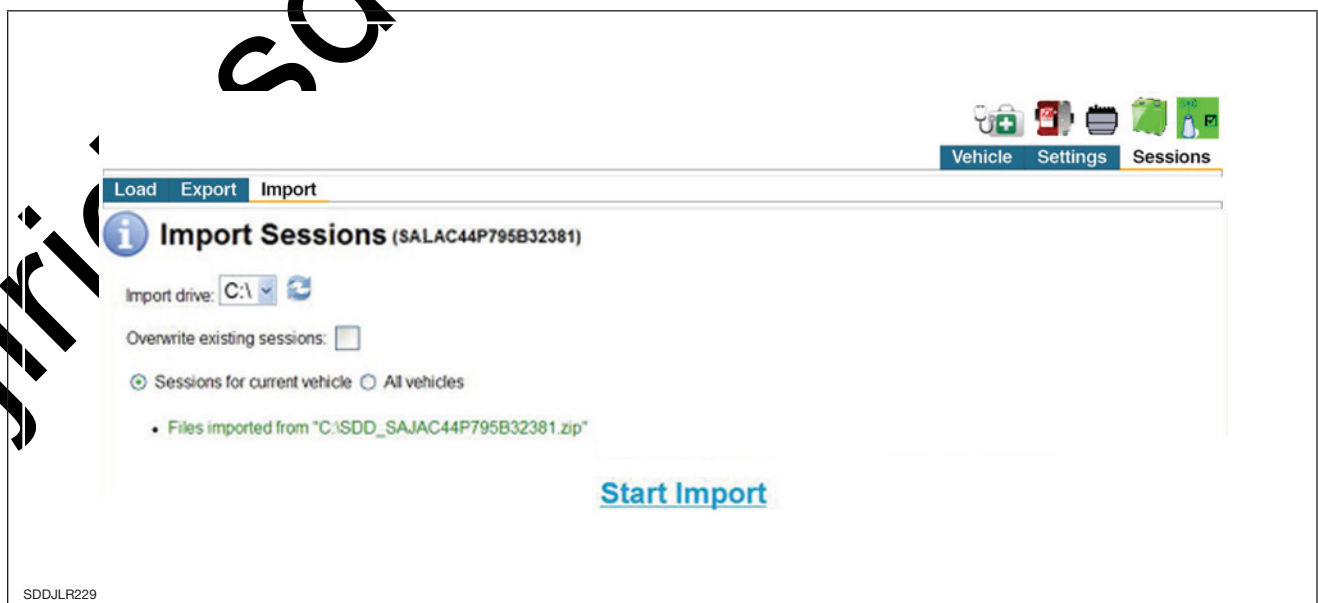

REPAIR VALIDATION

Since SDD is designed to retain DTC information first read from the vehicle during the current session, some specific actions must be taken to ensure technicians are correctly interpreting the DTCs displayed when performing a repair validation process.

After ALL diagnostic procedures have been run, ALL repairs have been performed, take the following steps to execute a 'basic' repair validation before executing a road test (when required):

1. From the recommendations list, locate and run the 'Re-Read DTCs' function.
2. Return to the 'Symptom Selection Screen' and ensure all of the applicable symptoms are currently selected.
3. Select 'Continue' and allow SDD to process the current vehicle information.
4. Review the 'Related Events' for any remaining DTCs.
5. Additional DTC info can be seen in the 'Show' option is selected to display 'Not Tested' DTCs to confirm that the vehicle has met the requirements to self-diagnose a specific DTC.

INITIAL DATA REINSTATEMENT

Once repairs have been carried out and DTCs have been cleared and re-read, the initial vehicle data can be restored for comparison purposes by clicking the icon highlighted below.

Vehicle Specification

Land Rover

L322-Range Rover 2006

Session | Selected Symptoms | Related Events | Unrelated Events | Recommendations | Extras

Vehicle | Settings | Sessions

Change Session Type | Close Session

SDDJLR249

The acknowledgement screen warns that the display does not represent the current state of the vehicle.

Initial vehicle data re-instatement

Initial DTC and symptom selection will now be used to configure the diagnostic session - this may not be representative of the current vehicle state.

Do you want to continue?

Continue | Close

Change Session Type | Close Session

SDDJLR250

The screen will indicate that initial vehicle data is being used as a reminder that this display does not represent the current state of the vehicle.

INITIAL VEHICLE DATA LOADED.

Vehicle Settings Sessions

Session Selected Symptoms Related Events Unrelated Events Recommendations Extras

Vehicle Specification

Land Rover

L322-Range Rover 2006

CAN_HS

FLM IPC PCM SASM TCCM VDM RLM TCM

CAN_MS

RDUM VIM ACM TPM

DS2

BPM HVAC LCM RCM DSM MFSW PAM RAIN SCLM

SUB_MOST

REM TVM TMC TEL AAM CDP FEM SRM

[Change Session Type](#) [Close Session](#)

SDDJLR251

EVENTS DEFINITIONS

Related Events / Unrelated Events

NOTE: The Related Events screen displays information based on an event. An event is a group of DTCs that were all triggered at the same point in time. Only the events that contain one or more DTCs related to the currently selected symptom(s) will be displayed in the Related Events timeline. The remainder of the events present in the vehicle will be displayed in the Unrelated Events tab.

Grouping the DTCs in this way allows a visual representation of the vehicle event history to be displayed to the operator.

The Event type can be switched between Distance and Time events, as required, by selecting either the 'Distance' or 'Time' button above the timeline.

Distance Event

If Distance is selected, the events will be identified by the recorded mileage at the point the event occurred.

Time Event

If Time is selected, the events will be identified by the number of days since the event occurred.

This selection will also determine whether DISTANCE or ELAPSED TIME information is displayed within the event detail section.

The timeline is split into segments based upon mileage or days. A maximum of two segments may be selected at any one time. All of the events that occurred within the selected segments will be displayed in the event detail section, and this data may be ordered by Distance/Time or Relevance.

When an event is selected, the event detail section will display the DTCs that are related to the currently selected event. The information displayed includes.

DTC

This field displays the logged DTC.

ECU

This field displays the control module acronym that the DTC was logged in.

DISTANCE or ELAPSED TIME


This field displays the mileage or time stamp that relates to when the DTC was logged.

DESCRIPTION

This field displays the DTC description.

STATUS

This field shows the status of the DTC. Status options are identified by the following icons:

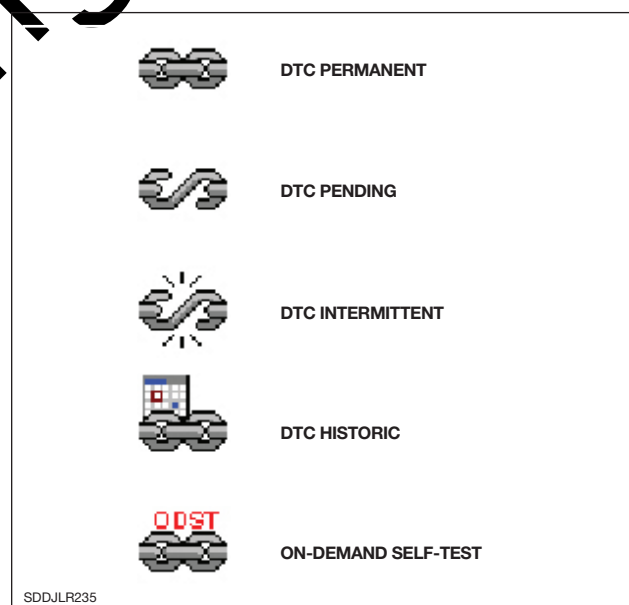

DTC status options are:

Permanent

Applied to a continuously monitored DTC that is logged (for example, the results from the associated on-board diagnostic test indicates that a fault exists) and where a corresponding fault is currently present (for example, was detected the last time the associated diagnostic test completed its run).

Pending

Applied to a continuously monitored DTC that is explicitly reported as Pending (for example, a fault has been detected in either the current or previous drive cycle, but has not yet been present for the necessary complete drive cycle to enable it to be transferred to the logged state).

Intermittent

Applied to a continuously monitored DTC that is logged, but where a corresponding fault is not currently present (for example, was not detected the last time the associated diagnostic test completed its run).

Historic

Applied to a continuously monitored DTC, that is explicitly reported as Historic (for example, a previously detected fault that has not been detected for a set period).

Unknown

Applied to a continuously monitored DTC that is logged, but does not fall into any of the previous categories (for example, the request for logged DTCs was completed successfully, but the request for additional information was unsuccessful so that categorization as either Permanent or Intermittent was not possible).

On Demand Self-Test (ODST)

Applied to an On-Demand DTC that is logged (for example, as a result of running an On-Demand Self-Test).

OPTIONS

This field displays the options available to the operator, to enable correct diagnosis and repair of the failure that logged the DTC. These options include the following:

DTC Help Information

When selected, DTC help sheet that will enable the operator to diagnose and rectify the failure for the relevant DTC will be displayed in a pop-up window.

DTC Snapshot Data

When selected, Snapshot Data relevant to the selected DTC will be displayed.

Recommended Candidates

When selected, a priority ordered list of Recommended Candidates relevant to the selected DTC will be displayed.

RELEVANCE

This field displays a bar graph and percentage figure that is related to the number of associated and currently selected symptom(s). For example, if four symptoms have been selected, and the DTC shown is related to all four symptoms, the relevance field will show 100%. If the DTC is only related to three of the symptoms, the relevance field will show 75%.

DTCs that are logged and related to the currently selected symptom(s), but cannot be associated to an event due to missing time stamp information, will be displayed below the event data for the selected events. The detail information is displayed in the same format as the event detail information.

Also available to the operator on this screen is the option to either omit or display Untested or On-Demand Self Test DTCs.

When all information has been obtained from the Related and Unrelated Events screens, click 'Recommendations'.

IDS-SDD-JLR: IDS Symptom Driven Diagnostics



General Notes on Operation



www.jlridssddmongoose.com

This publication is intended for instructional purposes only. Always refer to the appropriate service publication for specific details and procedures.

All rights reserved. All material contained herein is based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.


© 2012 Jaguar Land Rover North America LLC

<https://www.jlridssddmongoose.com/sdd-symptom-driven-diagnostics/>


SDD Configuration Menu.....	2
Testman and Task Manager	5
Using the USB Drive.....	6
Printing IDS Screens	8
IDS Monitor Trace.....	10
Disabling Windows XP Network Warnings	11

SDD CONFIGURATION MENU

SDD system configuration tasks are carried out from the SDD Configuration Menu, accessed by selecting the 'SDD Configuration' button from the IDS main menu Welcome screen.

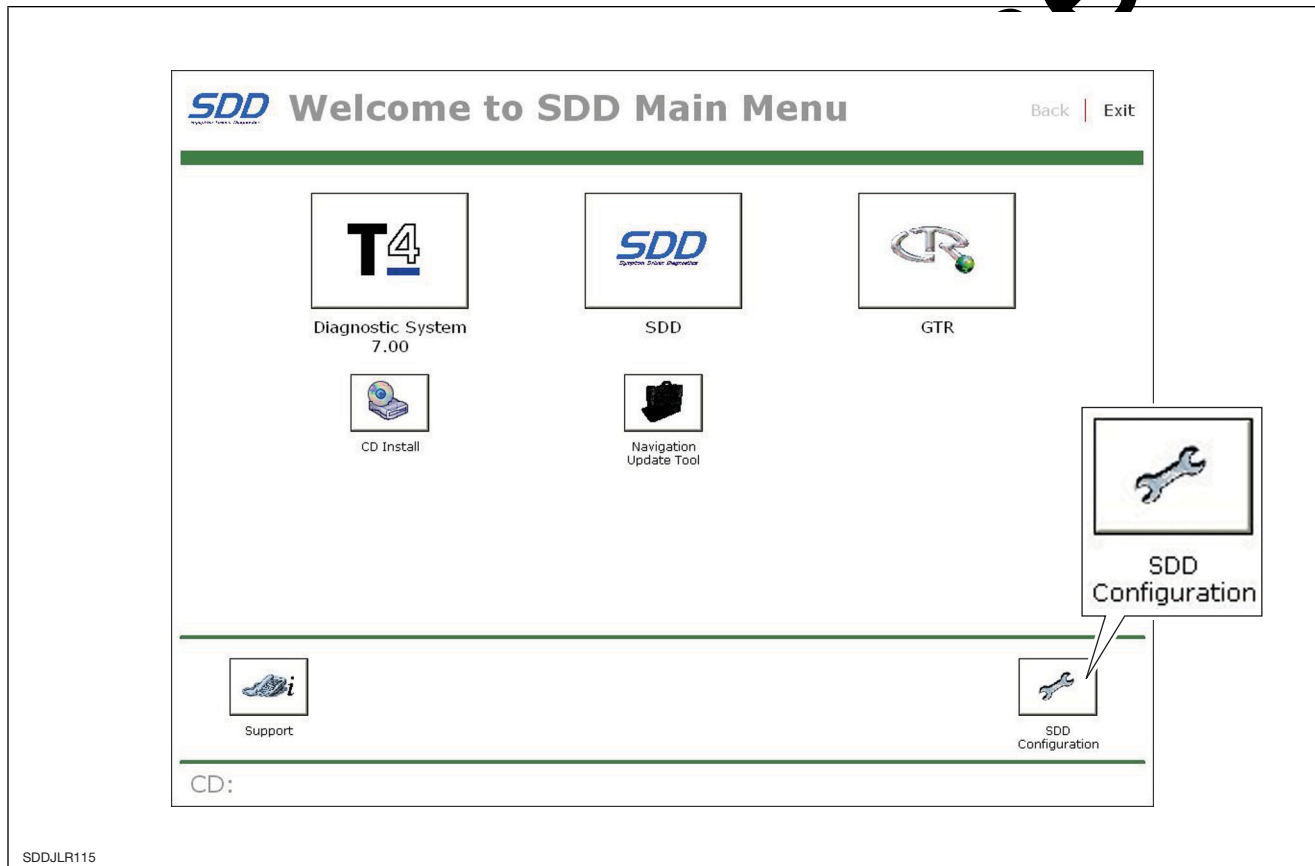

The SDD Configuration Menu contains 18 buttons for access to the various configuration options.

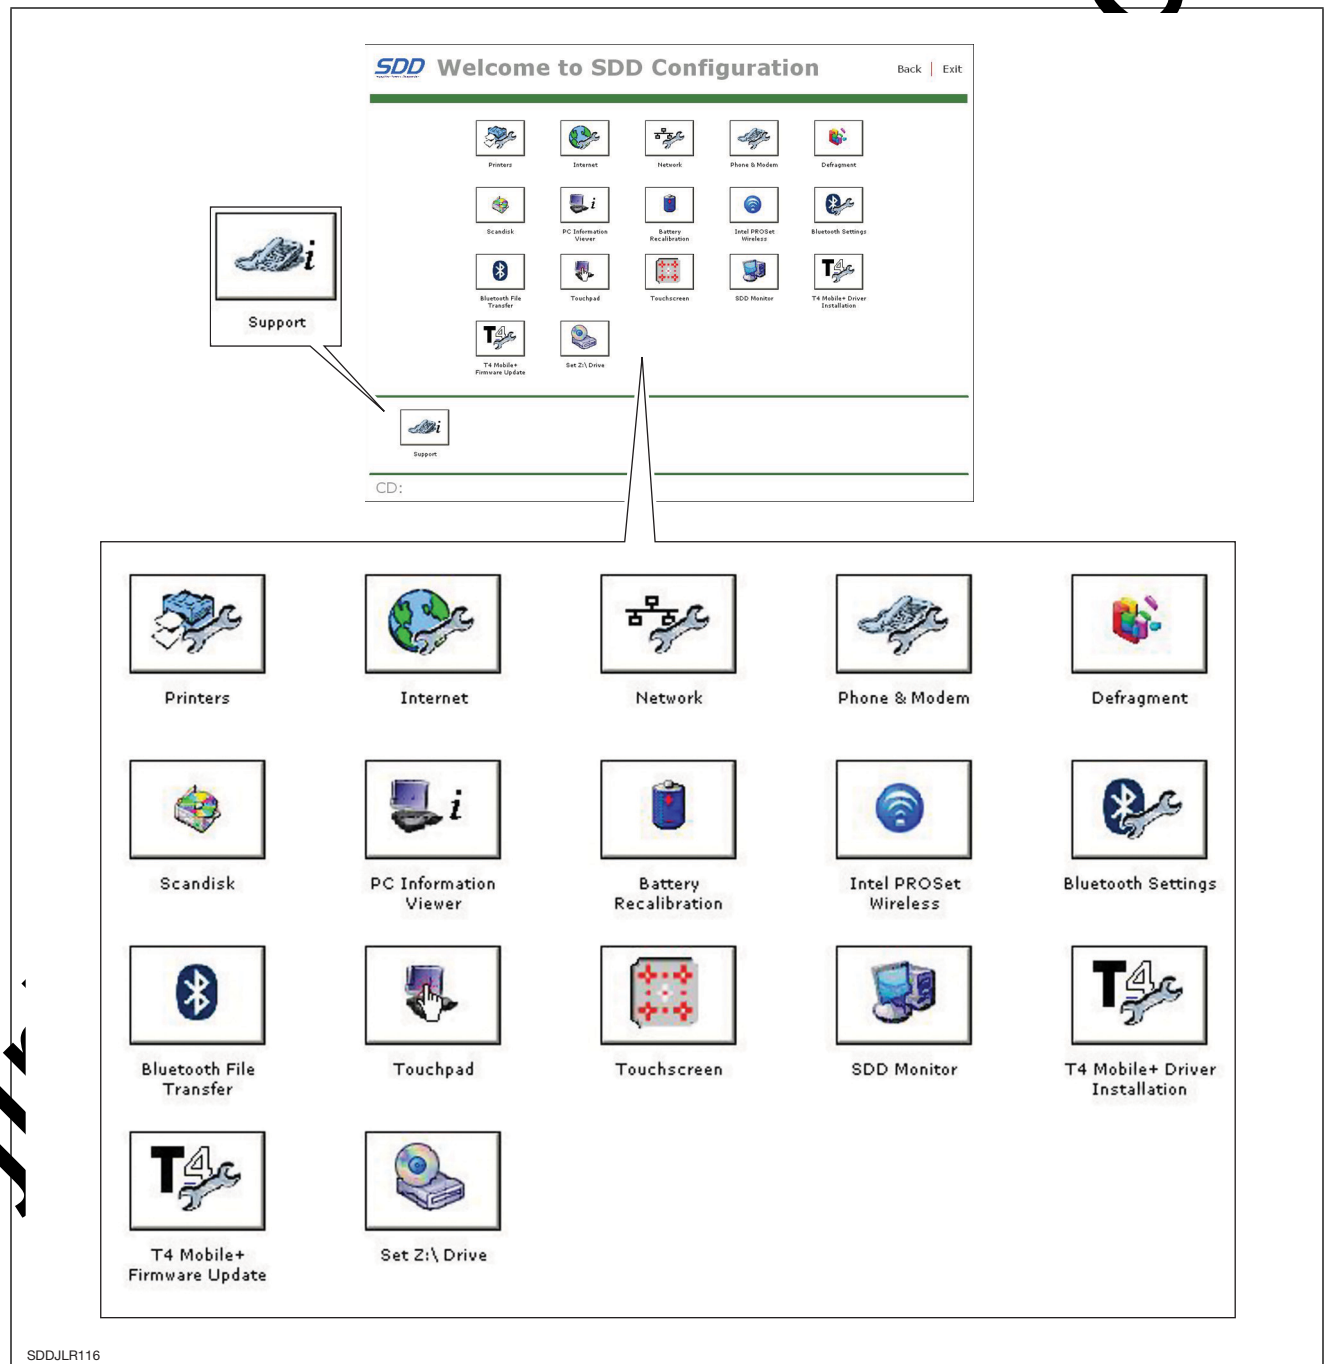

SDD configuration options are as follows:

Printers

Enables printers to be added and configured.

Internet

Configure internet connections.

Network

Configure network connections.

Phone & Modem

Configures the modem.

Defragment

Runs disk defragmenter to improve file access; use following installation of updated software.

Scandisk

Used to check the hard drive for faults and broken programs that may affect the operation of IDS.

PC Information Viewer

Displays current PC configuration.

Battery Recalibration

Recalibrates the battery.

Intel PROSet Wireless

Configures wireless network connection.

Bluetooth Settings

Configures Bluetooth® connections.

Bluetooth File Transfer

Transfer files using Bluetooth® network.

Touchscreen / Touchpad

Reconfigures / calibrates the touch screen.

SDD Monitor

Launches the SDD Monitor application.

T4 Mobile+ Driver Installation

Installs software updates to the laptop.

T4 Mobile+ Firmware Updates

Installs updates for the T4 Mobile+ communications box.

Set Z:\ Drive

Changes the DVD drive ID letter to Z (when DVD drive is connected to another USB port).

Support

Provides access to the SDD support contact details.

NOTE: The options 'Internet', 'Network', 'Phone & Modem', and 'Bluetooth Settings' are used to configure the appropriate connections and will normally only be used by the dealer Information Technology (IT) department.

TESTMAN AND TASK MANAGER

Testman


If for some reason an error occurs while using IDS, a Testman executable message window may be displayed.



Select the 'click here' option to display details of the error report. Make a note of the details and select the 'Don't Send' option.

Task Manager

If for some reason IDS 'locks up' and fails to respond to TSD or keyboard commands, it may be necessary to shut down the IDS application. To shut down IDS, simultaneously press the 'Ctrl' + 'Alt' + 'Del' keys on the keyboard. The Task Manager will be displayed.

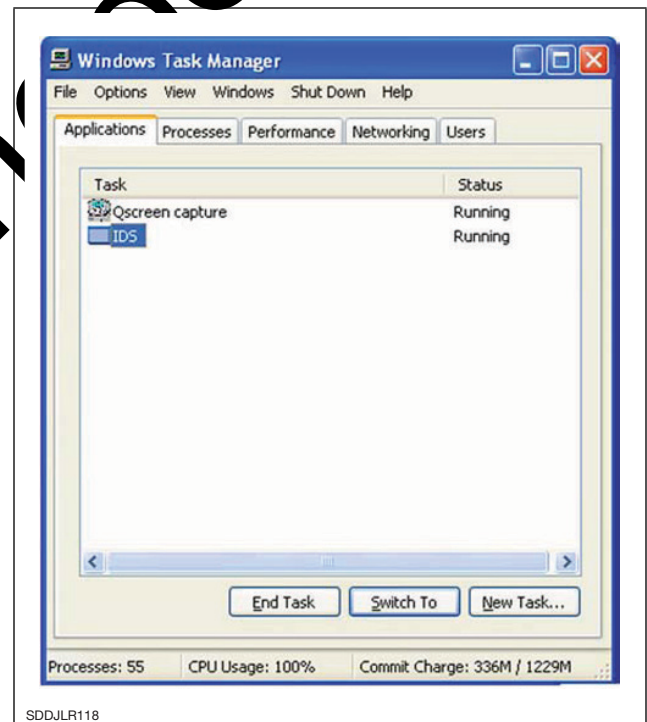

Select 'Shut Down' from the menu headings above the tabs, then select 'Restart'. IDS will shut down then restart.

If the computer has locked up completely and will not respond to the 'Ctrl' + 'Alt' + 'Del' command, it may be necessary to force the computer to shut down by holding the power switch in the 'On' position.

NOTE: Forcing the computer to shut down should not normally be required and should not be used as a substitute for closing down the computer by exiting from IDS.

If the problems described persist, the IDS support desk should be contacted.

USING THE USB DRIVE

A USB drive (sometimes referred to as ‘USB mass storage device’) is supplied to allow files to be stored or transferred to another computer. If it is necessary to print files, the USB drive can be used to transfer the required files to the printer.


The large capacity of the USB drive allows the transfer of a large amount of data from the IDS laptop computer to another computer.



Connecting the USB Drive


Remove the cap covering the connector on the USB drive, then insert the drive into one of the USB ports on IDS. After a short time, IDS will recognize the device and will display a pop-up screen message. The USB drive can be opened from this pop-up screen, provided IDS has been configured to do so.

USB Connection Pop-Up Screen

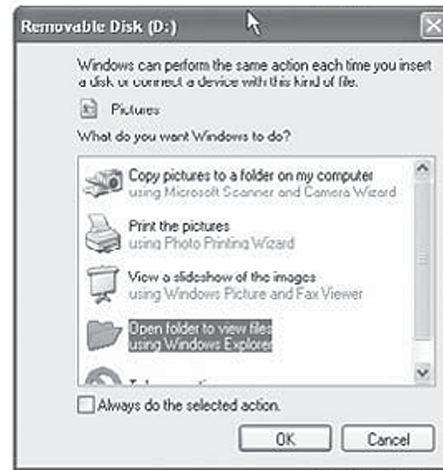

If IDS is not configured for this method, the USB drive can be opened by selecting 'My Computer' from the Windows 'Start' menu. Right-click on 'Removable Disk (D:)' and select 'Open' to display the contents of the USB drive.

A symbol will appear on the task bar to indicate that a USB device is connected.

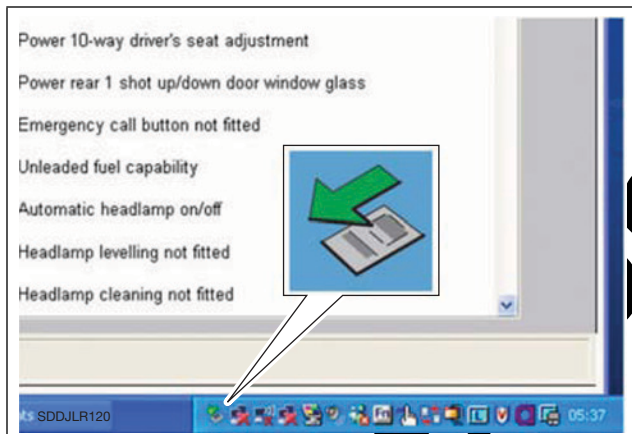

Save the required files to the USB drive and close the drive.

Closing and Removing the USB Drive

CAUTION: Do not remove the USB drive from IDS without first closing the drive and carrying out the disconnection procedure.

To remove the USB drive, close down the drive contents by selecting the 'X' at the top RH corner of the screen.

To disconnect the drive, select the USB symbol on the task bar. The message 'Safely remove USB mass storage device' will be displayed. Select the message. A confirmation message will be displayed stating that it is safe to remove the USB drive; the USB symbol will disappear from the task bar. The USB drive can now be removed from IDS.