

VEHICLE TRANSPORTATION AIDS AND VEHICLE STORAGE

VEHICLE STORAGE [G4741355]

DESCRIPTION AND OPERATION

INTRODUCTION

STANDARDS

Vehicles may require storage for varying periods of time before the customer takes delivery. It is essential that a new Jaguar vehicle is stored correctly, in order to make sure of total customer satisfaction after the car is removed from storage and prepared for sale.

This document establishes the MINIMUM STANDARDS required of franchise holders and appointed vehicle storage companies by Jaguar Land Rover Limited for the storage of new vehicles, and may only be deviated from with the Company's agreement. Any concerns must be discussed with your Franchise Regional Manager.

This information must be used in conjunction with the relevant Pre-Delivery Inspection (PDI) information.

AREAS OF RESPONSIBILITY

PREVENTATIVE MEASURES

Adequate preventative measures must be taken to make sure that each vehicle in stock is maintained in peak condition.

ARRIVAL

It is your responsibility to notify delivery companies immediately of any losses and/or transit damage identified on receipt of the vehicle.

Where applicable, Vehicle Condition Reports (VCR's) must be endorsed accordingly, otherwise it is unlikely that the transit insurance company will accept any claims for missing items or damage rectification.

STORAGE

Correct preparation of vehicles for storage is essential. The majority of new vehicles leaving Jaguar Land Rover Limited are provided with the appropriate protection for transit. It is your responsibility to make sure that a vehicle storage department, or specialist company, is sufficiently equipped to undertake the storage requirements endorsed in this publication. **When vehicles are in storage, any deterioration or damage sustained is the sole responsibility of the storage operator and must NOT be made the subject of a warranty claim.**

DISPATCH

When removing vehicles from storage, you are responsible for procedures that make sure they are in a safe and roadworthy condition.

VEHICLE STORAGE

VEHICLE IDENTIFICATION UPON ARRIVAL

- 1 A New Vehicle Storage History Sheet must be raised for every new vehicle upon arrival and must remain inside the vehicle until despatch. This must contain a record of the vehicle condition and any rectification work completed during the storage period (see Storage History Sheet).**
- 2** Vehicles must be checked for correct specification and/or shortages. Where this is incorrect the required parts must be procured through normal channels and costs claimed back through the Jaguar Land Rover claims submission system using the appropriate shortage or misbuild program code.
- 3** Claims for rectifying incorrect specification items and/or shortages must be made in accordance with the conditions detailed in Section C of the Warranty Policy and Procedures Manual.
- 4** Ignition and door keys must be suitably labeled and when the vehicle is locked, they must be held in a suitably identified and secure office. All key numbers must be recorded on the New Vehicle Storage History Sheet. All keys, including spares, must be removed from the vehicle during storage for security reasons.
- 5** During storage the vehicle must remain in transit mode, except for carrying out the battery check procedure.

VEHICLE INSPECTION

Vehicle Protection

Category 1 - Drivers Side Door - Rapguard + Blue Foam.

Category 2 - Land Rover - Hood Glove + Cat 1. Jaguar - Hood + Roof + Tailgate Glove + Cat 1.

Category 3 - Full Body Cover + Cat1.

Vehicles not installed with Cat 3 body inspection

The entire vehicle exterior must be inspected and, if necessary, washed thoroughly, including the underside and wheel arches, to remove all dirt and mud deposits.

Any defects found during inspection must be rectified before the vehicle is stored.

Make sure that bumper and body side protectors are correctly installed.

Vehicles installed with Cat 3 body inspection

The body protection cover is to be inspected for damage, if any damage is observed then inspect the area of the vehicle for damage.

Delivery damage is not the responsibility of Jaguar Land Rover and must not be made the subject of a warranty claim. It is the responsibility of the Retailer or vehicle storage company to identify any such damage at the time of the new vehicle receipt and to make sure that the full details are recorded on the Delivery Receipt. Claims for rectification of such damage must be directed to the Delivery Company.

Failure to notify the Delivery Company of damage details at the time of vehicle delivery will result in claims for subsequent rectification being rejected.

Warranty claims for damage repairs may only be submitted where Jaguar Land Rover's responsibility is clearly indicated.

Examples falling into this category are paintwork damage during the installation of trim or outward facing dents on the door skin.

Warranty claims will not be accepted for any transit damage repaired or identified after the vehicle has been placed into service.

IDEALLY ALL VEHICLES ARE TO BE STORED IN A WELL VENTILATED AND TEMPERATURE-CONTROLLED BUILDING.

However, it is recognized that the majority of all vehicle storage is done in an open compound. Therefore, the following site requirements must be observed and must be authorized with your Regional Manager.



- 1** The site must have a level well-drained hard standing surface, preferably concrete or tarmac. This must be free from loose/sharp edges and any contaminates that may lead to tire damage.
- 2** The site and driveways must be kept clean and clear of any obstruction at all times.
- 3** The site must be enclosed by a secure intruder-proof perimeter fence and the gates securely locked. The site must be under daily surveillance, with unauthorized access prevented at all times.
- 4** The site must be located away from areas subject to industrial fallout, sea spray or wind-blown dust and sand. Where fallout conditions are unavoidable it will be necessary to monitor the exterior condition of all cars and wash as necessary.
- 5** Mains water, tire inflation and battery charging facilities must be available on site.
- 6** Hedges, shrubs and trees adjacent to the site must be kept trimmed and clear of parked vehicles.
- 7** Vehicles must not be parked under trees, overhead cables or other overhanging structures as bird droppings or other types of contamination could occur.

VEHICLE PARKING

Vehicles must be parked tidily with 300 mm (1 foot) between bumpers, front and rear.

Vehicles must be parked 750 mm (2.5 feet) away from any fixed obstacle (for example a wall or fence)

Vehicles must be moved on a first-in-first-out basis, subject to specification.

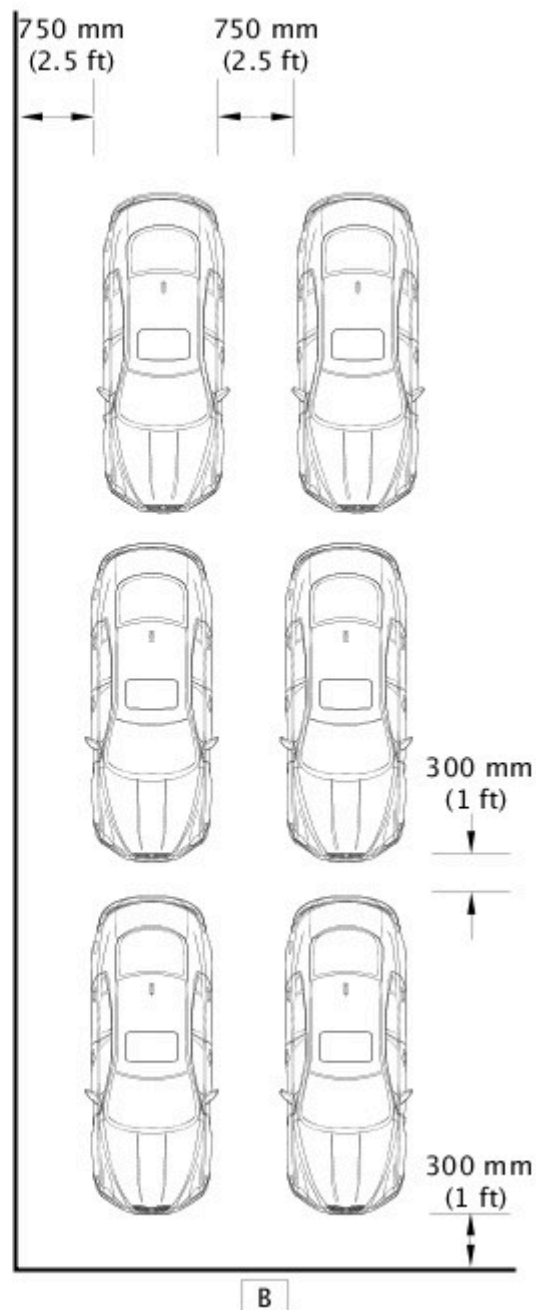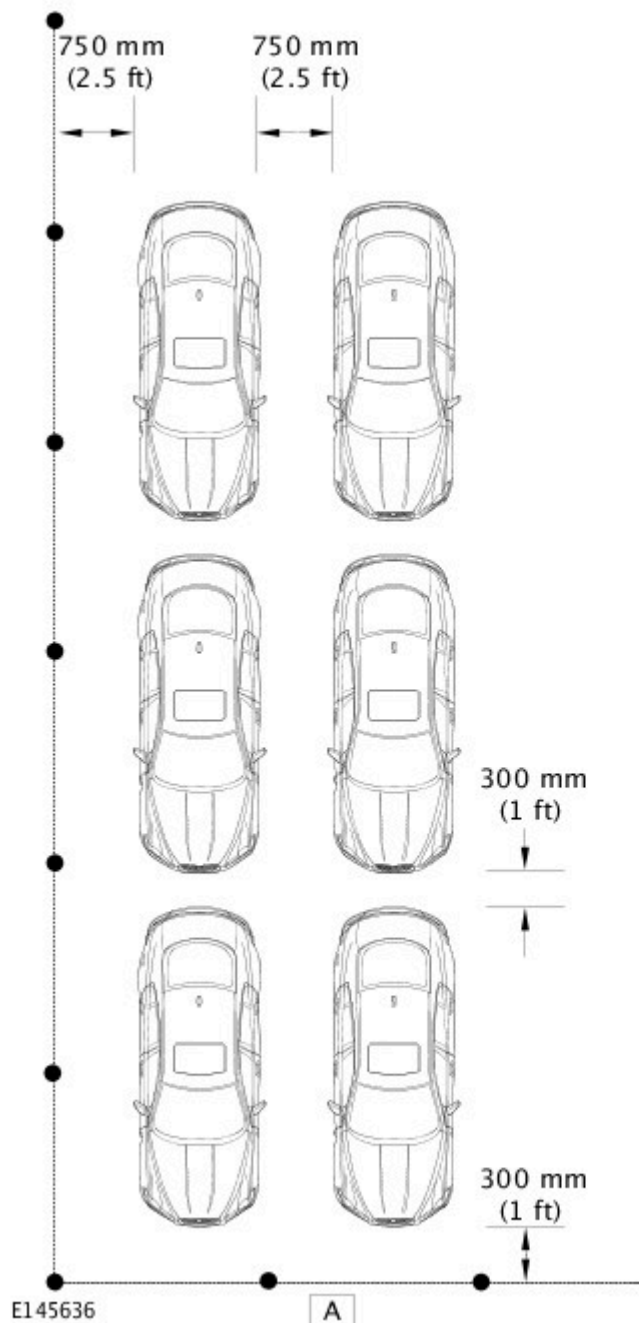

ITEM	DESCRIPTION
A	Storage Outside
B	Storage Inside

FACILITIES AND EQUIPMENT

NOTE:

Tools supplied with the vehicle must not be used for any rectification work prior to the prospective purchaser.

The following equipment used must be functionally capable of meeting the compliance requirements. Refer to the approved equipment document.

- Car wash facilities.
- Tire inflation equipment with calibrated gauge 0 - 4.05 bar (0 - 60lbf/in²).
- Jacking equipment.

- Wheel brace.
- Approved battery tester.

The following materials must be available and must meet Jaguar Land Rover specifications:

- Engine oil.
- Transmission fluid.
- Brake fluid.
- Distilled water.
- Windshield washer fluid.
- Engine coolant.

Access to trailer/recovery vehicle (Vehicles must not be towed).

Comprehensive filing system for vehicle records.

OPERATIONS REQUIRED DURING STORAGE PERIOD

REFERENCE CHART

The following chart gives a quick reference to the requirements necessary during the time a vehicle is in storage. A detailed explanation of each operation is provided on subsequent pages.

If a vehicle remains in storage after 150 days from receipt of vehicle, a new form must be started.

OPERATION	UPON RECEIPT	30 days from receipt	60 days from receipt	90 days from receipt	120 days from receipt	150 days from receipt
1. IDENTIFICATION	X	.	.	.	.	.
2. INSPECTION	X	X	X	X	X	X
3. HIGH VOLTAGE BATTERY STATE OF CHARGE	X	X	X	X	X	X
4. COOLING SYSTEM	X	X	X	X	X	X
6. AIR CONDITIONING	X	X	X	X	X	X
7. TIRES	X	X	X	X	X	X
8. PARKING BRAKE	X	X	X	X	X	X
9. DOORS, WINDOWS AND VEHICLE INTERIOR	X	.	.	.	.	.
All markets	REMOVE CAT1 PROTECTION AFTER 180 DAYS - REMOVE CAT2/CAT3 PROTECTION AFTER 1 YEAR - UNLESS THE VEHICLE IS TO BE TRANSPORTED BY ROAD ON A TRANSPORTER THEN REMOVE AFTER 180 DAYS					

BATTERIES

Make sure the correct standard of battery care is applied, refer to the 'Battery Care Requirements for New Vehicles' (Retailer).

For requirements for receipt of a new vehicle, new vehicle storage and replacement batteries, refer to the 'Battery Care Requirements for New Vehicles' (Retailer and Service).

Place a label on the vehicle (or on the New Vehicle Storage History Form) to indicate when a battery recharge will be required. The battery condition must be checked prior to starting and/or moving the vehicle.

The storage, handling and charging of batteries is not dangerous, provided that the battery manufacturers' recommendations are followed. However, a suitable storage and charging facility must be available and must be in accordance with local legal requirements.

HYBRID ELECTRIC VEHICLE [HEV] BATTERY

CAUTION:

Always keep the Electric Vehicle (EV) battery charged, failure to do so may cause damage to the battery.


NOTE:

In extreme cold climate conditions (circa -30°C (86°F)), store the vehicle in a warmer area to protect it from the environment.

If the vehicle is not used for 30 days or more, it is essential that the EV battery is charged. For longer storage periods, charge the high voltage battery every 30 days.

Charge the EV battery as follows:

- Press and hold the brake pedal then press the start/stop switch to start the vehicle.
- To view the Tachometer, open the Instrument Panel Cluster Control Module (IPC) menu, then select Instrument Display, Hybrid Content and Reduced Hybrid Display.
- Raise the engine speed to approximately 1500 rpm.
- When the EV battery charge level has reached the position indicated in the following illustration, the vehicle may be switched off.

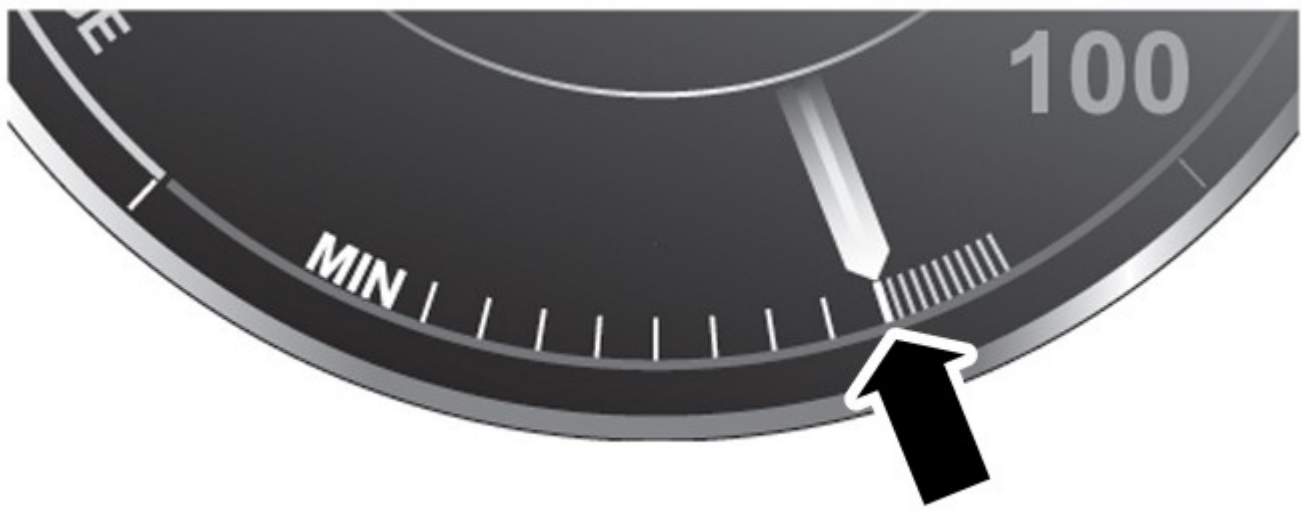

E161503

COOLING SYSTEM

- It is **ESSENTIAL** to maintain the concentration of engine coolant at the factory-fill condition. Failure to do so may cause oxidization of the cooling system leading to corrosion of the engine and heater.
- The coolant level is to be checked in line with the 30, 60 and 90 day process, to make sure the coolant is at the correct level in the expansion tank.
- If the temperature has fallen below -40°C the coolant system must be checked for leaks before starting the engine.
- If the vehicle is to be started between the 30, 60 and 90 day process the coolant level must be checked before the engine is started.
- The coolant mixture specification is 50% plain water and 50% Jaguar Land Rover engine coolant, Coolant and Corrosion Inhibitor for frost protection down to -36°C (-33°F).

Cooling system top up process

If required follow the below process to top up the cooling system proceed as follows:

WARNING:

DO NOT REMOVE THE HEADER TANK PRESSURE CAP WHILE THE ENGINE IS HOT.

CAUTION:

DO NOT use radiator engine coolant solution in the windshield washer equipment or paint work will be damaged.

- 1 Carefully examine the radiator and all hoses for leaks and security of hose clamps.
- 2 Remove the header tank pressure cap and drain the cooling system as instructed in the relevant service manual.
- 3 Mix engine coolant and water in the correct proportions and to the correct volume.
- 4 Close the drain plug and add the coolant until the level in the header tank is steady at 'MAX'.

ENGINE OIL LEVEL

Where installed, remove the oil level gauge and check the engine oil level. If necessary, top up with the approved grade of engine oil.

On vehicles with an electronic oil level and temperature sensor, check the engine oil level using the procedures described in the applicable Workshop Manual.

ENGINE AND AIR CONDITIONING SYSTEM

If the vehicle is stored for 30 days or more, the engine and air conditioning system must be operated using the following process:

- 1 Set the ignition to on
- 2 Make sure the air conditioning is set to off
- 3 Start the engine and run for 1 minute at idle
- 4 Switch on the air conditioning system and set to low
- 5 Make sure all the instrument panel air ducts are open
- 6 Run the air conditioning system for minimum of 5 continuous minutes with the engine at idle

TIRES

For storage purposes, tires on installed wheels must be inflated to and maintained at a maximum pressure of 3.60 bar (52 lbf/in²).

NOTE:

Wheels must be rotated through 180 degrees in the forward direction monthly, to make sure that the tread is rotated evenly during the storage period

The spare wheel tire pressure must be maintained at the appropriate pressure specified in the Owners Handbook.

Tire condition must be inspected and damaged tires replaced prior to removal from storage.

Guidance for Rotation of Tires

To make sure tires are rotated through a minimum of 180 degrees, apply a chalk mark on a front wheel tire wall at the current centre contact point with the road surface. Move the car forward until the chalk mark is at the horizontal position. This process can be applied to a single car or to a row of vehicles and must make sure that all four wheels on each vehicle is rotated by 180 degrees.

PARKING BRAKE

Vehicles with Electric Park Brake

NOTES:

- For all vehicles with an Electric Park Brake (EPB), on manual transmission vehicles, first or reverse gear must be selected before releasing the EPB.
- For all vehicles with an EPB, On automatic transmission vehicles 'Park' (P) must be selected before releasing the EPB.

Where possible the EPB must remain off during storage. If, for any reason, it is not possible to perform the release procedure, the operation of the EPB must be checked/monitored monthly during the road wheel rotation procedure. Refer to the Workshop Manual, General Procedures, Parking Brake and Actuation for EPB release procedure.

DOORS, WINDOWS AND VEHICLE INTERIOR

Doors, windows, hood, boot lid and fuel flap must be closed and locked to prevent water and moisture ingress.

PAINTWORK

Paintwork can be damaged if the body protection remains on the vehicle for an extended period of time. In all markets the CAT1 MUST be removed after 180 days. For all markets the CAT2 and CAT3 MUST be removed after 1 year . UNLESS THE VEHICLE IS TO BE TRANSPORTED BY ROAD ON A TRANSPORTER THEN REMOVE CAT2 CAT3 AFTER 180 DAYS.

If storage is subsequently continued, the vehicle must be kept under cover and must be washed regularly (at least every month).

REMOVAL FROM STORAGE

PROCEDURES





Before removal from storage area, all fluid levels including coolant, hydraulic fluids and lubricating oils must be checked and replenished where necessary. Where a substantial loss has occurred the cause must be traced prior to moving the vehicle.

The New Vehicle Storage History Sheet must be checked and safety related faults rectified before the vehicle is moved from the storage site. These checks are essential to make sure that the vehicle is safe to drive.





Tires must be adjusted to the pressures recommended in the relevant service manual or owners handbook.

Reconnect the battery negative terminal (when applicable).


Check the operation of the lighting and signaling equipment.

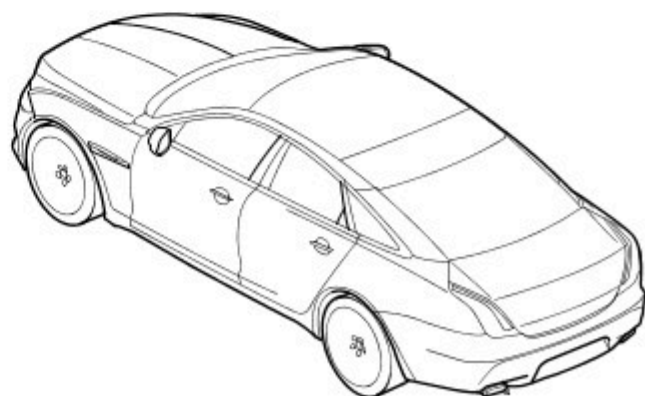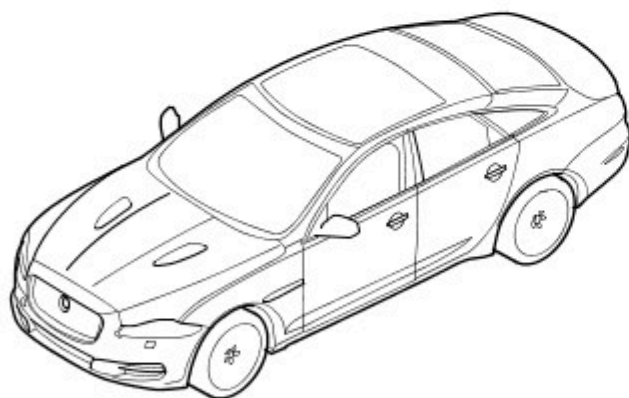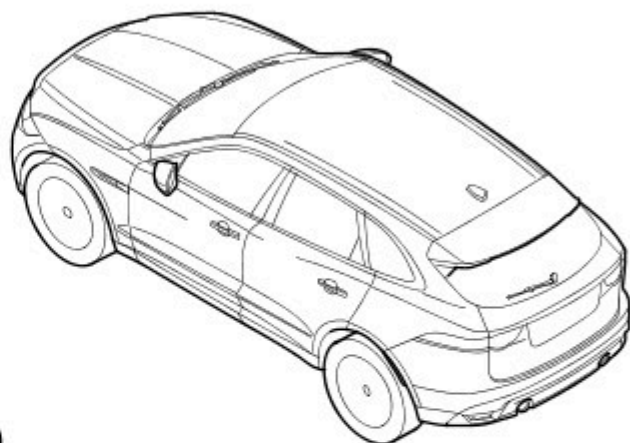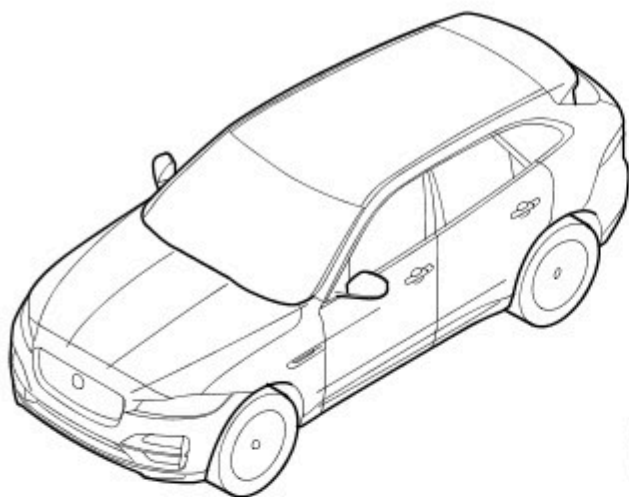

E145632

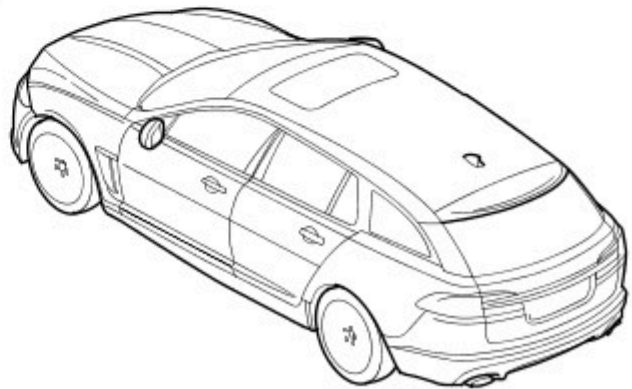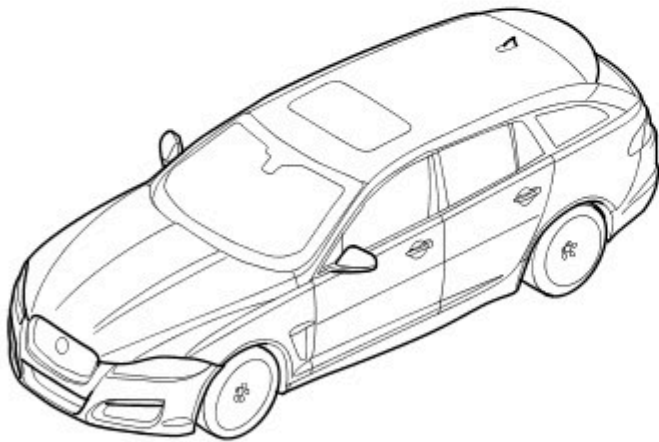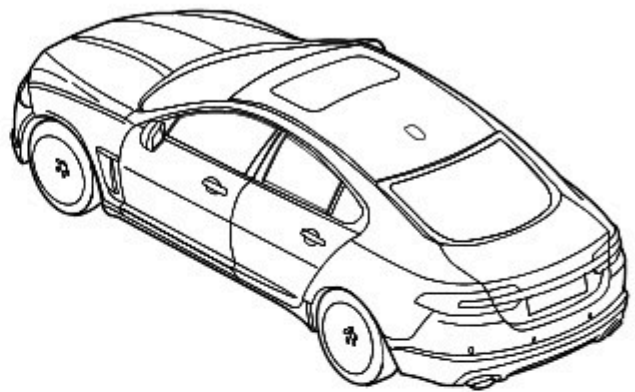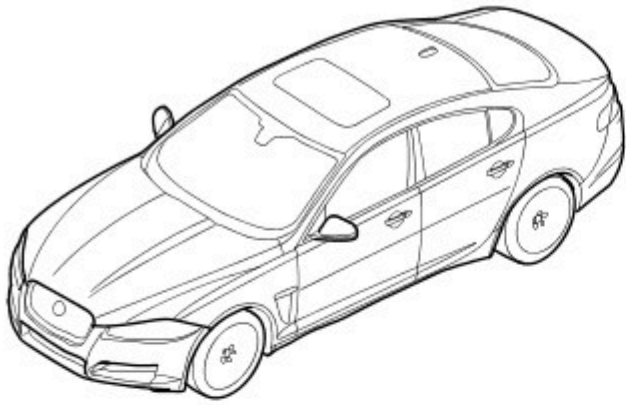

E145633

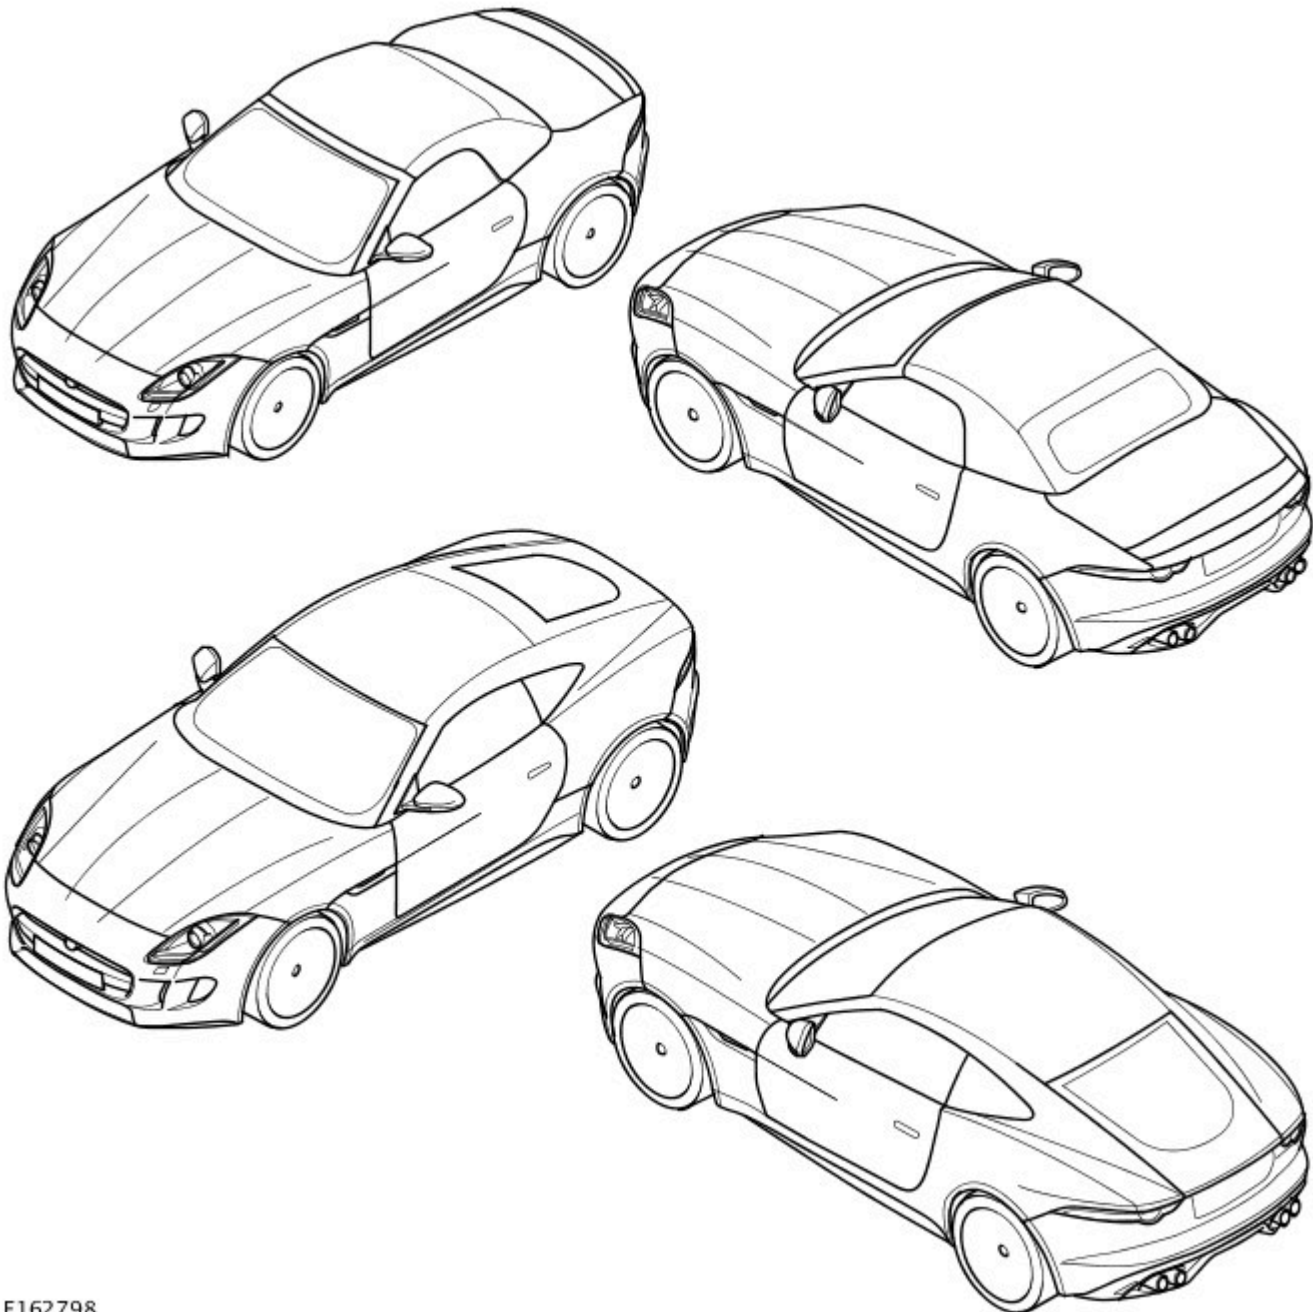

E162798