
## WINDSHIELD WIPER SWITCH ASSY

## **REPLACEMENT**

1. REMOVE STEERING COLUMN COVER

(See page 50-6)

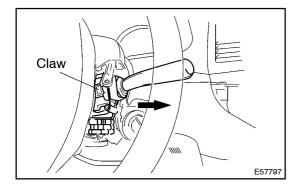

## 2. REMOVE WINDSHIELD WIPER SWITCH ASSY

- (a) Disconnect the connector.
- (b) Using a screwdriver, release the claw and pull out the windshield wiper switch assy.

## **NOTICE:**

Pressing the claw hard breaks the claw.

HINT:

Tape the screwdriver tip before use.

eenen na