
LAMP ASSY,SIDE TURN SUGNAL REPLACEMENT

eencc n1

1. REMOVE LAMP ASSY, SIDE TURN SUGNAL

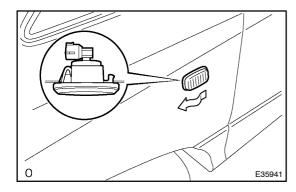

- (a) Pull the side turn signal light lens RH as shown in the illustration.
- (b) Disconnect the connector of side turn signal light and remove the socket.