
Position of Parts in Body

[RHD]

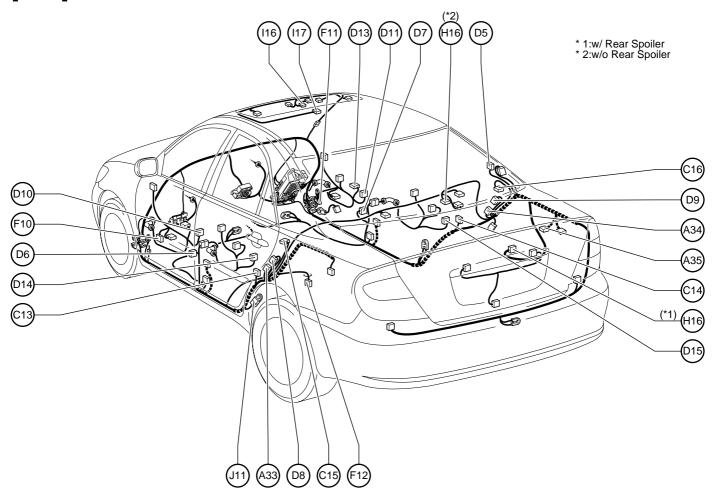

- A33 ABS Speed Sensor Rear LH
- A34 ABS Speed Sensor Rear RH
- A35 Auto Antenna Control Relay
- C13 Curtain Shield Airbag Sensor LH
- C14 Curtain Shield Airbag Sensor RH
- C15 Curtain Shield Airbag Squib LH
- C16 Curtain Shield Airbag Squib RH
- D 5 Door Control Receiver
- D 6 Door Courtesy SW Front LH
- D 7 Door Courtesy SW Front RH
- D 8 Door Courtesy SW Rear LH
- D 9 Door Courtesy SW Rear RH
- D10 Door Key Lock and Unlock SW Front LH
 Door Lock Motor Front LH
 Door Unlock Detection SW Front LH
 Double Door Lock Motor Front LH
 Position SW Front LH
- D11 Door Key Lock and Unlock SW Front RH
 Door Lock Motor Front RH
 Door Unlock Detection SW Front RH
 Double Door Lock Motor Front RH
 Position SW Front RH

- D13 Door Lock Control SW Front RH Power Window Master SW
- D14 Door Lock Motor Rear LH
 Door Unlock Detection SW Rear LH
 Double Door Lock Motor Rear LH
 Position SW Rear LH
- D15 Door Lock Motor Rear RH
 Door Unlock Detection SW Rear RH
 Double Door Lock Motor Rear RH
 Position SW Rear RH
- F10 Front Door Speaker LH
- F 11 Front Door Speaker RH
- F12 Fuel Pump Fuel Sender
- H16 High Mounted Stop Light
- I 16 Inner Mirror
- I 17 Interior Light
- J 11 Junction Connector