

## ACCELERATOR PEDAL ASSY (2AZ-FE) REPLACEMENT

100.IY-02

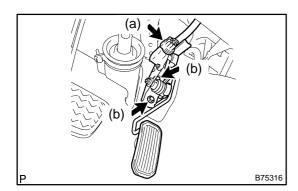

## 1. REMOVE ACCELERATOR PEDAL ASSY

- (a) Disconnect the accelerator position sensor connector.
- (b) Remove the 2 bolts and the accelerator pedal.

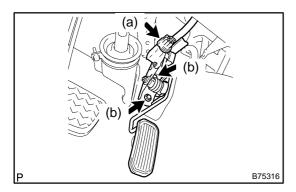

## 2. INSTALL ACCELERATOR PEDAL ASSY

- (a) Connect the accelerator position sensor connector.
- (b) Install the accelerator pedal with the 2 bolts.

Torque: 7.5 N·m (76 kgf·cm, 66 in. lbf)