I GROUND POINT (RHD)

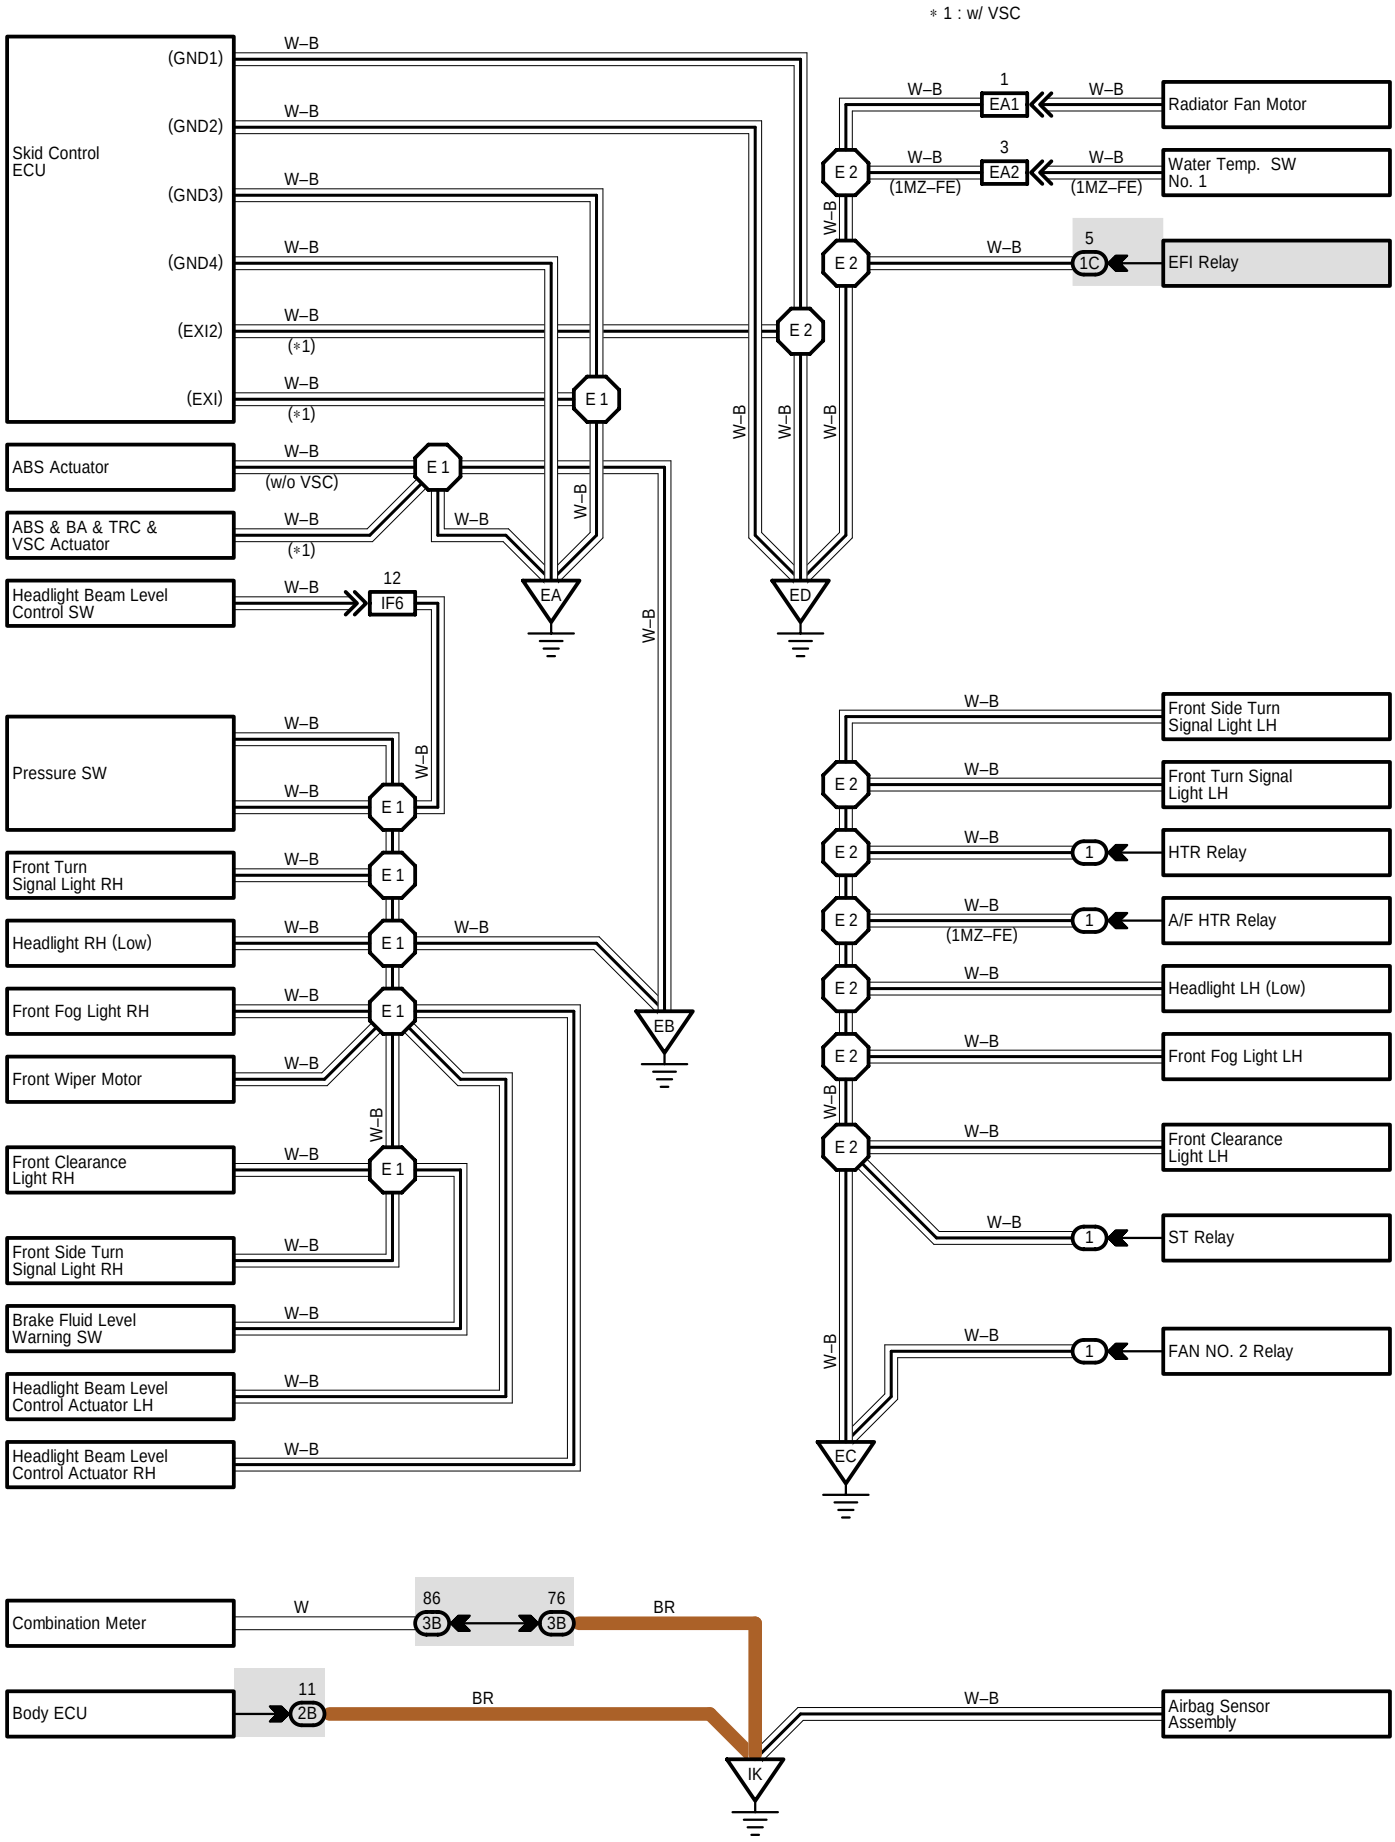

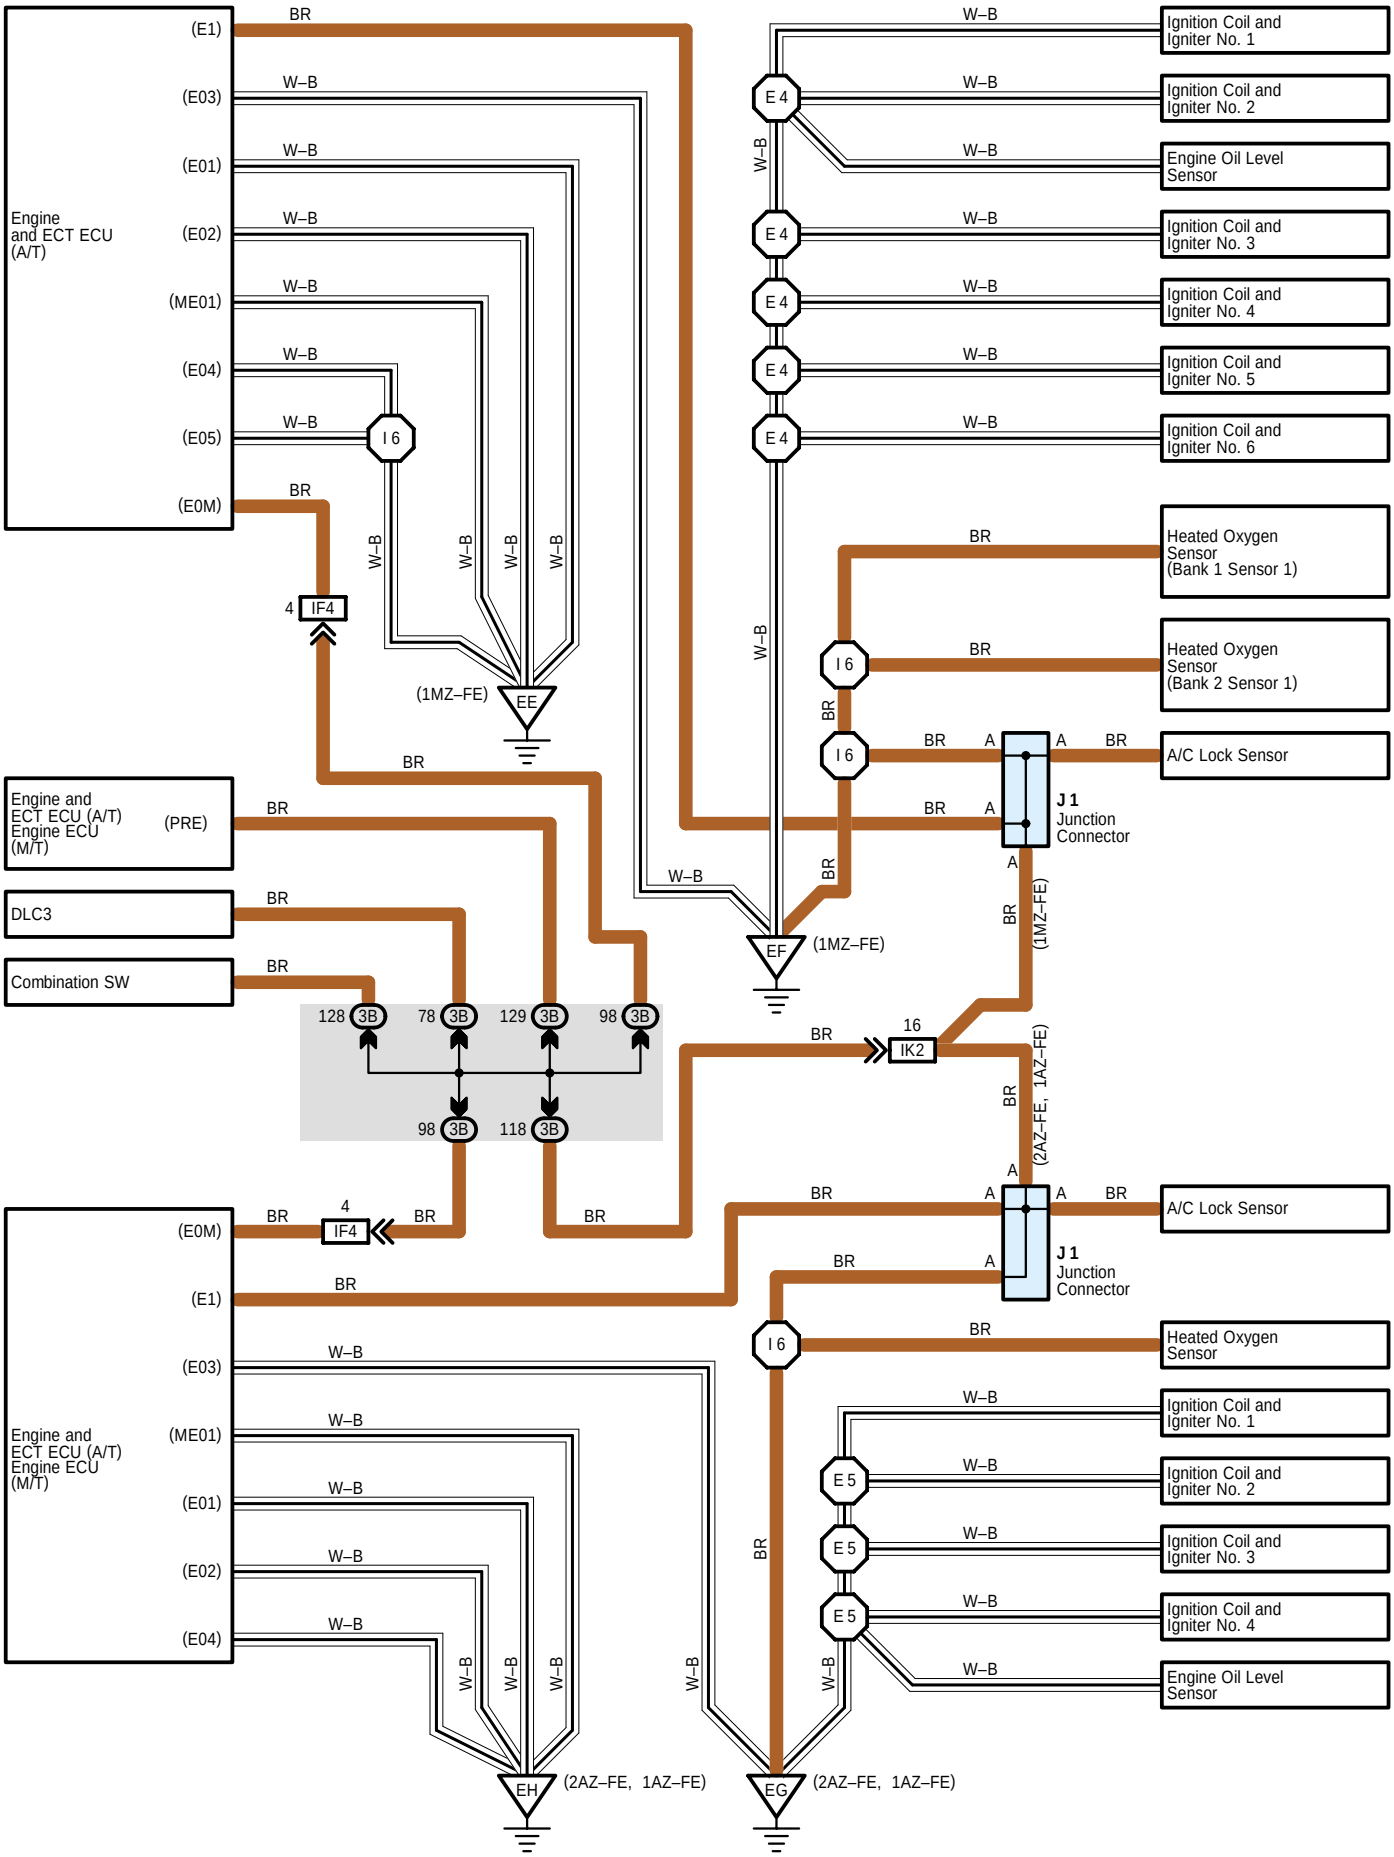
Engine and ECT ECU (A/T)
(E1)
(E03)
(E01)
(E02)
(ME01)
(E04)
(E05)
(E0M)
I 6
4 IF4
(1MZ–FE) EE
Engine and ECT ECU (A/T) Engine ECU (M/T)
(PRE)
DLC3
Combination SW
128 3B
78 3B
129 3B
98 3B
98 3B
118 3B
W–B
BR
E 4
Ignition Coil and Igniter No. 1
Ignition Coil and Igniter No. 2
Engine Oil Level Sensor
Ignition Coil and Igniter No. 3
Ignition Coil and Igniter No. 4
Ignition Coil and Igniter No. 5
Ignition Coil and Igniter No. 6
Heated Oxygen Sensor (Bank 1 Sensor 1)
Heated Oxygen Sensor (Bank 2 Sensor 1)
A/C Lock Sensor
J 1 Junction Connector
EF (1MZ–FE)
16 IK2
(2AZ–FE, 1AZ–FE)
(1MZ–FE)
E 5
EH (2AZ–FE, 1AZ–FE)
EG (2AZ–FE, 1AZ–FE)

I GROUND POINT (RHD)

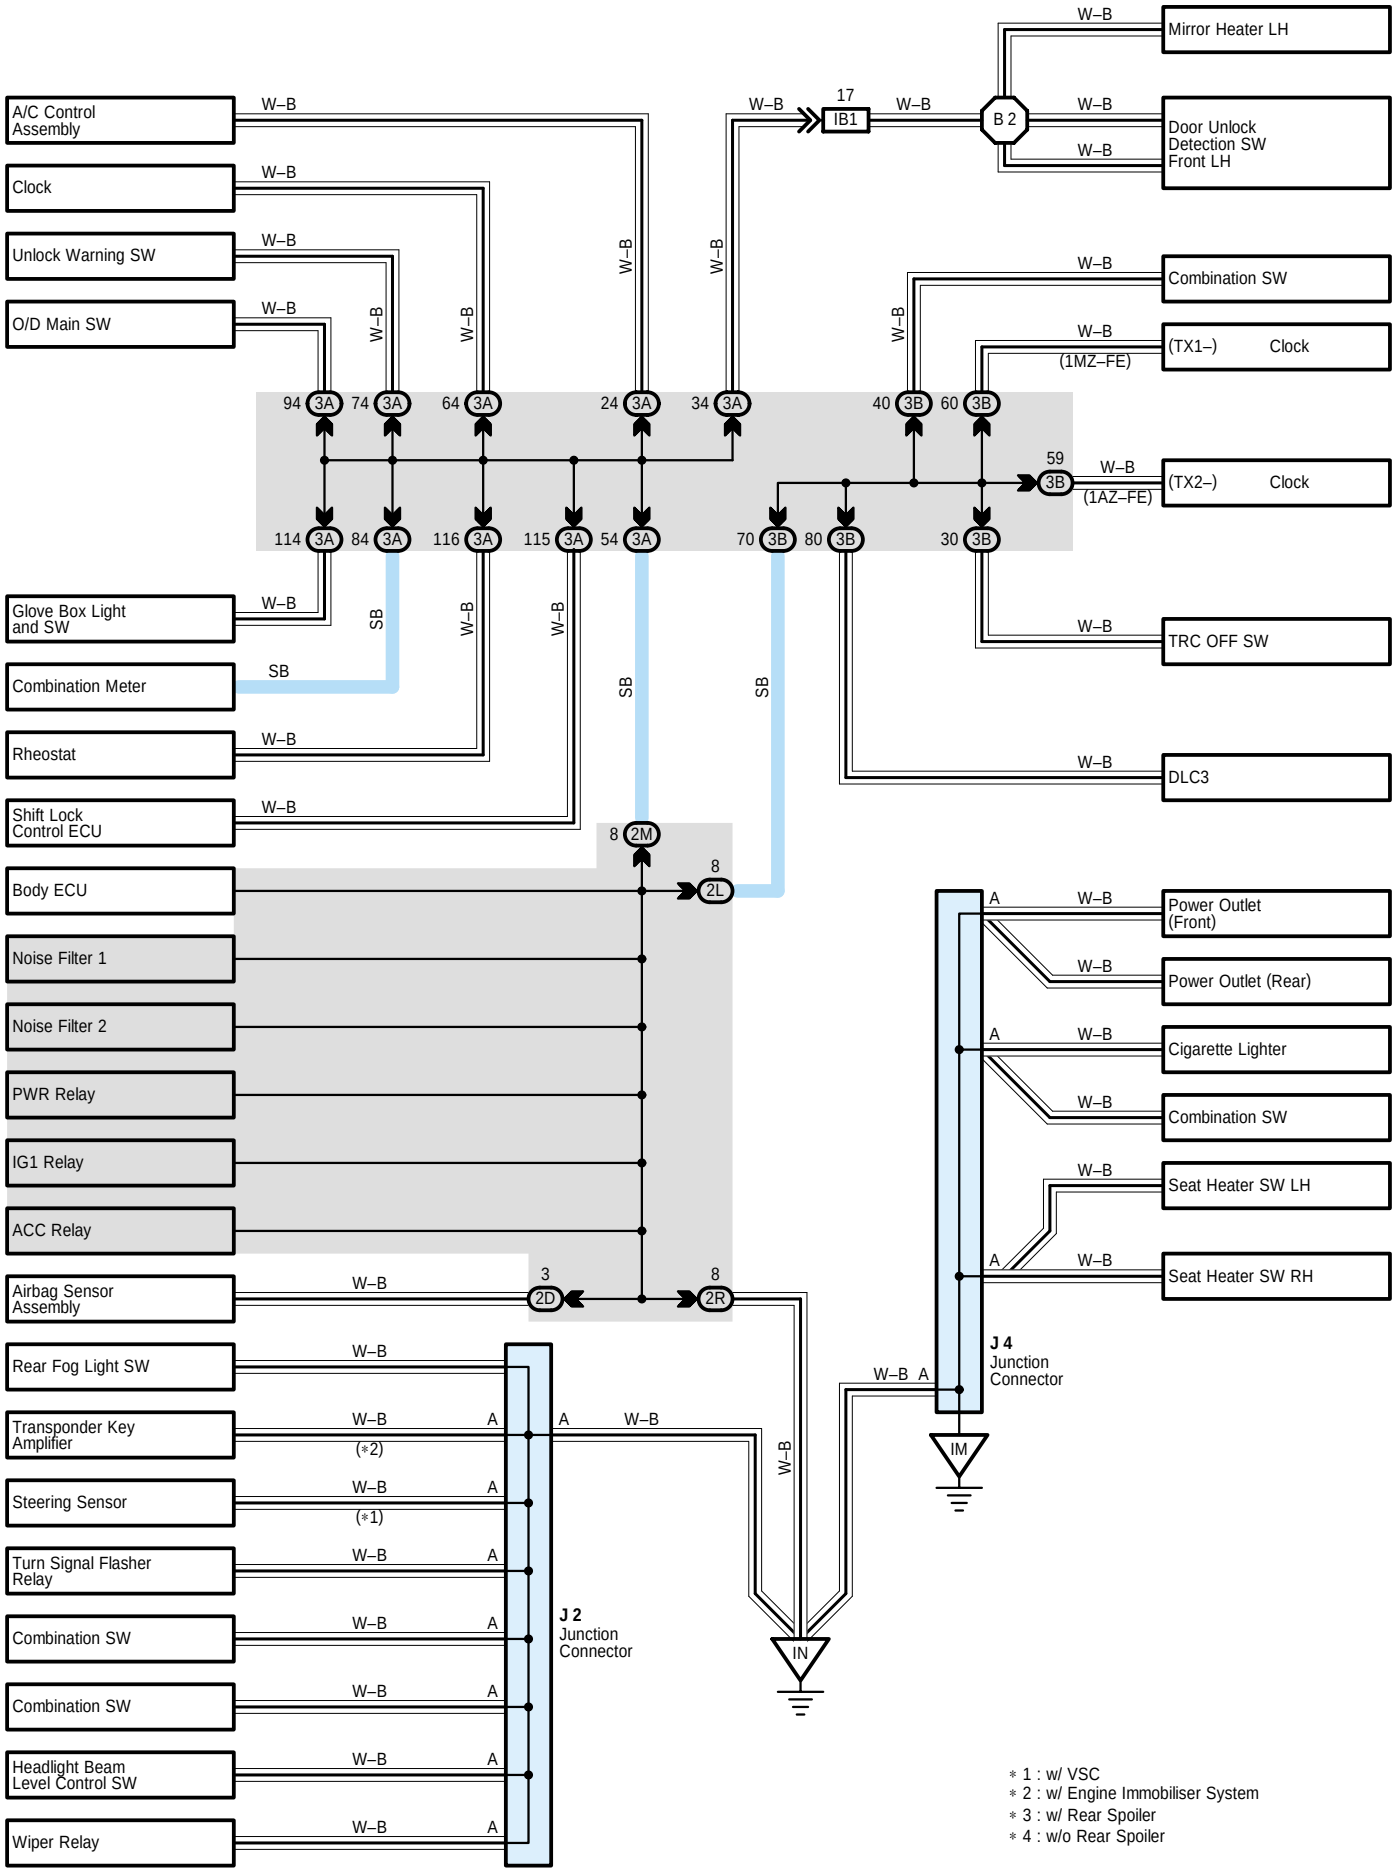

∗ 1 : w/ VSC
∗ 2 : w/ Engine Immobiliser System
∗ 3 : w/ Rear Spoiler
∗ 4 : w/o Rear Spoiler

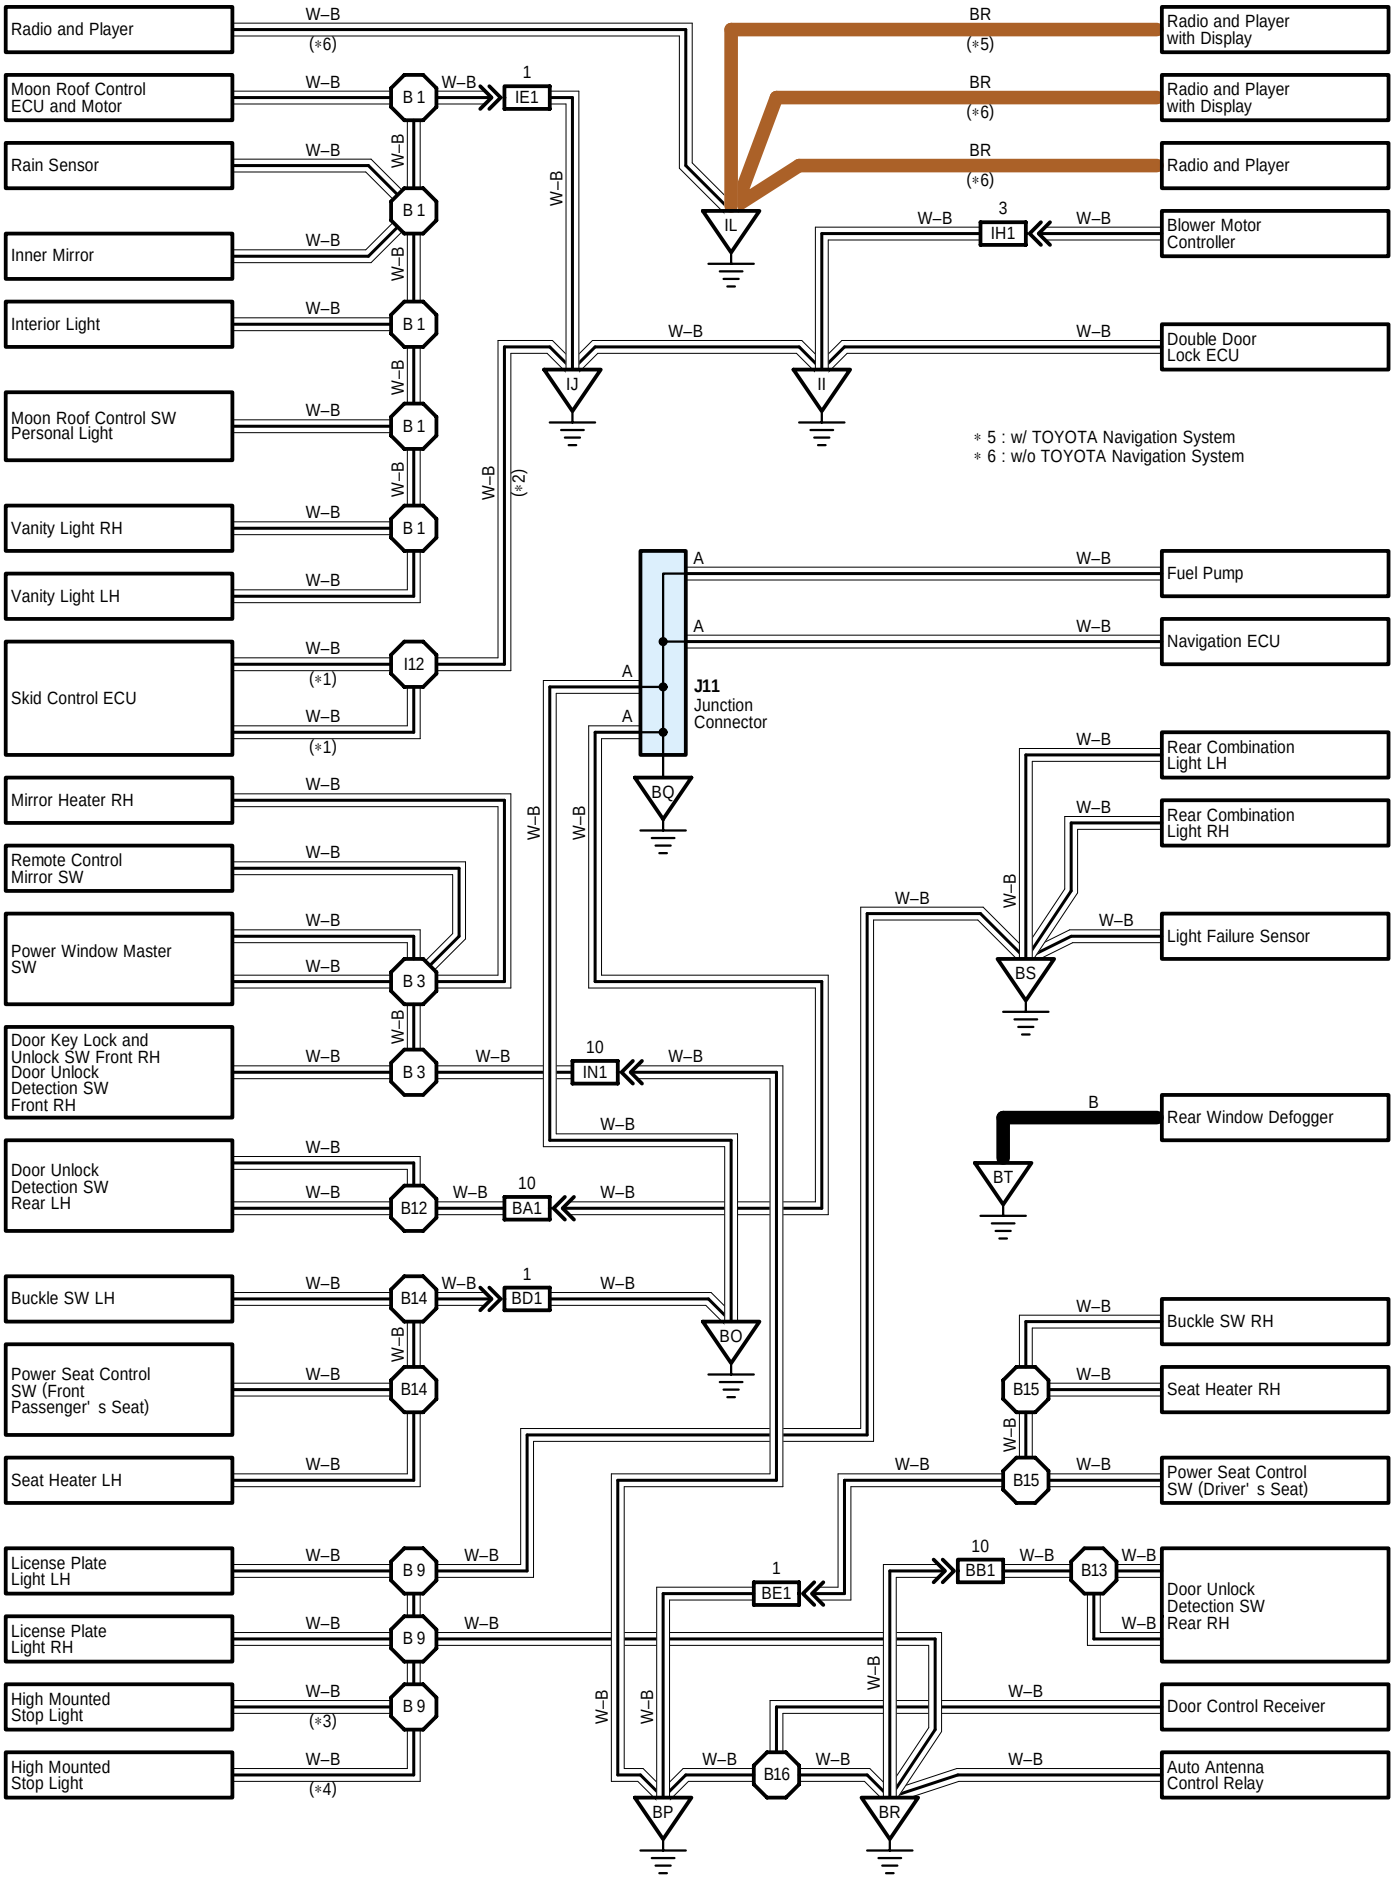
Radio and Player
Moon Roof Control ECU and Motor
Rain Sensor
Inner Mirror
Interior Light
Moon Roof Control SW Personal Light
Vanity Light RH
Vanity Light LH
Skid Control ECU
Mirror Heater RH
Remote Control Mirror SW
Power Window Master SW
Door Key Lock and Unlock SW Front RH Door Unlock Detection SW Front RH
Door Unlock Detection SW Rear LH
Buckle SW LH
Power Seat Control SW (Front Passenger' s Seat)
Seat Heater LH
License Plate Light LH
License Plate Light RH
High Mounted Stop Light
High Mounted Stop Light
Radio and Player with Display
Radio and Player with Display
Radio and Player
Blower Motor Controller
Double Door Lock ECU
Fuel Pump
Navigation ECU
Rear Combination Light LH
Rear Combination Light RH
Light Failure Sensor
Rear Window Defogger
Buckle SW RH
Seat Heater RH
Power Seat Control SW (Driver' s Seat)
Door Unlock Detection SW Rear RH
Door Control Receiver
Auto Antenna Control Relay
J11 Junction Connector
∗ 5 : w/ TOYOTA Navigation System
∗ 6 : w/o TOYOTA Navigation System