
## CRUISE CONTROL MAIN SWITCH ASSY REPLACEMENT

goned n


HINT:

Installation[]s[]n[]he[]reverse[]order[]of[]removal.

- 1. DISCONNECT/BATTERY/NEGATIVE/TERMINAL/(SEE/PAGE/60-1)
- 2. REMOVE STEERING WHEEL COVER LOWER NO.2
- 3. REMOVE STEERING WHEEL COVER LOWER NO.3
- 4. REMOVE[HORN[BUTTON[ASSY[SEE[PAGE[60-19]]

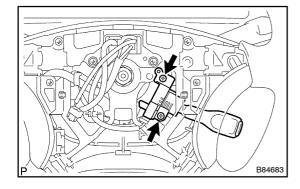

- 5. REMOVE CRUISE CONTROL MAIN SWITCH ASSY
- (a) ☐ Disconnect The connector.
- (b) Remove the 2screws.

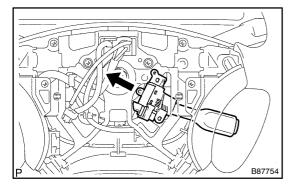

(c) Pullout the Gruise Gontrol main witch assy in the direction shown by the arrow in the lustration.

- 6. INSTALL[HORN[BUTTON[ASSY[SEE[PAGE[60-19]]
- 7. INSPECT[HORN[BUTTON[ASSY[SEE[PAGE[60-13]]
- 8. CONNECT BATTERY NEGATIVE TERMINAL
- 9. INSPECT[\$RS[WARNING[LIGHT[SEE[PAGE[05-10])]]