
Position of Parts in Seat

[LHD]

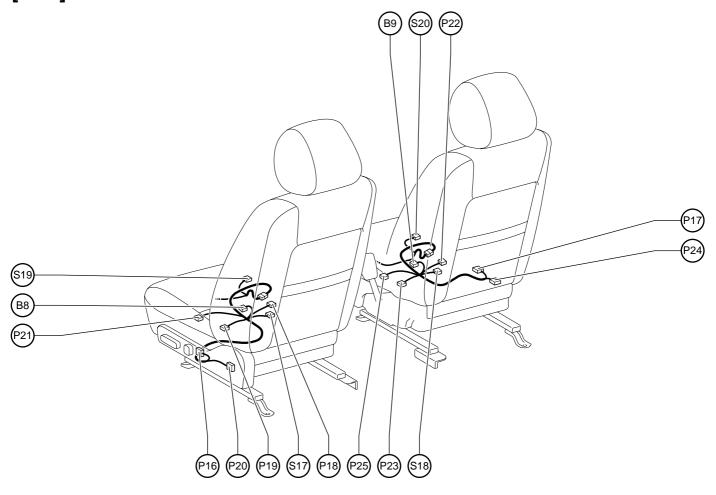

- B 8 Buckle SW LH
 B 9 Buckle SW RH
 - Occupant Detection Sensor
- P16 Power Seat Control SW (Driver's Seat)
- P17 Power Seat Control SW (Front Passenger's Seat)
- P18 Power Seat Motor (Driver's Seat Front Vertical Control)
- P19 Power Seat Motor (Driver's Seat Lifter Control)
- P20 Power Seat Motor (Driver's Seat Reclining Control)
- P21 Power Seat Motor (Driver's Seat Slide Control)
- P22 Power Seat Motor
 - (Front Passenger's Seat Front Vertical Control)
- P23 Power Seat Motor
 - (Front Passenger's Seat Lifter Control)
- P24 Power Seat Motor
 - (Front Passenger's Seat Reclining Control)
- P25 Power Seat Motor
 - (Front Passenger's Seat Slide Control)

- S17 Seat Heater LH
- S18 Seat Heater RH
- S19 Side Airbag Squib LH
- S20 Side Airbag Squib RH