
Position of Parts in Instrument Panel

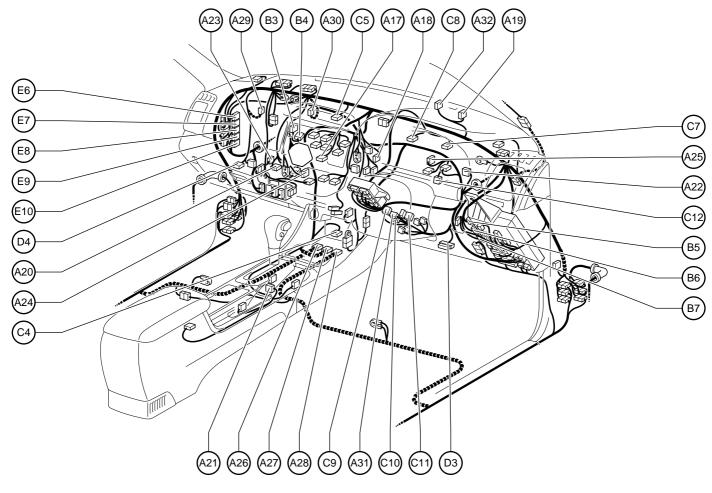



- A17 A/C Control Assembly
- A18 A/C Room Temp. Sensor
- A19 A/C Solar Sensor
- A20 A/C Thermistor
- A21 A/T Shift Lever Illumination O/D Main SW
- A22 Accelerator Position Sensor
- A23 Air Inlet Control Servo Motor
- A24 Air Mix Control Servo Motor
- A25 Air Vent Mode Control Servo Motor
- A26 Airbag Sensor Assembly
- A27 Airbag Sensor Assembly
- A28 Airbag Sensor Assembly
- A29 Airbag Squib (Front Passenger Airbag Assembly)
- A30 Airbag Squib (Front Passenger Airbag Assembly)
- A31 Airbag Squib (Steering Wheel Pad)
- A32 Automatic Light Control Sensor
- B 3 Blower Motor
- B 4 Blower Motor Controller
- B 5 Body ECU
- B 6 Body ECU
- B 7 Body ECU

- C 4 Cigarette Lighter
 Cigarette Lighter Illumination
- C 5 Clock
- C 7 Combination Meter
- C 8 Combination Meter
- C 9 Combination SW
- C10 Combination SW
- C11 Combination SW Combination SW
- C12 Cruise Control Clutch SW
- D 3 DLC3
- D 4 Double Door Lock ECU
- E 6 Engine and ECT ECU (A/T) Engine ECU (M/T)
- E 7 Engine and ECT ECU (A/T) Engine ECU (M/T)
- E 8 Engine and ECT ECU (A/T) Engine ECU (M/T)
- E 9 Engine and ECT ECU (A/T) Engine ECU (M/T)
- E10 Engine and ECT ECU (A/T) Engine ECU (M/T)