
## **Position of Parts in Body**

## [LHD]

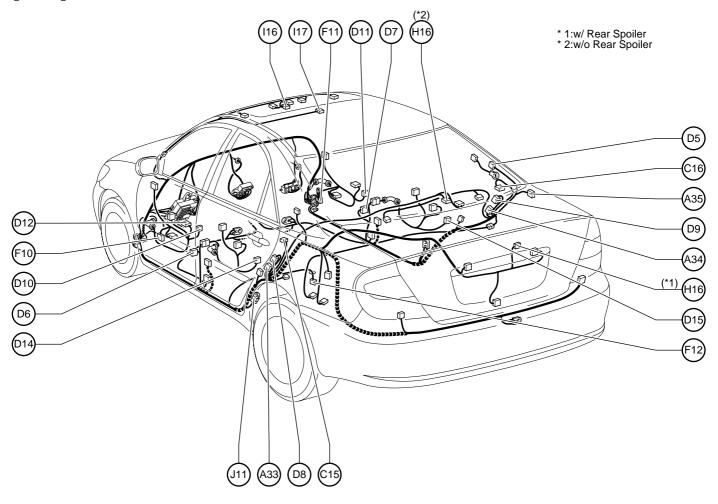

- A33 ABS Speed Sensor Rear LH
- A34 ABS Speed Sensor Rear RH
- A35 Auto Antenna Control Relay
- C15 Curtain Shield Airbag Squib LH
- C16 Curtain Shield Airbag Squib RH
- D 5 Door Control Receiver
- D 6 Door Courtesy SW Front LH
- D 7 Door Courtesy SW Front RH
- D 8 Door Courtesy SW Rear LH
- D 9 Door Courtesy SW Rear RH
- D10 Door Key Lock and Unlock SW Front LH
  Door Lock Motor Front LH
  - Door Unlock Detection SW Front LH
- D11 Door Key Lock and Unlock SW Front RH Door Lock Motor Front RH
  - Door Unlock Detection SW Front RH
- D12 Door Lock Control SW Front LH
- Power Window Master SW D14 Door Lock Motor Rear LH
  - Door Unlock Detection SW Rear LH
- D15 Door Lock Motor Rear RH

  Door Unlock Detection SW Rear RH

- F10 Front Door Speaker LH
- F 11 Front Door Speaker RH
- F 12 Fuel Pump Fuel Sender
- H16 High Mounted Stop Light
- I 16 Inner Mirror
- I 17 Interior Light
- J 11 Junction Connector