
INSPECTION

700BL-01

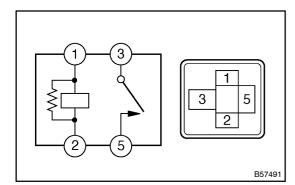

1. INSPECT DEFOGGER RELAY

(a) Inspect the defogger relay (marking: DEF) continuity. **Standard:**

Terminal No.	Condition	Specified condition
1 ⇔ 2	Constant	Continuity
3 ⇔ 5	Constant	No continuity
3 ⇔ 5	Apply B+ between terminals 1 and 2	Continuity

If the continuity is not as specified, replace the relay.