

POWER SOURCE LOCATION


6805I-01

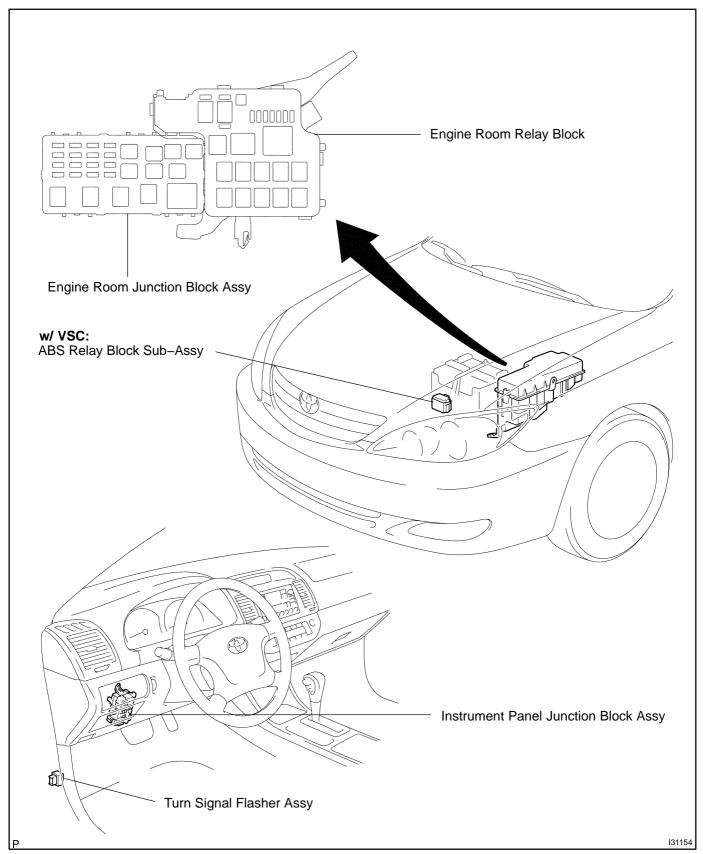

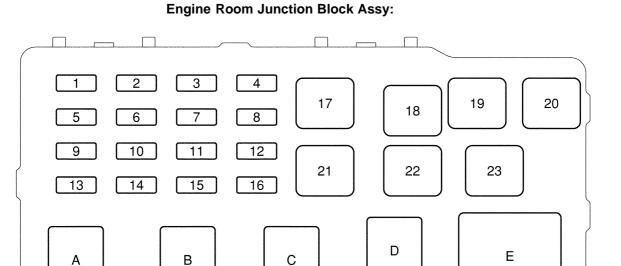

RELAY: FUSE: A, EFI 1, A/ F 25 A 14, D.C.C 30 A B, HORN 2, DOOR 1 25 A 15, IG 2 10 A 16, ST C, C/ OPN 3, -5 A D, FAN No.1 4, AM 2 30 A 17, ADJ PDL 30 A E, HEAD 5, -18, CDS 30 A 6, EFI 20 A 19, ABS No.2 40 A 7, ALT-S 5 A 20, MAIN 40 A 8, HEAD LH UPR 10 A 21, ABS No.3 30 A 9, ETCS 10 A 22, HTR 50 A 10, HORN 23, RDI 30 A 10 A 11, IGN 15 A 12, HEAD RH UPR 10 A 13, HAZ 15 A

P 131155

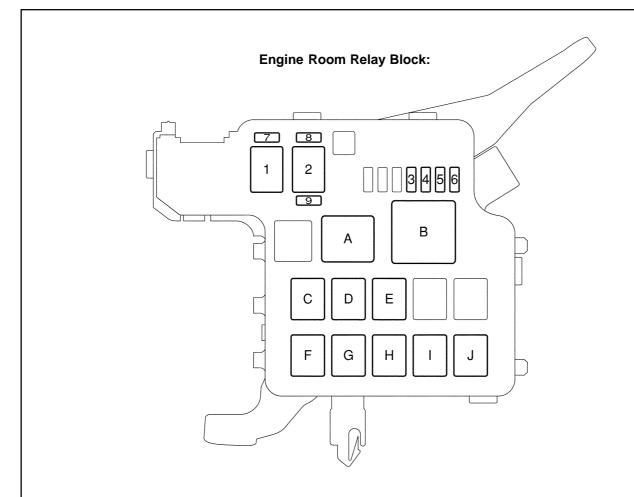

RELAY: FUSE:

A, ST	H, FAN No.3	1, ABS No.1	50 A
B, HTR	I, ADJ PDL	2, ALT	120 A (2AZ)
C, FAN No.2	J, DRL No.4		120 A (1MZ)
D, DRL No.3		3, A/C	10 A
E, DRL No.2		4, DRL	5 A
F, A/ F HTR (1MZ)		5, HEAD RH LWR	15 A
G, MG CLT		6, HEAD LH LWR	15 A
		7, SPARE	5 A
		8, SPARE	10 A
		9, SPARE	15 A

P 144138

