


- \* 7 : TMC Made 1MZ-FE, TMC Made 3MZ-FE
- \* 8 : Except \*7 \* 9 : USA \*10 : Canada

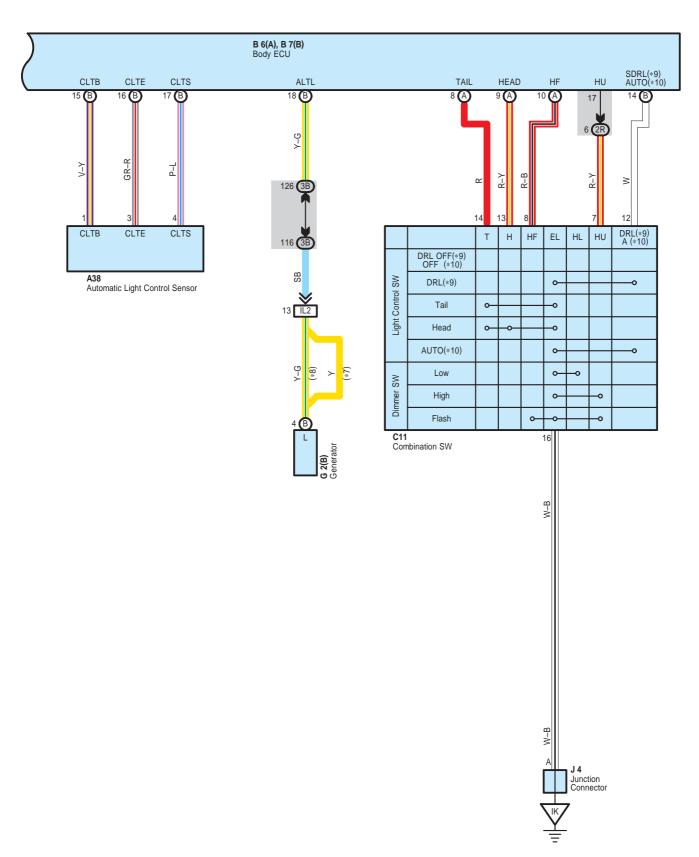

## **System Outline**

#### **Daytime Running Light Operation**

When the engine is started, a signal from the generator is input into TERMINAL (B) 18 of the body ECU. At this time, if the parking brake pedal is depressed or parking brake lever is pulled (Parking brake SW ON), the body ECU is not activated, and the daytime running light system does not operate.

When the parking brake pedal or parking lever is released (Parking brake SW OFF), a signal is input into TERMINAL 18 of the body ECU. This activates the body ECU and the headlight turns on.

# : Parts Location

Co	de	See Page	Code		See Page	Code		See Page
A:	A38 42		G2	В	40 (*2)	H4		40 (*2)
B6	Α	42	H1		38 (*1)	J4		43
B7	В	42			40 (*2)	J22	Α	43
C7	Α	42	H:	2	38 (*1)	J23	В	43
C	11	42	112		40 (*2)	Р3	Α	43
D16		38 (*1)	H3		38 (*1)	13	В	43
		40 (*2)	113		40 (*2)			
G2 B		38 (*1)	H	4	38 (*1)			

## : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

# : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)		
1C				
1E				
1F 2	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)		
1G				
1H				
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)		
2F	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)		
2G <sup>2</sup>	20	Engine Room Main Wile and Driver Side 3/B (Lower Finish Panel)		
2R	_ 29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)		
2S		Instrument Fallet write and Drivet Side 3/D (Lower Fillish Fallet)		
3A	<del> </del> 34	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)		
3B				

### : Connector Joining Wire Harness and Wire Harness

L	Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
	IF2	50	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
	IF3	30	
	IL2	51	Engine Wire and Instrument Panel Wire (Behind the Glove Box)

#### : Ground Points

Code	See Page	Ground Points Location	
EB	48 (*1)	- Right Fender	
	49 (*2)		
EC	48 (*1)	Left Fender	
	49 (*2)	Letti endei	
II	50	Cowl Side Panel LH	
IJ	IJ IK 50	Instrument Panel Brace LH	
IK		Instrument Fanel Brace Lin	

<sup>\* 1 : 1</sup>MZ-FE, 3MZ-FE

<sup>\* 2 : 2</sup>AZ-FE

<sup>\* 3 :</sup> w/ Power Seat

<sup>\* 4 :</sup> w/o Power Seat