
HEADLAMP DIMMER SWITCH ASSY

REPLACEMENT

1. REMOVE STEERING COLUMN COVER

(See page 50-6)

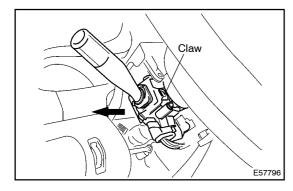

2. REMOVE HEADLAMP DIMMER SWITCH ASSY

- (a) Disconnect the connector.
- (b) Using a screwdriver, release the claw and pull out the headlight dimmer switch assy.

NOTICE:

Pressing the claw hard breaks the claw.

HINT:

Tape the screwdriver tip before use.

650CD-0